



Intermec



User's Manual

**700 Series Color
Mobile Computer**

Intermec Technologies Corporation

Corporate Headquarters	Technical Communications Department
6001 36th Ave. W.	550 Second Street SE
Everett, WA 98203	Cedar Rapids, IA 52401
U.S.A.	U.S.A.

www.intermec.com

The information contained herein is proprietary and is provided solely for the purpose of allowing customers to operate and service Intermec-manufactured equipment and is not to be released, reproduced, or used for any other purpose without written permission of Intermec.

Information and specifications contained in this document are subject to change without prior notice and do not represent a commitment on the part of Intermec Technologies Corporation.

© 2002 by Intermec Technologies Corporation. All rights reserved.

The word Intermec, the Intermec logo, Norand, ArciTech, CrossBar, Data Collection Browser, dcBrowser, Duratherm, EasyCoder, EasyLAN, Enterprise Wireless LAN, EZBuilder, Fingerprint, i-gistics, INCA (under license), InterDriver, Intermec Printer Network Manager, IRL, JANUS, LabelShop, Mobile Framework, MobileLAN, Nor*Ware, Pen*Key, Precision Print, PrintSet, RoutePower, TE 2000, Trakker Antares, UAP, Universal Access Point, and Virtual Wedge are either trademarks or registered trademarks of Intermec Technologies Corporation.

Throughout this manual, trademarked names may be used. Rather than put a trademark (™ or ®) symbol in every occurrence of a trademarked name, we state that we are using the names only in an editorial fashion, and to the benefit of the trademark owner, with no intention of infringement.

There are U.S. and foreign patents pending.

Microsoft, Windows, and the Windows logo are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Bluetooth is a trademark of Bluetooth SIG, Inc., U.S.A.

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>).

This product includes cryptographic software written by Eric Young (EAY@cryptsoft.com).

Document Change Record

This page records changes to this document. The document was originally released as Revision A.

Revision	Date	Description of Change
B	11/2002	Added information about the Siemens MC45 radio module, the tethered scanner, CAB extraction, FTP Server parameters, and Data Collection control panel applet imager options.
C	04/2003	Added information about the ambient light sensor, the beeper, keypad sequences, the alphanumeric keypad, the vibrator, an accessories list, programming notifications, the MaxiCode symbology, the Utilities control panel applet, and the Wireless Network control panel applet.

Contents

Before You Begin	xix
Safety Summary	xix
Do not repair or adjust alone	xix
First aid	xix
Resuscitation	xix
Energized equipment	xix
Safety Icons	xx
Global Services and Support	xxi
Warranty Information	xxi
Web Support	xxi
Telephone Support	xxi
Who Should Read this Manual?	xxii
Related Documents	xxii
 1 Introduction	1
Ambient Light Sensor	2
Audio System	3
Speaker	3
Microphone	3
External Headset Jack	4
Battery	5
Beeper	7
Enable the Beeper	7
Disable the Scanner Mute	8
Select a Beeper Volume	9
Disable the Beeper	10
Keypad	11
Backlight for Keypad	11
Key Sequences	12
[Gold] or [Gold/White] Plane Keys	12
Alpha (Blue) Plane Keys	14
Modem Support	16
Storage Media	16
CompactFlash Cards	16
Secure Digital Cards	16
Software Build Version	17

Vibrator	18
Wireless Network Support	18
Accessories	19
What's New	20
2 Pocket PC 2002	21
Introduction	22
Premium versus Professional Editions	22
Where to Find Information	24
Basic Skills	25
Buttons and Stylus	25
Today Screen	25
Programs	27
Navigation Bar and Command Bar	28
Pop-up Menus	29
Notifications	29
Enter Information on Your 700 Series Computer	30
Typing With the Soft Keyboard	31
Using Block Recognizer	31
Using Letter Recognizer	32
Using Transcriber	32
Selecting Typed Text	32
Writing on the Screen	33
Selecting the Writing	33
Converting Writing to Text	34
Drawing on the Screen	36
Creating a Drawing	36
Selecting a Drawing	36
Recording a Message	37
Creating a Recording	37
Using My Text	38
Finding and Organizing Information	39
Customizing Your 700 Series Computer	40
Adjusting Settings	40
Adding or Removing Programs	40
Microsoft ActiveSync	43

Microsoft Pocket Outlook	45
Calendar: Scheduling Appointments and Meetings	45
Creating an Appointment	46
Using the Summary Screen	47
Creating Meeting Requests	47
Scheduling a Meeting	47
Contacts: Tracking Friends and Colleagues	48
Creating a Contact	48
Finding a Contact	49
Using the Summary Screen	50
Tasks: Keeping a To Do List	51
Creating a Task	52
Using the Summary Screen	53
Notes: Capturing Thoughts and Ideas	54
Creating a Note	55
Inbox: Sending and Receiving E-mail Messages	56
Synchronizing E-mail Messages	56
Connecting Directly to an E-mail Server	56
Using the Message List	57
Composing Messages	59
Managing E-mail Messages and Folders	60
Folder Behavior With a Direct Connection to an E-mail Server	60
Companion Programs	61
Pocket Word	61
Creating a Document	61
Typing Mode	63
Writing Mode	64
Drawing Mode	65
Recording Mode	65
Pocket Excel	66
Creating a Workbook	66
Tips for Working in Pocket Excel	67
MSN Messenger	67
Setting Up	68
Working with Contacts	68
Chatting with Contacts	69
Windows Media Player for Pocket PC	71
Microsoft Reader	72
Getting Books on Your 700 Series Computer	72
Using the Library	73
Reading a Book	74
Using Reader Features	75
Removing a Book	75

Pocket Internet Explorer	76
The Mobile Favorites Folder	76
Favorite Links	76
Mobile Favorites	76
Using AvantGo Channels	78
Using Pocket Internet Explorer	79
Viewing Mobile Favorites and Channels	80
Browsing the Internet	80
Getting Connected	81
Transferring Items Using Infrared	81
Sending Information	81
Receiving Information	82
Connecting to an Internet Service Provider	82
Creating a Modem Connection to an ISP	82
Creating an Ethernet Connection to an ISP	86
Connecting to Work	87
Creating a Modem Connection to Work	87
Creating an Ethernet Connection to Work	91
Ending a Connection	93
Connecting Directly to an E-mail Server	93
Setting Up an E-mail Service	94
 3 Installing Applications	 97
Packaging an Application	98
Installing Applications	98
Using Microsoft ActiveSync	99
Using the FTP Server	100
Using a Storage Card	100
Copying to a CompactFlash Card	100
Copying to a Secure Digital Storage Card	101
Updating the System Software	101
Application Migration	101
Migrating from a 700 Monochrome Computer	104
Cabinet File Installation	104
 4 Network Support	 105
CORE	106
Install an Available Radio Module	106
Loading a Radio Module	106

Network Adapters	107
Ethernet Communications	108
802.11b Communications	110
Network Selection APIs	110
802.11b Radio CORE Module	110
WWAN Radio Options	113
CDMA/1xRTT	113
GSM/GPRS	116
Terminal Application	119
Phone Application	120
AT Command Interface	121
Wireless Printing	125
Documentation	125
700 Color Computer Setup	126
Bluetooth CORE Module (Bluealps)	129
AutoIP/DHCP	131
SNMP Configuration on the 700 Series Computer	132
Management Information Base	132
Object Identifiers	133
Configuring with SNMP	133
5 Printer Support	135
Printing ASCII	136
Directly to a Port	136
Directly to a Generic Serial Port	136
IrDA Printer Driver	136
NPCP Printer Driver	137
About NPCP	137
NPCP Driver Installation and Removal	137
Opening the NPCP Driver	138
Closing the NPCP Driver	138
Reading from the NPCP Driver	138
Writing to the NPCP Driver	138
NPCP Driver I/O Controls	139
NPCP Printer Communications	140
Sample Code	140
NPCP Error Codes	141

O'Neil Printer Driver	142
DTR Driver Installation and Removal	142
Opening the DTR Driver	143
Closing the DTR Driver	143
Writing to the DTR Driver	143
DTR Printer Communications	143
6 Scanner Support	145
Scanner Control and Data Transfer	146
Automatic Data Collection COM Interfaces	146
Multiple ADC COM Object Support	147
How to Create and Use the ADC COM Interfaces	148
Read-Ahead Bar Code Data Access	148
Grid Data Filtering	149
Filter Expression Values	150
Editing Expression Values	151
ADC Connection	153
2D Imager Overview	154
Data Collection Features	154
Image Acquisition Features	155
Create and Delete ADC COM Object Functions	157
ITCDeviceOpen	157
ITCDeviceClose	158
IADC Functions	159
IADC::CancelReadRequest	160
IADC::Initialize	161
IADC::QueryAttribute	162
IADC::QueryData	163
IADC::Read	164
IADC::SetAttribute	165
IBarCodeReaderControl Functions	167
IBarCodeReaderControl::CancelReadRequest	168
IBarCodeReaderControl::ControlLED	169
IBarCodeReaderControl::Initialize	170
IBarCodeReaderControl::IssueBeep	171
IBarCodeReaderControl::QueryAttribute	172
IBarCodeReaderControl::Read	173
IBarCodeReaderControl::SetAttribute	175
IBarCodeReaderControl::TriggerScanner	178
IS9CConfig Functions	179
IS9CConfig::GetCodabar	180
IS9CConfig::SetCodabar	181
IS9CConfig::GetCode39	183
IS9CConfig::SetCode39	184
IS9CConfig::GetCode93	186
IS9CConfig::SetCode93	187
IS9CConfig::GetCode128	189
IS9CConfig::SetCode128	190
IS9CConfig::GetI2of5	192

IS9CConfig::SetI2of5	193
IS9CConfig::GetMatrix2of5	195
IS9CConfig::SetMatrix2of5	196
IS9CConfig::GetMSI	198
IS9CConfig::SetMSI	199
IS9CConfig::GetPDF417	201
IS9CConfig::SetPDF417	203
IS9CConfig::GetPlessey	206
IS9CConfig::SetPlessey	207
IS9CConfig::GetStandard2of5	209
IS9CConfig::SetStandard2of5	210
IS9CConfig::GetTelepen	212
IS9CConfig::SetTelepen	213
IS9CConfig::GetUpcEan	215
IS9CConfig::SetUpcEan	217
IS9CConfig2 Functions	221
IS9CConfig2::GetCode11	222
IS9CConfig2::SetCode11	223
IS9CConfig2::GetCustomSymIds	225
IS9CConfig2::SetCustomSymIds	226
IS9CConfig2::GetGlobalAmble	229
IS9CConfig2::SetGlobalAmble	230
IS9CConfig2::GetPDF417Ext	232
IS9CConfig2::SetPDF417Ext	233
IS9CConfig2::GetSymIdXmit	235
IS9CConfig2::SetSymIdXmit	236
IS9CConfig3 Functions	238
ISCP Commands	238
ISCP::GetConfig	239
ISCP::SetConfig	240
AIM Symbology ID Defaults	241
 IImage Interface	 243
IImage::ReadSigCapBuffer	243
IImage::ReadSigCapFile	246
IImage::ReadImage	248
IImage::CancelReadImage	249
IImage::Start	250
IImage::Stop	251
IImage::Open	252
IImage::Close	253
 Data Collection Configuration	 254

Tethered Scanner	255
Enabling and Disabling	255
Changing Comm Settings	256
Tethered Scanner	256
Sabre 1551E or 1553 Tethered Scanner	257
Welch Allyn 1470 Imager Settings	257
Error Message	257
Scanner Cabling	257
Limitations and Capabilities	258
 7 Programming	261
Creating CAB Files	262
Creating Device-Specific CAB Files	262
Creating an .INF File	262
Sample .INF File	271
Using Installation Functions in SETUP.DLL	274
After the CAB File Extraction	274
Creating CAB Files with CAB Wizard	275
Troubleshooting the CAB Wizard	276
 FTP Server	277
Configurable Parameters Via the Registry Editor	278
BlockSize	278
DeviceName	279
DeviceURL	279
IDNATarget	280
ManifestName	280
PauseAtStartup	281
Root	281
Transferring Files Over TCP/IP Networks	282
Stopping the FTP Server from Your Application	286
Autostart FTP	286
 Full Screen	288

Kernel I/O Controls	290
_IOCTL_HAL_GET_DEVICE_INFO	290
_IOCTL_HAL_ITC_READ_PARM	291
_IOCTL_HAL_ITC_WRITE_SYSPARM	296
_IOCTL_HAL_GET_DEVICEID	298
_IOCTL_HAL_GET_OAL_VERINFO	299
_IOCTL_HAL_GET_BOOTLOADER_VERINFO	300
_IOCTL_HAL_WARMBOOT	301
_IOCTL_HAL_COLDBOOT	301
_IOCTL_HAL_GET_RESET_INFO	302
_IOCTL_HAL_GET_BOOT_DEVICE	303
_IOCTL_HAL_REBOOT	304
_IOCTL_PROCESSOR_INFORMATION	305
_IOCTL_GET_CPU_ID	306
 Network Selection APIs	307
RadioConnect()	309
RadioDisconnect()	309
GetMac()	309
GetBSSID()	310
GetSSID()	310
GetLinkSpeed()	310
GetNetworkType()	311
GetTXPower()	311
GetNetworkMode()	312
SetNetworkMode()	312
AddWep()	313
GetRSSI()	313
GetAssociationStatus()	314
GetWepStatus()	314
GetAuthenticationMode()	315
SetAuthenticationMode()	315
SetChannel()	316
EnableWep()	316
GetPowerMode()	317
SetSSID()	317
isOrinoco()	318
EncryptWepKeyForRegistry()	318
SetRTSThreshold()	318
GetRTSThreshold()	319
ConfigureProfile()	319
StartScanList()	319
 Reboot Functions	320
_IOCTL_HAL_REBOOT	320
_IOCTL_HAL_COLDBOOT	320
_IOCTL_HAL_WARMBOOT	320

Remapping the Keypad	321
Unshifted Plane	321
Gold Plane	321
Alpha (Blue) Plane	322
Key Values	322
Numeric Keypad	322
Alphanumeric Keypad	322
How Key Values Are Stored in Registry	323
Change Notification	323
Advanced Keypad Remapping	323
Scan Codes	324
Numeric Keypad	324
Alphanumeric Keypad	325
Sample View of Registry Keys	327
Notifications	328
NLEDGetDeviceInfo()	329
NLEDSetDevice()	329

A Configurable Settings

Configuration Parameters	332
Changing a Parameter Setting	332
About Configuration Parameters	333
Data Collection Control Panel Applet	334
Symbolologies	335
Code 39	336
Standard 2 of 5	337
Codabar	338
UPC/EAN	339
Code 93	340
Code 128	341
Plessey	344
MSI	345
PDF417	346
Interleaved 2 of 5	349
Matrix 2 of 5	350
Telepen	351
Code 11	352
QR Code	353
Data Matrix	354
MaxiCode	355
Symbology Options	356
Symbology ID	356
Prefix	362
Suffix	363

Beeper/LED	364
Beeper	365
Beeper Volume	366
Beeper Frequency	367
Good Read Beeps	368
Good Read Beep Duration	369
Imager	370
Aimer LED duration	370
Image Dimension	371
Virtual Wedge	372
Virtual Wedge	372
Preamble	373
Postamble	374
Grid	375
Code Page	376
SNMP Control Panel Applet	377
Security	378
Read Only Community	378
Read/Write Community	379
Read Encryption	380
Write Encryption	381
Encryption Key	382
Traps	383
Authentication	383
Threshold	384
Identification	385
Contact	385
Name	386
Location	387
Unit Information Control Panel Applet	388
Versions	389
Battery Status	390
CAB Files	391
Utilities Control Panel Applet	393
Dock Switch	394
Registry Save	395
Wakeup Mask	396
App Launch	397

Wireless Network Control Panel Applet	399
Profiles	399
Basic	401
Security	402
Advanced	406
Certificates	407
Import/Export	408
Scan List	409
Selected Profile	409
Scan List	410
Other Configurable Parameters	411
Audio Volume	411
Automatic Shutoff	411
Backlight Timeout	412
Date/Time	412
Key Clicks	412
Using Reader Commands	413
Change Configuration	413
Set Time and Date	414
B Bar Codes	415
Bar Code Symbolologies	416
UPC	418
EAN	418
Codabar	418
Code 11	419
Code 39	419
Encoded Code 39 (Concatenation)	419
Encoded Code 39 (Full ASCII)	419
Code 93	420
Code 128	420
I 2 of 5 (Interleaved)	422
S 2 of 5 (Standard 2 of 5)	422
Plessey	423
MSI Code (Variant of Plessey)	423
Bar Code Labels	424
Audio Volume	424
Automatic Shutoff	425
Backlight Timeout	425
Key Clicks	426
Virtual Wedge Grid, Preamble, Postamble	427
Grid	427
Preamble	427
Postamble	427



Index

Classes and Functions 430

General Index 433

Files Index 455

Before You Begin

This section provides you with safety information, technical support information, and sources for additional product information.

Safety Summary

Your safety is extremely important. Read and follow all warnings and cautions in this document before handling and operating Intermec equipment. You can be seriously injured, and equipment and data can be damaged if you do not follow the safety warnings and cautions.

Do not repair or adjust alone

Do not repair or adjust energized equipment alone under any circumstances. Someone capable of providing first aid must always be present for your safety.

First aid

Always obtain first aid or medical attention immediately after an injury. Never neglect an injury, no matter how slight it seems.

Resuscitation

Begin resuscitation immediately if someone is injured and stops breathing. Any delay could result in death. To work on or near high voltage, you should be familiar with approved industrial first aid methods.

Energized equipment

Never work on energized equipment unless authorized by a responsible authority. Energized electrical equipment is dangerous. Electrical shock from energized equipment can cause death. If you must perform authorized emergency work on energized equipment, be sure that you comply strictly with approved safety regulations.

Safety Icons

This section explains how to identify and understand dangers, warnings, cautions, and notes that are in this manual. You may also see icons that tell you when to follow ESD procedures and when to take special precautions for handling optical parts.



A warning alerts you of an operating procedure, practice, condition, or statement that must be strictly observed to avoid death or serious injury to the persons working on the equipment.

Avertissement: Un avertissement vous avertit d'une procédure de fonctionnement, d'une méthode, d'un état ou d'un rapport qui doit être strictement respecté pour éviter l'occurrence de mort ou de blessures graves aux personnes manipulant l'équipement.



A caution alerts you to an operating procedure, practice, condition, or statement that must be strictly observed to prevent equipment damage or destruction, or corruption or loss of data.

Attention: Une précaution vous avertit d'une procédure de fonctionnement, d'une méthode, d'un état ou d'un rapport qui doit être strictement respecté pour empêcher l'endommagement ou la destruction de l'équipement, ou l'altération ou la perte de données.



Note: Notes either provide extra information about a topic or contain special instructions for handling a particular condition or set of circumstances.

Global Services and Support

Warranty Information

To understand the warranty for your Intermec product, visit the Intermec web site at <http://www.intermec.com>, click Support, and then click Warranty.

Disclaimer of warranties: The sample code included in this document is presented for reference only. The code does not necessarily represent complete, tested programs. The code is provided “as is with all faults.” All warranties are expressly disclaimed, including the implied warranties of merchantability and fitness for a particular purpose.

Web Support

Visit the Intermec web site at <http://www.intermec.com> to download many of our current manuals in PDF format. To order printed versions of the Intermec manuals, contact your local Intermec representative or distributor.

Visit the Intermec technical knowledge base (Knowledge Central) at <http://intermec.custhelp.com> to review technical information or to request technical support for your Intermec product.

Telephone Support

These services are available from Intermec Technologies Corporation.

Service	Description	Call 1-800-755-5505 and choose this option
Factory Repair and On-site Repair	Request a return authorization number for authorized service center repair, or request an on-site repair technician.	1
Technical Support	Get technical support on your Intermec product.	2
Service Contract Status	Inquire about an existing contract, renew a contract, or ask invoicing questions.	3
Schedule Site Surveys or Installations	Schedule a site survey, or request a product or system installation.	4
Ordering Products	Talk to sales administration, place an order, or check the status of your order.	5

Who Should Read this Manual?

This manual provides you with information about the features of the 700 Series Color Mobile Computer and how to configure, troubleshoot, and support it. You must be familiar with your host PC, your network, and your other Intermec equipment.

Related Documents

This table contains a list of related Intermec documents and their part numbers.

Document Title	Part Number
<i>700 Series Color Mobile Computer Quick Start Guide</i>	962-054-053
700 Series Color Software Tools CD	235-099-001
700 Color Recovery CD PPC 2002 Professional Edition <i>English</i>	235-100-001 (<i>Kit</i>)
700 Color Recovery CD PPC 2002 Premium Edition <i>English</i>	235-101-001 (<i>Kit</i>)

The Intermec web site at <http://www.intermec.com> contains many of our documents that you can download in PDF format.

To order printed versions of the Intermec manuals, contact your local Intermec representative or distributor.



1 Introduction

This chapter introduces the 700 Series Color Mobile Computer, developed by Intermec Technologies Corporation to enhance wireless connectivity needs.

This chapter contains hardware and software configuration information to assist you in making the most out of your 700 Color Computer. The components include:


- Ambient light sensors (*next page*)
- Audio system (*page 3*)
- Battery (*page 5*)
- Beeper (*page 7*)
- Keypad (*page 11*)
- Modem support (*page 16*)
- Software build version (*page 17*)
- Storage media (*page 16*)
- Vibrator (*page 18*)
- Wireless network support (*page 18*)



Note: Desktop icons and control panel applet icons are shown to the left.

Ambient Light Sensor

The ambient light sensor turns on the display lighting when conditions warrant but automatically turns it off again as surrounding light increases. This conserves your 700 Color battery power.

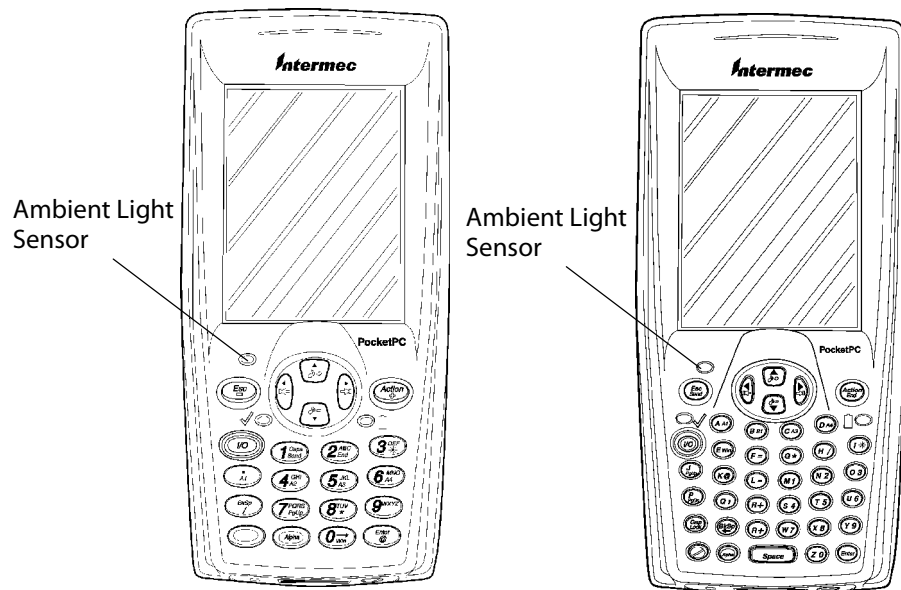


This illustration shows the 700 Color Computer with a numeric keypad (left) and an alphanumeric keypad (right).



Backlight

To adjust the ambient light sensor, tap **Start** → **Settings** → the **System** tab → the **Backlight** icon → the **Both Power** tab. Make your selections, then tap **ok** to exit this applet.

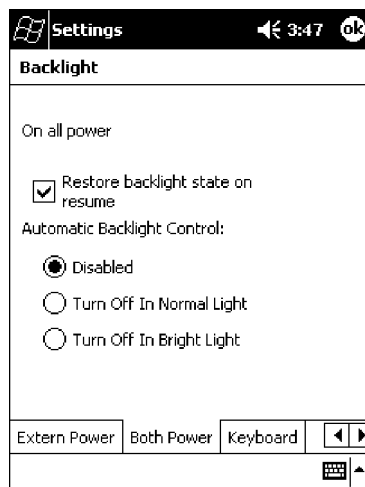


Audio System

The audio system consists of the speaker, internal microphone, and the external headset jack.

Speaker


A speaker capable of variable volume levels is located on the back of the computer. This speaker has a transducer volume of 85 dB min at 10 CM and a frequency range of 1–8 KHz.

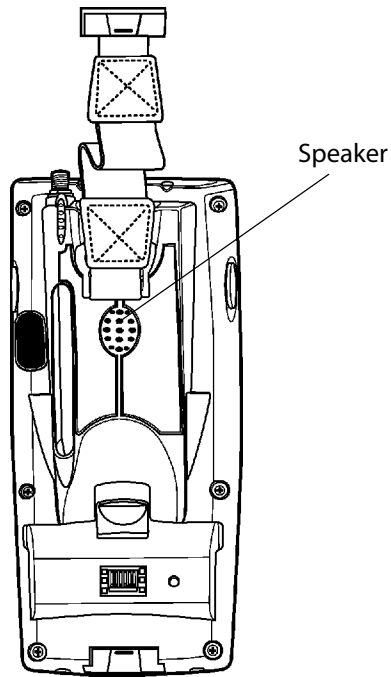

This is the back of the 700 Color Computer.

Microphone


The built-in microphone is located on the bottom of the unit next to the Hirose docking connector.

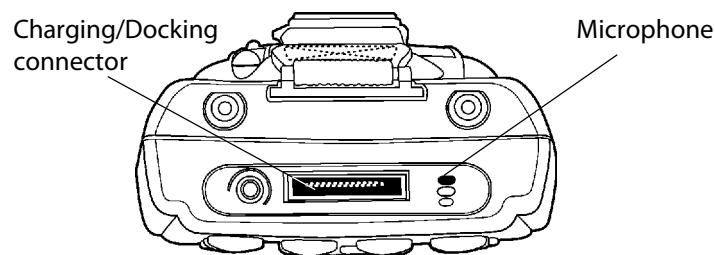

This is the bottom of the 700 Color Computer. Note that the keypad is to the bottom in this illustration.

External Headset Jack

The external headset jack connects a mobile phone style headset to your mobile computer for use in noisy environments. The jack is a 2.5 mm, three-conductor jack, with autosensing of the headset jack insertion which disables the internal speaker and microphone. The external headset jack is located on the bottom of the mobile computer next to the Hirose docking connector.

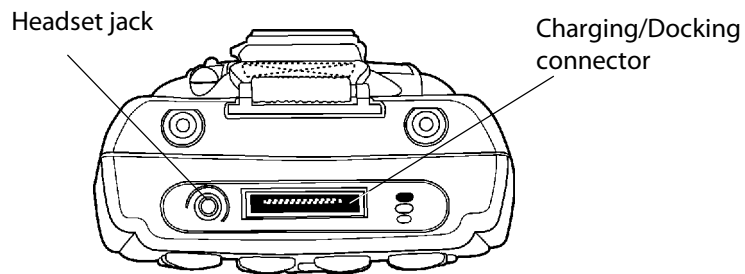


This is the bottom of the 700 Color Computer. Note that the keypad is to the bottom in this illustration.

Battery




Power

The 700 Series Computer comes equipped with a 14.4 Watt-hour, 7.2V, replaceable Lithium-Ion (LiIon) battery. To view the status of this battery from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Power** icon → the **Power** tab to view the current status of both the main battery and the backup battery. Tap **ok** to exit this information.

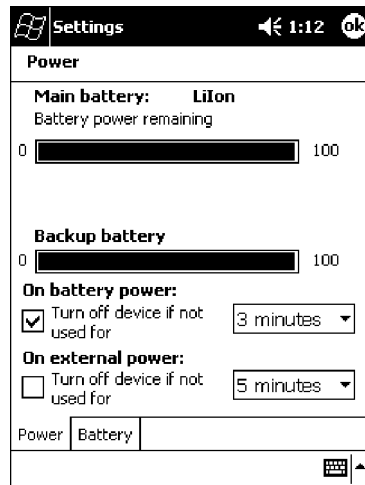Unit
Information

You can also view the battery status for the 700 Series Computer by accessing the **Unit Information** control panel applet. Tap **Start** → **Settings** → the **System** tab → the **Unit Information** icon → the **Battery Status** tab to view the current status. Tap **ok** to exit this information.

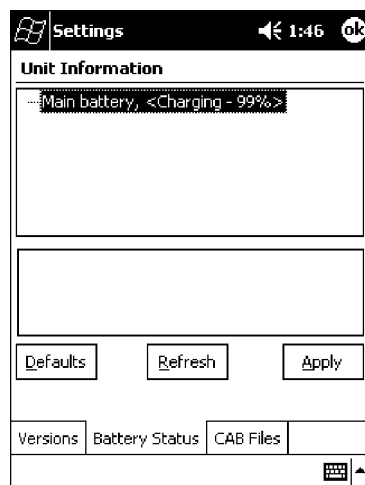

If your computer shuts down because of low battery conditions, your computer will not operate. This is done to ensure that data is protected. Although the battery will protect the data against loss for several hours, you should connect your computer to a power source when you first detect a low battery condition.


Your computer contains an internal super capacitor, a temporary power storage device, that protects data for up to ten minutes. This is to give you time to replace the main battery pack before that data is lost. *Be sure to put the computer in a suspend mode before doing so.*

If you have at least one device in your 700 Series Computer (radio, scanner, imager, or Ethernet), the battery power fail level is set so that after the system shuts down in a low battery condition, there is still sufficient charge to allow the unit to remain configured, keep proper time, and maintain DRAM (Dynamic Random Access Memory) for at least 23 to 32 hours at room temperature *if* the main battery remains in the mobile computer. The configuration and time are lost if:

- The battery discharges beyond this level.
- The battery is removed when the computer is *not in suspend mode*.
- A cold reset is performed on the computer.



You can modify RAM maintenance in a limited way. On the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Power** icon → the **Battery** tab. Drag the slider bar to the right to change the suspend voltage to favor suspend time over rundown time, then click **ok** to exit.

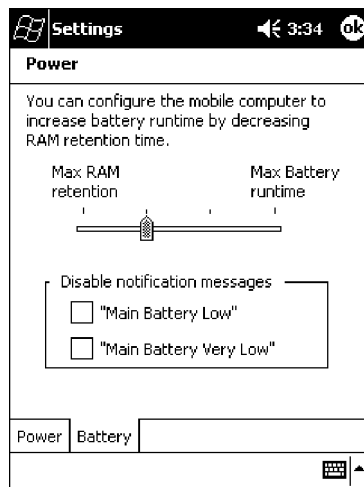

Beeper



Note: Each time the 700 Computer is cold-booted, all default settings are restored.

If the beeper is disabled on your 700 Color Computer, do the following instructions to enable the beeper. If you are not able to enable the beeper, then contact Customer Support.


For information about setting volume levels for screen taps, ActiveSync alert noises, etc., tap **Start** → **Help** → **Pocket PC Basics**, then select **Notifications**.

Enable the Beeper



Do the following to enable the beeper:

- 1 Tap **Start** → **Settings** → the **Personal** tab → the **Sounds & Notifications** icon → the **Volume** tab.
- 2 Drag the **System volume** slider bar to the right off the “Silent” position.
- 3 Tap **ok** to exit this applet.

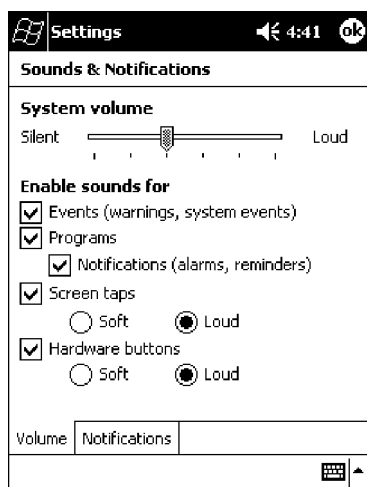

Disable the Scanner Mute

Do the following to disable the mute feature on the scanner.




Audio

- 1 Tap **Start** → **Settings** → the **System** tab → the **Audio** icon, then select **User defined audio settings**.



- 2 Tap the **Input Mixing** tab, then clear (or uncheck) the **SCAN Mute** box.
- 3 Drag its slider bar (note the greyed slider bar) to the appropriate level of loudest, with the left side being the most quiet and the right side being the most loud.
- 4 Tap **ok** to exit this applet.

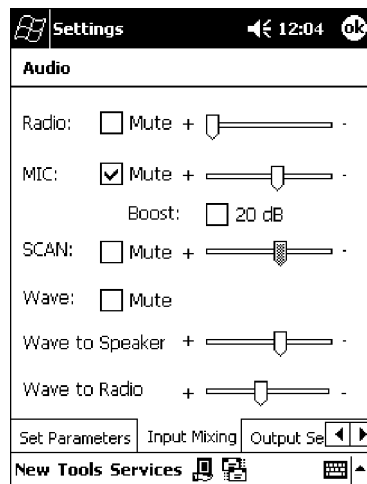


Select a Beeper Volume



Do the following to select a beeper volume. 700 Computers built with a laser scanner have three options: Off, High, or Medium like in this sample illustration. 700 Computers built with an imager have just two: Beeper or Vibrate. See Appendix A, “*Configurable Settings*,” for more information about the **Beeper Volume** or **Beeper** option.

- 1 Tap **Start** → **Settings** → the **System** tab → the **Data Collection** icon to access its control panel applet.
- 2 Use the right and left arrows to scroll to the **Beeper/LED** tab, then tap this tab.
- 3 *For units with laser scanners:*
Tap **Beeper Volume**, select an option, then tap **Apply** to change the setting.
For units with imagers:
Tap **Beeper**, select either option, then tap **Apply** to change the setting.
- 4 Tap **ok** to confirm this change, then tap **ok** to exit the Data Collection control panel applet.

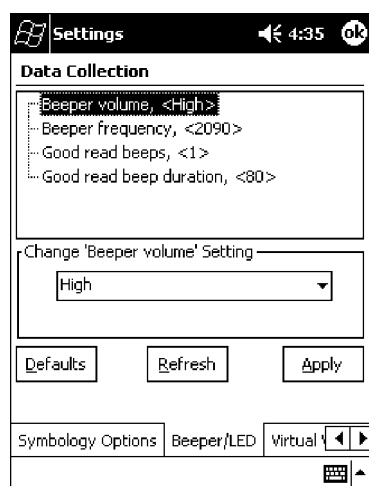


This illustration shows the screen for a 700 Color Computer built with a laser scanner.

Disable the Beeper



Do the following to disable the beeper:

- 1 Tap **Start** → **Settings** → the **Personal** tab → **Sounds & Notifications** → the **Volume** tab.
- 2 Drag the **System volume** slider bar completely to the left to the “Silent” position.
- 3 Tap **ok** to exit this applet.

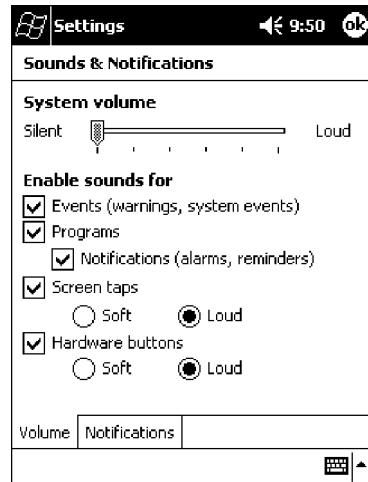


Keypad

Instructions for the keypad include the backlight and keypress sequences.

Backlight for Keypad



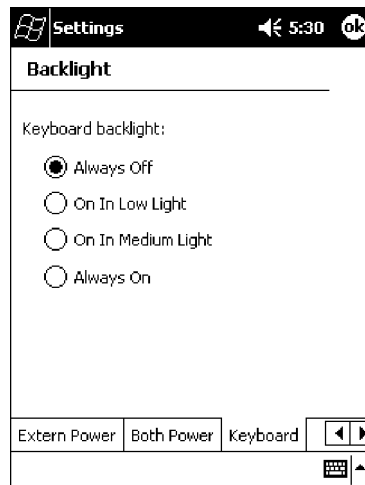

You can configure your keypad to turn on a backlight to assist you when you are working in low lighting. To adjust the backlight for the keypad, tap **Start** → **Settings** → the **System** tab → the **Backlight** icon. Use the left/right scroll arrows to move to and tap the **Keyboard** tab. Make your selection, then tap **ok** to exit this applet.









Key Sequences

Use the following key sequences to enter characters into your 700 Color Computer using either a numeric keypad or an alphanumeric keypad.

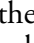
[Gold] or [Gold/White] Plane Keys




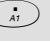





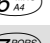


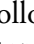














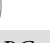
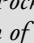
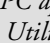
The [Gold]  plane key (numeric keypad) or the [Gold/White]  plane key (alphanumeric keypad) provides you access to display controls, special characters, and Pocket PC options.

Press the [Gold]  key or the [Gold/White]  key for each gold plane key stroke you wish to make. For example to turn on the front light, press and hold the [Gold]  key plus the  key on the numeric keypad or press and hold the [Gold/White]  key plus the  key on the alphanumeric keypad. To turn the front light off, press the appropriate keys again.


Below and on the next page are the key sequences.































Numeric Keypad

The following table lists sequences that use the [Gold]  plane key. See Chapter 2, “Pocket PC 2002,” for information about the Pocket PC applications.

Press the Keys	To Do This
[Gold]  	Toggle the backlight on or off (also goes through backlight power levels if held down)
[Gold]  	Access the Pocket PC Record application (<i>see Note</i>).
[Gold]  	Access the Pocket PC Calendar application (<i>see Note</i>).
[Gold]  	Access the Pocket PC Contacts application (<i>see Note</i>).
[Gold]  	Access the Pocket PC Tasks application (<i>see Note</i>).
[Gold]  	Move up one page.
[Gold]  	Enter an asterisk (*).
[Gold]  	Move down one page.
[Gold]  	Access the Pocket PC Start menu.
[Gold]  	Enter an at symbol (@).
[Gold]  	Enter a backslash (/).
[Gold]  	Enter a minus sign (–).
[Gold]  	Enter a plus sign (+).
[Gold]  	Tab to the right.
[Gold]  	Tab to the left.
<i>Note: Pocket PC applications are accessible only if configured to do so in the App Launch portion of the Utilities control panel applet. See page 393 for more information.</i>	

Alphanumeric Keypad


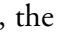

The following table lists sequences that use the [Gold/White]  plane key. See Chapter 2, “Pocket PC 2002,” for information about the Pocket PC applications.

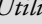
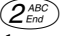
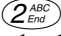
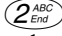
Press the Keys	To Do This
[Gold/White]  	Toggle the backlight on or off (also goes through backlight power levels if held down)
[Gold/White]  	Access the Pocket PC Record application (<i>see Note</i>).
[Gold/White]  	Access the Pocket PC Calendar application (<i>see Note</i>).
[Gold/White]  	Access the Pocket PC Contacts application (<i>see Note</i>).
[Gold/White]  	Access the Pocket PC Tasks application (<i>see Note</i>).
[Gold/White]  	Move up one page.
[Gold/White]  	Enter an asterisk (*).
[Gold/White]  	Move down one page.
[Gold/White]  	Access the Pocket PC Start menu.
[Gold/White]  	Enter an at symbol (@).
[Gold/White]  	Enter a backslash (/).
[Gold/White]  	Enter a minus sign (–).
[Gold/White]  	Enter a plus sign (+).
[Gold/White]  	Tab to the right.
[Gold/White]  	Tab to the left.
<i>Note: Pocket PC applications are accessible only if configured to do so in the App Launch portion of the Utilities control panel applet. See page 393 for more information.</i>	



Alpha (Blue) Plane Keys


The alphabet can be entered with either the numeric keypad or the alpha-numeric keypad. Below and on the next page are the key sequences.








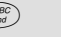



















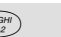
















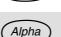
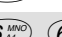

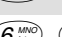






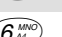










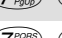























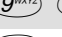
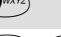



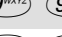







Numeric Keypad

When you press , the Scanning/Alpha LED () shows 'red' for the Alpha mode. The keypad stays in Alpha mode until you press .


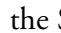

To type a lowercase 'c,' press     (the [2] key three times). To type a letter on the same key as the last letter entered, wait two seconds, then enter the correct series of keystrokes to create the next letter.


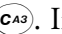


While you are in the Alpha mode and you press  to initiate the CAPS mode, you will render a CAPS LOCK until you press  again. Once you are in CAPS mode, you stay in CAPS until it is pressed again.


Press  to enter a space.




































































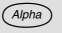



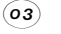









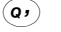

























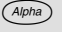



















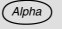


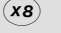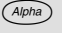To Enter	Press the Keys	To Enter	Press the Keys
a	 	A	  
b	  	B	   
c	   	C	    
d	 	D	  
e	  	E	   
f	   	F	    
g	 	G	  
h	  	H	   
i	   	I	    
j	 	J	  
k	  	K	   
l	   	L	    
m	 	M	  
n	  	N	   
o	   	O	    
p	 	P	  
q	  	Q	   
r	   	R	    
s	    	S	     
t	 	T	  
u	  	U	   
v	   	V	    
w	 	W	  
x	  	X	   
y	   	Y	    
z	    	Z	     

Alphanumeric Keypad

When you press , the Scanning/Alpha LED () lights 'red' to indicate Alpha mode. The keypad stays in the Alpha mode until you press  again.

If you want to type a lowercase 'c,' press [Gold/White]  . If you want an uppercase "C," press and hold the  key, then press .

Press  to enter a space.

To Enter	Press the Keys	To Enter	Press the Keys
a	 	A	  
b	 	B	  
c	 	C	  
d	 	D	  
e	 	E	  
f	 	F	  
g	 	G	  
h	 	H	  
i	 	I	  
j	 	J	  
k	 	K	  
l	 	L	  
m	 	M	  
n	 	N	  
o	 	O	  
p	 	P	  
q	 	Q	  
r	 	R	  
s	 	S	  
t	 	T	  
u	 	U	  
v	 	V	  
w	 	W	  
x	 	X	  
y	 	Y	  
z	 	Z	  

Modem Support

The 700 Series Computer has the following modem options:

- Modem dock that provides charging and includes a built-in modem and a serial port between which an application can switch.
- Snap-on modem, a stand-alone product, that attaches to the bottom of your 700 Color Computere. Note that this modem cannot be placed in a dock, printer, or other devices. Contact your Intermec representative for more information.

Storage Media



Note: MultiMediaCards (MMCs) are not supported in the 700 Series Computers.


To access either the CompactFlash (CF) or Secure Digital (SD) card slot, locate the access door at the top of the 700 Series Computer, remove its two screws, then remove the door. See the *700 Series Color Mobile Computer Quick Start Guide* P/N: 962-054-053 for more information.

CompactFlash Cards

The CompactFlash card slot accepts either a storage card or the 802.11b radio, which is factory-installed and cannot be removed.

Secure Digital Cards

The Secure Digital card slot accepts storage cards only.

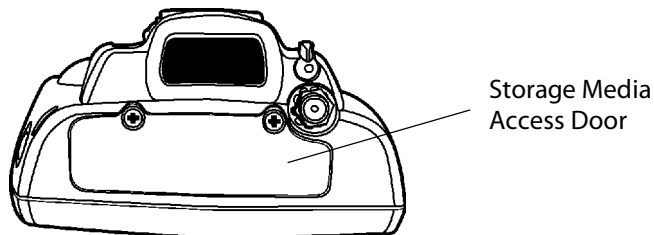


This is the top of the 700 Color Computer. Note that the keypad is to the bottom in this illustration.

Software Build Version


To check to see if your 700 Series Computer has the latest build, select **Start** → **Internet Explorer** → the **Intermec** logo.



The latest software build version is displayed beneath the **Version Information** title. This information would be useful should you need assistance.

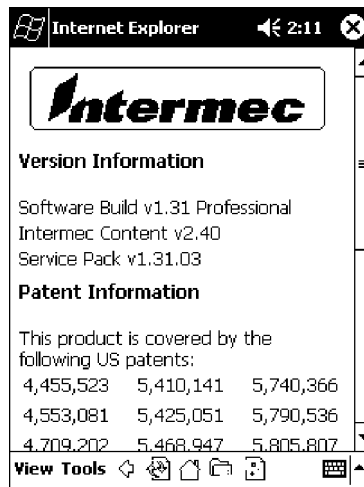

You can also view the latest software build by accessing the **Unit Information** control panel applet. Select **Start** → **Settings** → the **System** tab → the **Unit Information** icon → the **Versions** tab to view the current build version.

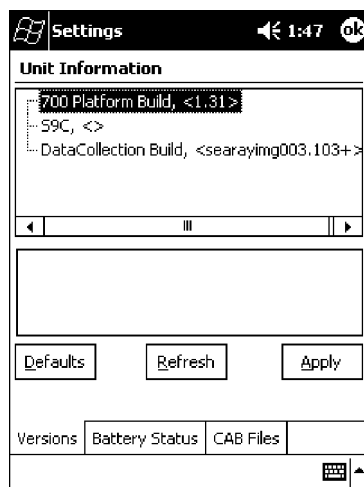

Vibrator



Note: Each time the 700 Computer is cold-booted, all default settings are restored.


If your 700 Color Computer is built with an imager or scanner and the vibrator is disabled, do the following instructions to enable the vibrator. If you are not able to enable the vibrator, then contact Customer Support.

For information about setting volume levels for screen taps, ActiveSync alert noises, etc., tap **Start** → **Help** → **Pocket PC Basics**, then select **Notifications**.

See Chapter 7, “*Programming*,” to see how to programatically control the vibrator. See Appendix A, “*Configurable Settings*,” for more information about the **Beeper Volume** option.



- 1 Tap **Start** → **Settings** → the **System** tab → the **Data Collection** icon to access its control panel applet.
- 2 Use the right and left arrows to scroll to the **Beeper/LED** tab, then tap this tab.
- 3 Tap **Beeper**, select the “Vibrate” option, then tap **Apply**.
- 4 Tap **ok** to confirm this change, then tap **ok** to exit the Data Collection control panel applet.

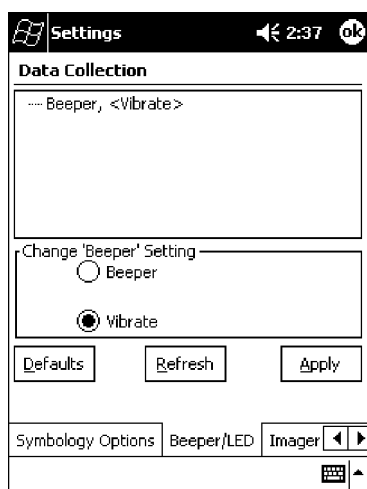

Wireless Network Support

Radios are installed at the factory and cannot be installed by a user. The 700 Color Computer must be serviced to install or replace radios. Contact your Intermec representative for more information. See Chapter 4, “*Network Support*” for information about supported radios.

Accessories

The following accessories are available for the 700 Series Computer. *Note that this is not a complete list.* Contact your Intermec representative for information about these and other accessories that are not in this list.

Accessory Descriptions	Intermec Part Number
AC Power Cord 3-prong, U.S. (<i>contact your representative for cords available for outside the U.S.</i>)	321-054-001
Battery Pack	318-013-001
External Battery Charger (charges four batteries) <i>requires AC Adapter P/N: 851-061-002</i>	852-060-001
External Battery Charger (charges one battery) <i>requires AC Adapter P/N: 851-060-002</i>	852-060-002
Holster with Scan Handle	815-046-002
Holster without Scan Handle	815-046-001
Modem Cable, DA15 to Hirose	854-037-203
Multidock (<i>holds four 700 Series Computers</i>)	225-682-001
RS-232 Data Cable, Hirose to DB9M, 6.0 ft (1.83 m)	226-435-003
Scan Handle	714-525-001
Scan Handle, dockable	714-525-002
Single Dock	225-681-001
Single Dock Cable, RS-232, DB9 F to DB25 M, 6.0 ft (1.83 m)	226-084-001
Single Dock Cable, USB-A to USB-B, 6.5 ft (2.0 m) (<i>use with Single Dock P/N: 225-683-001</i>)	321-576-002
Single Dock Modem	225-683-002
Single Dock Null Modem Cable, DB9F to DB9F with T-screws	321-563-001
Single Dock USB/Ethernet	225-683-001
Storage Media — CompactFlash storage cards (16MB, 32MB, 64MB, 128MB)	856-028-XXX
Storage Media — Secure Digital storage cards (16MB, 32MB, 64MB, 128MB)	856-038-XXX
Vehicle Dock, two RS-232 serial (DB9M) ports in A/B configuration	225-685-001
Vehicle Dock with charge, one RS-232 serial (DB9M) port and power connection	225-680-001
Vehicle Dock Cable, RS-232, DB9F to DB25M, 6.0 ft (1.83 m)	226-084-001
Vehicle Cradle (<i>requires appropriate mounting hardware</i>)	225-680-101

What's New

The newest functionality is available in software build versions 1.31 or greater. These changes have occurred since the last release of this manual:

- Added information about ambient light sensor, the beeper, keypad sequences, the alphanumeric keypad, the vibrator, and an accessories list, to Chapter 1 “*Introduction*.”
- Added information about network selection APIs and notifications to Chapter 7, “*Programming*.”
- Added information about the MaxiCode symbology, the Utilities control panel applet, and the Wireless Network control panel applet to Appendix A, “*Configurable Settings*.”



2 Pocket PC 2002

This chapter introduces the Pocket PC 2002 operating system from Microsoft Corporation.

Introduction

Congratulations on purchasing a Pocket PC. Due to the size and capabilities of this 700 Series Color Mobile Computer, you can keep your most important business and personal information up-to-date and close at hand. Microsoft ActiveSync increases the power of your 700 Series Computer by allowing you to synchronize the information on your desktop or laptop computer with your 700 Series Computer. Picture yourself in the following situations:

- A Calendar reminder alerts you that it is time to catch the bus. You grab your 700 Color Pocket PC Mobile Computer and catch the bus just in time. Because ActiveSync keeps the information on your 700 Series Computer up-to-date, you leisurely review your task list, make notes about the new books and CDs you want to buy, and read and respond to e-mail messages. When you get back to the office, ActiveSync transfers any task changes you made, your notes, and your e-mail message responses to your desktop computer. For more information on ActiveSync, see “*Microsoft ActiveSync*” on page 43.
- While walking with a colleague, your 700 Color Pocket PC Mobile Computer rings. You look at the caller ID and see it is your manager who is calling. She asks if you two are free this afternoon for an emergency meeting. While your colleague fumbles through his paper organizer, you press a button on your 700 Series Computer and instantly see a list of today’s appointments and meetings. You are quickly able to tell your manager your available times, and make a note of the new meeting while on the call. You hang up, send an e-mail with a schedule request for the three of you at the desired location. For more information on scheduling appointments and meetings, see “*Microsoft Pocket Outlook*” on page 45.
- You are meeting your friends tonight for dinner and a movie. You download the latest movie information from the Internet to your desktop computer and then synchronize it with your 700 Series Computer. At dinner, you pull out your 700 Color Pocket PC Mobile Computer and review your movie options with your friends. For more information on downloading Web pages to your 700 Series Computer, see “*Pocket Internet Explorer*” on page 76.

Premium versus Professional Editions

Your 700 Series Computer will have either the Premium Edition or the Professional Edition of Pocket PC 2002. Do the following to determine which edition of Pocket PC 2002 is on your unit.


- 1 Select **Start** → **Internet Explorer** → the **Intermec** logo.



- 2 Note the “Software Build” information displayed beneath the **Version Information** title.



Note: If you have an older software build, your unit may say either “PREM” (*which indicates the Premium Edition*) or “PRO” (*which indicates the Professional Edition*).

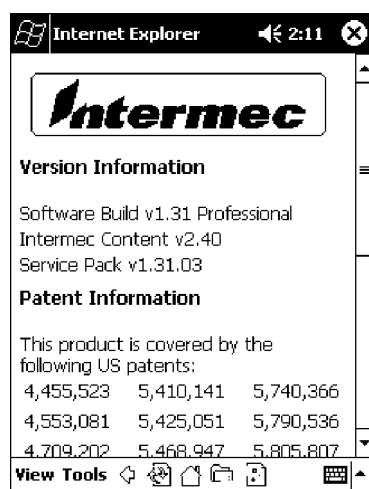

- 3 Tap the **Close** icon in the top right corner to exit the Internet Explorer. Below is a list of components for each edition of Pocket PC 2002:

Component	Premium Edition	Professional Edition
Microsoft ActiveSync Client (<i>page 43</i>)	X	X
Microsoft Pocket Outlook (<i>page 45</i>)	X	X
Pocket Word (<i>page 61</i>)	X	X
Pocket Excel (<i>page 66</i>)	X	X
MSN Messenger (<i>page 67</i>)	X	
Windows Media Player for Pocket PC (<i>page 71</i>)	X	RAM
Microsoft Reader (<i>page 72</i>)	X	RAM
Pocket Internet Explorer (<i>page 76</i>)	X	X



Note: Components marked with “RAM” are provided on a Companion CD for download into RAM rather than burned into Flash ROM.

Where to Find Information

This chapter describes your 700 Series Computer hardware, provides an overview of the programs on your 700 Series Computer, and explains how to connect your 700 Series Computer to a desktop computer, a network, or the Internet. For instructions on setting up your 700 Series Computer and installing ActiveSync, see the Quick Start Card. The following is a guide to more information to assist you use your 700 Series Computer.

For information on:	See this source:
Programs on your mobile computer.	This chapter and mobile computer Help. To view Help, tap Start → Help .
Additional programs that can be installed on the mobile computer.	The Pocket PC Companion CD.
Connecting to and synchronizing with a desktop computer.	The Quick Start Card or <i>AutoSync Help</i> on your desktop computer. To view Help, click Help → Microsoft ActiveSync Help .
Last-minute updates and detailed technical information.	The Read Me files, located in the Microsoft ActiveSync folder on the desktop computer and on the Pocket PC Companion CD.
Up-to-date information on your Pocket PC.	http://www.microsoft.com/mobile/pocketpc

Pocket PC and many of the technologies supported by the 700 Series Computer are not from Intermec Technologies. Many of the utilities and features on a Pocket PC device come directly from Microsoft without any modification from Intermec Technologies. There may be certain Microsoft-specific issues that Intermec Technologies would not be able to support, so you will have to contact Microsoft Corporation. Use these URLs to determine your Microsoft support options:

- <http://msdn.microsoft.com/support/>
- <http://support.microsoft.com/>
- <news://news.microsoft.com> (*a free support option*)

Basic Skills

Learning to use your 700 Series Computer is easy. This describes the basic concepts of using and customizing your 700 Series Computer.

Buttons and Stylus


Your 700 Series Computer has hardware buttons that control actions and scroll functions, and a stylus for selecting items and entering information. On the 700 Series Computer, the stylus replaces the mouse.

- **Tap:**
Touch the screen once with the stylus to open items and select options.
- **Drag:**
Hold the stylus on the screen and drag across the screen to select text and images. Drag in a list to select multiple items.
- **Tap and hold:**
Tap and hold the stylus on an item to see a list of actions available for that item. On the pop-up menu that appears, tap the action to be performed.







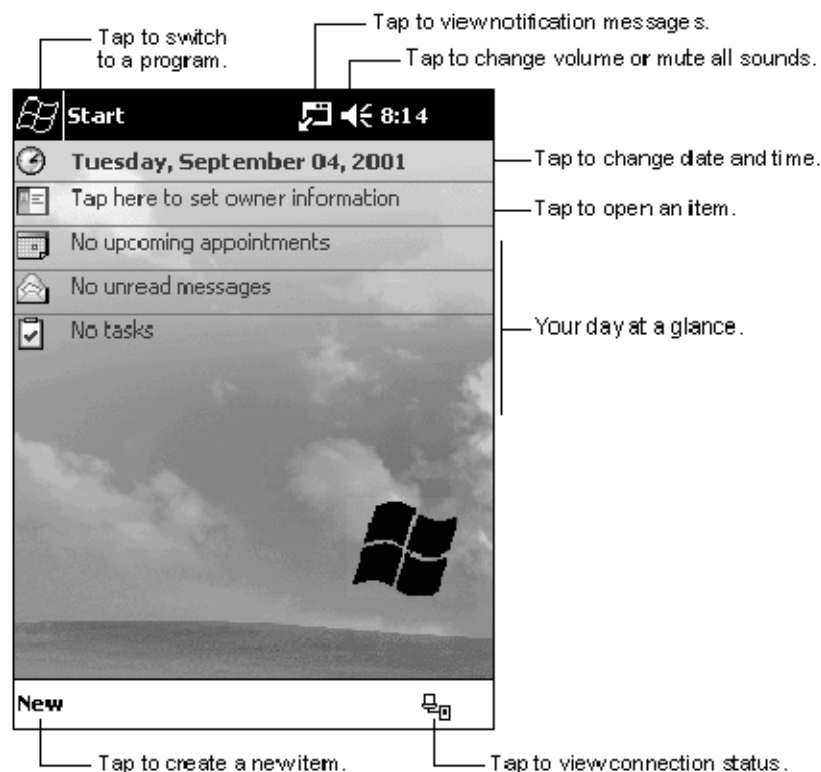





Today Screen



When you turn on your 700 Series Computer for the first time each day (or after four hours of inactivity), you will see the **Today** screen. You can also display it by tapping the **Start** flag (shown left) and then **Today**. On the **Today** screen, you can see at a glance important information for the day.



Following are some of the status icons you may see:

<u>Status Icon</u>	<u>Meaning:</u>
	Turns all sounds on and off.
	Backup battery is low.
	Main batteries are charging.
	Main batteries are low.
	Main batteries are very low.
	Main batteries are full.
	Connection is active.
	Synchronization is beginning or ending.
	Synchronization is occurring.
	Notification of one or more instant messages received.
	Notification of one or more e-mail messages received.
	If more notification icons need to be displayed than there is room to display them, the Notification icon (<i>shown left</i>) will display. Tap the icon to view all notification icons.

Programs

You can switch from one program to another by selecting it from the **Start** menu. (You can customize which programs you see on this menu. For information, see “*Adjusting Settings*” on page 40.) To access some programs, tap **Start** → **Programs**, and then the program name.

You can also switch to some programs by pressing a program button. Your 700 Series Computer has one or more program buttons located on the front or side of the computer. The icons on the buttons identify the programs to which they switch.



Note: Some programs have abbreviated labels for check boxes and drop-down menus. To see the full spelling of an abbreviated label, tap and hold the stylus on the label. Drag the stylus off the label so that the command is not carried out.

The following is a partial list of programs that are on your 700 Series Computer. Look on the Pocket PC Companion CD for additional programs that you can install onto your 700 Series Computer.



ActiveSync

Synchronize information between your 700 Series Computer and desktop computer.



Calendar

Keep track of your appointments and create meeting requests.



Contacts

Keep track of your friends and colleagues.



Inbox

Send and receive e-mail messages.



Pocket Internet Explorer

Browse Web and WAP (Wireless Application Protocol) sites, and download new programs and files from the Internet.



Notes

Create handwritten or typed notes, drawings, and recordings.



Tasks

Keep track of your tasks.



Pocket Excel

Create new workbooks or view and edit Excel workbooks created on your desktop computer.



MSN Messenger

Send and receive instant messages with your MSN Messenger contacts.




Pocket Word


Create new documents or view and edit Word documents created on your desktop computer.

Navigation Bar and Command Bar

The navigation bar is located at the top of the screen. It displays the active program and current time, and allows you to switch to programs and close screens.

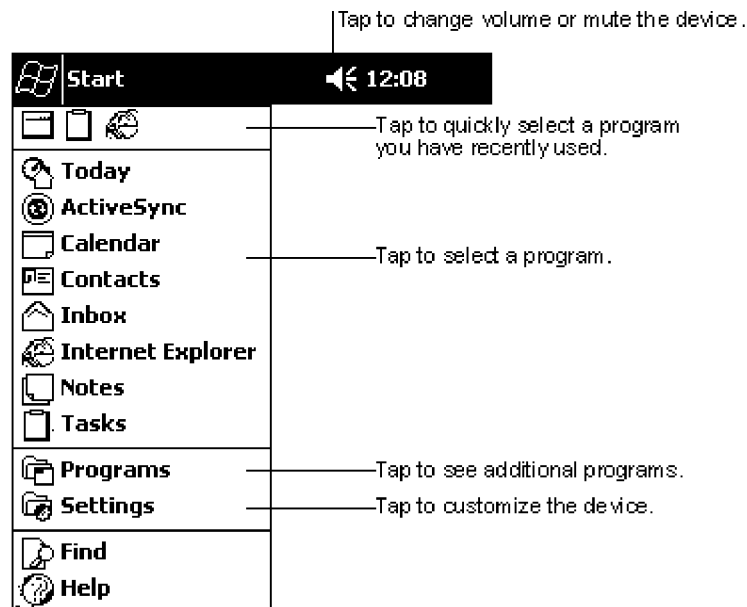


Use the command bar at the bottom of the screen to perform tasks in programs. The command bar includes menu names, buttons, and the **Input Panel** button. To create a new item in the current program, tap **New**. To see the name of a button, tap and hold the stylus on the button. Drag the stylus off the button so that the command is not carried out.

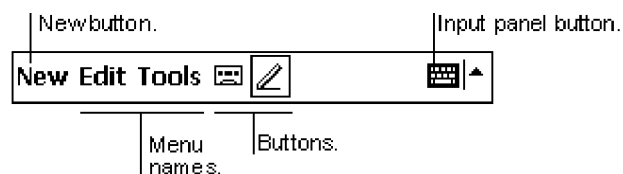

Pop-up Menus

With pop-up menus, you can quickly choose an action for an item. For example, you can use the pop-up menu in the contact list to quickly delete a contact, make a copy of a contact, or send an e-mail message to a contact. The actions in the pop-up menus vary from program to program. To access a pop-up menu, tap and hold the stylus on the item name that you want to perform the action on. When the menu appears, lift the stylus, and tap the action you want to perform. Or tap anywhere outside the menu to close the menu without performing an action.

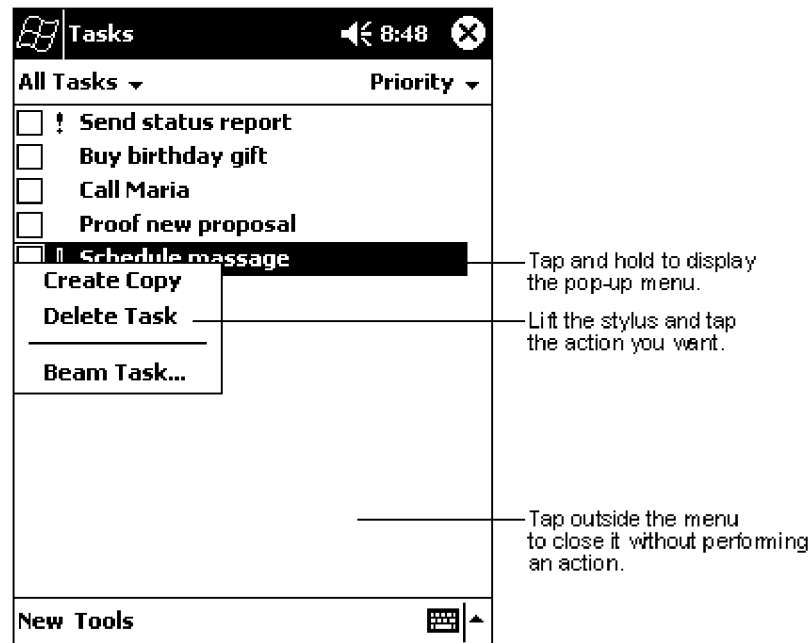

Notifications

Your 700 Series Computer reminds you in a variety of ways when you have something to do. For example, if you have set up an appointment in Calendar, a task with a due date in Tasks, or an alarm in Clock, you will be notified in any of the following ways:

- A message box appears on the screen.
- A sound, which you can specify, is played.
- A light flashes on your 700 Series Computer.
- A vibrator resonates from the 700 Series Computer.

To choose reminder types and sounds for your 700 Series Computer, tap **Start** → **Settings** → the **Personal** tab → **Sounds & Notifications**. The options you choose here apply throughout the 700 Series Computer.


Enter Information on Your 700 Series Computer

You have several options for entering new information:


- Use the input panel to enter typed text, either by using the soft keyboard or other input method.
- Write directly on the screen.
- Draw pictures on the screen.
- Speak into your 700 Series Computer microphone to record a message.
- Use Microsoft ActiveSync to synchronize or copy information from your desktop computer to your 700 Series Computer. For more information on ActiveSync, see *ActiveSync Help* on your desktop computer.

Use the input panel to enter information in any program on your 700 Series Computer. You can either type using the soft keyboard or write using **Block Recognizer**, **Letter Recognizer**, or **Transcriber**. In either case, the characters appear as typed text on the screen.

To show or hide the input panel, tap the **Input Panel** button. Tap the arrow next to the **Input Panel** button to see your choices.

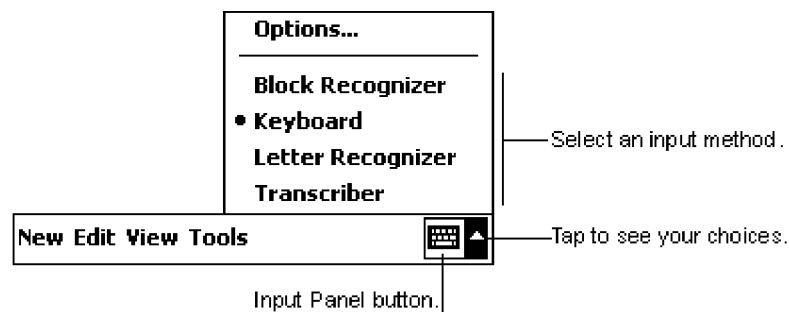

When you use the input panel, your 700 Series Computer anticipates the word you are typing or writing and displays it above the input panel. When you tap the displayed word, it is inserted into your text at the insertion point. The more you use your 700 Series Computer, the more words it learns to anticipate.

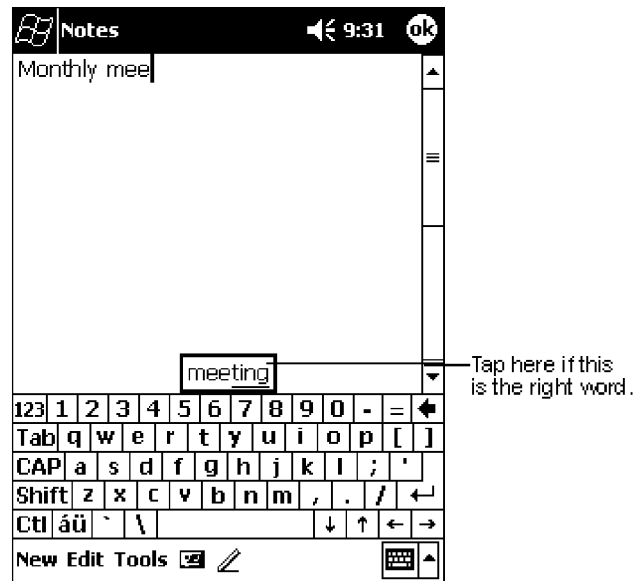

Note: To change word suggestion options, such as the number of words suggested at one time, tap **Start** → **Settings** → the **Personal** tab → **Input** → the **Word Completion** tab.

Typing With the Soft Keyboard

- 1 Tap the arrow next to the **Input Panel** button, and then **Keyboard**.
- 2 On the soft keyboard that is displayed, tap the keys with your stylus.

Using Block Recognizer

With Block Recognizer, you can input character strokes using the stylus that are similar to those used on other 700 Series Computers.

- 1 Tap the arrow next to the **Input Panel** button, then **Block Recognizer**.
- 2 Write a letter in the box.

When you write a letter, it is converted to typed text that appears on the screen. For specific instructions on using Block Recognizer, with Block Recognizer open, tap the question mark next to the writing area.

Using Letter Recognizer

With Letter Recognizer, you can write letters using the stylus just as you would on paper.

- 1 Tap the arrow next to the **Input Panel** button, then **Letter Recognizer**.
- 2 Write a letter in the box.

When you write a letter, it is converted to typed text that appears on the screen. For specific instructions on using Letter Recognizer, with Letter Recognizer open, tap the question mark next to the writing area.

Using Transcriber

With Transcriber, you can write anywhere on the screen using the stylus just as you would on paper. Unlike Letter Recognizer and Block Recognizer, you can write a sentence or more of information. Then, pause and let Transcriber change the written characters to typed characters.

- 1 Tap the arrow next to the **Input Panel** button, and then **Transcriber**.
- 2 Write anywhere on the screen.

For specific instructions on using Transcriber, with Transcriber open, tap the question mark in the lower right hand corner of the screen.

Selecting Typed Text

If you want to edit or format typed text, you must select it first.


- Drag the stylus across the text you want to select.

You can cut, copy, and paste text by tapping and holding the selected words and then tapping an editing command on the pop-up menu, or by tapping the command on the **Edit** menu.

Writing on the Screen

In any program that accepts writing, such as the Notes program, and in the **Notes** tab in Calendar, Contacts, and Tasks, you can use your stylus to write directly on the screen. Write the way you do on paper. You can edit and format what you have written and convert the information to text at a later time.

- Tap the **Pen** button to switch to writing mode. This action displays lines on the screen to help you write.

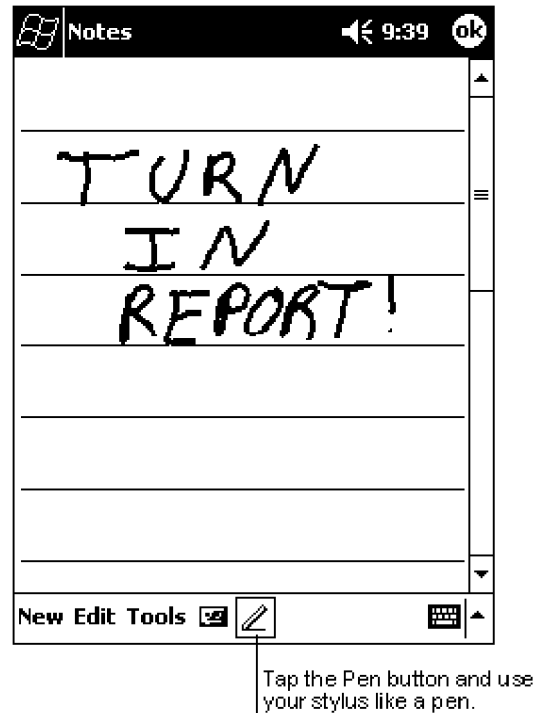

Note: Some programs that accept writing may not have the **Pen** button. See the documentation for that program to find out how to switch to writing mode.

Selecting the Writing

If you want to edit or format writing, you must select it first.

- 1 Tap and hold the stylus next to the text you want to select until the insertion point appears.
- 2 Without lifting, drag the stylus across the text you want to select.


If you accidentally write on the screen, tap **Tools** → **Undo** and try again. You can also select text by tapping the **Pen** button to deselect it and then dragging the stylus across the screen.

You can cut, copy, and paste written text in the same way you work with typed text: tap and hold the selected words and then tap an editing command on the pop-up menu, or tap the command on the **Edit** menu.


Converting Writing to Text

- Tap Tools → Recognize.

If you want to convert only certain words, select them before tapping **Recognize** on the **Tools** menu (or *tap and hold the selected words and then tap Recognize on the pop-up menu*). If a word is not recognized, it is left as writing.

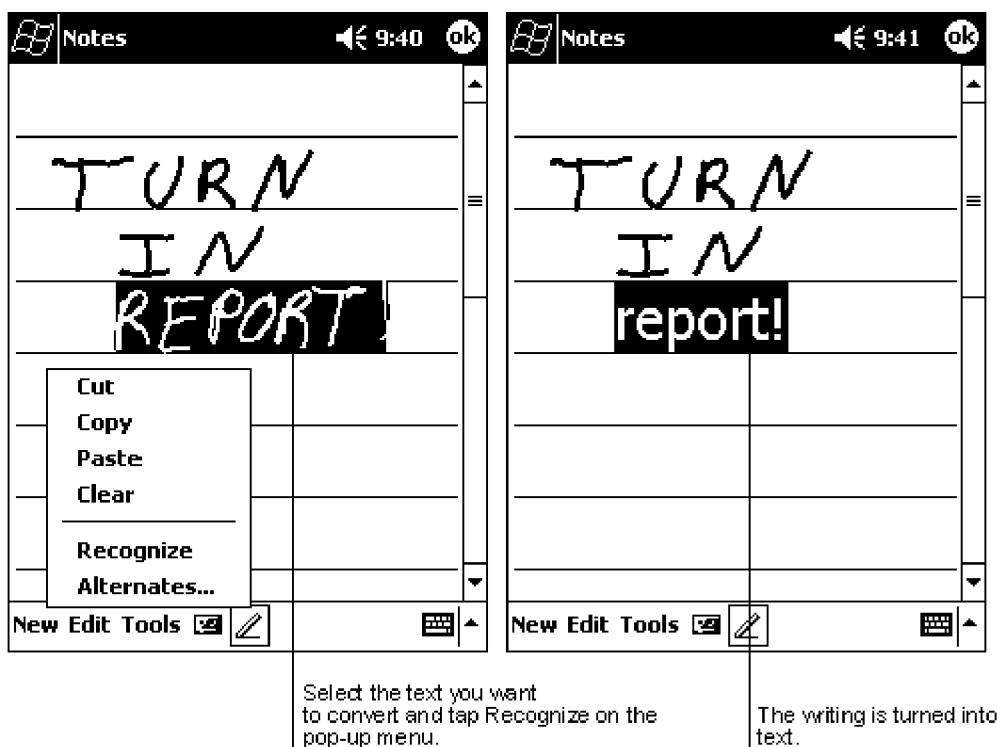

If the conversion is incorrect, you can select different words from a list of alternates or return to the original writing. To do so, tap and hold the incorrect word (tap one word at a time). On the pop-up menu, tap **Alternates**. A menu with a list of alternate words appears. Tap the word you want to use, or tap the writing at the top of the menu to return to the original writing.

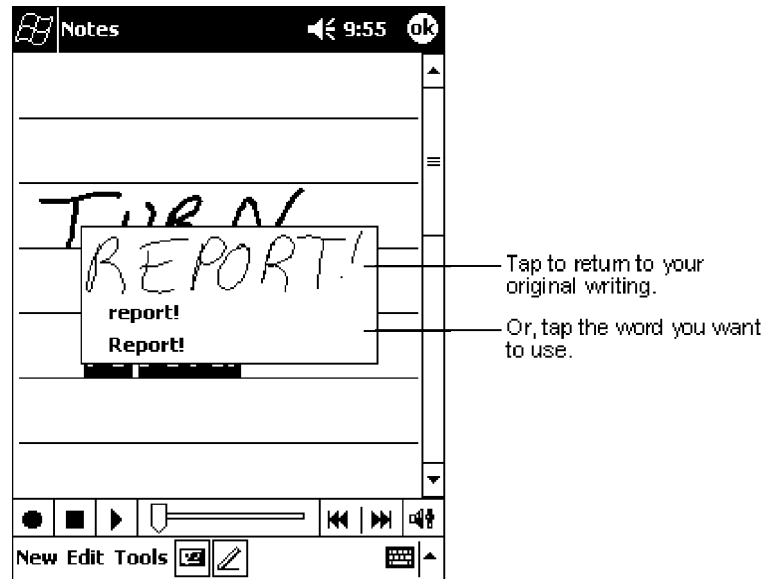

Tips for getting good recognition:


- Write neatly.
- Write on the lines and draw descenders below the line. Write the cross of the “t” and apostrophes below the top line so that they are not confused with the word above. Write periods and commas above the line.
- For better recognition, try increasing the zoom level to 300% using the **Tools** menu.
- Write the letters of a word closely and leave big gaps between words so that the 700 Series Computer can easily tell where words begin and end.
- Hyphenated words, foreign words that use special characters such as accents, and some punctuation cannot be converted.
- If you add writing to a word to change it (such as changing a “3” to an “8”) after you attempt to recognize the word, the writing you add will not be included if you attempt to recognize the writing again.

Drawing on the Screen

You can draw on the screen in the same way that you write on the screen. The difference between writing and drawing on the screen is how you select items and how they can be edited. For example, selected drawings can be resized, while writing cannot.

Creating a Drawing

- Cross three ruled lines on your first stroke. A drawing box appears. Subsequent strokes in or touching the drawing box become part of the drawing. Drawings that do not cross three ruled lines will be treated as writing.

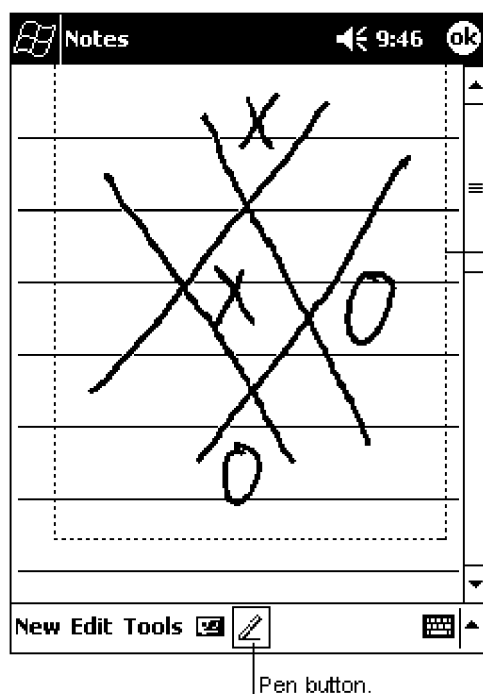

Note: You may want to change the zoom level so that you can more easily work on or view your drawing. Tap **Tools** and then a zoom level.

Selecting a Drawing

If you want to edit or format a drawing, you must select it first.

- Tap and hold the stylus on the drawing until the selection handle appears. To select multiple drawings, deselect the **Pen** button and then drag to select the drawings you want.

You can cut, copy, and paste selected drawings by tapping and holding the selected drawing and then tapping an editing command on the pop-up menu, or by tapping the command on the **Edit** menu. To resize a drawing, make sure the **Pen** button is not selected, and drag a selection handle.

Recording a Message

In any program where you can write or draw on the screen, you can also quickly capture thoughts, reminders, and phone numbers by recording a message. In Calendar, Tasks, and Contacts, you can include a recording in the **Notes** tab. In the Notes program, you can create a stand-alone recording or include a recording in a written note. If you want to include the recording in a note, open the note first. In the Inbox program, you can add a recording to an e-mail message.


Creating a Recording

- 1 Hold your computer's microphone near your mouth or source of sound.
- 2 Press and hold the **Record** hardware button on your 700 Series Computer until you hear a beep.
- 3 While holding down the **Record** button, make your recording.
- 4 To stop recording, release the **Record** button. Two beeps will sound. The new recording appears in the note list or as an embedded icon.




Note: You can also make a recording by tapping the **Record** button on the Recording toolbar.

To play a recording, tap it in the list or tap its icon in the note.

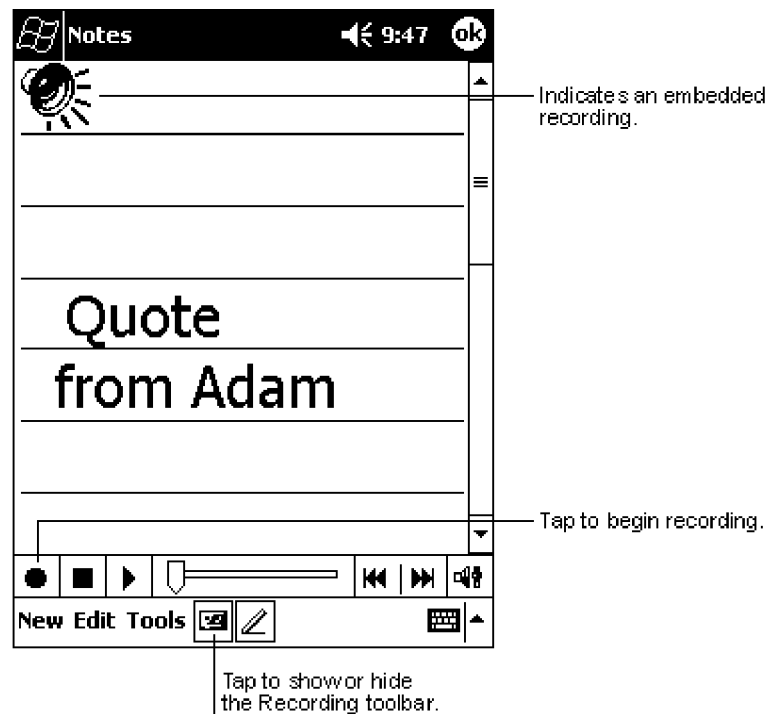

Using My Text

When using Inbox or MSN Messenger, use **My Text** to quickly insert pre-set or frequently used messages into the text entry area. To insert a message, tap **My Text** and tap a message.

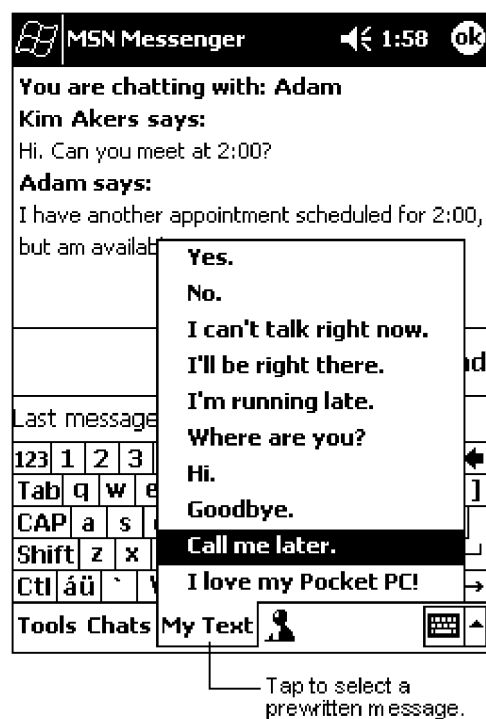

Note: You can add text after inserting a **My Text** message before sending it.

To edit a **My Text** message, in the **Tools** menu, tap **Edit** → **My Text Messages**. Select the message you wish to edit and make desired changes.

Finding and Organizing Information


The **Find** feature on your 700 Series Computer helps you quickly locate information.

Tap **Start** → **Find**. Enter the text you want to find, select a data type, and then tap **Go** to initiate the search.



Note: To quickly find information that is taking up storage space on your 700 Series Computer, select **Larger than 64 KB** in **Type**.

You can also use the File Explorer to find files on your 700 Series Computer and to organize these files into folders. Tap **Start** → **Programs** → **File Explorer**.

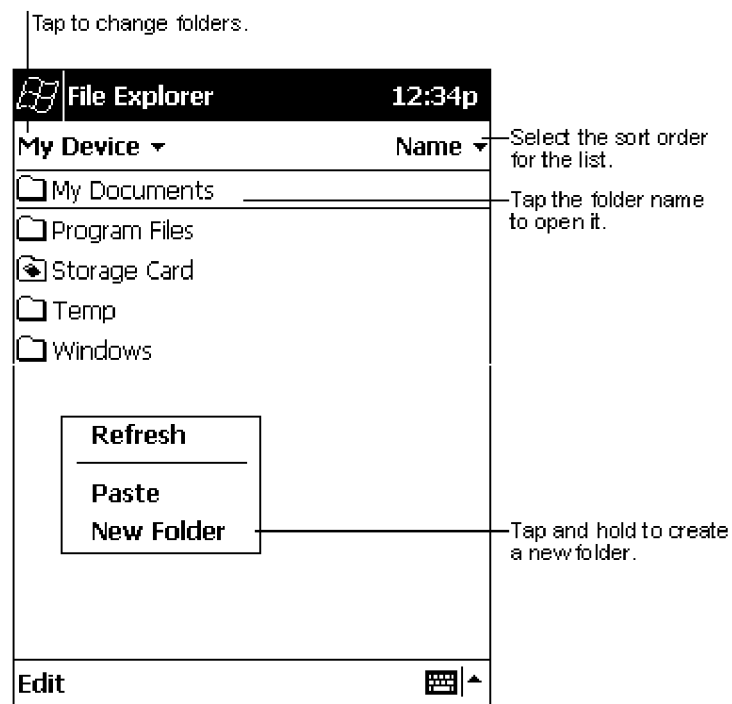

Note: You can move files in File Explorer by tapping and holding the item you want to move, and then tapping **Cut** or **Copy** and **Paste** on the pop-up menu.

Customizing Your 700 Series Computer

You can customize your 700 Series Computer by adjusting settings and installing additional software.

Adjusting Settings

You can adjust settings to suit the way you work. To see available options, tap **Start** → **Settings** → either the **Personal** tab or the **System** tab located at the bottom of the screen. You might want to adjust the following:

- **Clock:**
To change the time or to set alarms.
- **Menus:**
To customize what appears on the **Start** menu, and to enable a pop-up menu from the **New** button.
- **Owner Information:**
To enter your contact information.
- **Password:**
To limit access to your 700 Series Computer.
- **Power:**
To maximize battery life.
- **Today:**
To customize the look and information displayed on the **Today** screen.

Adding or Removing Programs

Programs added to your 700 Series Computer at the factory are stored in ROM (Read Only Memory). You cannot remove this software, and you will never accidentally lose ROM contents. ROM programs can be updated using special installation programs with a *.XIP extension. All other programs and data files added to your 700 Series Computer after factory installation are stored in RAM (Random Access Memory).

You can install any program created for your 700 Series Computer, as long as your 700 Series Computer has enough memory. The most popular place to find software for your 700 Series Computer is on the Pocket PC Web site (<http://www.microsoft.com/mobile/pocketpc>).

Adding Programs Using ActiveSync

You will need to install the appropriate software for your 700 Series Computer on your desktop computer before installing it on your 700 Series Computer.

- 1 Determine your 700 Series Computer and processor type so that you know which version of the software to install. Tap **Start** → **Settings** → the **System** tab → **About** → the **Version** tab, then make a note of the information in **Processor**.
- 2 Download the program to your desktop computer (or insert the CD or disk that contains the program into your desktop computer). You may see a single *.XIP, *.EXE, or *.ZIP file, a SETUP.EXE file, or several versions of files for different 700 Series Computer types and processors. Be sure to select the program designed for the Pocket PC and your 700 Series Computer processor type.

- 3 Read any installation instructions, Read Me files, or documentation that comes with the program. Many programs provide special installation instructions.
- 4 Connect your 700 Series Computer and desktop computer.
- 5 Double-click the *.EXE file.
 - If the file is an installer, the installation wizard will begin. Follow the directions on the screen. Once the software has been installed on your desktop computer, the installer will automatically transfer the software to your 700 Series Computer.
 - If the file is not an installer, you will see an error message stating that the program is valid but it is designed for a different type of computer. You will need to move this file to your 700 Series Computer. If you cannot find any installation instructions for the program in the Read Me file or documentation, use ActiveSync Explore to copy the program file to the Program Files folder on your 700 Series Computer. For more information on copying files using ActiveSync, see *ActiveSync Help*.

Once installation is complete, tap **Start** → **Programs**, and then the program icon to switch to it.

Adding a Program Directly from the Internet

- 1 Determine your 700 Series Computer and processor type so that you know which version of the software to install. Tap **Start** → **Settings** → the **System** tab → **About** → the **Version** tab, then make a note of the information in **Processor**.
- 2 Download the program to your 700 Series Computer straight from the Internet using Pocket Internet Explorer. You may see a single *.XIP, *.EXE, or *.ZIP file, a SETUP.EXE file, or several versions of files for different 700 Series Computer types and processors. Be sure to select the program designed for the Pocket PC and your 700 Series Computer processor type.
- 3 Read any installation instructions, Read Me files, or documentation that comes with the program. Many programs provide installation instructions.
- 4 Tap the file, such as a *.XIP or *.EXE file. The installation wizard will begin. Follow the directions on the screen.

Adding a Program to the Start Menu

Tap **Start** → **Settings** → **Menus** → the **Start Menu** tab, and then the check box for the program. If you do not see the program listed, you can either use File Explorer on the 700 Series Computer to move the program to the **Start Menu** folder, or use ActiveSync on the desktop computer to create a shortcut to the program and place the shortcut in the **Start Menu** folder.

- **Using File Explorer on the 700 Series Computer:**

Tap **Start** → **Programs** → **File Explorer**, and locate the program (tap the folder list, labeled **My Documents** by default, and then **My Device** to see a list of all folders on the 700 Series Computer). Tap and hold the program and tap **Cut** on the pop-up menu. Open the **Start Menu** folder located in the **Windows** folder, tap and hold a blank area of the window, and tap **Paste** on the pop-up menu. The program will now appear on the **Start** menu. For more information on using File Explorer, see “*Finding and Organizing Information*” on page 39.

- **Using ActiveSync on the desktop computer:**

Use the Explorer in ActiveSync to explore your 700 Series Computer files and locate the program. Right-click the program, and then click **Create Shortcut**. Move the shortcut to the **Start Menu** folder in the **Windows** folder. The shortcut now appears on the **Start** menu. For more information, see *ActiveSync Help*.

Removing Programs

- Tap **Start** → **Settings** → the **System** tab → **Remove Programs**.

If the program does not appear in the list of installed programs, use File Explorer on your 700 Series Computer to locate the program, tap and hold the program, and then tap **Delete** on the pop-up menu.

Microsoft ActiveSync

Visit the following Microsoft Web site for the latest in updates, technical information, and samples:

- <http://www.microsoft.com/mobile/pocketpc/downloads/activesync.asp>

Using Microsoft ActiveSync, you can synchronize the information on your desktop computer with the information on your 700 Series Computer. Synchronization compares the data on your 700 Series Computer with your desktop computer and updates both computers with the most recent information. For example:

- Keep Pocket Outlook data up-to-date by synchronizing your 700 Series Computer with Microsoft Outlook data on your desktop computer.
- Synchronize Microsoft Word and Microsoft Excel files between your 700 Series Computer and desktop computer. Your files are automatically converted to the correct format



Note: By default, ActiveSync does not automatically synchronize all types of information. Use ActiveSync options to turn synchronization on and off for specific information types.

With ActiveSync, you can also:

- Back up and restore your 700 Series Computer data.
- Copy (rather than synchronize) files between your 700 Series Computer and desktop computer.
- Control when synchronization occurs by selecting a synchronization mode. For example, you can synchronize continually while connected to your desktop computer or only when you choose the synchronize command.
- Select which information types are synchronized and control how much data is synchronized. For example, you can choose how many weeks of past appointments you want synchronized.


Before you begin synchronization, install ActiveSync on your desktop computer from the Pocket PC Companion CD. For more information on installing ActiveSync, see your Quick Start card. ActiveSync is already installed on your 700 Series Computer.

After installation is complete, the ActiveSync Setup Wizard helps you connect your 700 Series Computer to your desktop computer, set up a partnership so you can synchronize information between your 700 Series Computer and your desktop computer, and customize your synchronization settings. Your first synchronization process will automatically begin when you finish using the wizard.

After your first synchronization, take a look at Calendar, Contacts, and Tasks on your 700 Series Computer. You will notice that information you have stored in Microsoft Outlook on your desktop computer has been copied to your 700 Series Computer, and you did not have to type a word. Disconnect your 700 Series Computer from your computer and you are ready to go!

Once you have set up ActiveSync and completed the first synchronization process, you can initiate synchronization from your 700 Series Computer. To switch to ActiveSync on your 700 Series Computer, tap **Start** → **ActiveSync**. Note that if you have a wireless LAN card, you can synchronize remotely from your 700 Series Computer.

For information about using ActiveSync on your desktop computer, start ActiveSync on your desktop computer, and then see *ActiveSync Help*.

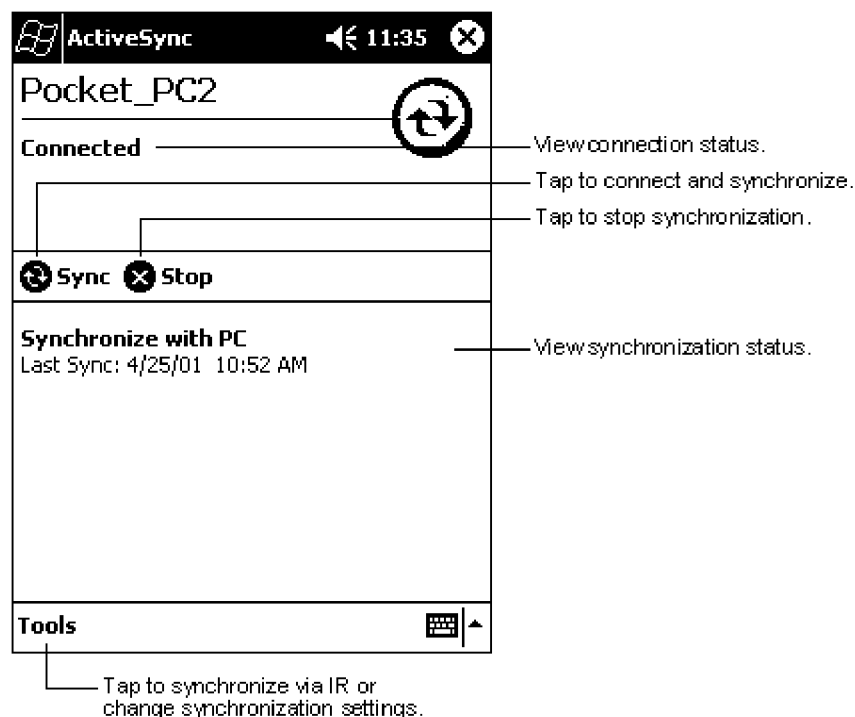

For more information about ActiveSync on your 700 Series Computer, switch to ActiveSync, then tap **Start** → **Help**.

Microsoft Pocket Outlook



Note: The Professional Edition of Microsoft Pocket Outlook does not include a spell checker.


Microsoft Pocket Outlook includes Calendar, Contacts, Tasks, Inbox, and Notes. You can use these programs individually or together. For example, e-mail addresses stored in Contacts can be used to address e-mail messages in Inbox.

Using ActiveSync, you can synchronize information in Microsoft Outlook or Microsoft Exchange on your desktop computer with your 700 Series Computer. You can also synchronize this information directly with a Microsoft Exchange server. Each time you synchronize, ActiveSync compares the changes you made on your 700 Series Computer and desktop computer or server and updates both computers with the latest information. For information on using ActiveSync, see *ActiveSync Help* on the desktop computer.

You can switch to any of these programs by tapping them on the **Start** menu.

Calendar: Scheduling Appointments and Meetings

Use Calendar to schedule appointments, including meetings and other events. You can check your appointments in one of several views (Agenda, Day, Week, Month, and Year) and easily switch views by using the **View** menu.

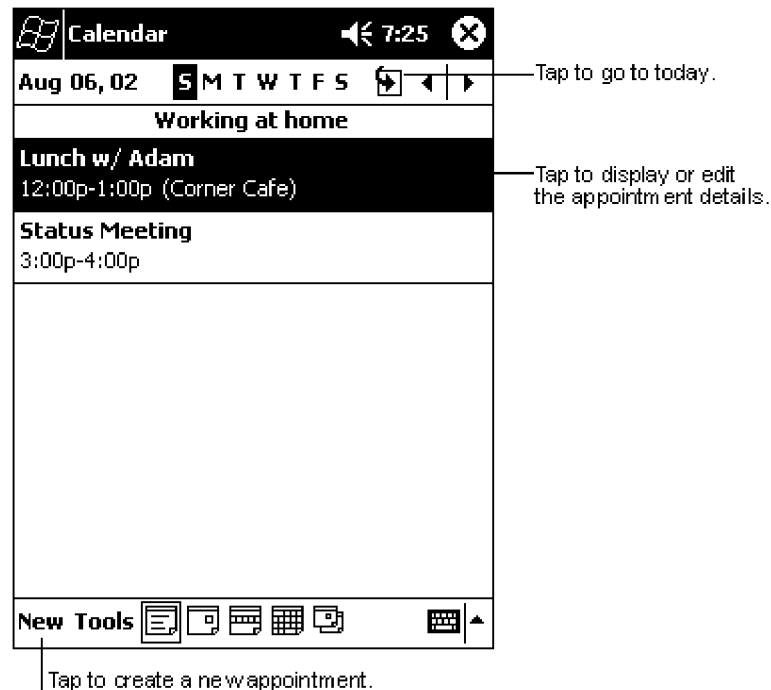



Note: You can customize the Calendar display, such as changing the first day of the week, by tapping **Options** on the **Tools** menu.

Creating an Appointment

- 1 If you are in **Day** or **Week** view, tap the desired date and time for the appointment.
- 2 Tap **New**.
- 3 Using the input panel, enter a description and a location. Tap first to select the field.
- 4 If needed, tap the date and time to change them.
- 5 Enter other desired information. You will need to hide the input panel to see all available fields.
- 6 To add notes, tap the **Notes** tab. You can enter text, draw, or create a recording. For more information on creating notes, see “*Notes: Capturing Thoughts and Ideas*” on page 54.
- 7 When finished, tap **OK** to return to the calendar.

Tap to return to the calendar (the appointment is saved automatically).

Tap to choose from predefined text.

Tap to choose from previously entered locations.

Tap to select a time.

Tap to select a date.


Notes is a good place for maps and directions.



Note: If you select **Remind me** in an appointment, your 700 Series Computer will remind you according to the options set in **Start** → **Settings** → the **Personal** tab → **Sounds & Reminders**.

Using the Summary Screen

When you tap an appointment in Calendar, a summary screen is displayed. To change the appointment, tap **Edit**.

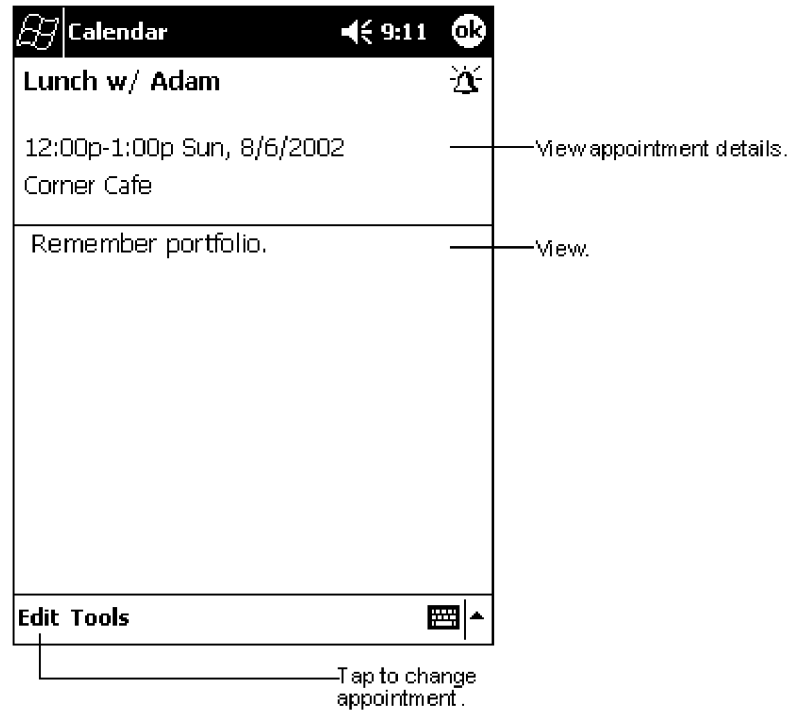

Creating Meeting Requests

You can use Calendar to set up meetings with users of Outlook or Pocket Outlook. The meeting request will be created automatically and sent either when you synchronize Inbox or when you connect to your e-mail server. Indicate how you want meeting requests sent by tapping **Tools** → **Options**. If you send and receive e-mail messages through ActiveSync, select **ActiveSync**.

Scheduling a Meeting


- 1 Create an appointment.
- 2 In the appointment details, hide the input panel, and then tap **Attendees**.
- 3 From the list of e-mail addresses you have entered in Contacts, select the meeting attendees.

The meeting notice is created automatically and placed in the Outbox folder.

For more information on sending and receiving meeting requests, see Calendar Help and Inbox Help on the 700 Series Computer.

Contacts: Tracking Friends and Colleagues

Contacts maintains a list of your friends and colleagues so that you can easily find the information you are looking for, whether you are at home or on the road. Using the 700 Series Computer infrared (IR) port, you can quickly share Contacts information with other 700 Series Computer users.

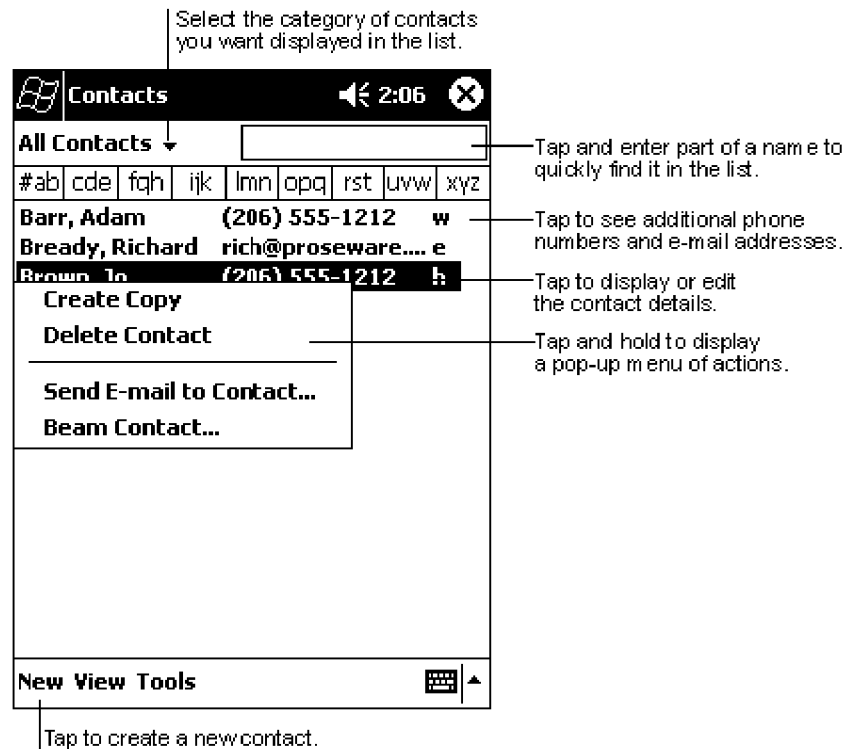


Note: To change the way information is displayed in the list, tap **Tools** → **Options**.

Creating a Contact

- 1 Tap **New**.
- 2 Using the input panel, enter a name and other contact information. You will need to scroll down to see all available fields.
- 3 To assign the contact to a category, scroll to and tap **Categories** and select a category from the list. In the contact list, you can display contacts by category.
- 4 To add notes, tap the **Notes** tab. You can enter text, draw, or create a recording. For more information on creating notes, see "*Notes: Capturing Thoughts and Ideas*" on page 54.

- 5 When finished, tap OK to return to the contact list.

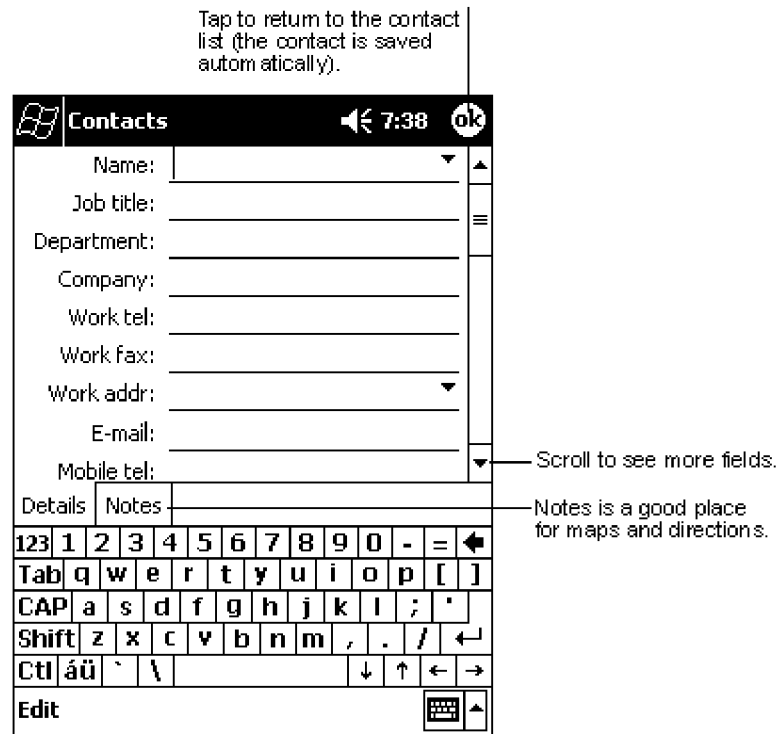


Finding a Contact

There are four ways to find a contact:

- In the contact list, enter a contact name in the box under the navigation bar. To show all contacts again, clear text from the box or tap the button to the right of the box.
- In the contact list, tap the category list (labeled **All Contacts** by default) and select the type of contact that you want displayed. To show all contacts again, select **All Contacts**. To view a contact not assigned to a category, select **None**.
- To view the names of companies your contacts work for, in the contact list, tap **View** → **By Company**. The number of contacts that work for that company will be displayed to the right of the company name.
- Tap **Start** → **Find**, enter the contact name, select **Contacts** for the type, and then tap **Go**.


Using the Summary Screen

When you tap a contact in the contact list, a summary screen is displayed. To change the contact information, tap **Edit**.

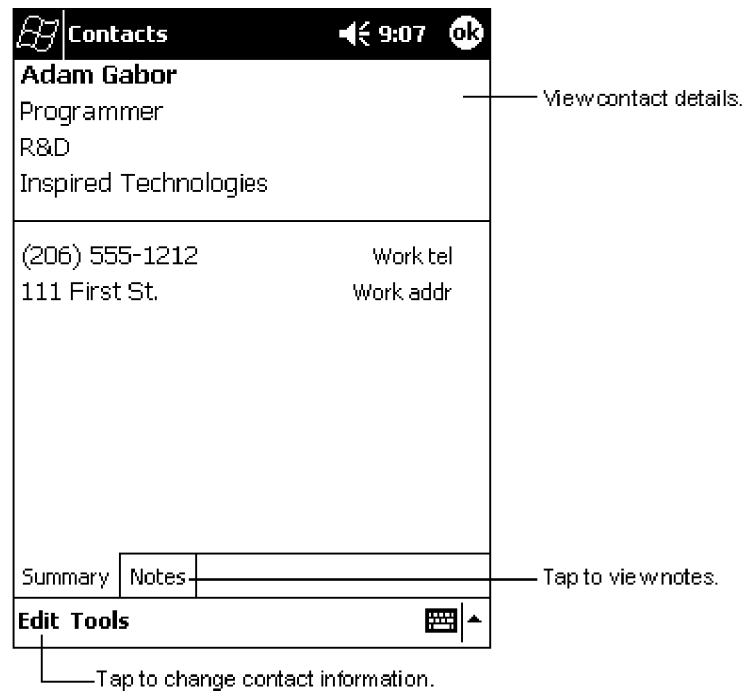

Tasks: Keeping a To Do List

Use Tasks to keep track of what you have to do.

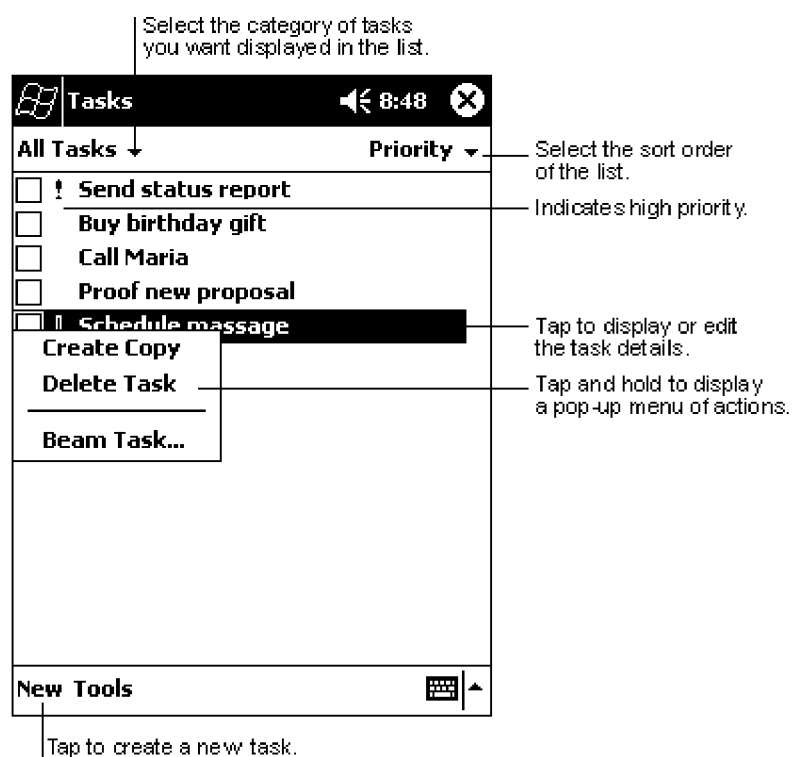

Note: To change the way information is displayed in the list, tap **Tools** → **Options**.

Creating a Task

- 1 Tap **New**.
- 2 Using the input panel, enter a description.
- 3 You can enter a start date and due date or enter other information by first tapping the field. If the input panel is open, you will need to hide it to see all available fields.
- 4 To assign the task to a category, tap **Categories** and select a category from the list. In the task list, you can display tasks by category.
- 5 To add notes, tap the **Notes** tab. You can enter text, draw, or create a recording. For more information on creating notes, see “*Notes: Capturing Thoughts and Ideas*” on page 54.
- 6 When finished, tap **OK** to return to the task list.

Tap to return to the task list (the task is saved automatically).

Tap to choose from predefined subjects.


Notes is a good place for maps and drawings.



Note: To quickly create a task with only a subject, tap **Entry Bar** on the **Tools** menu. Then, tap **Tap here to add a new task** and enter your task information.


Using the Summary Screen

When you tap a task in the task list, a summary screen is displayed. To change the task, tap **Edit**.

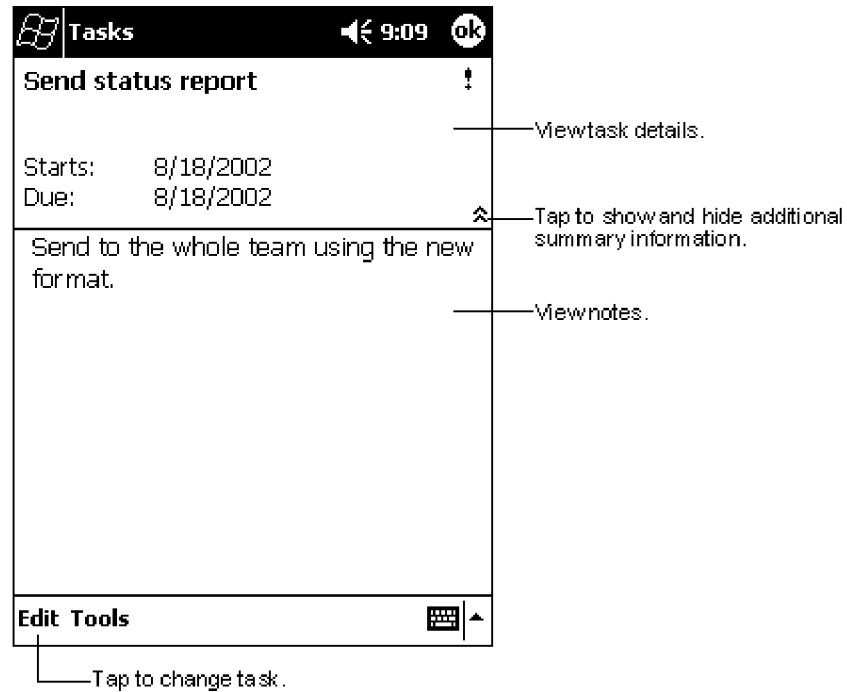


Notes: Capturing Thoughts and Ideas

Quickly capture thoughts, reminders, ideas, drawings, and phone numbers with Notes. You can create a written note or a recording. You can also include a recording in a note. If a note is open when you create the recording, it will be included in the note as an icon. If the note list is displayed, it will be created as a stand-alone recording.

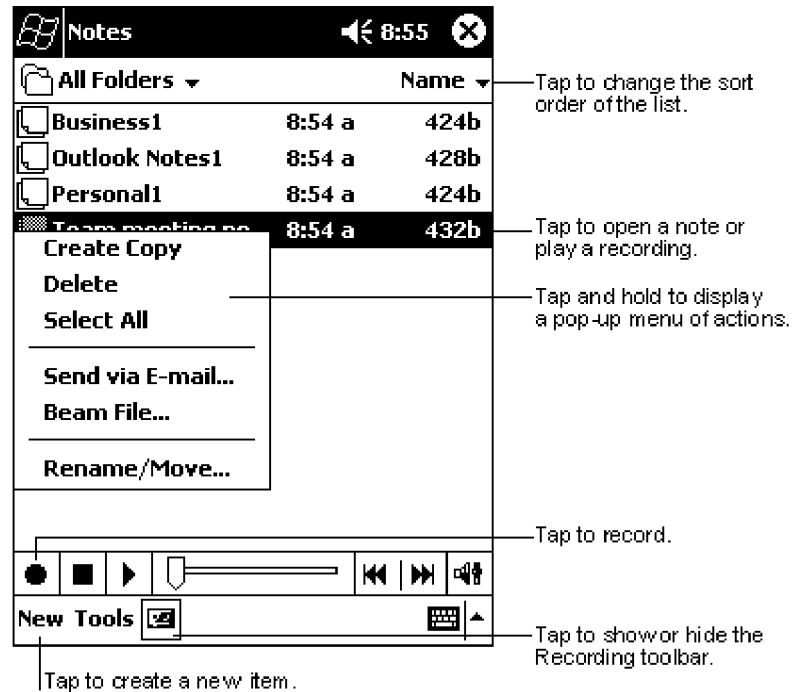

Creating a Note

- 1 Tap New.
- 2 Create your note by writing, drawing, typing, and recording. For more information about using the input panel, writing and drawing on the screen, and creating recordings, see “*Basic Skills*” on page 25.

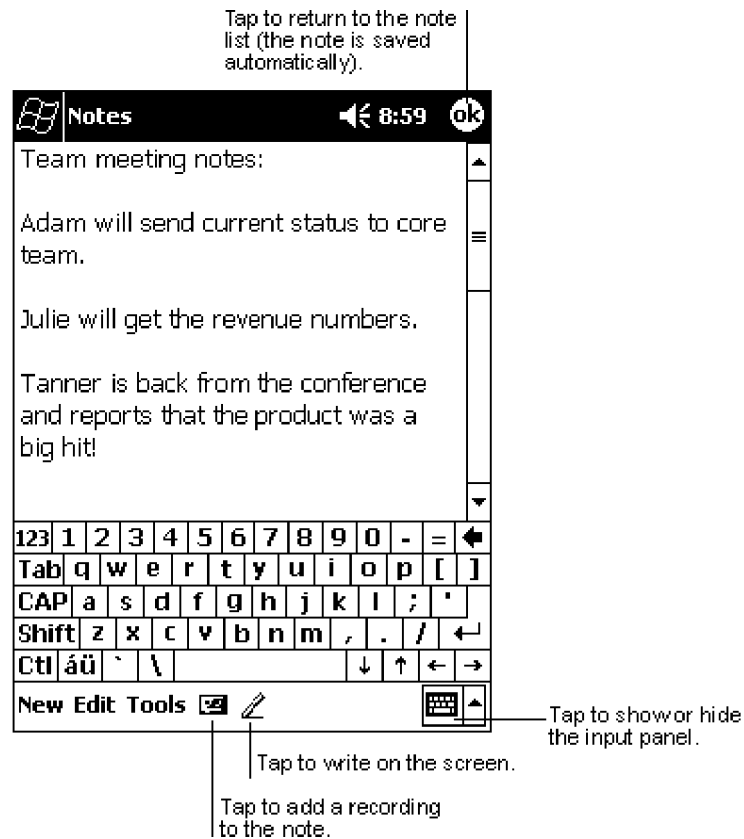

Inbox: Sending and Receiving E-mail Messages

Use Inbox to send and receive e-mail messages in either of these ways:

- Synchronize e-mail messages with Microsoft Exchange or Microsoft Outlook on your desktop computer.
- Send and receive e-mail messages by connecting directly to an e-mail server through an Internet Service Provider (ISP) or a network.

Synchronizing E-mail Messages

E-mail messages can be synchronized as part of the general synchronization process. You will need to enable Inbox synchronization in ActiveSync. For information on enabling Inbox synchronization, see *ActiveSync Help* on the desktop computer. During synchronization:

- Messages are copied from the mail folders of Exchange or Outlook on your desktop computer to the ActiveSync folder in Inbox on your 700 Series Computer. By default, you will receive messages from the past three days only, the first 100 lines of each message, and file attachments of less than 100 KB in size.
- E-mail messages in the Outbox folder on your 700 Series Computer are transferred to Exchange or Outlook, and then sent from those programs.
- E-mail messages in subfolders must be selected in ActiveSync on your desktop computer in order to be transferred.

Connecting Directly to an E-mail Server

In addition to synchronizing e-mail messages with your desktop computer, you can send and receive e-mail messages by connecting to an e-mail server using a modem or network card connected to your 700 Series Computer. You will need to set up a remote connection to a network or an ISP, and a connection to your e-mail server. For more information, see “*Getting Connected*” on page 81.

When you connect to the e-mail server, new messages are downloaded to the 700 Series Computer Inbox folder, messages in the 700 Series Computer Outbox folder are sent, and messages that have been deleted on the e-mail server are removed from the 700 Series Computer Inbox folder.


Messages that you receive directly from an e-mail server are linked to your e-mail server rather than your desktop computer. When you delete a message on your 700 Series Computer, it is also deleted from the e-mail server the next time you connect based on the settings selected in ActiveSync.

You can work online or offline. When working online, you read and respond to messages while connected to the e-mail server. Messages are sent as soon as you tap **Send**, which saves space on your 700 Series Computer.


When working offline, once you have downloaded new message headers or partial messages, you can disconnect from the e-mail server and then decide which messages to download completely. The next time you connect, Inbox downloads the complete messages you have marked for retrieval and sends the messages you have composed.

Using the Message List

Messages you receive are displayed in the message list. By default, the most recently received messages are displayed first in the list.

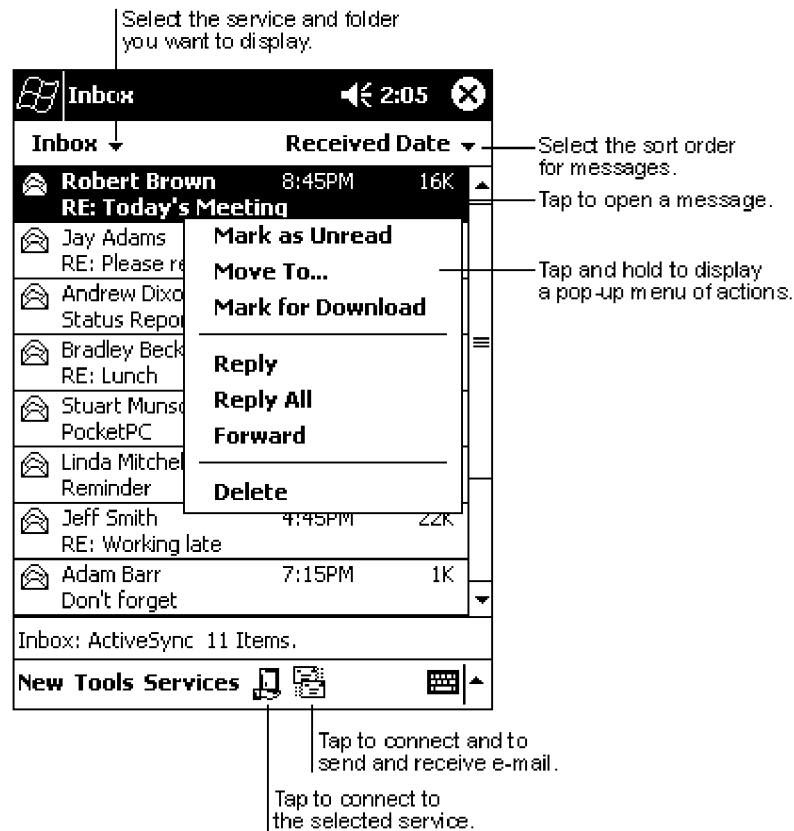

When you receive a message, tap it to open it. Unread messages are displayed in bold.

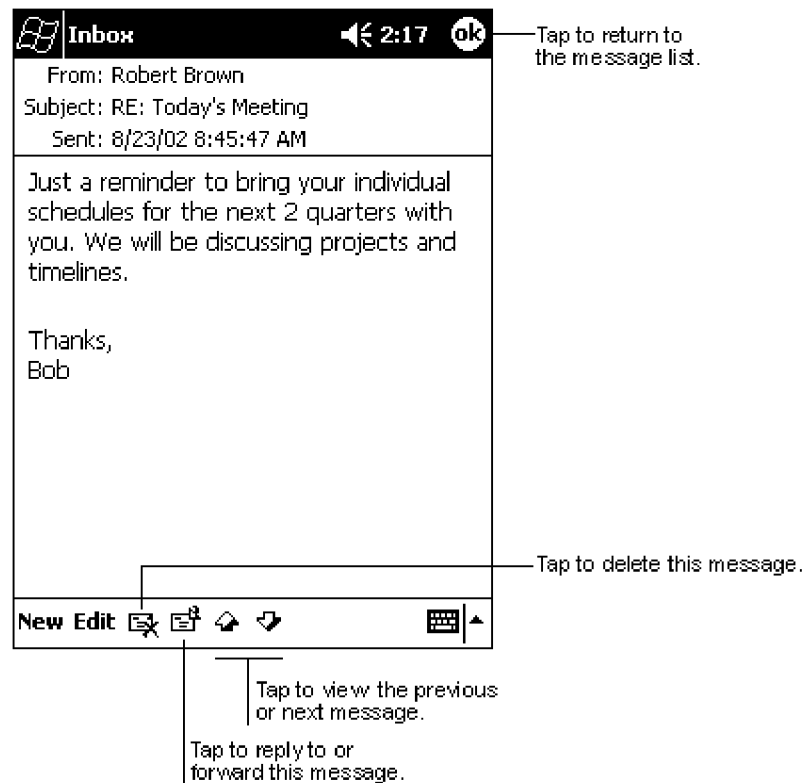

When you connect to your e-mail server or synchronize with your desktop computer, by default, you will receive messages from the last five days only, the first 100 lines of each new message, and file attachments of less than 100 KB in size. The original messages remain on the e-mail server or your desktop computer.

You can mark the messages that you want to retrieve in full during your next synchronization or e-mail server connection. In the message list, tap and hold the message you want to retrieve. On the pop-up menu, tap **Mark for Download**. The icons in the Inbox message list give you visual indications of message status.


You specify your downloading preferences when you set up the service or select your synchronization options. You can change them at any time:

- Change options for Inbox synchronization using ActiveSync options. For more information, see *ActiveSync Help*.
- Change options for direct e-mail server connections in Inbox on your 700 Series Computer. Tap **Tools** → **Options** → the **Service** tab, then tap the service you want to change. Tap and hold the service and select **Delete** to remove a service.

Composing Messages

To compose a message:

- 1 Tap **New**.
- 2 In the **To** field, enter an e-mail or SMS address of one or more recipients, separating them with a semicolon, or select a name from the contact list by tapping the **Address Book** button. All e-mail addresses entered in the e-mail fields in Contacts appear in the Address Book.
- 3 Compose your message. To enter preset or frequently used messages, tap **My Text** and select a message.
- 4 Tap **Send** when you have finished the message. If you are working offline, the message is moved to the Outbox folder and will be sent the next time you connect.

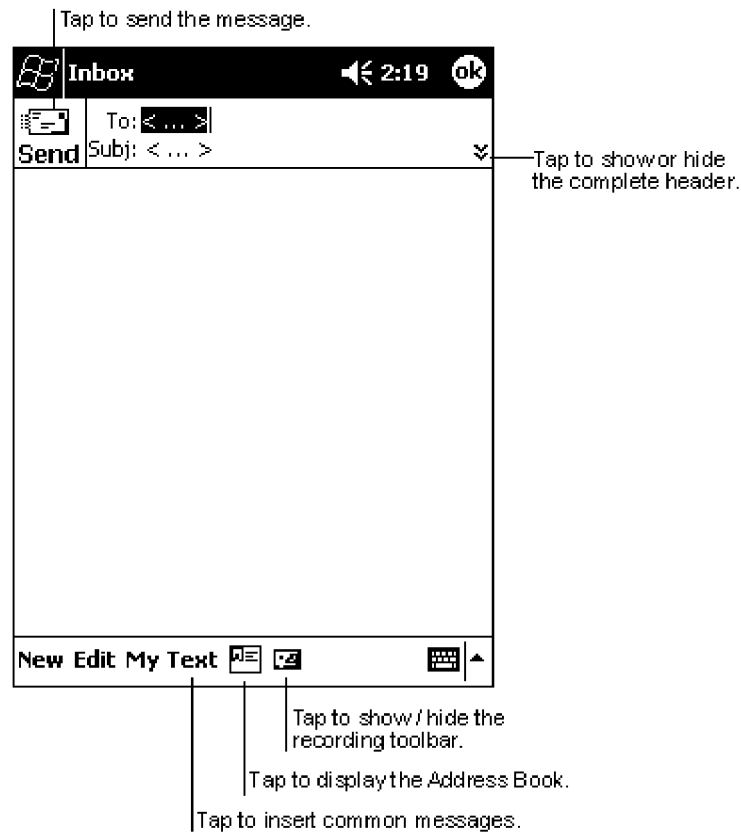

If you are sending an SMS message and want to know if it was received, tap **Edit** → **Options** → **Request SMS text message delivery notification** before sending the message.

Managing E-mail Messages and Folders

By default, messages are displayed in one of five folders for each service you have created: Inbox, Deleted Items, Drafts, Outbox, and Sent Items. The Deleted Items folder contains messages that have been deleted on the 700 Series Computer. The behavior of the Deleted and Sent Items folders depends on the options you have chosen. In the message list, tap **Tools** → **Options** → the **Message** tab, then select your options.

If you want to organize messages into additional folders, tap **Tools** → **Manage Folders** to create new folders. To move a message to another folder, in the message list, tap and hold the message and then tap **Move to** on the pop-up menu.

Folder Behavior With a Direct Connection to an E-mail Server

The behavior of the folders you create depends on whether you are using ActiveSync, SMS, POP3, or IMAP4.

- **If you use ActiveSync:**
E-mail messages in the Inbox folder in Outlook will automatically be synchronized with your 700 Series Computer. You can select to synchronize additional folders by designating them for ActiveSync. The folders you create and the messages you move will then be mirrored on the server. For example, if you move two messages from the Inbox folder to a folder named Family, and you have designated Family for synchronization, the server creates a copy of the Family folder and copies the messages into that folder. You can then read the messages while away from your desktop computer.
- **If you use SMS:**
Messages are stored in the Inbox folder.
- **If you use POP3:**
and you move e-mail messages to a folder you created, the link is broken between the messages on the 700 Series Computer and their copies on the mail server. The next time you connect, the mail server will see that the messages are missing from the 700 Series Computer Inbox and delete them from the server. This prevents you from having duplicate copies of a message, but it also means that you will no longer have access to messages that you move to folders created from anywhere except the 700 Series Computer.
- **If you use IMAP4:**
The folders you create and the e-mail messages you move are mirrored on the server. Therefore, messages are available to you anytime you connect to your mail server, whether it is from your 700 Series Computer or desktop computer. This synchronization of folders occurs whenever you connect to your mail server, create new folders, or rename/delete folders when connected.

Companion Programs

The companion programs consist of Microsoft Pocket Word, Microsoft Pocket Excel, Windows Media Player for Pocket PC, and Microsoft Reader. To switch to a companion program on your 700 Series Computer, tap **Start** → **Programs**, then tap the program name.


Pocket Word

Pocket Word works with Microsoft Word on your desktop computer to give you easy access to copies of your documents. You can create new documents on your 700 Series Computer, or you can copy documents from your desktop computer to your 700 Series Computer. Synchronize documents between your desktop computer and your 700 Series Computer so that you have the most up-to-date content in both locations.

Creating a Document

Use Pocket Word to create documents, such as letters, meeting minutes, and trip reports. To create a new file, tap **Start** → **Programs** → **Pocket Word** → **New**. A blank document appears. Or, if you have selected a template for new documents in the **Options** dialog box, that template appears with appropriate text and formatting already provided. You can open only one document at a time; when you open a second document, you will be asked to save the first. You can save a document you create or edit in a variety of formats, including Word (.DOC), Pocket Word (.PSW), Rich Text Format (.RTF), and Plain Text (.TXT).

Pocket Word contains a list of the files stored on your 700 Series Computer. Tap a file in the list to open it. To delete, make copies of, and send files, tap and hold a file in the list. Then, select the appropriate action on the pop-up menu.

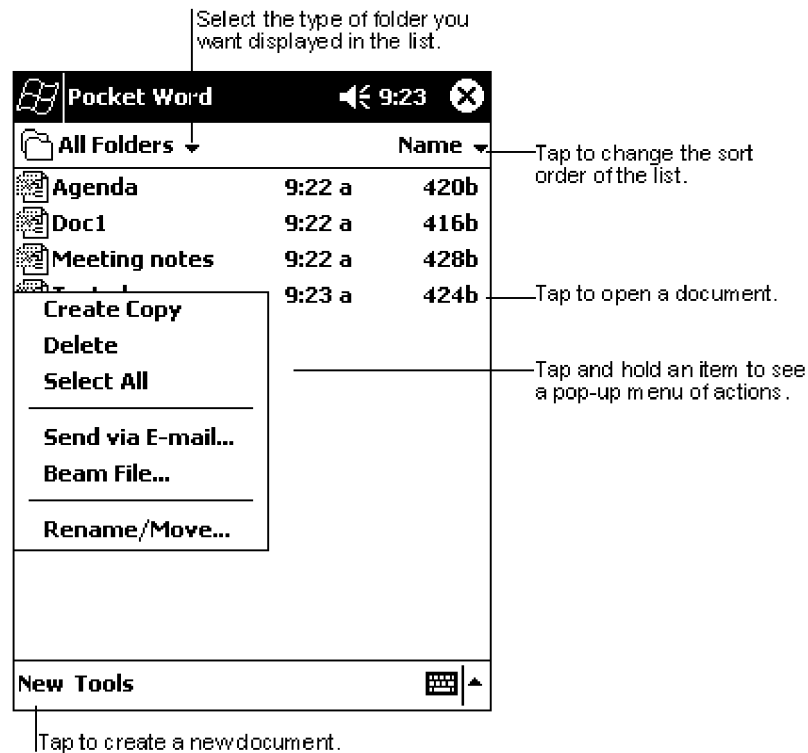

You can enter information in Pocket Word in one of four modes (typing, writing, drawing, and recording), which are displayed on the **View** menu. Each mode has its own toolbar, which you can show and hide by tapping the **Show/Hide Toolbar** button on the command bar.




Note: You can change the zoom magnification by tapping **View → Zoom**, then select the percentage you want. Select a higher percentage to enter text and a lower one to see more of your document.

If you are opening a Word document created on a desktop computer, select **Wrap to Window** on the **View** menu so that you can see the entire document.

Typing Mode


Using the input panel, enter typed text into the document. For more information on entering typed text, see “*Basic Skills*” on page 25.

To format existing text and to edit text, first select the text. You can select text as you do in a Word document, using your stylus instead of the mouse to drag through the text you want to select. You can search a document to find text by tapping **Edit** → **Find/Replace**.

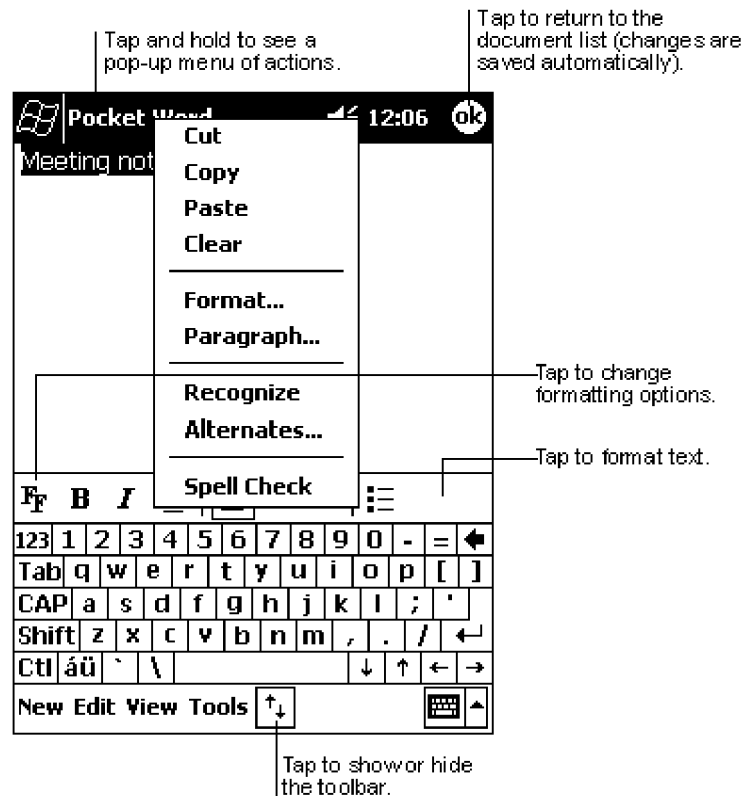

Writing Mode

In writing mode, use your stylus to write directly on the screen. Ruled lines are displayed as a guide, and the zoom magnification is greater than in typing mode to allow you to write more easily. For more information on writing and selecting writing, see “*Basic Skills*” on page 25.

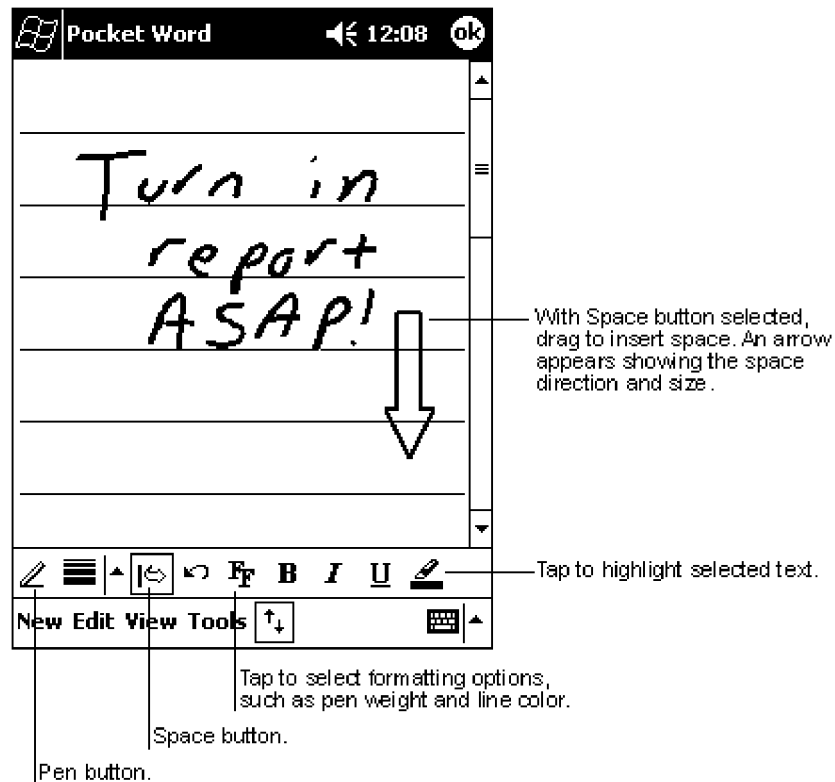


Note: If you cross three ruled lines in a single stylus stroke, the writing becomes a drawing, and can be edited and manipulated as described in “*Drawing Mode*” on the next page.

Written words are converted to graphics (metafiles) when a Pocket Word document is converted to a Word document on your desktop computer.

Drawing Mode

In drawing mode, use your stylus to draw on the screen. Grid lines appear as a guide. When you lift your stylus off the screen after the first stroke, you will see a drawing box indicating the boundaries of the drawing. Every subsequent stroke within or touching the drawing box becomes part of the drawing. For more information on drawing and selecting drawings, see “*Basic Skills*” on page 25.

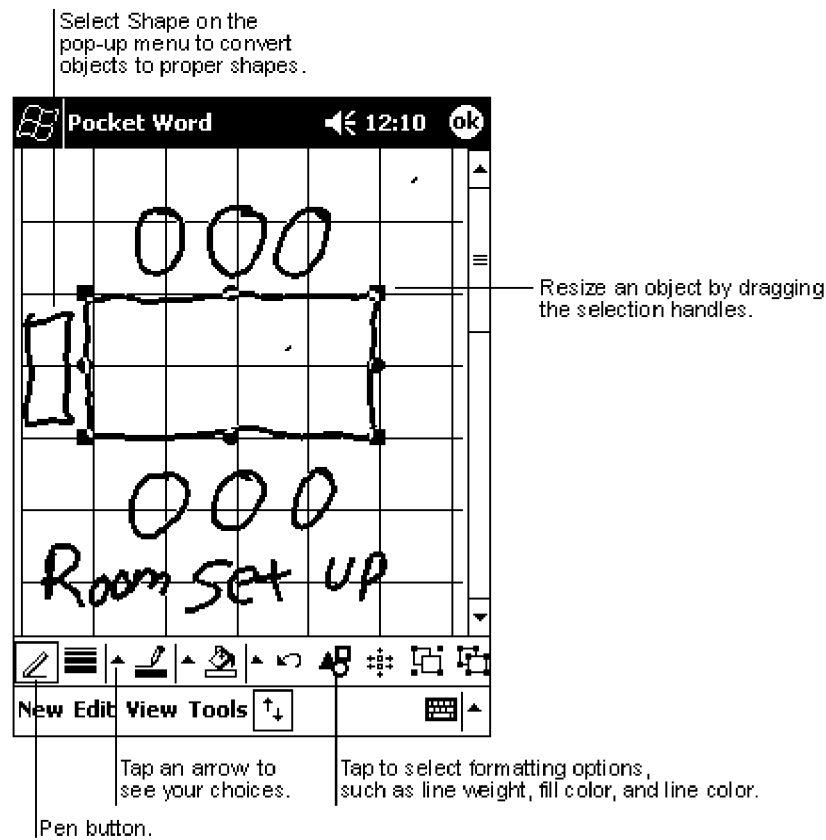

Recording Mode

In recording mode, embed a recording into your document. Recordings are saved as .WAV files. For more information on recording, see “*Basic Skills*” on page 25.

For more information on using Pocket Word, tap **Start** → **Help**.

Pocket Excel


Pocket Excel works with Microsoft Excel on your desktop computer to give you easy access to copies of your workbooks. You can create new workbooks on your 700 Series Computer, or you can copy workbooks from your desktop computer to your 700 Series Computer. Synchronize workbooks between your desktop computer and your 700 Series Computer so that you have the most up-to-date content in both locations.

Creating a Workbook

Use Pocket Excel to create workbooks, such as expense reports and mileage logs. To create a new file, tap **Start** → **Programs** → **Pocket Excel** → **New**. A blank workbook appears. Or, if you have selected a template for new workbooks in the Options dialog box, that template appears with appropriate text and formatting already provided. You can open only one workbook at a time; when you open a second workbook, you will be asked to save the first. You can save a workbook you create or edit in a variety of formats, including Pocket Excel (.PXL) and Excel (.XLS).

Pocket Excel contains a list of the files stored on your 700 Series Computer. Tap a file in the list to open it. To delete, make copies of, and send files, tap and hold a file in the list. Then select the appropriate action from the pop-up menu.

Pocket Excel provides fundamental spreadsheet tools, such as formulas, functions, sorting, and filtering. To display the toolbar, tap **View** → **Toolbar**.

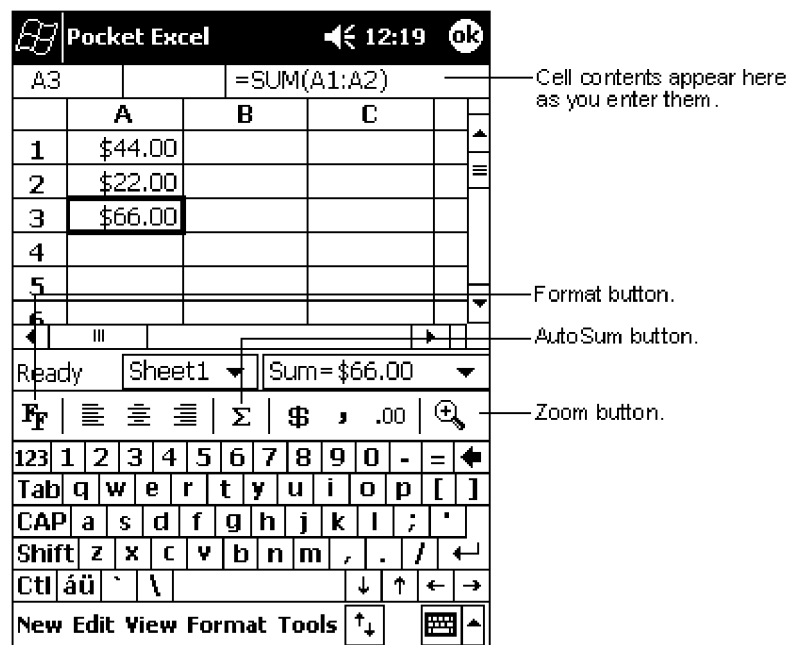



Note: If your workbook contains sensitive information, you can protect it with a password. To do so, open the workbook, tap **Edit → Password**. Every time you open the workbook, you will need to enter the password, so choose one that is easy for you to remember but hard for others to guess.

Tips for Working in Pocket Excel

Note the following when working in large worksheets in Pocket Excel:

- View in full-screen mode to see as much of your worksheet as possible. Tap **View → Full Screen**. To exit full-screen mode, tap **Restore**.
- Show and hide window elements. Tap **View** and then tap the elements you want to show or hide.
- Freeze panes on a worksheet. First select the cell where you want to freeze panes. Tap **View → Freeze Panes**. You might want to freeze the top and leftmost panes in a worksheet to keep row and column labels visible as you scroll through a sheet.
- Split panes to view different areas of a large worksheet. Tap **View → Split**. Then drag the split bar to where you want it. To remove the split, tap **View → Remove Split**.
- Show and hide rows and columns. To hide a hidden row or column, select a cell in the row or column you want to hide. Then tap **Format , Row or Column → Hide**. To show a hidden row or column, tap **Tools → Go To**, and then type a reference that is in the hidden row or column. Then tap **Format → Row or Column → Unhide**.

For more information on using Pocket Excel, tap **Start → Help**.

MSN Messenger



Note: MSN Messenger is **only** available on the Premium Edition of Pocket PC 2002.

MSN Messenger on your 700 Series Computer is an instant messaging program that lets you:

- See who is online.
- Send and receive instant messages.
- Have instant message conversations with groups of contacts.

To use MSN Messenger, you must have a Microsoft Passport account or a Microsoft Exchange e-mail account. You must have a Passport to use MSN Messenger Service. If you have a Hotmail or MSN account, you already have a Passport. Once you have obtained either a Microsoft Passport or a Microsoft Exchange account, you are ready to set up your account.

- Sign up for a Microsoft Passport account at <http://www.passport.com>.
- Get a free Microsoft Hotmail e-mail address at <http://www.hotmail.com>.

To switch to MSN Messenger, tap **Start → Programs → MSN Messenger**.

Setting Up

Before you can connect, you must enter Passport or Exchange account information. To set up an account and sign in:


- 1 In the **Tools** menu, tap **Options**.
- 2 In the **Accounts** tab, enter your Passport or Exchange account information.
- 3 To sign in, tap the sign-in screen and enter your e-mail address and password.



Note: If you already use MSN Messenger on your desktop computer, your contacts will show up on your 700 Series Computer without being added again.

Working with Contacts

The MSN Messenger window shows all of your messenger contacts at a glance, divided into Online and Not Online categories. From this view, while connected, you can chat, send e-mail, block the contact from chatting with you, or delete contacts from your list using the pop-up menu.

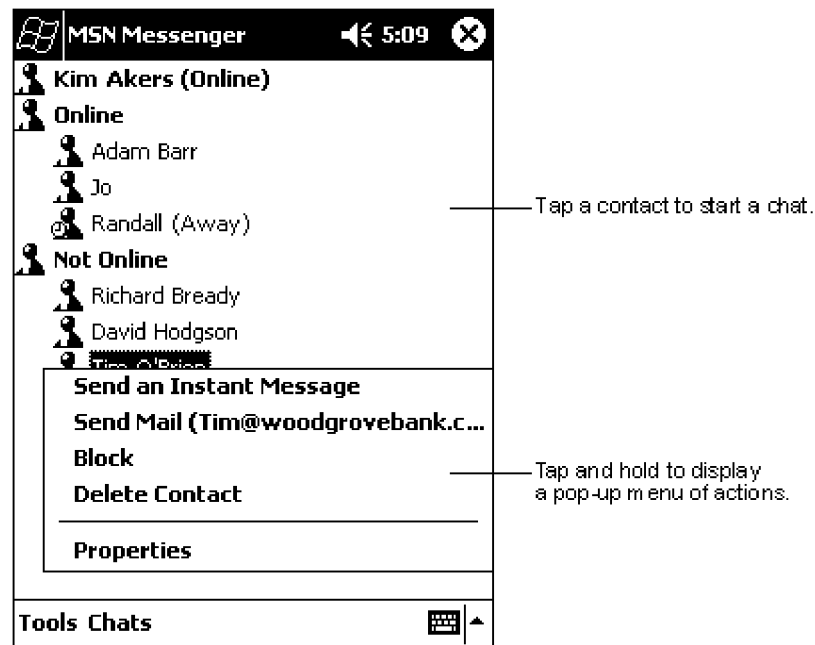


Note: To see others online without being seen, in the **Tools** menu, tap **My Status** → **Appear Offline**.

If you block a contact, you will appear offline but will remain on the blocked contact's list. To unblock a contact, tap and hold the contact, then tap **Unblock** on the pop-up menu.


Chatting with Contacts

Tap a contact name to open a chat window. Enter your message in the text entry area at the bottom of the screen, or tap **My Text** to enter a preset message, and tap **Send**. To invite another contact to a multi-user chat, in the **Tools** menu, tap **Invite** and tap the contact you want to invite.

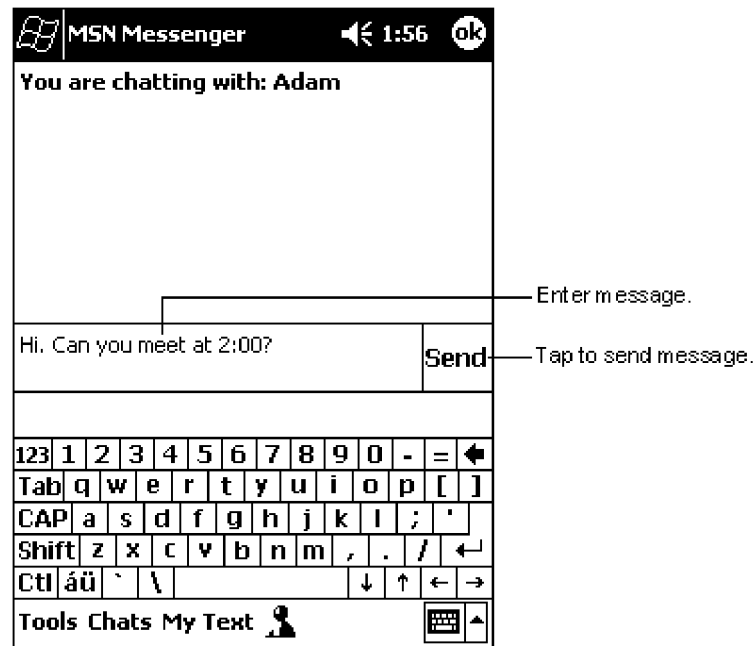

Note: To switch back to the main window without closing a chat, tap the **Contacts** button. To revert back to your chat window, tap **Chats** and select the person whom you were chatting with.

To know if the contact you are chatting with is responding, look for the message under the text entry area.

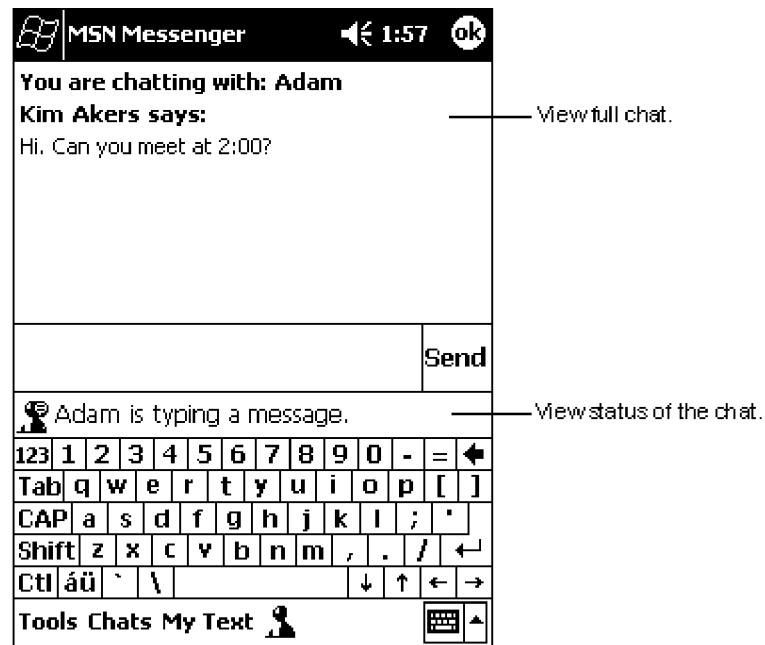

For more information on using MSN Messenger, tap **Start** → **Help**.


Windows Media Player for Pocket PC



Note: The Windows Media Player is only available on the Premium Edition of Pocket PC 2002. For the Professional Edition, this application is available on a Companion CD for download into RAM rather than burned into Flash ROM. Contact your Intermec representative for information.

Use Microsoft Windows Media Player for Pocket PC to play digital audio and video files that are stored on your 700 Series Computer or on a network. To switch to Windows Media Player for Pocket PC, tap **Start** → **Programs** → **Windows Media**.

Use Microsoft Windows Media Player on your desktop computer to copy digital audio and video files to your Pocket PC. You can play Windows Media and MP3 files on your Pocket PC.

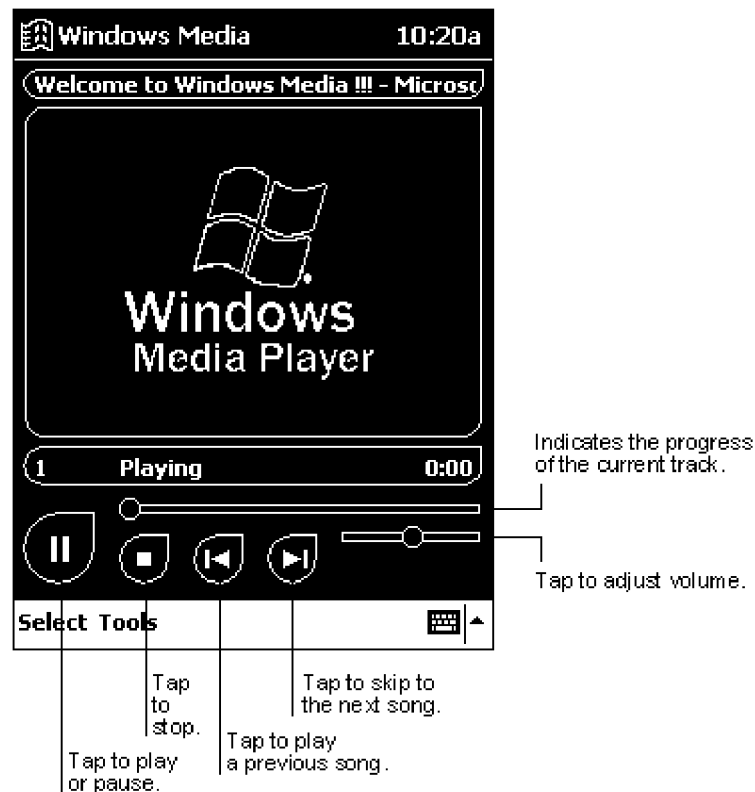

For more information about using Windows Media Player for Pocket PC, tap **Start** → **Help**.

Microsoft Reader



Note: Microsoft Reader is only available on the Premium Edition of Pocket PC 2002. For the Professional Edition, this application is available on a Companion CD for download into RAM rather than burned into Flash ROM. Contact your Intermec representative for information.

Use Microsoft Reader to read eBooks on your 700 Series Computer. Download books to your desktop computer from your favorite eBook Web site. Then, use ActiveSync to copy the book files to your activated 700 Series Computer. The books appear in the Reader Library, where you can tap them in the list to open them. Each book consists of a cover page, an optional table of contents, and the pages of the book. You can:

- Page through the book by using the Up/Down control on your 700 Series Computer or by tapping the page number on each page.
- Annotate the book with highlighting, bookmarks, notes, and drawings.
- Search for text and look up definitions for words.

The Guidebook contains all the information you will need to use the software. To open the Guidebook, tap **Help** on the Reader command bar. Or, on a book page, tap and hold on the book title, and then tap **Help** on the pop-up menu. To switch to Microsoft Reader, tap **Start** → **Programs** → **Microsoft Reader**.

Getting Books on Your 700 Series Computer

You can download book files from the Web. Just visit your favorite eBook retailer and follow the instructions to download the book files.


Sample books and a dictionary are also included in the MSReader folder in the Extras folder on the Pocket PC Companion CD.

Use ActiveSync to download the files from your desktop computer to your activated mobile computer as described in the Read Me file in the MSReader folder.

Using the Library

The Library is your Reader home page; it displays a list of all books stored on your 700 Series Computer or storage card. To open the Library:

- 1 On the Reader command bar, tap **Library**.
- 2 On a book page, tap the book title, then tap **Library** on the pop-up menu.
- 3 To open a book, tap its title in the Library list.

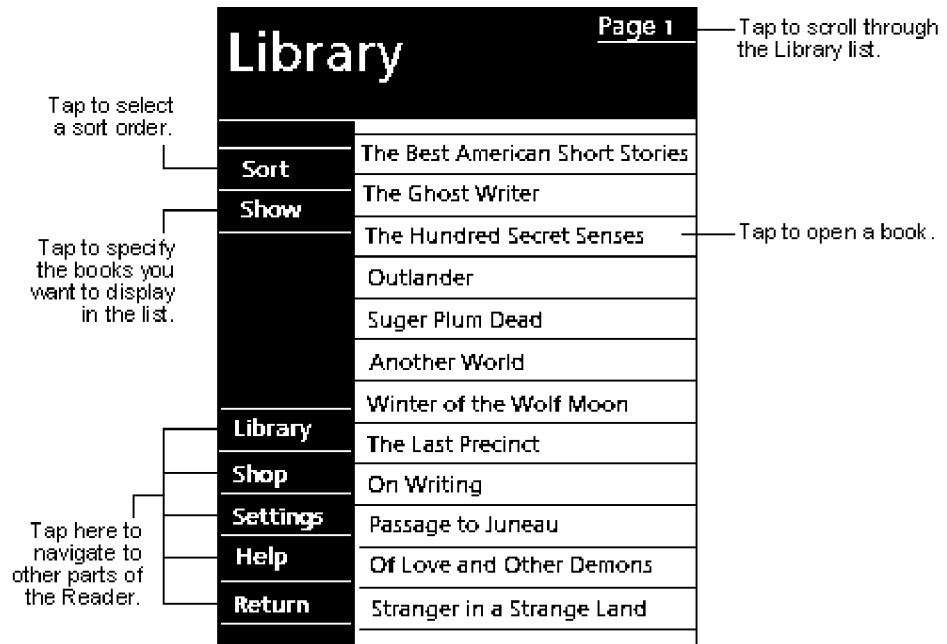


Reading a Book

Each book consists of a cover page, an optional table of contents, and the pages of the book. Navigation options are listed in the bottom portion of the cover page.

The first time you open a book, you will probably want to go to the first page or to the table of contents, if there is one. Subsequently, whenever you open the book, you will be automatically taken to the last page read.

In addition to the text, each book page includes a page number and book title.

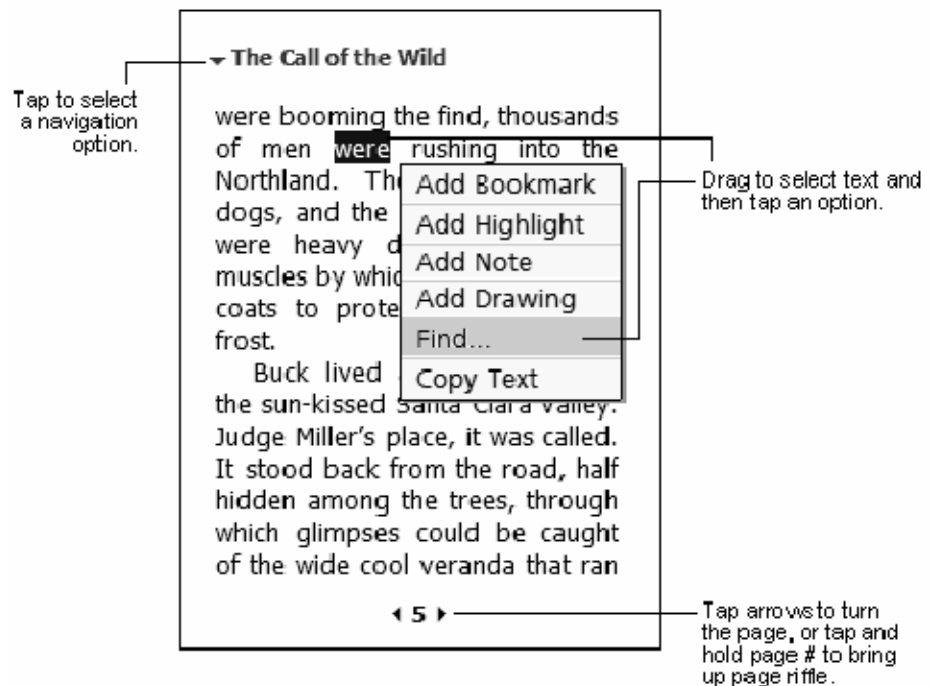

You can also page through a book by using the Up/Down control on your 700 Series Computer.

Using Reader Features

Reading a book electronically gives you several options not available with paper books. These options are available from any book page.

Select text by dragging across the text on the page. Then, tap an option on the pop-up menu, as described here:

- **Searching for Text**
Find text in a book by tapping **Find** on the pop-up menu. Enter the word you want to search for, and tap the desired **Find** option. Reader highlights found text on the page. To close **Find**, tap outside the box. To return to your original page, tap the title and then tap **Return** on the pop-up menu.
- **Copying Text**
You can copy text from books that support this feature into any program that accepts text. On a book page, select the text you want to copy. Then, tap **Copy Text** on the pop-up menu. The text can be pasted into the program of your choice.
- **Adding Bookmarks**
When you add a bookmark to a book, a color-coded bookmark icon appears in the right margin. You can add multiple bookmarks to a book. Then, from anywhere in the book, tap the bookmark icon to go to the bookmarked page.
- **Highlighting Text**
When you highlight text, it appears with a colored background.
- **Attaching Notes to Text**
When you attach a note to text, you enter the text in a notepad that appears on top of the book page. A **Note** icon will display in the left margin. To show or hide the note, tap the icon.
- **Adding Drawings**
When you add a drawing, a **Drawing** icon appears in the bottom-left corner of the page, and drawing tools appear across the bottom of the page. Draw by dragging your stylus.
- **Annotations Index**
To see a list of a book's annotations, including bookmarks, highlights, text notes, and drawings, tap **Annotations Index** on the book's cover page. You can tap an entry in the list to go to the annotated page.

Removing a Book

When you finish reading a book, you can delete it to conserve space on your 700 Series Computer. If a copy of the book is stored on your desktop computer, you can download it again at any time.

To remove a book from your 700 Series Computer, tap and hold the title in the Library list, and then tap **Delete** on the pop-up menu.

Pocket Internet Explorer



Note: The Professional Edition of Pocket Internet Explorer does not support WAP pages.

Use Microsoft Pocket Internet Explorer to view Web or WAP pages in either of these ways:

- During synchronization with your desktop computer, download your favorite links and mobile favorites that are stored in the Mobile Favorites subfolder in Internet Explorer on the desktop computer.
- Connect to an ISP or network and browse the Web. To do this, you will need to create the connection first, as described in “*Getting Connected*” on page 81.

When connected to an ISP or network, you can also download files and programs from the Internet or intranet.

To switch to Pocket Internet Explorer, tap **Start → Internet Explorer**.

The Mobile Favorites Folder

Only items stored in the Mobile Favorites subfolder in the Favorites folder in Internet Explorer on your desktop computer will be synchronized with your 700 Series Computer. This folder was created automatically when you installed ActiveSync.

Favorite Links

During synchronization, the list of favorite links in the Mobile Favorites folder on your desktop computer is synchronized with Pocket Internet Explorer on your 700 Series Computer. Both computers are updated with changes made to either list each time you synchronize. Unless you mark the favorite link as a mobile favorite, only the link will be downloaded to your 700 Series Computer, and you will need to connect to your ISP or network to view the content. For more information on synchronization, see *ActiveSync Help* on the desktop computer.

Mobile Favorites

If you are using Microsoft Internet Explorer 5.0 or later on your desktop computer, you can download mobile favorites to your 700 Series Computer. Synchronizing mobile favorites downloads Web content to your 700 Series Computer so that you can view pages while you are disconnected from your ISP and desktop computer.

Use the Internet Explorer plug-in installed with ActiveSync to create mobile favorites quickly. To create a mobile favorite:

- 1 In Internet Explorer on your desktop computer, click **Tools → Create Mobile Favorite**.
- 2 To change the link name, enter a new name in the **Name** box.
- 3 Optionally, in **Update**, select a desired update schedule.

- 4 Click **OK**. Internet Explorer downloads the latest version of the page to your desktop computer.
- 5 If you want to download the pages that are linked to the mobile favorite you just created, in Internet Explorer on the desktop computer, right-click the mobile favorite just created and then click **Properties**. In the **Download** tab, specify the number of links deep you want to download. To conserve 700 Series Computer memory, go only one level deep.
- 6 Synchronize your 700 Series Computer and desktop computer. Mobile favorites that are stored in the Mobile Favorites folder in Internet Explorer are downloaded to your 700 Series Computer.



Note: If you did not specify an update schedule in step 3 above, you will need to manually download content to keep the information updated on your desktop computer and 700 Series Computer. Before synchronizing with your 700 Series Computer, in Internet Explorer on your desktop computer, click **Tools** → **Synchronize**. You will see the last time content was downloaded to the desktop computer, and you can manually download content if needed.

You can add a button to the Internet Explorer toolbar for creating mobile favorites. In Internet Explorer on your desktop computer, click **View** → **Toolbars** → **Customize**.

Mobile favorites take up storage memory on your 700 Series Computer. To minimize the amount of memory used:

- In the settings for the Favorites information, type in ActiveSync options, turn off pictures and sounds, or stop some mobile favorites from being downloaded to the 700 Series Computer. For more information, see *ActiveSync Help*.
- Limit the number of downloaded linked pages. In Internet Explorer on the desktop computer, right-click the mobile favorite you want to change and then **Properties**. In the **Download** tab, specify “0” or “1” for the number of linked pages you want to download.

Using AvantGo Channels

AvantGo is a free interactive service that gives you access to personalized content and thousands of popular Web sites. You subscribe to AvantGo channels directly from your 700 Series Computer. Then, you synchronize your 700 Series Computer and desktop computer, or connect to the Internet to download the content. For more information, visit the AvantGo Web site. To sign up for AvantGo:

- 1 In ActiveSync options on the desktop computer, turn on synchronization for the AvantGo information type.
- 2 In Pocket Internet Explorer on your 700 Series Computer, tap the **Favorites** button to display your list of favorites.
- 3 Tap the **AvantGo Channels** link.
- 4 Tap the **Activate** button.
- 5 Follow the directions on the screen. You will need to synchronize your 700 Series Computer with your desktop computer and then tap the **My Channels** button to complete the AvantGo setup.

When synchronization is complete, tap the **AvantGo Channels** link in your list of favorites to see a few of the most popular channels. To add or remove channels, tap the **Add** or **Remove** link.


Using Pocket Internet Explorer

You can use Pocket Internet Explorer to browse mobile favorites and channels that have been downloaded to your 700 Series Computer without connecting to the Internet. You can also connect to the Internet through an ISP or a network connection and browse the Web.



Viewing Mobile Favorites and Channels

- 1 Tap the Favorites button to display your list of favorites.
- 2 Tap the page you want to view.

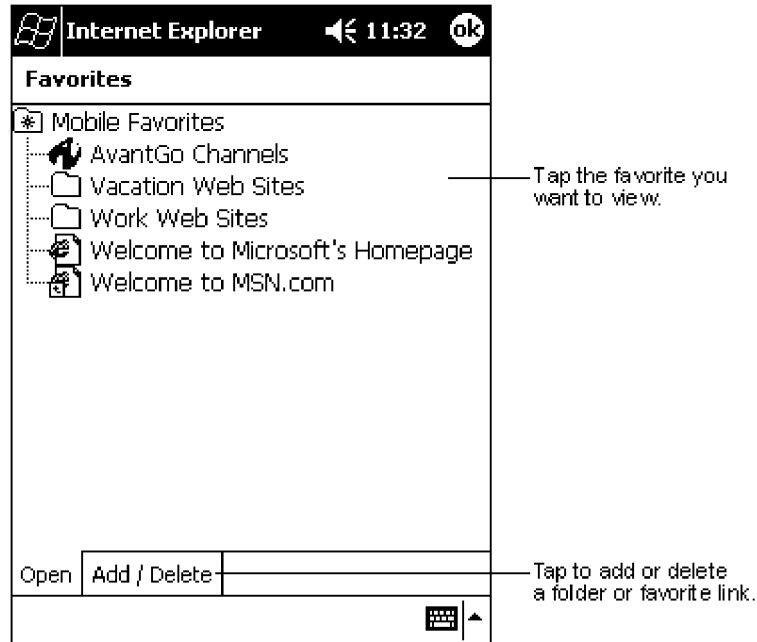

You will see the page that was downloaded the last time you synchronized with your desktop computer. If the page is not on your 700 Series Computer, the favorite will be dimmed. You will need to synchronize with your desktop computer again to download the page to your 700 Series Computer, or connect to the Internet to view the page.

Browsing the Internet

- 1 Set up a connection to your ISP or corporate network using **Connections**, as described in “*Getting Connected*” on page 81.
- 2 To connect and start browsing, do one of the following:
 - Tap the **Favorites** button, and then tap the favorite you want to view.
 - Tap **View → Address Bar**. In the address bar that appears at the top of the screen, enter the Web address you want to visit and then tap **Go**. Tap the arrow to choose from previously entered addresses.



Note: To add a favorite link while using the 700 Series Computer, go to the page you want to add, tap and hold on the page, and tap **Add to Favorites**.

Getting Connected

You can use your 700 Series Computer to exchange information with other 700 Series Computers as well as your desktop computer, a network, or the Internet. You have the following connection options:


- Use the infrared (IR) port on your 700 Series Computer to send and receive files between two 700 Series Computers. If this is the method you want to use, see “*Transferring Items Using Infrared*” below.
- Connect to your ISP. Once connected, you can send and receive e-mail messages by using Inbox and view Web or WAP pages by using Pocket Internet Explorer. The communication software for creating an ISP connection is already installed on your 700 Series Computer. Your service provider will provide software needed to install other services, such as paging and fax services. If this is the method you want to use, see “*Connecting to an Internet Service Provider*” on page 82.
- Connect to the network at your company or organization where you work. Once connected, you can send and receive e-mail messages by using Inbox, view Web or WAP pages by using Pocket Internet Explorer, and synchronize with your desktop computer. If this is the method you want to use, see “*Connecting to Work*” on page 87.
- Connect to your desktop computer to synchronize remotely. Once connected, you can synchronize information such as your Pocket Outlook information. If this is the method you want to use, see *ActiveSync Help* on your desktop computer or Connections Help on the 700 Series Computer.

Transferring Items Using Infrared

Using infrared (IR), you can send and receive information, such as contacts and appointments, between two 700 Series Computers.

Sending Information

- 1 Switch to the program where you created the item you want to send and locate the item in the list.
- 2 Align the IR ports so that they are unobstructed and within a close range.
- 3 Tap and hold the item, and tap **Beam Item** on the pop-up menu.

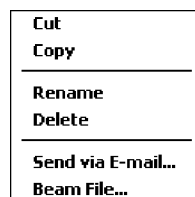

Note: You can also send items, but not folders, from File Explorer. Tap and hold the item you want to send, and then tap **Beam File** on the pop-up menu.

Receiving Information

- 1 Align the IR ports so that they are unobstructed and within a close range.
- 2 Have the owner of the other 700 Series Computer send the information to you. Your 700 Series Computer will automatically receive it.

Connecting to an Internet Service Provider

You can connect to your ISP, and use the connection to send and receive e-mail messages and view Web or WAP pages. You can connect to your ISP in one of two ways:


- Create a modem connection. If this is the method you want to use, see “*Creating a Modem Connection to an ISP*” below.
- Use an Ethernet card and a net tap to connect to the network. If this is the method you want to use, see “*Creating an Ethernet Connection to an ISP*” on page 86.

Creating a Modem Connection to an ISP

- 1 Obtain the following information from your ISP. Some ISPs require information in front of the user name, such as MSN/username.
 - ISP dial-up access telephone number
 - User name
 - Password
 - TCP/IP settings
- 2 If your 700 Series Computer does not have a built-in modem, install a modem card, or use or use a NULL modem cable and appropriate adapters to connect an external modem to your 700 Series Computer through the serial port.
- 3 Tap **Start** → **Settings** → the **Connections** tab → the **Connections** icon. Under the **When needed, automatically connect to The Internet using these settings:** select **Internet Settings** from the drop-down list, then tap **Modify**.



Connections

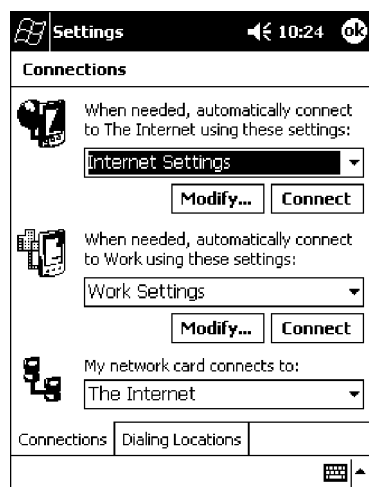

- 4 In the **Modem** tab, tap **New**.

Settings 10:27 ok

Internet Settings

Create a connection, or tap and hold on an existing connection and select a desired action.

Name	Number
New...	

When dialing: Automatically dial the best number

General Modem

Keyboard icon

- 5 Enter a name for the connection, such as “ISP Connection.”

In the **Select a modem** list, select your modem type. If your modem type does not appear, try reinserting the modem card. If you are using an external modem that is connected to your 700 Series Computer with a cable, select “Hayes Compatible on COM1.”

Settings 10:29

Make New Connection

Enter a name for the connection:

ISP Connection

Select a modem:

Hayes Compatible on COM1

Baud rate:

19200

Advanced...

Cancel Back Next

Keyboard icon


- 6 You should not need to change any settings in **Advanced**. Most ISPs now use a dynamically-assigned address. If the ISP you are connecting to does not use a dynamically-assigned address, tap **Advanced** → the **TCP/IP** tab, tap **Use specific IP address**, then enter the address. Tap **ok** to close the Advanced page, then tap **Next**.

The screenshot shows the 'Settings' application with the 'Advanced' tab selected. The 'TCP/IP' section is active, showing two radio buttons: 'Use server-assigned IP address' (unselected) and 'Use specific IP address' (selected). Below the selected option is a text field containing '0 . 0 . 0 . 0'. There are three checkboxes: 'Use Slip' (unchecked), 'Use software compression' (checked), and 'Use IP header compression' (checked). At the bottom, there are three tabs: 'Port Settings', 'TCP/IP' (selected), and 'Name Servers'. An 'ok' button is in the top right corner.


- 7 Enter the access phone number, then tap **Next**.

The screenshot shows the 'Settings' application with the 'ISP Connection' tab selected. It contains three text input fields: 'Country code:' with '1', 'Area code:' with '425', and 'Phone number:' which is empty. At the bottom, there are three buttons: 'Cancel', 'Back', and 'Next'. An 'ok' button is in the top right corner.

- 8 Select other desired options, tap **Finish**, then tap **ok** to exit.

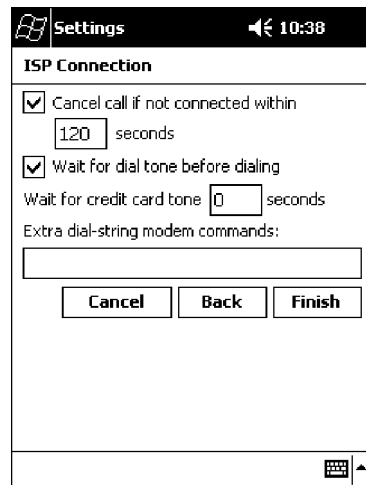

- 9 Tap the **Dialing Locations** tab and specify your current location and phone type (most phone lines are tone). These settings will apply to all connections you create.

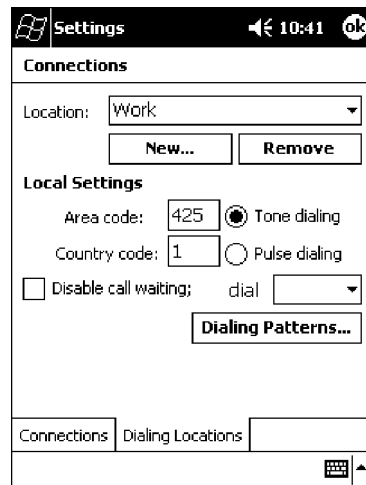

To start the connection, start using one of the following programs. Your 700 Series Computer will start connecting. Once connected, you can:


- Send and receive e-mail messages by using Inbox. Before you can use Inbox, you need to provide the information it needs to communicate with the e-mail server. For specific instructions, see “*Connecting Directly to an E-mail Server*” on page 93.
- Visit Web and WAP pages by using Pocket Internet Explorer. For more information, see “*Pocket Internet Explorer*” on page 76.
- Send and receive instant messages with MSN Messenger. For more information, see “*MSN Messenger*” on page 67.

Creating an Ethernet Connection to an ISP

- 1 You do not need to create a new connection on your 700 Series Computer. Instead, you must purchase a dock to enable on-board Ethernet or purchase a CompactFlash Ethernet card that is compatible with your 700 Series Computer.
- 2 Obtain your user name, password, and domain name from your ISP.
- 3 Insert the Ethernet card into your 700 Series Computer. For instructions on inserting and using the Ethernet card, see the owner's manual.



If using an on-board Ethernet, place your 700 Series Computer in a dock, tap **Start** → **Today**, then look in the System Tray for the Ethernet icon (shown left). If not there, then tap the antenna icon for the NDISTRAY pop-up menu and select **Built-in Ethernet** from the menu.

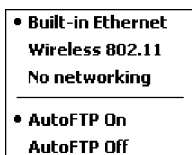


- 4 The first time you insert the card, **Network Settings** will appear automatically so that you can configure the Ethernet card. Most networks use DHCP, so you should not have to change these settings unless your network administrator instructs you to do so. Tap **ok**.



Network Adapters


If the Network Settings does not appear or to change settings later, tap **Start** → **Settings** → the **Connections** tab → the **Network Adapters** tab, tap the adapter you want to change, and then tap **Properties**.

- *If using an on-board Ethernet*, then select **Start** → **Settings** → the **Connections** tab → **Network Adapters**. Select “NE2000 Compatible Ethernet Driver” from the list of adapters installed, then tap **Properties** to configure the Ethernet driver.

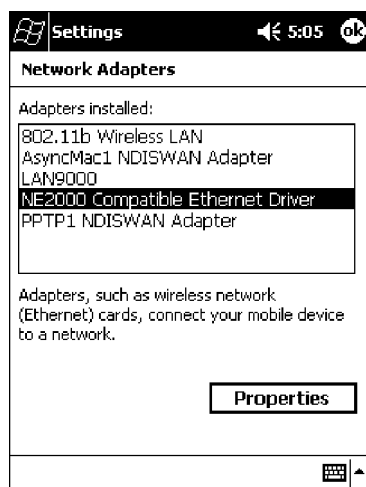



- 5 Connect the Ethernet card or dock to the network by using a network cable. For information, see your owner's manual.
- 6 Tap **Start** → **Settings** → the **Connections** tab → the **Connections** icon. From the **My network card connects to** drop-down list, select "The Internet."

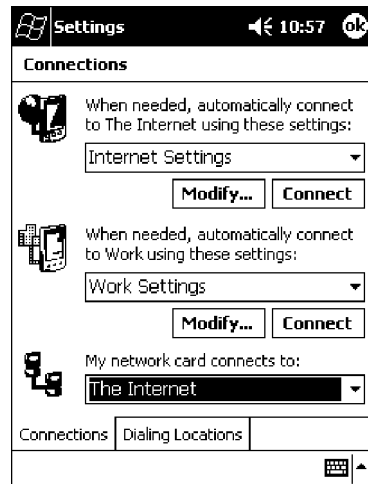

To start the connection, simply start using one of the programs listed in the preceding section. Once connected, you can perform the same activities as listed in the preceding section.

Connecting to Work

If you have access to a network at work, you can send e-mail messages, view intranet pages, synchronize your 700 Series Computer, and possibly access the Internet. You can connect to work in one of two ways:


- Create a modem connection by using a RAS (Remote Access Server) account. Before you can create this modem connection, your network administrator will need to set up a RAS account for you. If this is the method you want to use, see "*Creating a Modem Connection to Work*" below. Your network administrator may also give you VPN settings.
- Use an Ethernet card and a net tap to connect to the network. If this is the method you want to use, see "*Creating an Ethernet Connection to Work*" on page 91.

Creating a Modem Connection to Work


- 1 Get the following information from your network administrator:
 - Dial-up access telephone number
 - User name
 - Password
 - Domain name
 - TCP/IP settings



- 2 If your 700 Series Computer does not have a built-in modem, install a modem card.
- 3 Tap **Start** → **Settings** → the **Connections** tab → the **Connections** icon. Under the **When needed, automatically connect to The Internet using these settings:** select **Internet Settings** from the drop-down list, then tap **Modify**.

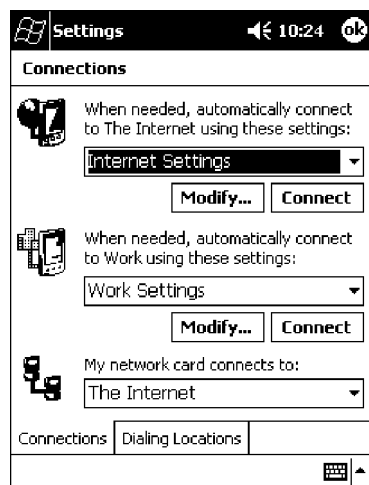

- 4 In the **Modem** tab, tap **New**.

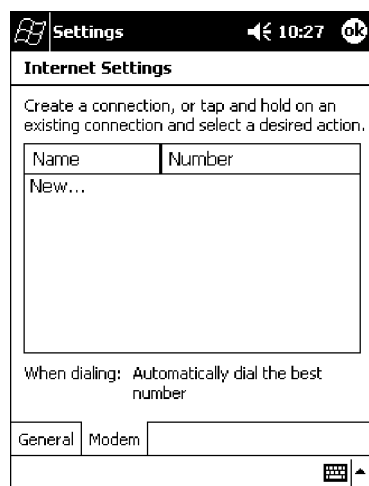

- 5 Enter a name for the connection, such as “Company Connection.”

In the **Select a modem** list, select your modem type. If your modem type does not appear, try reinserting the modem card. If you are using an external modem that is connected to your 700 Series Computer with a cable, select “Hayes Compatible on COM1.”

Settings 11:02

Make New Connection

Enter a name for the connection:
Company Connection

Select a modem:
Hayes Compatible on COM1:

Baud rate:
19200

Advanced...

Cancel Back Next

- 6 You should not need to change any settings in **Advanced**. Most ISPs now use a dynamically-assigned address. If the ISP you are connecting to does not use a dynamically-assigned address, tap **Advanced** → the **TCP/IP** tab, tap **Use specific IP address**, then enter the address. Tap **ok** to close the Advanced page, then tap **Next**.

Settings 10:32 ok

Advanced

☐ Use server-assigned IP address

☒ Use specific IP address

0 . 0 . 0 . 0

☐ Use Slip

☒ Use software compression

☒ Use IP header compression

Port Settings TCP/IP Name Servers


- 7 Enter the access phone number, then tap Next.

The screenshot shows the 'ISP Connection' screen in the Settings application. The title bar includes a Windows logo, the word 'Settings', and a speaker icon with the time '10:35'. Below the title bar is a section header 'ISP Connection'. There are three input fields: 'Country code:' with the value '1', 'Area code:' with the value '425', and 'Phone number:' which is empty. At the bottom of the screen are three buttons: 'Cancel', 'Back', and 'Next'. A small keyboard icon is visible in the bottom right corner.

- 8 Select other desired options, tap **Finish**, then tap **ok** to exit the Internet Settings.

The screenshot shows the 'ISP Connection' screen in the Settings application. The title bar includes a Windows logo, the word 'Settings', and a speaker icon with the time '10:38'. Below the title bar is a section header 'ISP Connection'. There are several options: a checked checkbox for 'Cancel call if not connected within 120 seconds', a checked checkbox for 'Wait for dial tone before dialing', and a field for 'Wait for credit card tone' with the value '0' seconds. There is also a field for 'Extra dial-string modem commands'. At the bottom of the screen are three buttons: 'Cancel', 'Back', and 'Finish'. A small keyboard icon is visible in the bottom right corner.

- 9 Tap the **Dialing Locations** tab and specify your current location and phone type (most phone lines are tone). These settings will apply to all connections you create.

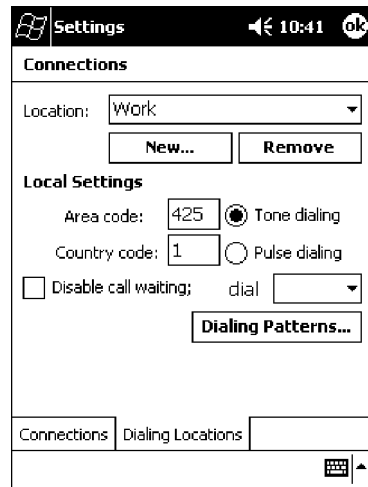

To start the connection, start using one of the following programs. Your 700 Series Computer will automatically begin connecting. Once connected, you can:

- Send and receive e-mail messages by using Inbox. Before you can use Inbox, you need to provide the information it needs to communicate with the e-mail server. For specific instructions, see “*Connecting Directly to an E-mail Server*” on page 93.
- Visit Internet or intranet Web or WAP pages via Pocket Internet Explorer.
- Send and receive instant messages with MSN Messenger. For more information, see “*MSN Messenger*” on page 67.
- Synchronize. For more information, see *ActiveSync Help* on the desktop computer.


Creating an Ethernet Connection to Work

- 1 You do not need to create a new connection on your 700 Series Computer. Instead, you must purchase a dock to enable on-board Ethernet or purchase a CompactFlash Ethernet card that is compatible with your 700 Series Computer.
- 2 Obtain the following information from your ISP:
 - User name
 - Password
 - Domain name

- 3 Insert the Ethernet card into your 700 Series Computer. For instructions on inserting and using the Ethernet card, see the owner's manual.



- *If using an on-board Ethernet*, place your 700 Series Computer in a dock, tap **Start** → **Today**, then look in the System Tray for the Ethernet icon (*shown left*). If not there, then tap the antenna icon for the NDISTRAY pop-up menu and select **Built-in Ethernet** from the menu.

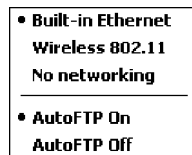


- 4 The first time you insert the card, **Network Settings** will appear automatically so that you can configure the Ethernet card. Most networks use DHCP, so you should not have to change these settings unless your network administrator instructs you to do so. Tap **ok** to exit the Network Settings.



Network Adapters

If it does not appear or to change settings later, tap **Start** → **Settings** → the **Connections** tab → the **Network Adapters** icon, tap the adapter you want to change, and then tap **Properties**.

- *If using an on-board Ethernet*, then select **Start** → **Settings** → the **Connections** tab → the **Network Adapters** icon. Select “NE2000 Compatible Ethernet Driver” from the list of adapters installed, then tap **Properties** to configure the Ethernet driver.

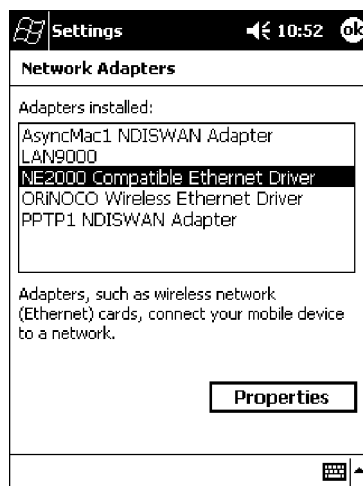

- 5 Connect the Ethernet card or dock to the network by using a network cable. For information, see your owner's manual.

- 6 Do the following to synchronize your 700 Series Computer:
- a Tap **Start** → **ActiveSync** to access the Microsoft ActiveSync application.
 - b Tap **Tools** → **Options**. → the **PC** tab, check **Include PC when synchronizing remotely and connect to**, then select your computer's name from the drop-down list

Remote synchronization with a desktop computer will work only if a partnership is set up with that computer through ActiveSync and ActiveSync is set to allow remote connections. Other restrictions apply. For more information, see *ActiveSync Help* on the desktop computer.

To start the connection, simply start using one of the programs listed in the preceding section. Once connected, you can perform the same activities as listed in the preceding section.

Ending a Connection

To disconnect, do one of the following:



- When connected via dial-up or VPN, tap the **Connection** icon (*shown left*) on your navigation bar, and then tap **End**.
- When connected via cable or cradle, detach your 700 Series Computer from the cable or cradle.
- When connected via Infrared, move the 700 Series Computer away from the PC.
- When connected via a network (Ethernet) card, remove the card from your 700 Series Computer.

Connecting Directly to an E-mail Server


You can set up a connection to an e-mail server so that you can send and receive e-mail messages by using a modem or network connection and Inbox on your 700 Series Computer.




Note: The ISP or network must use a POP3 or IMAP4 e-mail server and an SMTP gateway.

You can use multiple e-mail services to receive your messages. For each e-mail service you intend to use, first set up and name the e-mail service. If you use the same service to connect to different mailboxes, set up and name each mailbox connection.

Setting Up an E-mail Service

 Do the following to set up an e-mail service. Tap the question mark at the top of the screen for more assistance.


- 1 On your 700 Series Computer, tap **Start** → **Inbox** to access the Inbox application. Tap **Services** → **New Service**.

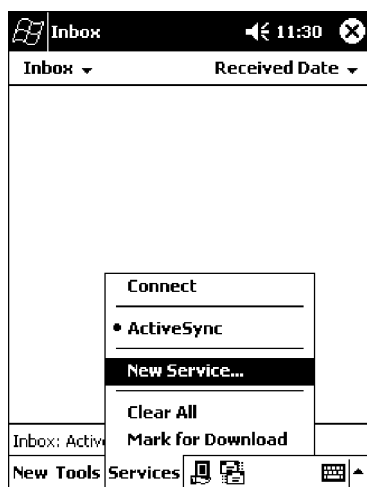

- 2 Enter an e-mail address, tap **Next**, then tap **Next** again after the status of the automatic configuration is listed as “Completed.”




- 3 Enter your user name and password, then tap **Next**.

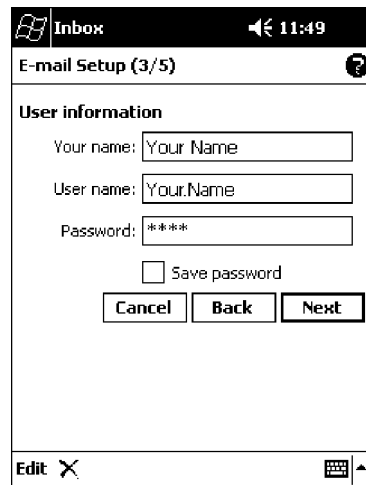

The screenshot shows the 'E-mail Setup (3/5)' screen. At the top, there is a status bar with 'Inbox' and a time of 11:49. Below the title bar, the screen is titled 'E-mail Setup (3/5)'. The main section is labeled 'User information'. It contains three text input fields: 'Your name:' with the placeholder 'Your Name', 'User name:' with the placeholder 'Your.Name', and 'Password:' with the placeholder '****'. Below these fields is a checkbox labeled 'Save password'. At the bottom of the form are three buttons: 'Cancel', 'Back', and 'Next'. The bottom of the screen features a navigation bar with an 'Edit' button, a close icon (X), a keyboard icon, and an arrow icon.

- 4 Select the appropriate service type from the **Service type** drop-down list, either POP3 or IMAP4, or enter a new service type, then tap **Next**.

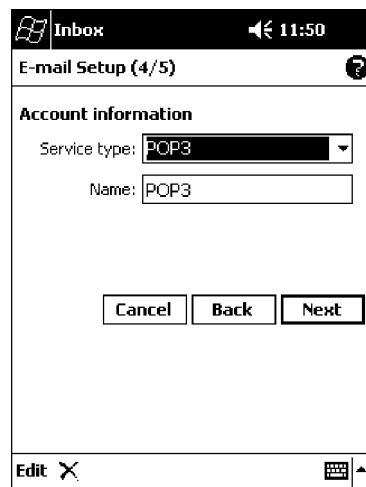

The screenshot shows the 'E-mail Setup (4/5)' screen. At the top, there is a status bar with 'Inbox' and a time of 11:50. Below the title bar, the screen is titled 'E-mail Setup (4/5)'. The main section is labeled 'Account information'. It contains a 'Service type:' drop-down menu with 'POP3' selected, and a 'Name:' text input field with 'POP3' entered. Below these fields are three buttons: 'Cancel', 'Back', and 'Next'. The bottom of the screen features a navigation bar with an 'Edit' button, a close icon (X), a keyboard icon, and an arrow icon.

- 5 In **Incoming mail**, enter the name of your e-mail server. In **Outgoing mail**, enter the name of your Simple Mail Transfer Protocol (SMTP) host. If you are using a network connection, enter your domain name in **Domain**. Tap **Options** to do additional configurations. Tap **Finish** to assign this service.

The screenshot displays the 'E-mail Setup (5/5)' screen within the 'Inbox' application. The title bar at the top shows 'Inbox' and the time '11:51'. Below the title bar, the screen is titled 'E-mail Setup (5/5)'. Under the heading 'Server information', there are three input fields: 'Incoming mail:', 'Outgoing mail:', and 'Domain:'. To the right of these fields is an 'Options' button. At the bottom of the main content area are three buttons: 'Cancel', 'Back', and 'Finish'. The bottom status bar includes an 'Edit' button and a keyboard icon.

When finished, to connect to your e-mail server, from the Inbox application, tap **Services** → **Connect**. For more information on using the Inbox program, see “*Inbox: Sending and Receiving E-mail Messages*” on page 56.



3 Installing Applications

There are multiple ways to get an application to your 700 Series Color Mobile Computer; just as there are multiple ways to package the application for delivery.

Packaging an Application

Use any of these methods to package an application for installation:

- For very simple applications, the application itself might be the only file that needs to be delivered.
- It could be a directory structure that contains the application, supporting files like ActiveX controls, DLLs, images, sound files, and data files.
- Or, you could package an application via a CAB file.

Consider any of the following when choosing a location into which to store your application:

- In the basic 700 Series Computer, as of software build version 1.31, there are two built-in storage options: the Object Store and the Persistent Storage Manager (PSM). The Object Store is RAM that looks like a disk. Anything copied here is deleted when a cold-boot is performed on the 700 Series Computer. The PSM is an area of storage which is embedded in a section of the system's FLASH memory. This storage area is *not* deleted during a cold-boot. It may, however, be deleted during the reflashing process. In addition to storing applications and data files, you do have the option to store a persistent registry to the PSM region.
- If the optional Secure Digital or CompactFlash storage card is in the system, then consider this card the primary location for placing an applications install files. The following folders represent either card:
 - The Secure Digital storage card creates the “\SDMMC Disk” folder.
 - The CompactFlash storage card creates the “\Storage Card” folder.
- Use the small non-volatile Flash File Store region to hold CAB files that rebuild the system at cold-boot or install applications from a CAB file *into* the Flash File Store so they are “ready-to-run” when a cold-boot is performed. Since the FLASH in the system has a limited number of write cycles, do not use the Flash File Store for excessive writing purposes; however, reading is okay.

Files copied to any of these locations are safe when a cold-boot is performed on a 700 Series Computer - *providing the AutoRun system is installed onto the storage card*. You can find this system on the Recovery CD. Copying a CAB file to the “\CABFILES” folder on one of these cards automatically extracts that CAB file on every cold-boot to ensure that your system is properly set up. See page 104 for more details on how this works.

Installing Applications

Consider any of the following options to get the package to the preferred location on your 700 Series Computer.

- Microsoft ActiveSync
- FTP Server (*page 100*)
- Secure Digital or CompactFlash storage cards (*page 100*)

Using Microsoft ActiveSync




Note: These instructions assume the 700 Color Management Tools portion of the *700 Color Software Tools CD* was installed onto your desktop.

The Microsoft ActiveSync tool is located on the 700 Color Companion CD. See Chapter 2, “*Pocket PC 2002*,” for information about this tool as provided by Microsoft Corporation.

This can be a serial, USB, Ethernet, InfraRed, or 802.11b ActiveSync connection. Files can then be copied using File Explorer on a PC or a laptop computer. This option is usually only good when updating a few 700 Series Computers.

These instructions assume that Microsoft ActiveSync was installed onto your desktop computer and is up and running. If not, go to Chapter 2, “*Pocket PC 2002*,” for an URL from which you can download the latest application.

- 1 Connect your 700 Series Computer to your desktop computer via an ActiveSync cable or IrDA.
- 2 Wait for a “Connected” message to appear in the Microsoft ActiveSync application to signal a connection to the 700 Series Computer. If necessary, select **File** → **Get Connected** to initiate a connection.

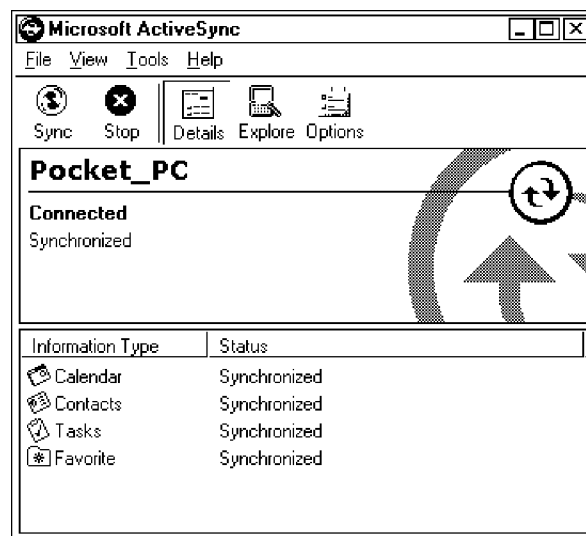

- 3 Click **Explore** to access the Mobile Device directory on your 700 Series Computer.

- 4 From your desktop, select **Start → Windows Explorer**, then browse the “C:\Intermec\700C Mgmt Tools\CabFiles” path for any CAB files needed for your 700 Series Computer. Select the appropriate file, right-click the file for a pop-up menu, then select **Copy**.
- 5 Within the Mobile Device directory, go to the directory where you want the files located on the 700 Series Computer, do a right-click for a pop-up menu, then select **Paste**.
- 6 When all of the files are pasted, perform a warm-boot on the 700 Series Computer. When the computer reboots, wait for the LED on the top left of your keypad to stop blinking. Tap **Start → Programs → File Explorer** to locate the newly copied executable files, then tap these files to activate their utilities.

Using the FTP Server

The 700 Series Computer has a built-in FTP Server that connects to a network via Ethernet or 802.11b. This allows connections to the 700 Series Computer for performing file transfers or computer management functions. Another benefit is that FTP scripts can be created to automate the process of copying files to the 700 Series Computer. This option is good for when a large number of 700 Series Computers need to be updated. See Chapter 7, “*Programming*,” for more information.

Using a Storage Card

Use the following steps to install an application using a storage card.

Copying to a CompactFlash Card

Follow the steps below to install your application on the device using a CompactFlash storage card:

- 1 Suspend the 700 Color Computer and remove its CompactFlash drive, which holds a SanDisk CompactFlash storage card.
- 2 Using a CompactFlash Adapter card, place the CompactFlash drive in your desktop PC card drive.
- 3 Create a subdirectory on the PCMCIA CompactFlash drive in which to store your application.
- 4 Use the CEImager application to add the autorun system to the storage card. See the *Software Tools User's Manual* to learn about CEImager.
- 5 Copy your application, data files, and all required DLLs and drivers to the subdirectory created on the CompactFlash drive.
- 6 Add your application to the AUTOUSER.DAT file on the “\Storage Card\2577” directory that contains the following statement, where *your directory* is the directory on the CompactFlash storage card where the application was installed, and *yourapp.exe* is the name of your application. Finish the “RUN=” statement with a carriage return line-feed combination. There may be multiple run statements in the file.

RUN=\<your di rectory>\<yourapp. exe>

- 7 Remove the CompactFlash card from your desktop computer and reinstall it into the 700 Series Computer.
- 8 Warm-boot the 700 Series Computer to add these files to the CompactFlash storage card.

If the AUTOUSER.DAT file is found and the “RUN=” statement is correct, the task manager will launch and execute your program on startup.

Copying to a Secure Digital Storage Card

Do the same steps as for the CompactFlash storage card, except replace the “\Storage Card\2577” directory with the “\SDMMC Disk\2577” directory in step 6 on the previous page.

Updating the System Software

You can use the 700 Color Recovery Tools CD to reinstall or update the operating system software on the 700 Color Computer. For more information, contact your Intermec representative.

Application Migration



Note: These instructions assume that the 700 Color Management Tools portion of the *700 Color Software Tools CD* was installed onto your desktop and that a storage card has been added to the base configuration of the 700 Color Computer.

The following steps are required to ensure that the following will happen on a cold-boot:

- CAB files restored
- applications automatically start
- registry restored


Do the following for the cold-boot procedure:



Intermec CE
Imager

- 1 From your desktop, double-click the **Intermec CE Imager** desktop icon to access the Intermec CEImager application. If this icon is not on your desktop, then double-click the CEIMAGER.EXE executable from the “C:\Intermec\700C Mgmt Tools\Tools\CEImager” folder.
- 2 Click **Default** under **Components List** to activate the components.

- 3 Click (+) to expand the **AutoRun System** component, click (+) to expand the **Destination Media** option, then select *either* the **CompactFlash Card** option or the **Secure Digital Card** option. *Do not select both storage cards, as the AutoRun files copied will work for one storage card, but **not** work on the other storage card.*

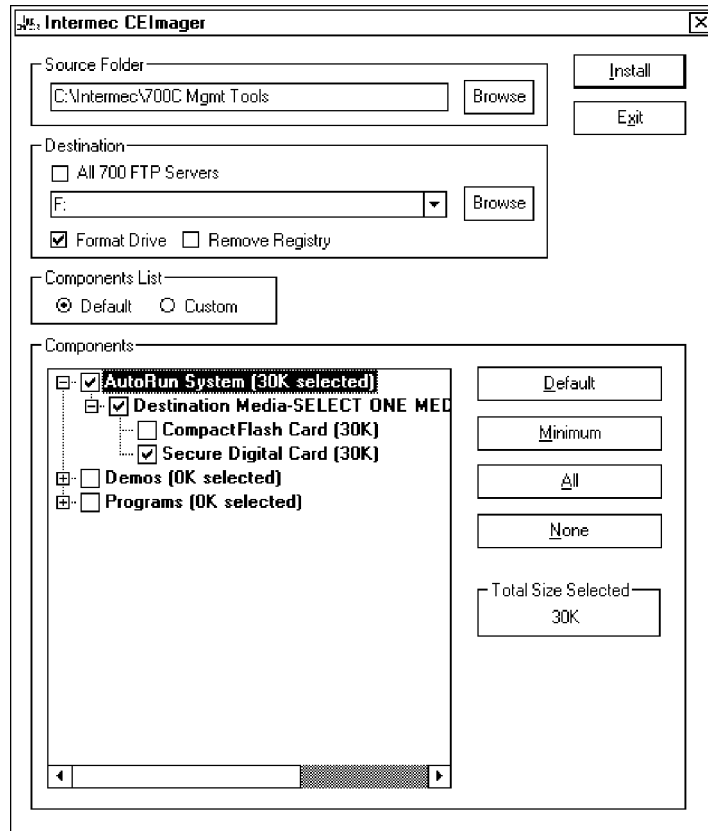


- 4 Click **Install** to install the AUTORUN files onto the storage card.
- 5 Create a “\CabFiles” folder on the storage card. Copy any CAB files that are to be extracted on every startup into this folder.
- 6 In the “\2577” directory, add your custom AUTOUSER.DAT file. See the *Recovery Help* for more information on how to set up an AUTOUSER.DAT file.

- 7 If you are using the RegFlushKey() API, the application must use a special API to make sure the registry is written to the appropriate card; or you can use the **Utilities** control panel applet, as follows. See Appendix A, “Configurable Settings,” for more information about this applet.



Utilities

- a From the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Utilities** icon → the **Registry Save** tab.
- b Tap **Enable Registry Storage**, then tap one of the following:
 - **FL**
To write the registry to the built-in Flash File Store. *Available in Software Builds version 1.30 or later.*
 - **SD**
To write the registry to the Secure Digital storage card.
 - **CF**
To write the registry to the CompactFlash storage card.
- c Tap **ok** to save your entry and exit the **Utilities** control panel applet.

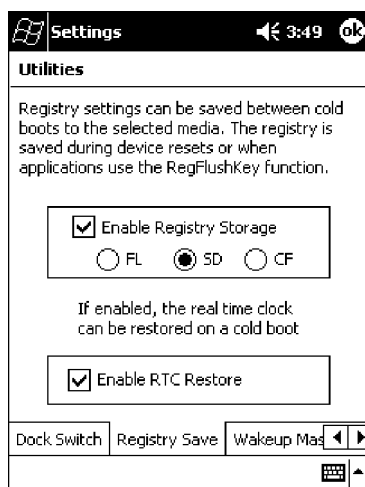

Note: If you are using a Secure Digital storage card, you must change any disk access from “Storage Card” to “SDMMC Disk.”



Note: If you are using the built-in PSM, you must change any disk access from “Storage Card” to “Flash File Store”.

- 8 Remove the storage card from the desktop PC and install the card into the 700 Color Computer.
- 9 Perform a cold-boot on the 700 Color Computer. Files automatically install from the storage card upon reboot. Any calls to the RegFlushKey() API will automatically write the registry to the appropriate location.

Migrating from a 700 Monochrome Computer

As you migrate from a 700 Monochrome Computer to a 700 Color Computer, you need to consider the following:

- When converting a 700 Monochrome Computer application to run on the 700 Color Computer, most APIs should work without changes. Below are a few exceptions:
 - The 700 Monochrome Computer uses the “\Storage Card” folder for nonvolatile storage. You may need to change the application to store data onto the “SDMMC Disk” folder instead of the “\Storage Card” folder if a Secure Digital storage card is present in the system.
 - If the application uses the RegFlushKey() API, it must first verify that the proper media is available in the system and call the special API mentioned in Step 7 on the previous page.
 - If the application is using the 700 Color switchable dock, use the IOCTL_DOCK_SWITCH value from the IOCTL_HAL_ITC_WRITE_SYSPARM function to set the proper port on the dock before communications. See more information about this KernelIOControl function in Chapter 7, “*Programming*.”
 - Some WAN radio options have changed. Review the WAN radio information in Chapter 4, “*Network Support*,” to determine if any changes are required in your application.
 - Arrow and tab keys are reversed from the 700 Monochrome Computer. Keyboard remapping is available on the 700 Color Computer if these keys need to be changed back (see page 101).
 - Special SDKs are not needed to compile applications for the Xscale processor. Targeting the SA1110 processor creates applications that run on the 700 Color Computer.

Cabinet File Installation

CAB files (*short form of “cabinet” files*) are compressed folders as defined by Microsoft. A “cabinet” file is a single file, usually suffixed with .CAB, that stores compressed files in a file library. A compressed file can be spread over several cabinet files. During installation, the setup application decompresses the files stored in a cabinet and copies them to the user’s system.

For the 700 Series Computer, CAB files register DLLs, create shortcuts, modify registry entries, and run custom setup programs. Tap a CAB file to extract that file or place the CAB file on one of the approved storage devices in the “\CabFiles” folder, then perform a warm-boot on the 700 Series Computer. There are two methods available to extract a CAB file:

- Tap a CAB file to extract it. With this method, the CAB file is automatically deleted when the extraction process is successful, *unless* the CAB file is set with the read-only attribute.
- Use the AUTOCAB method to extract all files when a cold-boot is performed on the 700 Series Computer. This method is on the *700 Color Software Tools CD*, see its *Software Tools User’s Manual* for information.



4 Network Support

The 700 Series Color Mobile Computer can integrate up to three radios in a single unit, and will automatically install the appropriate software for radio use when the unit is powered on.

The Intermec CORE (Common Object Resource Environment) application, which provides a framework for various modules that let you configure and manage your Intermec products, defaults to the most recently used module. If a module has not yet been used or set, CORE will default to the first module as listed alphabetically.

The following communication options on the 700 Series Computer provide wired and wireless connectivity:

- **Onboard wired Ethernet** (*standard*)
- **Wireless Local Area Network (LAN)**
This 802.11b radio option provides up to 11 Mb/sec throughput.
- **Wireless Wide Area Network (WAN)**
Includes support for GSM/GPRS and CDMA/1xRTT radios.
- **Wireless Printing**
This allows for cable-free communications with peripheral devices, such as printers, over a ten-meter range. This compatibility is provided via a Bluetooth qualified module by Socket Communications.

CORE

The Intermec CORE application provides a framework for various modules that let you configure and manage your Intermec products. These modules are software plug-ins that can be configuration tools, such as the 802.11b radio configuration module, or they can provide information on your environment, such as a battery life module.



CORE is built into the operating system of every 700 Series Computer. On the 700 Series Computer, tap **Start** → **Programs** → the **Intermec CORE** icon to access this application.

CORE modules are collections of specific information. Each module can display general and detailed information. Tap the **General** and **Details** tabs near the bottom to switch between general and detailed information. Note that not all modules will have detailed information.

Install an Available Radio Module

To install an available radio module onto your 700 Series Computer, tap **Modules** → **Add/Remove**, select a module from the bottom Available box, then tap **Add** to put the selected module in the upper Installed box. Click **OK** to exit the Add/Remove Modules screen.

Loading a Radio Module

To load or switch to another radio module installed on the 700 Series Computer, tap **Modules** → **Choose Module**, select a module from the Installed Modules box, then tap **Choose** to initialize and begin using that module.

To learn more about this application, see its online help. Tap **Start** → **Help** from the menu to see the CORE online help.



Note: Once CORE is running, you can return to it by tapping its icon from the System Tray via the Today screen. Tap **Start** → **Today** → the Intermec CORE three-ring icon (*circled in the following illustration*).




Network Adapters

Your 700 Series Computer can have up to three radios installed. The default network adapter or radio is dependent on what radios are installed in your 700 Series Computer. Below are the network adapters that exist as of this publication. See the Developer's Support web site for the latest information on network adapters for your unit.

- Ethernet Communications (*LAN9000*) — page 108.
- 802.11b Radios (*802.11b Wireless LAN driver*) — page 110.
- WWAN (*Wireless WAN*) — page 113.
- Wireless Printing (*PAN*) — page 125.

Note that the tip of the antenna attached to your 700 Series Computer is color-coded to identify its radio type. Refer to the following to determine your radio type:

- **Red**
CDMA (non-Sprint networks)
- **White**
GPRS US/Canada and CDMA Sprint networks
- **Blue**
GPRS International

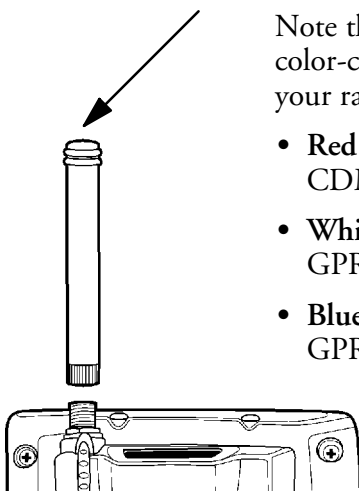

Ethernet Communications

Follow the steps below to start Ethernet communications on the 700 Series Computer. If your system does not contain an 802.11b radio, then **Ethernet networking using DHCP** will be selected as the default.



When “Built-in Ethernet” is selected from the NDISTRAY pop-up menu (the Network Driver Interface Specification tray application), then the antenna shown to the left will appear in the System Tray *as circled in the following illustration*.




When “No networking” is selected, then this icon will appear with a red “X” above it.

- | |
|---|
| <ul style="list-style-type: none"> • Built-in Ethernet Wireless 802.11 No networking |
| <ul style="list-style-type: none"> • AutoFTP On AutoFTP Off |



From the 700 Series Computer, tap **Start** → **Settings** → the **Connections** tab → the **Network Adapters** icon to access the network connections for this unit. Make the changes necessary for your network, then tap **ok** when finished.

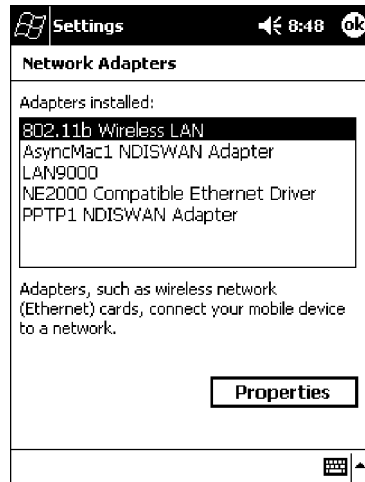


Note: “LAN9000” is for Ethernet and “802.11b Wireless LAN” is for 802.11b radios.

802.11b Communications



When “Wireless 802.11” is selected via the NDISTRAY pop-up menu, then the antenna shown to the left will appear in the System Tray.

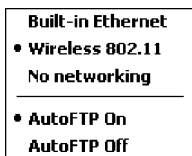

**Wireless
Network**

To configure 802.11b communications on the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Wireless Network** icon to access the Profile Wizard for the 802.11b radio module. Go to Appendix A, “*Configurable Settings*,” for configuration information.

Network Selection APIs

The Network Selection APIs change the network adapter configuration programmatically. Both drivers support the same IOCTL function numbers for loading and unloading the drivers. Go to Chapter 7, “*Programming*,” to see the APIs.

802.11b Radio CORE Module



Note: See page 106 for information on loading this module in CORE.


The 802.11b radio CORE module displays helpful information about the 802.11b radio option built into your 700 Series Computer.

Note that you can configure the 802.11b radio module from this CORE application. Select **Configure** → **Configure 802.11 CF** from the bottom menu bar to access the Profile Wizard application. See Appendix A, “*Configurable Settings*,” for information about this application via the Wireless Network control panel applet.

Select **Modules** → **Intermec 802.11 CF Help** for more information on the contents of this CORE module.

General

Below are descriptions and meanings for each piece of information provided via the **General** tab. *Note that the information is listed alphabetically.*

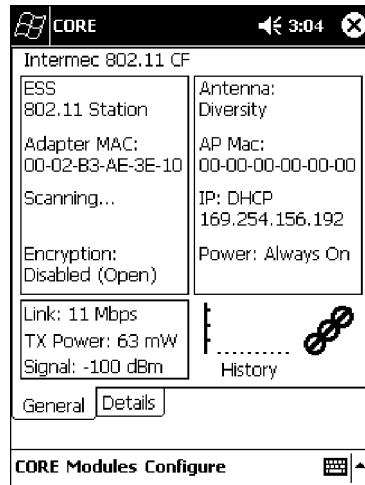


- **Adapter MAC:**
This identifies the MAC address for this 802.11b adapter.
- **Antenna:**
This identifies the antenna being used with the assigned profile: “Primary,” “Secondary,” or “Diversity.”
- **AP Mac:**
This identifies the MAC address of the access point to which this 700 Series Computer is connected.
- **Encryption:**
This indicates whether WEP encryption is “Enabled” or “Disabled (Open).” See page 402 for more information about WEP encryption.
- **ESS:**
This identifies the type of network to which you are attached, either an ESS (Embedded Security Subsystem) 802.11 Station, or Ad-hoc.
- **IP:**
This provides the IP address which can be set as either DHCP (Dynamic Host Configuration Protocol) or statically.
- **Link:**
This indicates the speed at which a connection is made.
- **Power:**
This indicates the power status of this 700 Series Computer: “Always On” is the default.
- **Scanning:**
Status of association. When connected to a network, this changes to “Connected to NET” with NET being the name of the network to which you are connected.
- **Signal:**
This identifies the radio signal strength (in dBm).



- **TX Power:**
This shows the speed (in milliwatts) at which transmissions are made.
- **History:**
This bar graph displays an active history of this radio module's quality of connections.
- **Friendly Indicator:**
If the radio stack is loaded, then all three dots are filled. These dots are left empty if the stack is not loaded. These dots do vary based on the CORE application's perception of the overall connection quality.

Details

Below are descriptions and meanings for each piece of information provided via the **Details** tab. *Note that the information is listed alphabetically.*

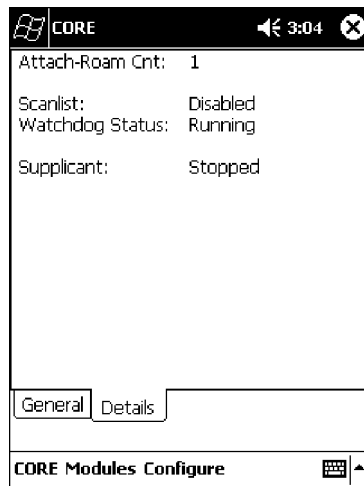

- **Attach-Roam Cnt:**
This includes the number of new associations made during the current session, including any found roaming.
- **Scanlist:**
This indicates whether the Scan List option was enabled or disabled. See page 409 for more information.
- **Supplicant:**
This monitors the 802.1x security activity on the client: “Running” or “Stopped.”
- **Watchdog Status:**
This monitors the activity of the Scan List: “Running” or “Stopped.”

WWAN Radio Options

Go to the following pages to learn more about your radio module:

- CDMA/1xRTT radio module (*page 113*)
- GSM/GPRS radio module (*page 116*)

CDMA/1xRTT

Code Division Multiple Access (CDMA) is a form of wide area wireless communications. 1xRTT supports up to 144 KB per second packet data transmission and doubles the voice capacity of current generation CDMA networks.

CDMA Radio Set Up

Information about how to set up and provision the CDMA radio is available in the *700 Color CDMA Radio Setup Quick Start Guide* P/N: 962-054-063.




Note: See page 106 for information on loading this module in CORE.

WAN Radio CORE Module — General

The WAN radio CORE module displays helpful information about the CDMA/1xRTT radio option built into your 700 Series Computer.

Below are descriptions and meanings for each piece of information provided via the **General** tab. *Note that the information is listed alphabetically.*

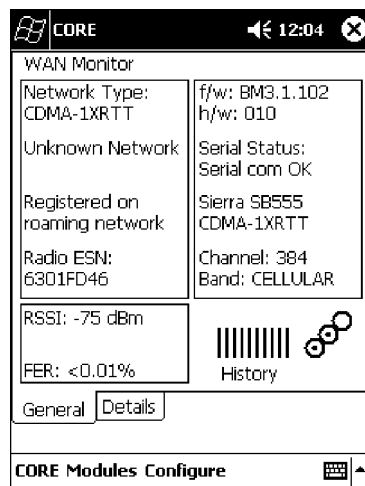

- **Band:**
This identifies the frequency bands used by this radio module.
- **Channel:**
This identifies the channel available for this radio module, if any.
- **FER:**
This shows the Frame Error Rate (FER), the percentage of packets of transmitted information with errors divided by the total number of packets transmitted, received, or processed over a given period of time.

- **f/w:**
This identifies the firmware version, if available.
- **h/w:**
This identifies the hardware version, if available.
- **Network Type:**
This is the network type which would list “CDMA-1XRTT.”
- **Radio ESN:**
This lists the Electronic Serial Number (ESN) assigned to this radio module or “Unavailable” if a number cannot be read from the radio.
- **Registered on home network:**
If the WAN radio module has registered with a service provider network, then one of the following will appear:
 - *Registered on home network:*
The radio module is registered on its “home” network.
 - *Registered on roamed network:*
The radio module is registered on another service provider’s network.
 - *Radio Not Registered:*
There is no network within range of this radio module.
- **RSSI:**
This displays the Received Signal Strength Indicator (RSSI) frequency or lists “Unavailable” if there is no signal or the signal cannot be retrieved from the radio module.
- **Serial Status:**
This indicates whether serial communications passed (“Serial com OK”) or failed (“Serial com FAIL”) in its last transaction. A status of “Serial com FAIL” typically indicates that the 700 Series Computer is unable to establish communication with the radio module installed within.
- **Sierra SB555:**
This identifies the product name for this radio module.
- **Channel:**
This identifies the bandwidth or channel available for this radio module, if any.
- **History:**
This bar graph displays an active history of this radio module’s quality of connections.
- **Friendly Indicator:**
Usually indicates the signal strength for this radio module. Three filled dots indicate a high quality or strong signal. Three empty dots indicate that the signal is out of range or there is no signal detected.



WAN Radio CORE Module — Details

Below are descriptions and meanings for each piece of information provided via the **Details** tab, reading from top to bottom. Most of this is similar to what is shown under the **General** tab. *Note that the information is listed alphabetically.*



- **Band:**
This identifies the frequency bands used by this radio module.
- **Firmware Rev:**
This identifies the firmware version, if available.
- **Manufacturer:**
This lists the name of the manufacturer that developed this radio module, such as “Sierra Wireless.”
- **Model:**
This lists the product name for this radio module, such as “Model 72.”
- **Operator:**
This identifies the service providing the network support, if known.
- **Phone Number:**
This identifies the telephone assigned via the Phone application, see page 120 for more information.
- **Radio Temp:**
This identifies the temperature of the radio module, or lists “Unavailable degrees” if no information or temperature cannot be measured.
- **RSSI:**
This displays the RSSI frequency or lists “Unavailable” if there is no signal or the signal cannot be retrieved from the radio module.
- **Serial Status:**
This indicates whether serial communications passed (“PASS”) or failed (“FAIL”) in its last transaction. A status of “FAIL” typically indicates that the 700 Series Computer is unable to establish communication with the radio module installed within.

GSM/GPRS

GSM (Global System for Mobile communications) is an open, nonproprietary wireless system. **GPRS** (General Packet Radio Service) is the high-speed data evolution of GSM that supports Internet Protocol (IP), enabling access to Internet and intranet content and applications from GPRS wireless devices.




Note: See page 106 for information on loading this module in CORE.

WAN Monitor — General

The WAN Monitor CORE module displays helpful information about the GSM/GPRS radio option built into your 700 Series Computer. *The following illustrations are for a GSM/GPRS Siemens MC45 radio.*

Below are descriptions and meanings for each piece of information provided via the **General** tab. *Note that the information is listed alphabetically.*

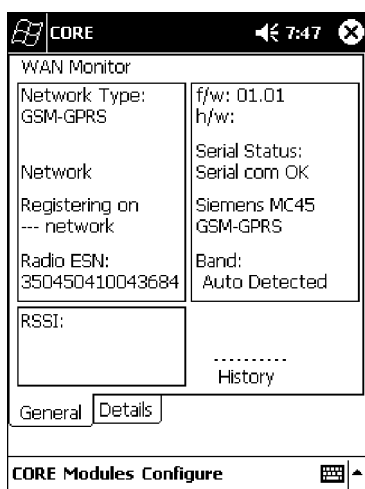

- **Band:**
This identifies the bandwidth available for this radio module, if any.
- **f/w:**
This identifies the firmware version, if available.
- **h/w:**
This identifies the hardware version, if available.
- **Network Type:**
This is the network type which would list “GSM-GPRS.”
- **Radio ESN:**
This is the Electronic Serial Number (ESN) assigned to this radio module. “Unavailable” appears if a number cannot be read from the radio.

- **Registered on home network:**

If the WAN radio module has registered with a service provider network, then one of the following will appear:

- *Registered on home network:*
The radio module is registered on its “home” network.
- *Registered on roamed network:*
The radio module is registered on another service provider’s network.
- *Radio Not Registered:*
There is no network within range of this radio module.

- **RSSI:**

This displays the Received Signal Strength Indicator (RSSI) frequency or lists “Unavailable” if there is no signal or the signal cannot be retrieved from the radio module.

- **Serial Status:**

This indicates whether serial communications passed (“Serial com OK”) or failed (“Serial com FAIL”) in its last transaction. A status of “Serial com FAIL” typically indicates that the 700 Series Computer is unable to establish communication with the radio module installed within.

- **Siemens MC45:**

This identifies the product name for this radio module.

- **History:**

This bar graph displays an active history of this radio module’s quality of connections.



- **Friendly Indicator:**

Usually indicates the signal strength for this radio module. Three filled dots indicate a high quality or strong signal. Three empty dots indicate that the signal is out of range or there is no signal detected.



WAN Monitor — Details

Below are descriptions and meanings for each piece of information provided via the **Details** tab, reading from top to bottom. Most of this is similar to what is shown under the **General** tab. *Note that the information is listed alphabetically.*



- **Firmware Rev:**
This identifies the firmware version, if available.
- **IMEI #:**
This is the IMEI (International Mobile station Equipment Identity) serial number of the GSM/GPRS radio module.
- **IMSI #:**
This shows the IMSI (International Mobile Subscriber Identity) number assigned to the SIM card installed in this 700 Series Computer.
- **Manufacturer:**
This lists the name of the manufacturer that developed this radio module, such as “Siemens.”
- **Model:**
This identifies the product name for this radio module, such as “MC45.”
- **Operator:**
This lists the name of the service providing the network support.
- **RSSI:**
This displays the RSSI frequency or lists “Unavailable” if there is no signal or the signal cannot be retrieved from the radio module.
- **Serial Status:**
This indicates whether serial communications passed (“PASS”) or failed (“FAIL”) in its last transaction. A status of “FAIL” typically indicates that the 700 Series Computer is unable to establish communication with the radio module installed within.


- **SIM Status :**

Identifies whether a Subscriber Identity Module (SIM) card is installed in this 700 Series Computer.

Terminal Application

Tap **Terminal App** from the **Details** page to send standard AT commands. Information about these AT commands are available under “*AT Command Interface*” on page 121.

Select an AT command from the drop-down list, then tap **Send**. The results of each test appears in the text box. Tap **Exit** or **ok** to close this screen and return to the **Details** page.

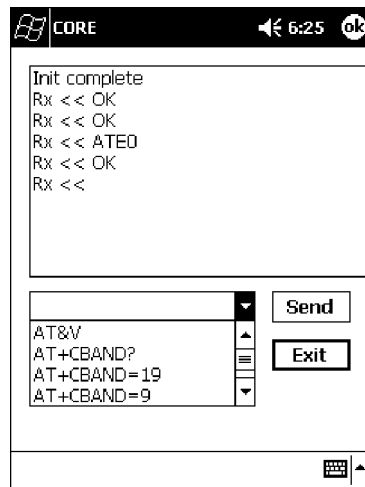


Phone Application

With the WAN radio module installed in your 700 Series Computer, you can send and receive telephone calls. Use the speaker on the back of the computer as your earpiece and use the connector on the bottom of the computer for your mouthpiece.

Tap **Phone App** from the **Details** page to access the application which will process your phone calls. Tap **Exit** or **ok** to close this application and return to the **Details** page.

- Tap the numbers for a phone call, using **Clear** to erase each digit, then tap **Send** to initiate the call.
- Tap **Answer** to receive an incoming call.
- Tap **End** to disconnect a transaction.
- Tap **Vol ^** or **Vol v** to adjust the speaker volume.
- Tap **Mic ^** or **Mic v** to adjust the microphone sensitivity.

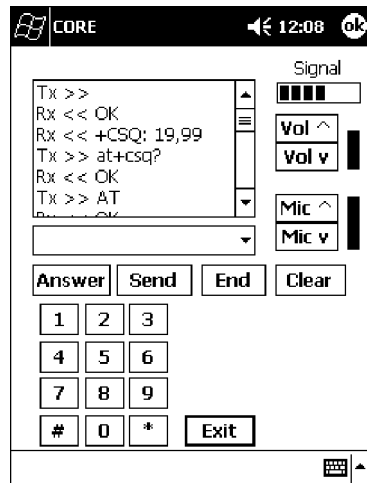

AT Command Interface

This interface specification is based on the following recommendation:

- **ETSI GSM 07.05:**
European Digital Cellular Telecommunication System (phase 2)
Use of DTE-DCE interface for Short message and cell broadcast service.
- **ETSI GSM 07.07:**
European Digital Cellular Telecommunication System (phase 2)
AT command set for GSM Mobile Equipment.
- **ITU-T Recommendation V.25 ter**
Serial asynchronous automatic dialing and control.



Note: You will need the Adobe Acrobat Reader application to view a PDF document. Go to <http://www.adobe.com/prodindex/acrobat/readstep.html> to install or download the latest Adobe Acrobat Reader according to Adobe's instructions.

Command Set for Sierra Wireless SB555

Use the AT command interface from Sierra Wireless to program the CDMA/1xRTT SB555 radio module. Documentation for this interface is available via the following URL. Click the “General AT command reference” link for a PDF document, which is 680 KB in size. *Note that this URL is subject to change.*

http://www.sierrawireless.com/ProductsOrdering/embedded_docs.html

Command Set for Siemens MC45

Use the MC45 AT command interface from Siemens AG to program the GPRS/GSM MC45 radio module. The “*MC45 Siemens Cellular Engine AT Command Set*” is available either from Intermec Technologies or from Siemens AG. Contact either your Intermec representative or the Siemens AG support personnel at the following URL for more information. *Note that this URL is subject to change.*

http://www.siemens-mobile.com/btob/CDA/presentation/ap_btob_cda_presentation_frontdoor/0,2950,12,FF.html


Testing the AT Commands

These commands can be sent to either WAN radio by setting up a dial-up networking connection to COM4. Do the following to initiate this connection and test these commands to your radio:




Connections

- 1 From the 700 Series Computer, select **Start** → **Settings** → the **Connections** tab → the **Connections** icon.
- 2 Tap **Modify** beneath the **Internet Settings** drop-down list.

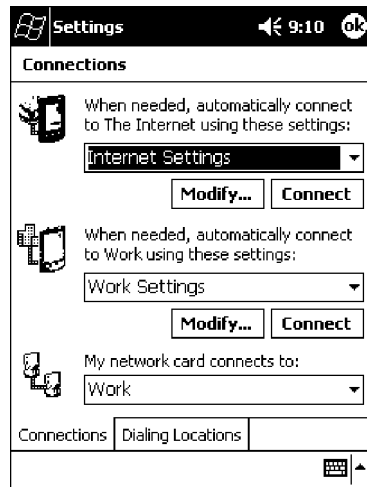

- 3 Tap **New..** to make a new connection.

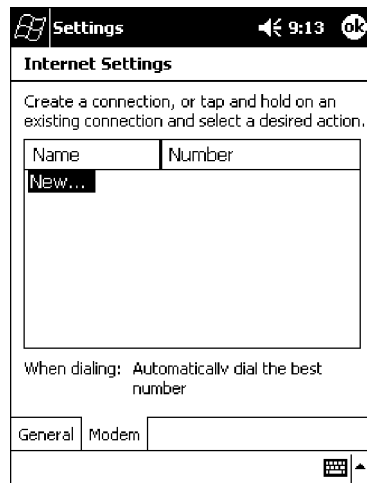

- 4 Enter a name for the connection, select “WANA on COM4” from the **Select a modem** drop-down list, and select “115200” from the **Baud rate** drop-down list. Tap **Advanced** to continue.

Settings 9:14

Make New Connection

Enter a name for the connection:
My Connection

Select a modem:
WANA on COM4

Baud rate:
115200

Advanced...

Cancel Back Next

- 5 On the **Port Settings** tab, check **Enter dialing commands manually**, then tap **ok** → **Next** → **Finish** to return to the Internet Settings screen with your new connection.

Settings 9:15 **ok**

Advanced

Connection preferences

Data Bits: 8

Parity: None

Stop Bits: 1

Flow Control: Hardware

Terminal


☐ Use terminal before connecting

☐ Use terminal after connecting

☒ Enter dialing commands manually

Port Settings TCP/IP Name Servers

- 6 Press and hold the new connection for a pop-up menu, then tap **Connect** to initiate the connection. Wait for about ten seconds for the Network Log On screen, then tap **OK**. *Note: You do not need to enter any information within the Network Log On screen.*

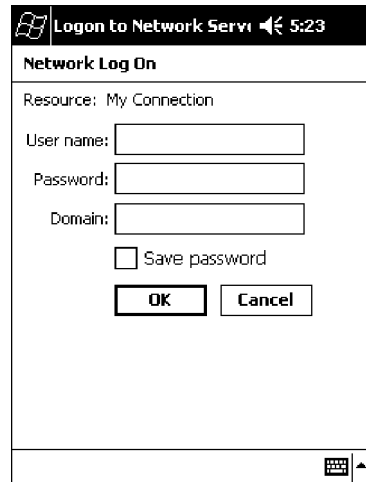

- 7 Use either the onscreen keyboard, or press the keys to type any of the AT commands provided. Press or tap **Enter** to send each command. The results of each command sent will print onscreen - see the sample illustration below. *Note that each "AT" command **must** start with either the "at" or "at+" characters.*
 - To see what you typed onscreen, type "at+e" to initiate the AT Echo command, then press **Enter**.

Wireless Printing

“Bluetooth” is the name given to a technology standard using short-range radio links, intended to replace the cables connecting portable and fixed electronic devices. The standard defines a uniform structure for a wide range of devices to communicate with each other, with minimal user effort. Its key features are robustness, low complexity, low power, and low cost. The technology also offers wireless access to LANs, the mobile phone network, and the internet for a host of home appliances and portable hand-held interfaces.


When installed on your 700 Color Computer, you can access the Bluetooth Device Manager application and BTctrl program from the System Tray via the Today screen. *Both icons are circled in the following illustration.*



Tap the **Bluetooth** icon for the Bluetooth Device Manager application to configure your local Bluetooth properties, manage discovered Bluetooth devices, and set favorite Bluetooth devices for remote connections.



Tap the **BTctrl** icon for the BTctrl program, which handles powering the Bluetooth module and loading the Bluetooth stack on boot and following a suspend/resume. BTctrl is not an application used on a daily basis, but you may need to refer to it from time to time.

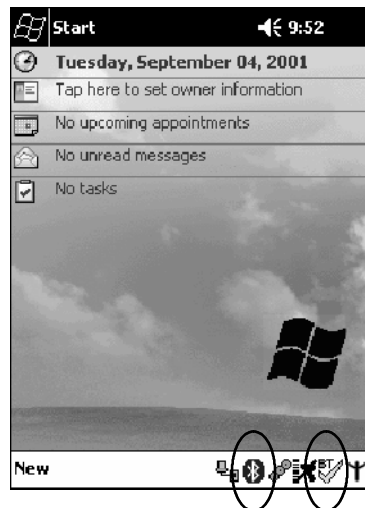

BT Control

You can also access the BT control application by tapping **Start** → **Programs** → the **BT Control** icon.


Documentation

Information about additional Bluetooth software, including the Bluetooth Device Manager and the BTctrl program, can be found within the Wireless Printing SDK. This is located on the *700 Color Software Tools CD*, via the “\Wireless Printing SDK” directory off the root of the toolkit. It also can be found in the *Wireless Printing Development Guide*, also on the *700 Color Software Tools CD*.

700 Color Computer Setup


Do the following on the 700 Color Computer to set it up for use with Bluetooth devices:

- 1 Tap the **Bluetooth** icon in the System Tray via the Today screen, then tap **Advanced Features** → **Bluetooth Devices**.
- 2 From the bottom of the screen, tap **Tools** → **Device Discovery** for the Bluetooth Discovery Wizard. Tap **Next** to initiate the discovery.
- 3 Tap the up/down arrows to change the number of seconds this discovery process is to occur. Tap **Next** to accept the default **Any Bluetooth device** selection and search for Bluetooth devices.

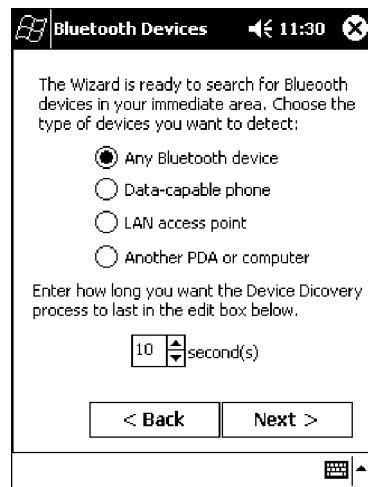

- 4 A list of discovered device will on the next screen. If devices were not discovered, tap **Back**, then **Next** to do report the discovery process, or tap **Finish** to exit the Wizard.
- 5 If devices are discovered and your device is in the list, select its applicable check box, tap **Next** to do a service discovery, then tap **Finish**.


If devices are discovered, but your device is not displayed, ensure your device and its radio are turned on, then do the Device Discovery again.

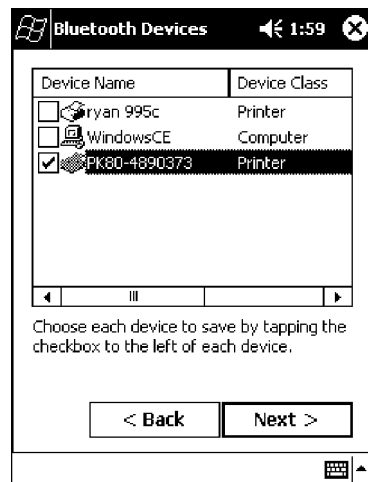

Discover Device

Icons for discovered remote devices are shown in the Bluetooth Devices screen. To verify whether these devices were discovered, do the following:

- 1 From the Bluetooth Devices Manager, select to highlight a device, then tap **Device** → **Properties** → the **Services** tab.

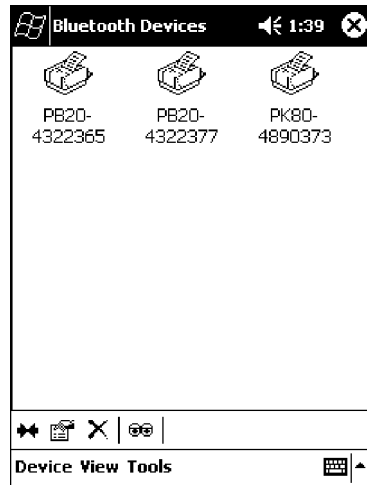

- 2 If a message, such as the following is shown, then your service was discovered correctly. Tap **ok** to return to the discovered remote devices.




- 3 If a message like the following is shown, tap **Update** to rediscover the services available (*you may need several attempts to correctly discover the services*). Tap **ok** to return to the discovered remote devices screen.



Set Device as Favorite

Do the following to set your Wireless Printing device as your “favorite” on the 700 Color Computer. *This example uses a COM Port device.*

- 1 Tap the **Bluetooth** icon in the System Tray via the Today screen, then tap **Advanced Features** → **Bluetooth Devices**.
- 2 From the bottom of the screen, tap **Tools** → **My Favorites**.
- 3 Tap **Use the favorite selected above** to enable the **My favorite COM port device** drop-down list.
- 4 Tap the drop-down arrow, then select your COM port device from the drop-down list.

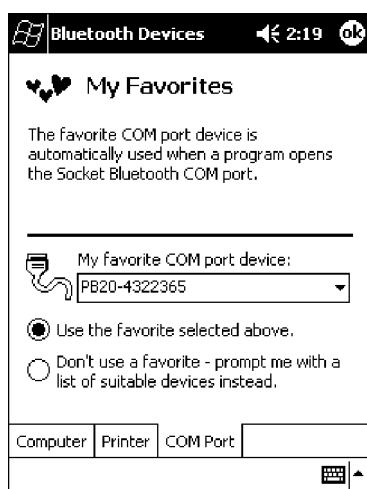


- 5 Tap **ok** to return to the Bluetooth Devices application. A heart is added to the icon for your device (*like shown to the left*).

Bluetooth CORE Module (Bluealps)



Note: See page 106 for information on loading this module in CORE.

The Bluealps CORE module displays helpful information about the wireless printing option within your 700 Series Computer. Below are descriptions and meanings for each piece of information provided via the **General** tab.

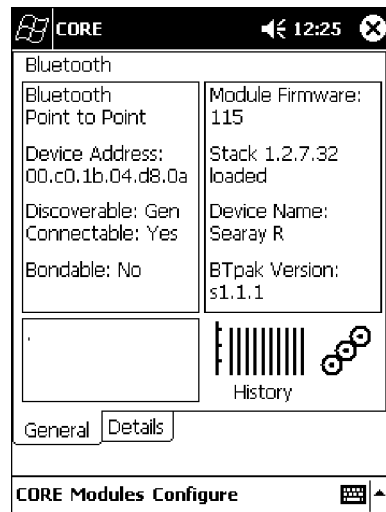

- **Bluetooth:**
This is the network type. “Point to Point” is the type of connection supported as of this publication. *Scatternets are currently not supported.*
- **Device Address:**
This provides the network address, which in this case, will be replaced by the device address of the Bluetooth compatible module within your 700 Series Computer. *Note that this address is universally unique.*
- **Discoverable:**
The following is displayed depending on whether the 700 Series Computer is configured to be discoverable:
 - “Gen” Generally discoverable
 - “Lim” Limited discovery
 - “No” Not discoverable
- **Connectable:**
This defines whether the 700 Series Computer is able to accept other devices with Bluetooth compatible modules connecting to it. “Yes” indicates the connection is available, “No” indicates it is not available.
- **Bondable:**
This defines the security element of the 700 Series Computer, which is the bondable setting. If the unit is bondable, then “Yes” is displayed, otherwise “No” is displayed.

- **Module Firmware:**

This reflects the firmware (hardware) version of the 700 Series Computer. When the CORE module first installs onto the unit, the firmware level is unknown, thus “...reading” is displayed. Once the firmware level is read from the unit, then a three-digit decimal value is displayed.

- **Stack *[Stack Version]* *[loaded/not loaded]*:**

[Stack Version] displays the Bluetooth stack version, which appears in the “1.2.3.4” format. If the stack is loaded, then “loaded” is displayed after the stack version, otherwise “not loaded” is displayed.

- **Device Name:**

This displays the device name as assigned to the Bluetooth compatible module by the end-user. If the configured name is longer than the space allowed, it will be truncated.

- **BTpak Version:**

This displays the driver version of additional Bluetooth components within the 700 Series Computer and is usually presented in the “1.2.3” format. The version may also contain a letter at either end.



- **History:**

This bar graph displays an active history of the Bluetooth driver’s quality of connections.



- **Friendly Indicator:**

If the Bluetooth stack is loaded, then all three dots are filled. These dots are left empty if the stack is not loaded. These dots do vary based on the CORE application’s perception of the overall connection quality.

AutoIP/DHCP

Automatic Private IP Addressing (AutoIP) is enabled by default in Pocket PC 2002. To remain compatible with other versions of Pocket PC, this setting needs to be enabled. You can configure the registry settings in the following to set the required AutoIP/DHCP behavior:

- For Ethernet: HKEY_LOCAL_MACHINE\Comm\LAN9001\TcpIp
- For 802.11b: HKEY_LOCAL_MACHINE\Comm\NETWLAN1\TcpIp

Other registry keys that can modify the behavior of AutoIP are as follows. You can find the appropriate settings and behavior of each of these keys in Microsoft Help.

- AutoInterval
- AutoMask
- AutoSubnet
- AutoIP
- AutoSeed

When a TCP/IP client cannot find a DHCP server, it generates an AutoIP address from the 169.254.xxx.xxx block. The client then tries to check for a DHCP server every 300 seconds (5 minutes) and if a DHCP server is found, the client drops the AutoIP address and uses the address from the DHCP server.

In the MSDN Windows CE documentation available out on the Microsoft Developer Network web site (<http://www.msdn.com>), see “*Automatic Client Configuration*” for more information on AutoIP.

To disable AutoIP, set the AutoCfg registry entry to “0.” If a DHCP server cannot be found, instead of using AutoIP, the system will display the “Unable to obtain a server assigned IP address” message.



Note: If AutoIP is defined using CAB files, the EnableDHCP registry key must also be defined and set to “1” before the system will attempt to obtain a DHCP address.

To extend the number of attempts that a DHCP client makes to get a DHCP address, use the DhcpRetryDialogue and DhcpMaxRetry registry settings.

Change the AutoInterval registry key value to make the client retry more often to obtain a DHCP address.

SNMP Configuration on the 700 Series Computer

In short, SNMP is an application-layer protocol that facilitates the exchange of management information between network devices. The 700 Series Computer is such an SNMP-enabled device. Use SNMP to control and configure the 700 Series Computer anywhere on an SNMP-enabled network.

The 700 Series Computer supports four proprietary Management Information Bases (MIBs) and Intermec Technologies provides SNMP support for MIB-II through seven read-only MIB-II (RFC1213-MIB) Object Identifiers (OIDs).



Note: You can only query these seven OIDs through an SNMP management station.

Management Information Base

The Management Information Base is a database that contains information about the elements to be managed. The information identifies the management element and specifies its type and access mode (Read-Only, Read-Write). MIBs are written in ASN.1 (Abstract Syntax Notation.1) — a machine independent data definition language. *Note: Elements to be managed are represented by objects. The MIB is a structured collection of such objects.*

You will find the following MIB files either on the 700 Color Tools CD or on the web via <http://www.intermec.com>:

- **INTERMEC.MIB**
Defines the root of the Intermec MIB tree.
- **ITCADC.MIB**
Defines objects for Automated Data Collection (ADC), such as bar code symbologies.
- **ITCSNMP.MIB**
Defines objects for Intermec SNMP parameters and security methods, such as an SNMP security IP address.
- **ITCTERMINAL.MIB**
Defines objects for 700 Series parameters, such as key clicks.

Object Identifiers

Each object has a unique identifier called an OID, which consist of a sequence of integer values represented in dot notation. Objects are stored in a tree structure and OIDs are assigned based on the position of the object in the tree. For example, the internet OID is equal to 1.3.6.1. Seven MIB OIDs are shown in the following table:

MIB Object Identifiers

MIB-II Item	OID	Group or Table	Description
ifNumber	1.3.6.1.2.1.2.1.0	Interfaces Group	Indicates the number of adapters present in the system. For the 700 Series Computer, if one adapter is present in the system, then <i>ifNumber</i> = 1 and <i>ifIndex</i> = 1.
ifIndex	1.3.6.1.2.1.2.2.1.1.ifIndex	Interfaces Table (ifTable)	A unique value for each interface. The value ranges between 1 and the value of <i>ifNumber</i> .
ifDescr	1.3.6.1.2.1.2.2.1.2.ifIndex	Interfaces Table (ifTable)	A textual string containing information about the interface.
ifType	1.3.6.1.2.1.2.2.1.3.ifIndex	Interfaces Table (ifTable)	An integer containing information about the type of the interface. It is equal to 1 for Other.
ipAdEntAddr	1.3.6.1.2.1.4.20.1.1.IpAddress	IP address Table (ipAddrTable)	The IP address to which this entry's addressing information pertains (<i>same as 700 IP address</i>), where IP Address is the valid non-zero IP address of the 700 Series Computer.
ipAdEntIfIndex	1.3.6.1.2.1.4.20.1.2.IpAddress	IP address Table (ipAddrTable)	The index value that uniquely identifies the interface to which this entry is applicable (<i>same as ifIndex</i>).
ipAdEntNetMask	1.3.6.1.2.1.4.20.1.3.IpAddress	IP address Table (ipAddrTable)	The subnet mask associated with the IP address of this entry (<i>same as Subnet Mask</i>).

Configuring with SNMP

The community string allows an SNMP manager to manage the 700 Series Computer with a specified privilege level. The default read-only community string is “public” and “private” is the default read/write community string. See the specific configuration parameter to find its OID. To configure the 700 Series Computers using SNMP:

- 1 Configure 700 Series Computers for RF or Ethernet communications.
- 2 Determine the OID (Object Identifier) for the parameter to be changed. The Intermec base OID is 1.3.6.1.4.1.1963.
- 3 Use your SNMP management station to get and set variables that are defined in the Intermec MIBs. You can set the traps, identification, or security configuration parameters for SNMP. See *Appendix A, “Configurable Settings,”* to learn more about these parameters.



5 Printer Support

The 700 Series Color Mobile Computer works with the following printers from Intermec Technologies. Contact an Intermec Representative for information about these printers.

- **6820**
A full-page, 80-column printer.
- **6808**
A 4-inch belt-mount printer.
- **PB20**
A 2-inch belt-mount printer with a Bluetooth compatible module from Socket Communications.
- **782T**
A 2-inch workboard printer.

Printing ASCII

The following methods for printing using Pocket PC at this time is as follows:

- Add port drivers to print ASCII directly to the port.
- Use LinePrinter ActiveX Control from the Software Developer's Kit (SDK) - *see the SDK User's Manual for more information.*
- Via wireless printing - *see the Wireless Printing Development Guide on the 700 Color Software Tools CD for more information.*

Directly to a Port

Printing directly to the port sends RAW data to the printer. The format of this data depends upon your application and the printer capabilities.

You must understand the printer commands available for your specific printer. Generally, applications just send raw ASCII text to the printer. Since you are sending data to the printer from your application directly to the port you are in complete control of the printers operations. This allows you to do line printing (*print one line at a time*) rather than the page format printing offered by the GDI approach. It is also much faster since data does not have to be converted from one graphics format to the other (display to printer). Most Intermec[®] printers use Epson Escape Sequences to control print format operations.

These commands are available in documentation you receive with your printers or from technical support. Win32 APIs are required to print directly to the port.

Directly to a Generic Serial Port

To print directly to a generic serial port printer (non-Intermec printers):

- Use CreateFile() to open ports - COM1: can be opened on most devices.
- Use WriteFile() to send data directly to the printer.
- Use CloseHandle() when you are finished printing to close the port.

IrDA Printer Driver

IrDA printing is only available on the certain devices and is supported directly by the Windows CE load via the IrSock API provided by the Microsoft Win32 API without need for additional drivers. Intermec 6804, 6805, 6806, 6808 and 6820 and other IrDA printers are supported.

NPCP Printer Driver

The NPCP printer communications driver (NPCPPORT.DLL) is a Stream Device Driver built into the operating system. The driver supports only NPCP communications to and from the 6820 and 4820 printers over a selected serial port.

All applications use WIN32 API functions to access the drivers. Basic operations are easily implemented by applications through the CreateFile(), WriteFile(), ReadFile(), DeviceIOControl(), and CloseHandle() Win32 APIs.

Operations to upgrade printer modules, perform printer diagnostics, and get printer configuration are performed largely via DeviceIOControl() functions.

About NPCP

NPCP (Norand[®] Portable Communications Protocol) is a proprietary protocol that provides session, network, and datalink services for Intermec mobile computers in the Intermec LAN environment used with printers and data communications.

NPCP Driver Installation and Removal

Use LPT9: for the NPCP printer device and COM1 for the last parameter. COM1 is the connection available via the 700 Series Computer.

Applications use the RegisterDevice() function to install the driver. DeregisterDevice() uninstalls the device driver and frees memory space when the driver is not required. Use the HANDLE returned by RegisterDevice() as the parameter to DeregisterDevice().

Use the RegisterDevice() function call as demonstrated below. Specify the full path name to the driver starting at the root for the RegisterDevice() function to work properly. The last parameter to RegisterDevice() is a DWORD that represents the name of the port for the NPCP stream driver to use. Build this parameter on the stack if it is not to be paged out during the call. The first parameter "LPT" (Device Name) and the second parameter "9" (index), indicate the name of the registered device, such as LPT9. This is used in the CreateFile() function call.

```
Install()
{
    HANDLE hDevice;
    TCHAR port[6];
    port[0] = TCHAR('C');
    port[1] = TCHAR('O');
    port[2] = TCHAR('M');
    port[3] = TCHAR('1');
    port[4] = TCHAR(':');
    port[5] = TCHAR(0);
    hDevice = RegisterDevice ( (TEXT("LPT"), 9,
    TEXT("\\STORAGE CARD\\WINDOWS\\NPCPPORT.dll"), (DWORD)port);
}
```

Opening the NPCP Driver

The application opens the NPCP driver by using the `CreateFile()` function. The call can be implemented as follows. The first parameter “LPT9:” must reflect the device name and index used in the `RegisterDevice()` function call and will fail for any of the following reasons:

```
hFile = CreateFile(_T("LPT9:"), GENERIC_WRITE |  
GENERIC_READ, 0, NULL, OPEN_ALWAYS, FILE_ATTRIBUTE_NORMAL,  
NULL);
```

- The port associated with the device during `RegisterDevice()` is in use.
- The NPCP device is already open.
- The share mode is not set to zero. The device cannot be shared.
- Access permissions are not set to `GENERIC_WRITE | GENERIC_READ`. Both modes must be specified.

Closing the NPCP Driver

Using the `CloseHandle()` (`hFile`) function closes the NPCP driver. Where *hFile* is the handle returned by the `CreateFile()` function call.

- `TRUE` = the device is successfully closed.
- `FALSE` = an attempt to close `NULL HANDLE` or an already closed device.

Reading from the NPCP Driver

Reading of the NPCP printers is not supported since all responses from the printer are the result of commands sent to the printer.

`DeviceIoControl()` functions are provided where data is to be received from the printer.

Writing to the NPCP Driver

All Print data can be sent to the printer using the `WriteFile()` function. The print data written to the driver must contain the proper printer commands for formatting. If the function returns `FALSE`, the NPCP error may be retrieved using `IOCTL_NPCP_ERROR`. See the description on the next page.

NPCP Driver I/O Controls

An application uses the DeviceIoControl() function to specify a printer operation to be performed. Certain I/O controls are required to bind and close communication sessions with the printer, and must be completed before any other commands to the driver can execute properly.

The function returns TRUE to indicate the device successfully completed its specified I/O control operation, otherwise it returns FALSE. The following I/O control codes are defined:

```
#define IOCTL_NPCP_CANCEL
CTL_CODE(FILE_DEVICE_SERIAL_PORT, 0x400, METHOD_BUFFERED, FILE_ANY_ACCESS)
#define IOCTL_NPCP_BIND
CTL_CODE(FILE_DEVICE_SERIAL_PORT, 0x401, METHOD_BUFFERED, FILE_ANY_ACCESS)
#define IOCTL_NPCP_CLOSE
CTL_CODE(FILE_DEVICE_SERIAL_PORT, 0x402, METHOD_BUFFERED, FILE_ANY_ACCESS)
#define IOCTL_NPCP_ERROR
CTL_CODE(FILE_DEVICE_SERIAL_PORT, 0x403, METHOD_BUFFERED, FILE_ANY_ACCESS)
#define IOCTL_NPCP_FLUSH
CTL_CODE(FILE_DEVICE_SERIAL_PORT, 0x404, METHOD_BUFFERED, FILE_ANY_ACCESS)
#define IOCTL_NPCP_IOCTL
CTL_CODE(FILE_DEVICE_SERIAL_PORT, 0x405, METHOD_BUFFERED, FILE_ANY_ACCESS)
#define IOCTL_NPCP_PRTVER
CTL_CODE(FILE_DEVICE_SERIAL_PORT, 0x406, METHOD_BUFFERED, FILE_ANY_ACCESS)
```

- **IOCTL_NPCP_CANCEL**
This cancels all printing at the printer. It flushes the printer buffers and reinitializes the printer to its default state. No parameters are required.
- **IOCTL_NPCP_BIND**
This command is required before any data is sent or received by the printer. Once the driver is opened, the application must bind the communications session with the printer before any data can be sent or received by the printer. If an error occurs during the bind, the application may use IOCTL_NPCP_ERROR to get the current extended error code. No parameters are required.
- **IOCTL_NPCP_CLOSE**
This command closes the current session with the printer. This function always returns TRUE. No parameters are required.
- **IOCTL_NPCP_ERROR**
This command returns the extended NPCP error code in PL/N format. The word returned will contain the PL/N compatible error code in the low byte and completion flags in the high byte. If the frame that returned an error was not received correctly by the printer the FRAME_NOT_ACKED bit will be set in the high byte. This operation always returns TRUE. An output buffer of at least 2 bytes is required. See “NPCP Error Codes” on page 141.
- **IOCTL_NPCP_FLUSH**
This command allows the application to poll the printer for errors while the report is completing the print process at the printer. If an error occurs during the polling process, the operation will return FALSE and the application can get the extended error code by using IOCTL_NPCP_ERROR. No parameters are required.

NPCP Printer Communications

All NPCP printer communications should be based on the following flow:

- 1 Use `CreateFile()`; to open the printer driver.
- 2 Use `IOCTL_NPCP_BIND` to bind a session with the printer; `IOCTL_NPCP_ERROR` to check for errors on the bind to ensure success; and `IOCTL_NPCP_CANCEL` to cancel any outstanding print jobs.
- 3 Use `IOCTL_NPCP_FLUSH` to poll the printer to free up printer buffer resources. Use `IOCTL_NPCP_FLUSH` to poll the printer's status. If an error is reported by the IOCTL, then use `IOCTL_NPCP_ERROR` to get the error and determine the correct recovery procedure.
- 4 Use `WriteFile()`; to write your data to the printer. Check for errors and that all data were written. Use `IOCTL_NPCP_ERROR` to get the extended error. If the error is critical in nature, use `IOCTL_NPCP_CLOSE`, followed by `CloseFile()`, to end the communications session. Start a new session, beginning with step 1 to ensure proper printing. For noncritical errors display the error and retry the operation.
- 5 After all data is sent to the printer, ensure that the printer continues to print the report properly by polling the printer's status. Use `IOCTL_NPCP_FLUSH` to poll the printer's status. If an error is reported by the IOCTL, then use `IOCTL_NPCP_ERROR` to get the error and determine the correct recovery procedure.

Sample Code

See sample code in the “\700C Dev Tools\Installable Drivers\Port Drivers\Npcp\NPCPPrint\” directory for more details on printing, printer communications and error code handling.

NPCP Error Codes

Call the `IOCTL_NPCP_ERROR` I/O control function to receive PL/N compatible error codes. Applications must decide how to act upon the data returned.

```
// Definition of NPCP communications Errors and Printer Errors
#define PNRDY (BYTE)102 // link not ready error
#define RXTMO (BYTE)104 // link no receive error
#define TXTMO (BYTE)106 // link no transmit error
#define BADADR (BYTE)111 // frame address error
#define GAPERR (BYTE)112 // link gap error (timeout) in receive data
#define LSRPE (BYTE)113 // frame parity error on length field
#define IFTS (BYTE)120 // session layer - invalid frame this state
#define NS_NE_VR (BYTE)121 // session layer sequence error
#define NR_NE_VS (BYTE)122 // session layer sequence error
#define MAC_CRCERR (BYTE)124 // MAC CRC error
#define RLENERR (BYTE)123 // MAC too much data received
#define FRMERR (BYTE)200 // Frame Reject
#define FRMERR_IF (BYTE)201 // Frame Reject - Invalid Frame
#define FRMERR_NR (BYTE)202 // Frame Reject - NR Mismatch
#define FRMERR_NS (BYTE)203 // Frame Reject - NS Mismatch
#define NDMERR (BYTE)204 // Normal Disconnect mode error
#define BINDERR (BYTE)210 // bind error
#define IPLDUR (BYTE)221 // invalid presentation layer response
#define HEADJAM (BYTE)222 // printer head jam
#define PAPEROUT (BYTE)223 // printer paper out
#define LOWVOLTS (BYTE)224 // printer low voltage
#define HIVOLTS (BYTE)225 // printer over voltage
#define LOWBAT (BYTE)226 // printer low battery
#define COVEROFF (BYTE)227 // printer cover off error
#define HEADFAULT (BYTE)228 // printer head short or driver short error
#define PFFAULT (BYTE)229 // paper feed motor fault.
#define FRAME_NOT_ACKED 0x8000 // frame was not received by printer and need
to be resent.
```

O'Neil Printer Driver

The DTR printer communications driver is a Stream Device Driver named ONEIL.DLL.

All applications use WIN32 API functions to access drivers. Basic operations are easily implemented by applications through the CreateFile(), WriteFile(), DeviceIOControl() and CloseHandle() Win32 APIs.

The driver supports communications to 6804DM, 6804T, 6805A, 6806, 6808, 681T, and PB20 printers over a selected serial port.

DTR Driver Installation and Removal

Your application must install the device driver by using the RegisterDevice() function. The driver name is ONEIL.DLL. We recommend that you use "DTR" for the Device Name parameter, "1" for the Device Driver index parameter, and use any of the following strings for the last parameter:

- NULL (==0) Defaults to COM1 @ 9600
- "COM1" only COM port specified defaults to 9600
- "COM1:9600" sets to COM port and specified bit rate
- "COM1:19200" sets to COM port and specified bit rate

Use the HANDLE returned by RegisterDevice() as the parameter to DeregisterDevice(). The correct usage of the RegisterDevice() function call is demonstrated below. You may use DeregisterDevice() to uninstall the driver.

```
Install()  
{  
  
    HANDLE hDevice;  
    TCHAR port[6];  
    port[0] = TCHAR('C');  
    port[1] = TCHAR('O');  
    port[2] = TCHAR('M');  
    port[3] = TCHAR('1');  
    port[4] = TCHAR(':');  
    port[5] = TCHAR(0);  
    hDevice = RegisterDevice ( (TEXT("DTR"), 1, TEXT("\\WINDOWS\\ONEIL.DLL"),  
        (DWORD)port);  
  
}
```

Opening the DTR Driver

The application opens the DTR driver by using the `CreateFile()` function. The call can be implemented as follows:

```
hFile = CreateFile(_T("DTR1:"), GENERIC_WRITE, 0, NULL,
OPEN_ALWAYS, FILE_ATTRIBUTE_NORMAL, NULL);
```

The first parameter “DTR1:” must reflect the device name and index used in the `RegisterDevice()` function call.

The function call will fail for any of the following reasons:

- The port associated with the device during `RegisterDevice()` is currently in use.
- The DTR device is already open.
- The share mode is not set to zero. The device cannot be shared.
- Access permissions are not set to `GENERIC_WRITE`.

Closing the DTR Driver

Using the `CloseHandle()` (`hFile`) function closes the DTR driver. Where *hFile* is the handle returned by the `CreateFile()` function call.

- `TRUE` indicates the device is successfully closed.
- `FALSE` indicates an attempt to close a `NULL HANDLE` or an already closed device.

Writing to the DTR Driver

You can use the `WriteFile()` function to send all Print data to the printer. The print data being written must contain the proper formatting printer commands.

DTR Printer Communications

All DTR printer communications should be based on the following flow:

- 1 Use `CreateFile()`; to open the printer driver.
- 2 Use `WriteFile()` to write your data to the printer. Check for errors and that all data were written.
- 3 Use `CloseHandle()` to close the driver.

6 Scanner Support

The 700 Series Color Mobile Computer is available with imaging or laser scanning technologies, including the following:

- **APS linear imager:**
Reads 1D symbologies and PDF417 bar codes. Linear imaging using Vista Scanning technology reads low-contrast bar codes, laminated bar codes, and bar codes displayed on CRT or TRT displays. This imaging uses harmless LEDs for illumination and does not require any warning labels. Vista Scanning is more reliable than lasers as it is a completely solid state with no moving parts or oscillating mirrors.
- **2D Imager:**
This decodes several stacked 1D and 2D symbologies, including PDF417, Data Matrix, and MaxiCode without “painting.” It can also read 1D codes from any orientation, for example the scan beam does not need to be aligned perpendicular to the symbol in order to read it. Photography is a secondary application; the lens in the device will favor bar code reading. Photos are 640x480, 256 gray-scale.
- **1D laser scanner:**
Traditional laser scanner that decodes 1D bar codes.
- **PDF417 laser scanner:**
Higher speed laser scanner that can read PDF417 labels by “painting” the label.



A 700 Color Imager Demo application demonstrates the more common features of the 700 Color Computer imager. See the *Imager Demo V1.0 User's Guide* on the 700 Color Software Tools CD for more information.

Scanner Control and Data Transfer



Note: To use the methods described below, enable Data Collection functionality on the 700 Computer using the bootloader configuration menu. See Chapter 3, “*Installing Applications*” for more information.

The Data Server and associated software provide several ways to manipulate scanner control and data transfer between the scanner subsystem and user applications:

- **Automatic Data Collection COM Interfaces:**
These COM interfaces allow user applications to receive bar code data, and configure and control the bar code reader engine.
- **ITCAxBarcodeReaderControl functions:**
These ActiveX controls allow user applications to collect bar code data from the scanner, to configure the scanner, and to configure audio and visual notification when data arrives. For more information, see the *SDK User's Manual*.
- **ITCAxReaderCommand functions:**
Use these ActiveX controls to modify and retrieve configuration information using the reader interface commands. For more information, see the *SDK User's Manual*.
- **Scanning EasySet bar code labels:**
You can use the EasySet bar code creation software from Intermec Technologies Corporation to print configuration labels. Scan the labels to change the scanner configuration and data transfer settings.

Automatic Data Collection COM Interfaces

Data collection configuration and functionality cannot be accessed by any means (*including control panel applets or remote management applications*) until after the 700 Series Computer has completed initialization, which occurs during a warm- or cold-boot or after a firmware upgrade.

When initialization is complete, the green LED on the 700 Series Computer stops flashing. Changes made to configuration settings remain after a warm boot. After a cold-boot, all configuration settings are reset to their defaults with the exception of scanner configurations, which remain except for the Symbology Identifier transmission option or the Preamble and Postamble strings. To reset all configuration settings to the factory defaults, the S9C scanner firmware must be reloaded.

The Automatic Data Collection (ADC) functions are accessed through custom COM interfaces. These interfaces allow the application to receive bar code data and configure and control the bar code reader engine. The COM interfaces include the following functions:

- IADC (*starting on page 159*)
- IBarcodeReaderControl (*starting on page 167*)
- IS9CConfig (*starting on page 179*)
- IS9CConfig2 (*starting on page 221*)
- IS9CConfig3 (*starting on page 238*)
- IImage Interface (*starting on page 243*)

Multiple ADC COM Object Support

A 700 Series Computer may have multiple reader engines to decode different types of ADC data. For example, a bar code reader engine decodes raw bar code data and passes it to a bar code reader COM object. An RFID reader engine decodes raw RFID tag data and passes it to an RFID tag reader COM object.

ADC COM interfaces are implemented as in-process COM objects. An instance of the ADC COM object creates a logical connection to access or control the reader engine. Specifically, the IBarcodeReadConfig or IBarcodeReaderControl COM objects can manage the bar code scanner configuration while the ADC COM object can gather data simultaneously. These ADC COM objects or connections can be created in a single application or multiple applications. Up to seven instances of a COM object can be created for a reader engine. For more information, see “*How to Create and Use the ADC COM Interfaces*” below.

For data collection features, ADC COM objects also provide for read ahead data access and grid data editing.

How to Create and Use the ADC COM Interfaces

You can also use the Input Device Functions (*starting on page 157*) to create and use the ADC COM interfaces.

- 1 Create and initialize the in-process Bar Code Reader object using `ITCDeviceOpen()` (*see page 157*). This function returns a COM Interface pointer to the Bar Code Reader Object created by the function.
- 2 Set the data grid if data filtering is desired (*default grid gives the application all the data*). See “Grid Data Filtering” on page 149, `IADC::SetAttribute()` on page 165, and `IBarCodeReaderControl::SetAttribute()` on page 175 for more information.
- 3 Issue a read to accept the bar code data. The timestamp, symbology, and data type are put into the `ITC_BARCODE_DATA_DETAILS` structure. Passing in a pointer to this structure is optional. The following sample code uses an infinite timeout.

```
ITC_BARCODE_DATA_DETAILS stBCDetails;
BYTE rgbBCData[1024]; // Buffer used to accept the bar code data
DWORD dwBytesReceived; // Number of bytes in the return data.
HRESULT hrStatus = pIBCControl->Read(
    rgbBCData,
    sizeof(rgbBCData),
    &dwBytesReceived,
    &stBCDetails,
    INFINITE
);
```

- 4 Compile and link the application.

Read-Ahead Bar Code Data Access

The Bar Code Reader COM object delivers ADC data to the connection in read-ahead mode. In this mode, the data is queued until a COM connection is ready to read it. Read-ahead mode decouples reader device performance from the application performance. That is, data is read as fast as the user can scan it, independent of the connection processing load.

The maximum number of bar codes that can be read by the scanner and saved, ahead of the application taking the data, is limited by the number of readahead buffers. For the 700 Color Computer, this limit is three. The scanned data is not saved for an application until the first `Read()` function is posted.

Grid Data Filtering

The virtual wedge retrieves scanned Automatic Data Collection (ADC) data and sends it to the keypad driver so that the 700 Series Computer can receive and interpret the data as keypad input. The data can be filtered so that only data conforming to a certain text pattern or symbology will be sent to an application. After the data is filtered, it can be edited by adding, deleting, or rearranging portions of the text or by extracting portions of text for further editing. To filter and edit data, you need to define the virtual wedge grid parameters.

- **Grid Processing:**

Grid processing takes place in two steps:

- **Compilation:**

In which the user's grid expressions are checked for errors and reduced to a binary form for faster matching. This is done whenever the virtual wedge grid is set or changed by configuration software.

- **Matching:**

In which data is tested against the grids set in compilation. Matching can be performed multiple times after a compilation. The AIM symbology ID of the data being tested, including the enclosing angle brackets, must be prepended to the incoming data.

Syntax

The basic syntax of each grid expression is:

```
<symID> filter-expression= > editing-expression
```

where:

- **symID**

Is the AIM symbology ID (*see the AIM Symbology ID Defaults table starting on page 241*).

- **filterexpression**

Is any character string that includes valid filter expression values (*see the "Filter Expression Values" table on the next page*).

- **editing-expression**

Is any character string that includes valid editing expression values (*see the "Editing Expression Values" table on page 151*).

Filter Expression Values

A filter-expression can be any string of text containing the operators listed below.

Filter Expression Values

Operator	Meaning	Example
Any character string not containing the special characters: . ? [] { } or \ (period, question mark, left/right brackets, left/right curly brackets, backslash).	Match the string literally.	super20 matches super20
\c where c is any of the special characters: . ? [] { } or \ (period, question mark, left/right brackets, left/right curly brackets, backslash)	Remove any special meaning of c.	* matches *
. (period)	Any character.	. matches x
^ (carat)	Anchor the match at the beginning of the string.	^abc matches abc, but not aabc
\$ (dollar sign)	Anchor the match at the end of the string.	abc\$ matches abc but not abcc
? (question mark)	Repeat the preceding expression zero or one time.	aa? matches a or aa
* (asterisk)	Repeat the preceding expression zero or more times.	ab*c matches ac, abc, abbc, etc.
+ (plus symbol)	Repeat the preceding expression one or more times.	ab+c matches abc, abbc, etc.
[characterclass]	A series of nonrepeating characters denoting a class.	[abcdefghijklmnopqrstuvwxyz] is the class of all lowercase alphas.
[range–rangeh]	A sequential range of nonrepeating characters denoting a class.	[a–z] is the class of all lowercase alphas.
[^characterclass]	Any character except those denoted by a character class.	[^a–z] matches a numeric digit or a punctuation mark.
[characterclass_tag]	[:alnum:] – Alphanumeric characters [:alpha:] – Alphabetic characters [:blank:] – Tab and space [:cntrl:] – Control characters [:digit:] – Numeric characters [:graph:] – All printable characters except space [:lower:] – Lowercase letters [:print:] – All printable characters [:punct:] – Punctuation [:space:] – White space characters [:upper:] – Uppercase letters [:xdigit:] – Hexadecimal digits	[:alpha:]* matches Dynaction, Selmer, or NewWonder but not Super20
{num}	Matches exactly <i>num</i> repetitions.	a{3} matches only aaa
{min,}	Matches at least <i>num</i> repetitions.	a{3,} matches aaaa but not aa

Filter Expression Values (continued)

Operator	Meaning	Example
{min,max}	A repetition operator like + or *, except the number of repetitions is specified by <i>min</i> and <i>max</i> .	[a-z]{1,3} matches a, ab, or aab, but not aabc
(expr1) (expr2)	Matches <i>expr1</i> or <i>expr2</i> .	a b matches a or b
(subexpression)	Grouping operator to consolidate terms into a subexpression, which can override the order of evaluation. The subexpression is available for later matching or editing by means of <i>\index</i> , where <i>\index</i> is between 1-9 and refers to the index-th group in the string, counting from left to right. <i>\0</i> refers to the whole expression.	Overriding evaluation order: (ab)*c matches c, abc, ababc, etc. Back-referencing: (aa)bb\1 matches aabbaa.

Editing Expression Values

This table lists the valid operators for editing expressions.

Operator	Meaning	Example
\index	The <i>index-th</i> subexpression (reading left-right) in the matched string. <i>index</i> must be between 0–9. <i>\0</i> is the matched expression itself.	M([0-9]{6})= > \1 produces 270494 when M270494 is scanned, stripping off the first character.
& or \0	The matched expression itself.	M[0-9]{6}= > \0-Conn and M[0-9]{6}= > &-Conn both produce M270494-Conn when M270494 is scanned.
\xhh	A concise representation of the lower 256 characters in the Unicode set. When converted, this is still a 16-bit value.	\x0d inserts a carriage return.
any character string	Inserts any character string in the output string.	See previous examples.

- *<symID>* is optional. If present, only data in the indicated symbology is accepted.
- If the entire expression is blank, all data is passed unchanged. If = > *editing-expression* is omitted, then all data that passes through the filter is returned unchanged. If = > *editing-expression* is present, the data is transformed by *editing-expression*.
- Multiple grid expressions can be compiled and are related in a logical OR fashion. These are expressed as single grid expressions separated by semicolons. When matching is attempted, the first grid expression from left to right that achieves a match will cause the data to be accepted.
- All pattern expressions and parsed data are in Unicode.

Grid Filter Example 1

This accepts a serial number in which the encoded number is a six-character string beginning with M followed by six numeric characters.

- **Filter**
M[0-9]{6}
- **Effect**
When a bar code, such as M270494, is scanned, all data is passed.

Grid Filter Example 2

This formats a scanned Social Security number and forms it into an XML element tagged “SSN”.

- **Filter**
([0-9]{3})([0-9]{2})([0-9]{4})= > <SSN > \1-\2-\3</SSN >
- **Effect**
A bar code, such as 123456789, is passed and reformatted to
<SSN > 123-45-6789</SSN >

Grid Filter Example 3

This deletes the first three and last five characters of a 21-character Code 128 label and deletes the first two characters of a 10-character Interleaved 2 of 5 label.

- **Filter**
<]C > ...(.{13})......= > \1; <]I > ..(.....)= > \1
- **Effect**
If Code 128, AAA1234567890123BBBBB becomes 1234567890123
If Interleaved 2 of 5, AA12345678 becomes 12345678

Grid Filter Example 4

This inverts data such that the first alphabetic string (like a first name) and second alphabetic string (like a last name) are reversed and separated by a comma and a space.

- **Filter**
([[:alpha:]]+)([[:alpha:]]+)= > \2, \1
- **Effect**
When a bar code with the data “Dexter Gordon” is scanned, the data is modified to read “Gordon, Dexter”.

ADC Connection

A 700 Series Computer can have both Bar Code and RFID reader engines with each engine supporting multiple connections. Each connection allows an application to access data or manage a configuration. An application could have multiple connections.

```
// Get an instance of the ADC COM object that corresponds integrated
scanner
IBarcodeReaderControl *pIBCControl;
// Pointer to the Bar Code Reader object
HRESULT hrStatus = ITCDeviceOpen( TEXT("default"),
IID_IBarCodeReaderControl, ITC_DHDEVFLAG_READAHEAD,
(LPVOID *) &pIBCControl);
// If the ADC object was successfully created and initialized, accept bar
code data.
ITC_BARCODE_DATA_DETAILS stBCDetails;
stBCDetails.wStructSize = sizeof(stBCDetails);
BYTE rgbBCData[1024];
//Buffer used to accept the bar code data
DWORD dwBytesReceived;
// Number of bytes in the return data.
HRESULT hrStatus = pIBCControl->Read(
rgbBCData,
sizeof(rgbBCData),
&dwBytesReceived,
& stBCDetails,
INFINITE
);
```

2D Imager Overview

The 700 Color optional integrated 2D Imager captures 640x480 256-grayscale images at 20 frames per second. The imager features can be categorized into data collection features and image acquisition features as follows:

Data Collection Features

The imager includes a decode engine capable of decoding 2D matrix symbologies such as Data Matrix or MaxiCode as well as the traditional 1D and stacked symbologies (*see the table on the next page for supported symbologies*). The application programming interfaces used to collect bar code data and configure the imager are the same as those used for the laser scanner. This includes the keyboard wedge as well as the ADC COM interfaces and includes functionality such as data editing and data filtering. In addition, the imager has the following configuration features (see “*IS9CConfig3 Functions*” starting on page 238 for configuration details):

- **Aimer LED:**
A small, rectangular-aiming LED is displayed periodically during the image capture and decoding process. The initial duration (*after scan buttons are pressed*) of the aimer LED can be configured. This helps to select the specific bar code to be scanned with multiple bar codes in the image.
- **Scaled Illumination LED:**
When the ambient light is not sufficient to decode the bar code, the red illumination LEDs will be turned on to brighten the image. The intensity of the illumination LEDs is scaled to brighten the image just enough for decode. This reduces power consumption and the effect of specular reflection.
- **Window size and position:**
The default window size (640x480) can be reduced in size and positioned. This is useful in applications where multiple bar codes may be present in the image and the specific bar code must be selected to be read. For example, the window can be sized and positioned around the aimer LED. The entire bar code must reside in the configured window for a good decode.

Omni-directional scanning is a feature that does not require configuration. 1D and stacked symbologies as well as 2D matrix symbologies can be scanned with the 700 Series Computer in any orientation. Thus, time is not needed to orient the 700 horizontal as with laser scanners.

The following table shows which bar code symbologies are supported either by an imager or by a laser scanner.

Bar Code Symbology	Imager	Laser Scanner
Code 39	X	X
Interleaved 2 of 5	X	X
Standard 2 of 5	X	X
Matrix 2 of 5		X
Code 128	X	X
Code 93	X	X
Codabar	X	X
MSI		X
Plessey		X
UPC	X	X
EAN/EAN 128	X	X
Code 11		X
PDF417	X	X
Micro PDF417		X
Telepen		X
Data Matrix	X	
QR Code	X	
MaxiCode	X	


Image Acquisition Features

The integrated imager provides the following image acquisition features:

- **Real-time and Still Image Acquisition:**
This includes functions that start and stop image acquisition and read acquired images.
- **Signature Capture:**
This allows the application to retrieve an image of the normalized signature. This means the image is always oriented as if the picture were taken at right angles to the signature, at the same distance, and in the center of the image no matter in what orientation the picture was taken.

Signature capture requires a PDF417 or Code 128 bar code symbology to be present in the image and requires the application to identify the X,Y offsets relative to the center the bar code, the X,Y dimension of image to be captured, and the aspect ratio of the bar code. Note the units are in terms of the narrow element width of the bar code.

See the following example signature capture label and dimensions. These image acquisition features are provided through the IImage Interface defined on page 243.

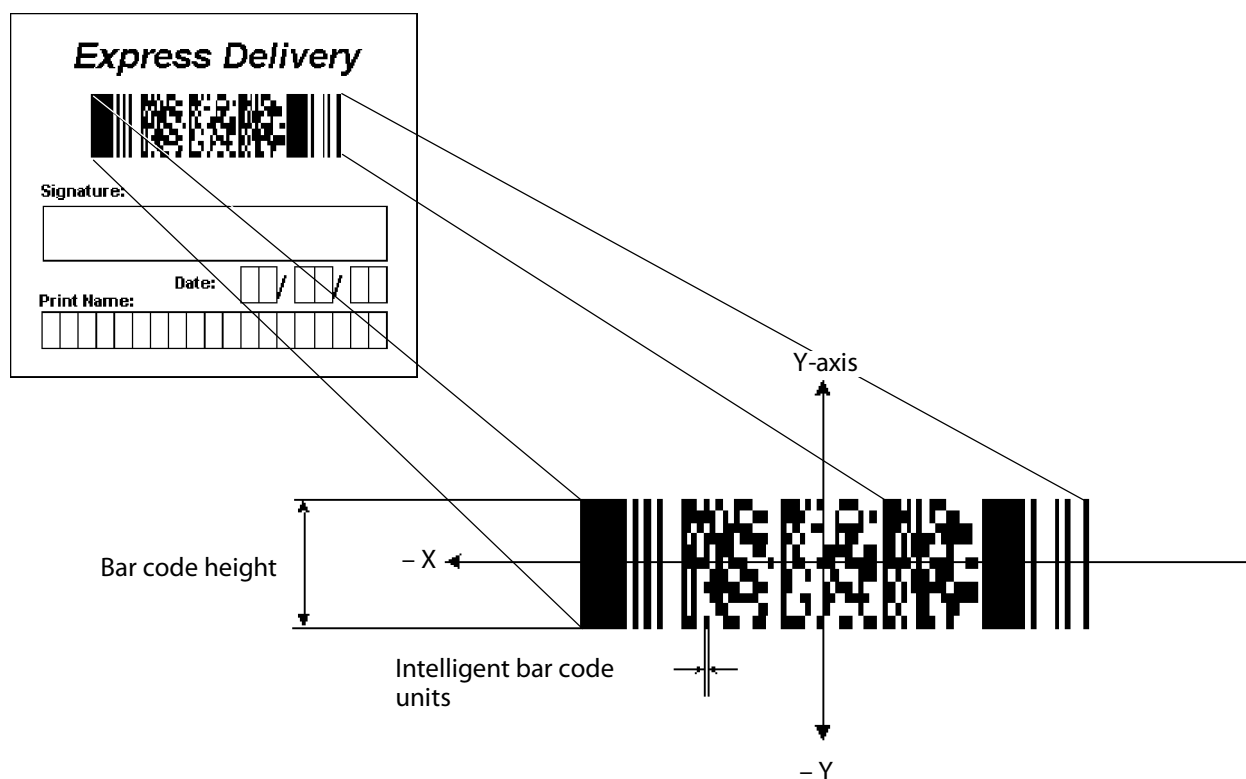

Create and Delete ADC COM Object Functions

Use these functions to create and release ADC COM interfaces. ITCDEVMGMT.H is the header file and ITCDEVMGMT.LIB is the library.

ITCDeviceOpen

This function opens and initializes a communication channel to the device. In C++, this function returns a pointer to an interface on which the methods are called. In C, this function returns a handle, which is the first parameter in each of the interface function calls.

Syntax

```
HRESULT ITCDeviceOpen( LPCTSTR pszDeviceName, REFIID iid,
ITC_DEVICE_FLAGS eDeviceFlags, void** ppvObject );
```

Parameters

<i>pszDevice</i>	[in]	Pointer to a string that contains the device name on which to initialize the logical connection. The device name (Merlin 1) identifies a communications port. Use “default” for all internal scanners, such as Imager, SE900, etc. Use “ExtScanner” for tethered scanners.
<i>iid</i>	[in]	The identifier of the interface being requested.
<i>eDeviceFlags</i>	[in]	Enumeration that identifies the read characteristics as follows: <ul style="list-style-type: none"> • ITC_DHDEVFLAG_READAHEAD Data is buffered on behalf of the calling applications. Data Buffering starts after the first call to IADC::Read (). • ITC_DHDEVFLAG_NODATA The client application is managing the device to set its configuration or control its interface but not to collect data from the device.
<i>ppvObject</i>	[out]	A pointer to the interface pointer identified by <i>iid</i> . If the object does not support this interface, <i>ppvObject</i> is set to NULL.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

- ITCDeviceClose

ITCDeviceClose

This function closes the interface opened with ITCDeviceOpen.

Syntax:

```
HRESULT ITCDeviceClose( IUnknown** ppvObject );
```

Parameters

<i>ppvObject</i>	[in,out]	A pointer to the interface pointer created by ITCDeviceOpen. If successful on output, this pointer is set to NULL.
------------------	----------	--

Return Values

None.

Remarks

On Windows, this interface decrements the reference count. So alternatively, IUnknown::Release() could be used and must be used if reference counting is performed with IUnknown::AddRef(). On DOS, this function closes all resources associated with the channel.

See Also

None.

IADC Functions

IADC functions provide ADC data in an input device independent manner. This interface can receive bar code data, RFID data, and other ADC data from data collection engines, such as a bar code scanner. Use IADC functions if bar code specifics such as symbology are not important to the application.

IADC functions are the following. IADC.H is the header file and ITCUUID.LIB contains the IID_IADC Interface GUID value used to obtain the interface.

- IADC::CancelReadRequest (*page 160*)
- IADC::Initialize (*page 161*)
- IADC::QueryAttribute (*page 162*)
- IADC::QueryData (*page 163*)
- IADC::Read (*page 164*)
- IADC::SetAttribute (*page 165*)

IADC::CancelReadRequest

This function cancels a pending Read() request. This call can be made on a separate thread as a Read() or on the same thread. On a separate thread, the function is useful in unblocking a blocked Read() so that other operations can be performed. On the same thread, this function is useful in stopping data from being collected on behalf of a Read Ahead Client.

Syntax

```
HRESULT IADC::CancelReadRequest( BOOL
FlushBufferedData, WORD *pwTotalDiscardedMessages, DWORD
*pdwTotalDiscardedBytes );
```

Parameters

<i>FlushBufferedData</i>	[in] True	Flush and discard all already buffered data.
	False	Do not discard data, data will be returned on the next read call.
<i>pwTotalDiscardedMessages</i>	[in/out]	Total number of discarded buffered labels or tags.
<i>pdwTotalDiscardedBytes</i>		Total number of discarded bytes.

Return Values

HRESULT that indicates success or failure.

Remarks

The return value indicates whether a read was pending.

See Also

- IADC::Initialize
- IADC::QueryAttribute
- IADC::QueryData
- IADC::Read
- IADC::SetAttribute

IADC::Initialize

This function initializes a connection by opening a communications channel with a logical reader engine. The communications port is implicitly identified. This communication channel is required to collect data or configure the device.

Syntax

```
HRESULT IADC::Initialize ( LPCTSTR pszDeviceName,
ITC_DEVICE_FLAGS eDeviceFlags ) ;
```

Parameters

- | | | |
|----------------------|------|--|
| <i>pszDeviceName</i> | [in] | Pointer to a string that contains the device name on which to initialize the logical connection. Use “default” for all internal scanners, such as Imager, SE900, etc. Use “ExtScanner” for tethered scanners. |
| <i>eDeviceFlags</i> | [in] | Enumeration that identifies the read characteristic as follows: <ul style="list-style-type: none"> • ITC_DHDEVFLAG_READAHEAD
Data is buffered on behalf of the calling application. Data buffering starts after the first call to IADC::Read (). |

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

- IADC::CancelReadRequest
- IADC::QueryAttribute
- IADC::QueryData
- IADC::Read
- IADC::SetAttribute

IADC::QueryAttribute

This function retrieves a specified attribute that is device-independent. The specified attribute can be a grid or multiclient enable status.

Syntax

```
HRESULT IADC::QueryAttribute (
    ITC_ADC_ATTRIBUTE_ID eAttribID, BYTE rgbBuffer[], DWORD
    dwBufferSize, DWORD *pnBufferData );
```

Parameters

<i>eAttribID</i>	[in]	Specifies the attribute. Only one attribute can be queried at a time. See IADC::SetAttribute.
<i>rgbBuffer</i>	[out]	Contains buffer for the attribute to be queried. The structure of <i>lpBuffer</i> depends on the attribute being queried. See IADC::SetAttribute for a description of these structures.
<i>dwBufferSize</i>	[in]	The maximum number of bytes <i>rgbBuffer</i> can store.
<i>pnBufferData</i>	[out]	Pointer to the DWORD location to put the number of bytes stored in <i>rgbBuffer</i> .

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

- IADC::CancelReadRequest
- IADC::Initialize
- IADC::QueryData
- IADC::Read
- IADC::SetAttribute

IADC::QueryData

This function returns the status of user input data that has been buffered.

Syntax

```
HRESULT IADC::QueryData ( DWORD *dwTotalBufferedBytes,
WORD *wNumberOfMessages, DWORD *dwNextMessageSize );
```

Parameters

<i>dwTotalBufferedBytes</i>	[out]	Total bytes buffered for connection.
<i>wNumberOfMessages</i>	[out]	Total messages buffered. For example, each buffer contains a single bar code scan.
<i>dwNextMessageSize</i>	[out]	Size (in bytes) of the next buffered message.

Return Values

A standard status code that indicates success or failure.

Remarks

None.

See Also

- IADC::CancelReadRequest
- IADC::Initialize
- IADC::QueryAttribute
- IADC::Read
- IADC::SetAttribute

IADC::Read

This function requests user input data from the reader engine. This is a blocking function that returns either when there is data or after a timeout.

Syntax

```
HRESULT IADC::Read ( BYTE rgbDataBuffer[], DWORD
dwDataBufferSize, DWORD pnBytesReturned, SYSTEMTIME
pSystemTime, DWORD dwTimeout );
```

Parameters

<i>rgbDataBuffer</i>	[in]	Pointer to the buffer that receives the data from the device.
<i>dwDataBufferSize</i>	[in]	Maximum number of bytes that can be stored in <i>rgbDataBuffer</i> .
<i>pnBytesReturned</i>	[out]	Pointer to the DWORD location to store the number of bytes returned in <i>rgbDataBuffer</i> .
<i>pSystemTime</i>	[out]	Pointer to a SYSTEMTIME structure that will hold the time stamp of the received data. This can be NULL if a timestamp is not needed.
<i>dwTimeout</i>	[in]	Number of milliseconds caller waits for data. This parameter is ignored if the Read Ahead flag is not set. <ul style="list-style-type: none"> • 0 If data is not available, returns quickly. • INFINITE Waits until data is available.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

- IADC::CancelReadRequest
- IADC::Initialize
- IADC::QueryAttribute
- IADC::QueryData
- IADC::SetAttribute

IADC::SetAttribute

This function changes an attribute such as a grid specification.

Syntax

```
HRESULT IADC::SetAttribute ( ITC_ADC_ATTRIBUTE_ID
eAttribID, BYTE rgbData[], DWORD nBufferSize );
```

Parameters

- eAttribID* [in] Identifies the attribute to set. Only one attribute can be set at a time. The attribute is:
- **ITC_MULTICLIENT_ENABLE**
Indicates whether this client can coexist with other clients.
- rgbData* [in] Contains data for the attribute to be set. Depending on the *eAttribID*, this will be mapped to the appropriate structure as follows:
- **ITC_MULTICLIENT_ENABLE**
BOOL is the *rgbData* Data Structure.
 - TRUE, Client can receive data with other clients (*default*).
 - FALSE, Data stream to this client is turned off when there are other clients.
 - **ITC_DHATTR_READFILTER**
Regular expression that performs data filtering and data editing. See "Grid Data Filtering" on page 149 for more information.
ITC_READFILTER is the *rgbData* Data Structure. The ITC_READFILE structure is defined in IADCDEVICE.H as follows:

```
typedef struct
{
    #define ITC_MAXFILTER_CHARS 240
    WORD    nFilterChars;
    TCHAR   szFilter[ITC_MAXFILTER_CHARS];
} ITC_READFILTER;
```

where:

- **ITC_MAXFILTER_CHARS**
Maximum number of characters in a filter specification. Includes NULL termination.
- *nFilterChars*
Number of characters in *pszDataMask*.
- *szFilter*
Data mask specification. See "Grid Data Filtering" on page 149 for more information.

nBufferSize [in] Number of bytes in *rgbData*.

Return Values

A standard status code that indicates success or failure.

Remarks

None.

See Also

- IADC::CancelReadRequest
- IADC::Initialize
- IADC::QueryAttribute
- IADC::QueryData
- IADC::Read

IBarCodeReaderControl Functions

IBarCodeReaderControl functions provide functionality for bar code collection and control only. These functions allow an application to:

- Trigger the bar code laser scanner
- Disable the scanner
- Receive a bar code with details such as symbology scanned, data type (Unicode, ASCII), and the time the data was received.

These functions include the following. IBARCODEREADER.H is the header file and ITCUUID.LIB contains the IID_IADC Interface GUID value used to obtain the interface.

- IBarCodeReaderControl::CancelReadRequest (*page 168*)
- IBarCodeReaderControl::ControlLED (*page 169*)
- IBarCodeReaderControl::Initialize (*page 170*)
- IBarCodeReaderControl::IssueBeep (*page 171*)
- IBarCodeReaderControl::QueryAttribute (*page 172*)
- IBarCodeReaderControl::Read (*page 173*)
- IBarCodeReaderControl::SetAttribute (*page 175*)
- IBarCodeReaderControl::TriggerScanner (*page 178*)

IBarCodeReaderControl::CancelReadRequest

This function cancels a pending IBarCodeReaderControl::Read request. If the read request is blocked, issue the CancelReadRequest from a separate thread.

Syntax

```
HRESULT IBarCodeReaderControl::CancelReadRequest( BOOL
FlushBufferedData, WORD *pwTotalDiscardedMessages, WORD
*pwTotalDiscardedBytes );
```

Parameters

<i>FlushBufferedData</i>	[in] TRUE	Flushes and discards all buffered data.
	FALSE	Does not discard data; data will be returned on the next read call.
<i>pwTotalDiscardedMessages</i>	[in/out]	Total number of discarded buffered labels or tags.
<i>pwTotalDiscardedBytes</i>		Total number of discarded bytes.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

- IBarCodeReaderControl::ControlLED
- IBarCodeReaderControl::Initialize
- IBarCodeReaderControl::IssueBeep
- IBarCodeReaderControl::QueryAttribute
- IBarCodeReaderControl::Read
- IBarCodeReaderControl::SetAttribute
- IBarCodeReaderControl::TriggerScanner

IBarCodeReaderControl::ControlLED

This function controls LED illumination on a tethered scanner. The good read LED and any valid LEDs will be turned on and off based on defined parameters.

Syntax

```
HRESULT IBarcodeReaderControl::ControlLED(
    ITC_BARCODE_LASER_LED_ID eLED, BOOL fLedOn );
```

Parameters

eLED [in] The specified LED identifier.

- ITC_BARCODE_LASER_GOOD_READ_LED
Identifies the good read LED.

fLedOn [in] TRUE turns on the LED. FALSE turns off the LED.

Return Values

HRESULT that indicates success or failure.

Remarks

This function does not coordinate LED control with the scanner. If the scanner LED control is enabled, function results will be unpredictable.

See Also

- IBarcodeReaderControl::CancelReadRequest
- IBarcodeReaderControl::Initialize
- IBarcodeReaderControl::IssueBeep
- IBarcodeReaderControl::QueryAttribute
- IBarcodeReaderControl::Read
- IBarcodeReaderControl::SetAttribute
- IBarcodeReaderControl::TriggerScanner

IBarCodeReaderControl::Initialize

This function opens and initializes a communications channel with a logical bar code reader engine.

Syntax

```
HRESULT IBarCodeReaderControl::Initialize ( LPCTSTR
pszDeviceName, ITC_DEVICE_FLAGS eDeviceFlags ) ;
```

Parameters

- | | | |
|----------------------|------|---|
| <i>pszDeviceName</i> | [in] | Pointer to a string with device on which to initialize the logical connection. The device identifies a communications port. Use “default” for all internal scanners, such as Imager, SE900, etc. Use “ExtScanner” for tethered scanners. |
| <i>eDeviceFlags</i> | [in] | Enumeration that identifies the read characteristic as follows: <ul style="list-style-type: none"> • ITC_DHDEVFLAG_READAHEAD
Data is buffered on behalf of the calling applications. Data Buffering starts after the first call to IADC::Read (). |

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

- IBarCodeReaderControl::CancelReadRequest
- IBarCodeReaderControl::ControlLED
- IBarCodeReaderControl::IssueBeep
- IBarCodeReaderControl::QueryAttribute
- IBarCodeReaderControl::Read
- IBarCodeReaderControl::SetAttribute
- IBarCodeReaderControl::TriggerScanner

IBarCodeReaderControl::IssueBeep

This function causes the reader engine to generate a high beep, a low beep, or a custom beep. The high beep and low beep are preconfigured beep tones and durations. The custom beep allows the client to specify the frequency and duration. The volume is the current volume setting. *Note this is not implemented.*

Syntax

```
HRESULT IBarCodeReaderControl::IssueBeep( ITC_BEEP_SPEC
rgBeepRequests[], DWORD dwNumberOfBeeps );
```

Parameters

rgBeepRequests [in] Array of ITC_BEEP_SPEC structures that identifies the beep type. The beep structure is:

```
typedef struct tagITCBeepSpec
{
    ITC_BEEP_TYPE eBeepType; // Identifies the type of beep
    // Following fields used only if the beep type is ITC_CUSTOM_BEEP.
    WORD wPitch; // Frequency, in Hz, of the beep.
    WORD wOnDuration; // Duration, in milliseconds, of Beep On.
    WORD wOffDuration; // Duration, in milliseconds, of Beep Off
    // Beep Off is used to separate individual beeps
} ITC_BEEP_SPEC;
typedef enum tagITCBeepType
{
    ITC_LOW_BEEP, // Issue the default low beep.
    ITC_HIGH_BEEP, // Issue the default high beep.
    ITC_CUSTOM_BEEP, // Issue a custom beep.
} ITC_BEEP_TYPE;
```

dwNumberOfBeeps [in] Identifies the total number of beeps in *rgBeepRequests*.

Return Values

E_NOTIMPL as this function is not implemented.

Remarks

None.

See Also

- IBarCodeReaderControl::CancelReadRequest
- IBarCodeReaderControl::ControlLED
- IBarCodeReaderControl::Initialize
- IBarCodeReaderControl::QueryAttribute
- IBarCodeReaderControl::Read
- IBarCodeReaderControl::SetAttribute
- IBarCodeReaderControl::TriggerScanner

IBarcodeReaderControl::QueryAttribute

This function retrieves the device-specific grid, the scanner enable status, and the LED control status for the current bar code reader engine.

Syntax

```
HRESULT IBarcodeReaderControl::QueryAttribute (
    ITC_BARCODEREADER_ATTRIBUTE_ID eAttr, BYTE
    rgbAttrBuffer[], DWORD dwAttrBufferSize );
```

Parameters

<i>eAttr</i>	[in]	Specifies the attribute. See IBarcodeReaderControl::SetAttribute on page 175 for the attributes.
<i>rgbAttrBuffer</i>	[out]	Contains buffer for the attribute to be queried. The structure of <i>rgbAttrBuffer</i> depends on the attribute being queried. See IBarcodeReaderControl::SetAttribute for a description of these structures.
<i>dwAttrBufferSize</i>	[in]	The maximum number of bytes that <i>rgbAttrBuffer</i> can store.

Return Values

A standard status code that indicates success or failure.

Remarks

The following attributes are not supported on the imager:

- ITC_RDRATTR_TONE_ENABLE
- ITC_RDRATTR_VOLUME_LEVEL
- ITC_RDRATTR_TONE_FREQUENCY
- ITC_RDRATTR_GOOD_READ_BEEPS_NUMBER
- ITC_RDRATTR_GOOD_READ_BEEP_DURATION

See Also

- IBarcodeReaderControl::CancelReadRequest
- IBarcodeReaderControl::ControlLED
- IBarcodeReaderControl::Initialize
- IBarcodeReaderControl::IssueBeep
- IBarcodeReaderControl::Read
- IBarcodeReaderControl::SetAttribute
- IBarcodeReaderControl::TriggerScanner

IBarCodeReaderControl::Read

This function reads data from the bar code input device. This method performs the same function as IADC::Read () except that it provides additional information about data received such as bar code symbology used, data type, and time stamp of received data.

Syntax

```
HRESULT IBarCodeReaderControl::Read ( BYTE
    rgbDataBuffer[], DWORD dwDataBufferSize, DWORD
    pnBytesReturned, ITC_BARCODE_DATA_DETAILS
    pBarCodeDataDetails, DWORD dwTimeout );
```

Parameters

<i>rgbDataBuffer</i>	[in]	Pointer to the buffer that receives data from the device.
<i>dwDataBufferSize</i>	[in]	Maximum number of bytes that can be stored in <i>rgbDataBuffer</i> .
<i>pnBytesReturned</i>	[out]	Pointer to the DWORD location that will store the bytes returned in <i>rgbDataBuffer</i> .
<i>pBarCodeDataDetails</i>	[in]	Address of data structure in which to put the data details. This may be NULL. The ITC_BARCODE_DATA_DETAILS is:

```
typedef struct tagITCBarCodeDetails
```

```
{
```

```
WORD wStructSize,
ITC_BARCODE_SYMBOLGY_ID eSymbology,
ITC_BARCODE_DATATYPE eDataType,
SYSTEMTIME stTimeStamp,
} ITC_BARCODE_DATA_DETAILS;
```

```
typedef enum tagBarCodeDataType
```

```
{
```

```
BARCODE_DATA_TYPE_UNKNOWN = 1,
BARCODE_DATA_TYPE_ASCII,
BARCODE_DATA_TYPE_UNICODE,
} ITC_BARCODE_DATATYPE;
```

where:

- *wStructSize* Size of structure. Used for versioning structure.
- *eSymbology* Symbology of the returned data.
- *eDataType* Identifies data types as ASCII, UNICODE, etc.
- *stTimeStamp* Timestamp of the received data.
- **BARCODE_DATA_TYPE_UNKNOWN** Data is unknown.
- **BARCODE_DATA_TYPE_ASCII** Data is ASCII.
- **BARCODE_DATA_TYPE_UNICODE** Data is UNICODE.

<i>dwTimeout</i>	[in]	Number of milliseconds caller waits for data. If you set a timeout, the call will be blocked until data is received. <ul style="list-style-type: none">• 0 If data not available, returns quickly.• INFINITE Waits until data is available.
------------------	------	--

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

- IBarcodeReaderControl::CancelReadRequest
- IBarcodeReaderControl::ControlLED
- IBarcodeReaderControl::Initialize
- IBarcodeReaderControl::IssueBeep
- IBarcodeReaderControl::QueryAttribute
- IBarcodeReaderControl::SetAttribute
- IBarcodeReaderControl::TriggerScanner

IBarcodeReaderControl::SetAttribute

This function enables and disables the laser scanner, sets the bar code reader engine specific grid, and enables or disables the reader engine LED control.

Syntax

```
HRESULT IBarcodeReaderControl::SetAttribute (
    ITC_BARCODEREADER_ATTRIBUTE_ID eAttr, BYTE
    rgbAttrBuffer[], DWORD dwAttrBufferSize );
```

Parameters

- eAttr* [in] Identifies the attribute to set. Only one attribute can be set at a time. The attributes are:
- **ITC_RDRATTR_SCANNER_ENABLE**
Enable or disable scanner for all connections.
 - **ITC_RDRATTR_GOOD_READ_LED_ENABLE**
Enables and disables the reader engine from controlling the good read LED.
 - **ITC_RDRATTR_TONE_ENABLE**
Enables and disables the reader engine from issuing beeps.
 - **ITC_RDRATTR_VOLUME_LEVEL**
Sets beep volume level.
 - **ITC_RDRATTR_TONE_FREQUENCY**
Sets beep frequency.
 - **ITC_RDRATTR_GOOD_READ_BEEPS_NUMBER**
Sets number of beeps for a good read.
 - **ITC_RDRATTR_GOOD_READ_BEEP_DURATION**
Sets duration of beeps for a good read.
 - **ITC_DHATTR_READFILTER**
The ITC_READFILTER is the *rgbData* Data Structure. The ITC_READFILTER structure is defined in IADCDEVICE.H as follows:

```
typedef struct
{
    #define ITC_MAXFILTER_CHARS 240
    WORD nFilterChars;
    TCHAR szFilter[ITC_MAXFILTER_CHARS];
} ITC_READFILTER;
```

where:

- *nFilterChars* Number of characters in *pszDataMask*.
- *szFilter* Data mask specification. See “*Grid Data Filtering*.”
- **ITC_MAXFILTER**
Maximum number of characters in a filter specification. Includes NULL termination.

rgbAttrBuffer [in] Contains data for the attribute to be set. Depending on *eAttr*, the *rgbAttrData* will be mapped to the appropriate structure as shown in the following table .

***rgbAttrBuffer* Data Structures**

eAttr	Data Structure contained in <i>rgbAttrBuffer</i>
ITC_DHATTR_READFILTER	ITC_READ_FILTER defines the grid structure.
ITC_RDRATTR_SCANNER_ENABLE	BOOL TRUE Enable scanner. FALSE Disable scanner.
ITC_RDRATTR_GOOD_READ_LED_ENABLE	BOOL TRUE Reader Engine controls good read LED. FALSE Good read LED is not controlled.
ITC_RDRATTR_DATA_VALID_LED_ENABLE	BOOL TRUE Reader Engine controls data valid LED. FALSE Data valid LED is not controlled.
ITC_RDRATTR_TONE_ENABLE	BOOL TRUE Reader Engine issues beeps. FALSE Beeps are not issued.
ITC_RDRATTR_VOLUME_LEVEL	ITC_BEEP_VOLUME An enumerator that identifies the beep volume level control. Valid range for S9C: <pre>typedef enum tagBeepVolume { ITC_BEEP_VOLUME_LOW = 0, ITC_BEEP_VOLUME_MEDIUM = 2, ITC_BEEP_VOLUME_HIGH = 1 //Default } ITC_BEEP_VOLUME</pre> <i>Note: Due to the hardware design on this 700 Series Computer, the volume level can be either OFF (ITC_BEEP_VOLUME_LOW) or ON (ITC_BEEP_VOLUME_MEDIUM/HIGH).</i>
ITC_RDRATTR_TONE_FREQUENCY	DWORD A value that identifies the tone frequency in Hz. Valid range for S9C: 1000–4095 Hz (default: 2090). <i>Note: Value is divided by 10 for storage. On retrieval, the scanner rounds off the value to the nearest 10 Hz, then multiplies the value by 10. For example, the value sent to the scanner is 2095. On retrieval, the value returned is 2090.</i>

rgbAttrBuffer Data Structures (continued)

eAttr	Data Structure contained in rgbAttrBuffer
ITC_RDRATTR_GOOD_READ_BEEPS_NUMBER	ITC_GOOD_READ_BEEPS_NUMBER An enumerator identifying the good read beeps number. Valid range for S9C: <pre>typedef enum tagGoodReadBeepsNumber { ITC_NUM_BEEPS_NONE = 0, ITC_NUM_BEEPS_ONE = 1, // Default ITC_NUM_BEEPS_TWO = 2 } ITC_GOOD_READ_BEEPS_NUMBER</pre>
ITC_RDRATTR_GOOD_READ_BEEP_DURATION	DWORD Value identifying the good read beep duration in ms. Valid range for S9C: 0–2550 ms (<i>Default: 80</i>). <i>Note: Value is divided by 10 for storage. On retrieval, the scanner rounds the value to the nearest 10 ms, then multiplies the value by 10.</i>

dwAttrBufferSize [in] The size of *rgbAttrBuffer* in bytes.

Return Values

HRESULT that indicates success or failure.

Remarks

The following attributes are not supported on the imager:

- ITC_RDRATTR_TONE_ENABLE
- ITC_RDRATTR_VOLUME_LEVEL
- ITC_RDRATTR_TONE_FREQUENCY
- ITC_RDRATTR_GOOD_READ_BEEPS_NUMBER
- ITC_RDRATTR_GOOD_READ_BEEP_DURATION

See Also

- IBarcodeReaderControl::CancelReadRequest
- IBarcodeReaderControl::ControlLED
- IBarcodeReaderControl::Initialize
- IBarcodeReaderControl::IssueBeep
- IBarcodeReaderControl::QueryAttribute
- IBarcodeReaderControl::Read
- IBarcodeReaderControl::TriggerScanner

IBarCodeReaderControl::TriggerScanner

This function turns the scanner on and off. The client application must coordinate control of the scanner with the user.

Syntax

```
HRESULT IBarCodeReaderControl::TriggerScanner ( BOOL  
fScannerOn );
```

Parameters

fScannerOn [in] Set TRUE to turn the scanner on. Set FALSE to turn the scanner off.

Return Values

HRESULT that indicates success or failure.

Remarks

When the scanner is turned on, its behavior is controlled by the trigger mode. That is, in one shot mode, the laser turns off when a label is scanned.

See Also

- IBarCodeReaderControl::CancelReadRequest
- IBarCodeReaderControl::ControlLED
- IBarCodeReaderControl::Initialize
- IBarCodeReaderControl::IssueBeep
- IBarCodeReaderControl::QueryAttribute
- IBarCodeReaderControl::Read
- IBarCodeReaderControl::SetAttribute

IS9CConfig Functions

This interface provides methods to set and retrieve the 700 Series Computer bar code configuration. All supported symbologies are initialized to their defaults when the S9C firmware is loaded.

GET/SET functions use enumerations as their parameters. In most enumerations, there is an enumerator `xx_NO_CHANGE` (such as `ITC_CODE39_NO_CHANGE`), where `xx` refers to a particular enumeration. This enumerator can be used during a call to a SET to indicate that no change is to be made to that particular parameter. This prevents the called function from having to format the same S9C command and send down to the S9C scanner.

For all symbologies, to set a bar code length of “any length,” use a value of “0” for the bar code length argument.

IS9CConfig functions are the following. `IS9CCONFIG.H` is the header file and `ITCUUID.LIB` contains the `IID_IADC` Interface GUID value used to obtain the interface.

- `IS9CConfig::GetCodabar` (*page 180*)
- `IS9CConfig::SetCodabar` (*page 181*)
- `IS9CConfig::GetCode39` (*page 183*)
- `IS9CConfig::SetCode39` (*page 184*)
- `IS9CConfig::GetCode93` (*page 186*)
- `IS9CConfig::SetCode93` (*page 187*)
- `IS9CConfig::GetCode128` (*page 189*)
- `IS9CConfig::SetCode128` (*page 190*)
- `IS9CConfig::GetI2of5` (*page 192*)
- `IS9CConfig::SetI2of5` (*page 193*)
- `IS9CConfig::GetMatrix2of5` (*page 195*)
- `IS9CConfig::SetMatrix2of5` (*page 196*)
- `IS9CConfig::GetMSI` (*page 198*)
- `IS9CConfig::SetMSI` (*page 199*)
- `IS9CConfig::GetPDF417` (*page 201*)
- `IS9CConfig::SetPDF417` (*page 203*)
- `IS9CConfig::GetPlessey` (*page 206*)
- `IS9CConfig::SetPlessey` (*page 207*)
- `IS9CConfig::GetStandard2of5` (*page 209*)
- `IS9CConfig::SetStandard2of5` (*page 210*)
- `IS9CConfig::GetTelepen` (*page 212*)
- `IS9CConfig::SetTelepen` (*page 213*)
- `IS9CConfig::GetUpcEan` (*page 215*)
- `IS9CConfig::SetUpcEan` (*page 217*)

IS9CConfig::GetCodabar

This function retrieves the current settings of Codabar symbology.

Syntax

```
HRESULT IS9CConfig::GetCodabar( ITC_CODABAR_DECODING*
    peDecode, ITC_CODABAR_START_STOP* peSS, ITC_CODABAR_CLSI*
    peCLSI, ITC_CODABAR_CHECK_DIGIT* peCheck,
    ITC_BARCODE_LENGTH_ID* peLengthId, BYTE rgbLengthBuff[],
    DWORD* pdwNumBytes );
```

Parameters

<i>peDecode</i>	[out]	Pointer to the ITC_CODABAR_DECODING location to receive the decoding for Codabar symbology.
<i>peSS</i>	[out]	Pointer to the ITC_CODABAR_START_STOP location to receive the Start/Stop option.
<i>peCLSI</i>	[out]	Pointer to the ITC_CODABAR_CLSI location to receive the CLSI library system.
<i>peCheck</i>	[out]	Pointer to the ITC_CODABAR_CHECK_DIGIT location to receive the check digit.
<i>peLengthId</i>	[out]	Pointer to the ITC_BARCODE_LENGTH_ID location to receive an indicator of either ITC_BARCODE_LENGTH or ITC_BARCODE_FIXED_LENGTH.
<i>rgbLengthBuff</i>	[out,size_is(3)]	An array of bytes to receive 1 byte of data for ITC_BARCODE_LENGTH, or 3 bytes of data for ITC_BARCODE_FIXED_LENGTH.
<i>pdwNumBytes</i>	[out]	Pointer to the DWORD location to receive a number indicating number of bytes in <i>rgbLengthBuff</i> : 1 byte for ITC_BARCODE_LENGTH or 3 bytes for ITC_BARCODE_FIXED_LENGTH.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig::SetCodabar

This function updates the Codabar settings with new values.

Syntax

```
HRESULT IS9CConfig::SetCodabar( ITC_CODABAR_DECODING
eDecode, ITC_CODABAR_START_STOP eSS, ITC_CODABAR_CLSI
eCLSI, ITC_CODABAR_CHECK_DIGIT eCheck,
ITC_BARCODE_LENGTH_ID eLengthId, BYTE
rgbLengthBuff[], DWORD dwNumBytes );
```

Parameters

<i>eDecode</i>	[in]	Identifies the decoding for Codabar symbology.
<i>eSS</i>	[in]	Identifies the Start/Stop option.
<i>eCLSI</i>	[in]	Identifies the CLSI library system.
<i>eCheck</i>	[in]	Identifies the check digit.
<i>eLengthId</i>	[in]	Use ITC_BARCODE_LENGTH_NO_CHANGE to indicate no change for bar code length. Use ITC_BARCODE_LENGTH for any length and minimum length, and set <i>rgbLengthBuff[0]</i> to a valid length value. Use ITC_BARCODE_FIXED_LENGTH to compose 1 or 2 or 3 fixed lengths, and set 3 bytes: <i>rgbLengthBuff[0]</i> , <i>rgbLengthBuff[1]</i> , <i>rgbLengthBuff[2]</i> with valid values.
<i>rgbLengthBuff</i>	[in, size_is(dwNumBytes)]	An array of bytes containing bar code lengths when <i>eLengthId</i> = ITC_BARCODE_LENGTH or ITC_BARCODE_FIXED_LENGTH.
<i>dwNumBytes</i>	[in]	Number of bytes in <i>rgbLengthBuff[]</i> . For S9C, this value is 1 when <i>eLengthId</i> = ITC_BARCODE_LENGTH or 3 when <i>eLengthId</i> = ITC_BARCODE_FIXED_LENGTH

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the IS9CConfig::GetCodabar and IS9CConfig::SetCodabar functions.

Codabar Default Settings

Parameter	Default	Valid Range
Decode	Not Active	ITC_CODABAR_DECODING
CLSI Library System	Not Active	ITC_CODABAR_CLSI
Start/Stop	Not Transmitted	ITC_CODABAR_START_STOP
Check Digit	Not Used	ITC_CODABAR_CHECK_DIGIT
Bar Code Length	Minimum Length = 6	0x00–0xFE ITC_BC_LENGTH_NO_CHANGE

Codabar Enumerations

```
typedef enum tagCodabarDecoding
{
    ITC_CODABAR_NOTACTIVE = 0,          // Default
    ITC_CODABAR_ACTIVE = 1,
    ITC_CODABAR_NO_CHANGE = 255
} ITC_CODABAR_DECODING;

typedef enum tagCodabarStartStop
{
    ITC_CODABAR_SS_NOTXMIT,             // Default
    ITC_CODABAR_SS_LOWERABCD,          // a,b,c,d
    ITC_CODABAR_SS_UPPERABCD,          // A,B,C,D
    ITC_CODABAR_SS_LOWERABCDTN,        // a,b,c,d / t,n,*,e
    ITC_CODABAR_SS_DC1TODC4,           // DC1,DC2,DC3,DC4
    ITC_CODABAR_SS_NO_CHANGE = 255
} ITC_CODABAR_START_STOP;

typedef enum tagCodabarClsi
{
    ITC_CODABAR_CLSI_NOTACTIVE = 0,    // Default
    ITC_CODABAR_CLSI_ACTIVE = 1,
    ITC_CODABAR_CLSI_NO_CHANGE = 255
} ITC_CODABAR_CLSI;

typedef enum tagCodabarCheckDigit
{
    ITC_CODABAR_CHECK_NOTUSED,         // Default
    ITC_CODABAR_CHECK_XMIT,
    ITC_CODABAR_CHECK_NOTXMIT,
    ITC_CODABAR_CHECK_NO_CHANGE = 255
} ITC_CODABAR_CHECK_DIGIT;

typedef enum tagBarcodeLengthId
{
    ITC_BARCODE_LENGTH = 0,
    ITC_BARCODE_FIXED_LENGTH,
    ITC_BARCODE_LENGTH_NO_CHANGE = 255
} ITC_BARCODE_LENGTH_ID;
```

IS9CConfig::GetCode39

This function retrieves the current settings of Code 39.

Syntax

```
HRESULT IS9CConfig::GetCode39( ITC_CODE39_DECODING*
    peDecode, ITC_CODE39_FORMAT* peFormat,
    ITC_CODE39_START_STOP* peSS, ITC_CODE39_SS_CHARS*
    peSSChars, ITC_CODE39_CHECK_DIGIT* peCheck, DWORD*
    pwLength );
```

Parameters

<i>peDecode</i>	[out]	Pointer to the ITC_CODE39_DECODING location to receive the decoding for Code 39.
<i>peFormat</i>	[out]	Pointer to the ITC_CODE39_FORMAT location to receive the Code 39 format.
<i>peSS</i>	[out]	Pointer to the ITC_CODE39_START_STOP location to receive the Code 39 start/stop.
<i>peSSChars</i>	[out]	Pointer to the ITC_CODE39_SS_CHARS location to receive the Start/Stop character.
<i>peCheck</i>	[out]	Pointer to the ITC_CODE39_CHECK_DIGIT location to receive the check digit.
<i>pwLength</i>	[out]	Pointer to the DWORD location to receive the bar code length.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig::SetCode39

This function updates the Code 39 settings with new values.

Syntax

```
HRESULT IS9CConfig::SetCode39( ITC_CODE39_DECODING  
eDecode, ITC_CODE39_FORMAT eFormat, ITC_CODE39_START_STOP  
eSS, ITC_CODE39_SS_CHARS eSSChars, ITC_CODE39_CHECK_DIGIT  
eCheck, DWORD dwLength );
```

Parameters

<i>eDecode</i>	[in]	Identifies the decoding for Code 39.
<i>eFormat</i>	[in]	Identifies the Code 39 Format.
<i>eSS</i>	[in]	Identifies the Start/Stop option.
<i>eSSChars</i>	[in]	Identifies the Start/Stop character.
<i>eCheck</i>	[in]	Identifies the Check digit.
<i>dwLength</i>	[in]	Identifies the bar code length.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the `IS9CConfig::GetCode39` and `IS9CConfig::SetCode39` functions.

Code 39 Default Settings

Parameter	Default	Valid Range
Decoding	Active	ITC_CODE39_DECODING
Format	Standard 43 Character	ITC_CODE39_FORMAT
Start/Stop	Not Transmitted	ITC_CODE39_START_STOP
Accepted Start/stop Characters	* only	ITC_CODE39_SS_CHARS
Check Digit	Not Used	ITC_CODE39_CHECK_DIGIT
Bar Code Length	Any Bar Code Length	0x00–0xFE ITC_BC_LENGTH_NO_CHANGE

Code 39 Enumerations

```
typedef enum tagCode39Decoding
{
    ITC_CODE39_NOTACTIVE = 0,
    ITC_CODE39_ACTIVE = 1,           // Default
    ITC_CODE39_NO_CHANGE = 255
} ITC_CODE39_DECODING;

typedef enum tagCode39Format
{
    ITC_CODE39_FORMAT_STANDARD43,    // Default
    ITC_CODE39_FORMAT_FULLASCII,
    ITC_CODE39_FORMAT_NO_CHANGE = 255
} ITC_CODE39_FORMAT;

typedef enum tagCode39StartStop
{
    ITC_CODE39_SS_NOTXMIT,           // Default
    ITC_CODE39_SS_XMIT,
    ITC_CODE39_SS_NO_CHANGE = 255
} ITC_CODE39_START_STOP;

typedef enum tagCode39StartStopChars
{
    ITC_CODE39_SS_CHARS_DOLLARSIGN,
    ITC_CODE39_SS_CHARS_ASTERISK,    // Default
    ITC_CODE39_SS_CHARS_BOTH,
    ITC_CODE39_SS_CHARS_NO_CHANGE = 255
} ITC_CODE39_SS_CHARS;

typedef enum tagCode39CheckDigit
{
    ITC_CODE39_CHECK_NOTUSED,        // Default
    ITC_CODE39_CHECK_MOD43_XMIT,
    ITC_CODE39_CHECK_MOD43_NOTXMIT,
    ITC_CODE39_CHECK_FRENCH_CIP_XMIT,
    ITC_CODE39_CHECK_FRENCH_CIP_NOTXMIT,
    ITC_CODE39_CHECK_ITALIAN_CPI_XMIT,
    ITC_CODE39_CHECK_ITALIAN_CPI_NOTXMIT,
    ITC_CODE39_CHECK_NO_CHANGE = 255
} ITC_CODE39_CHECK_DIGIT;
```

IS9CConfig::GetCode93

This function retrieves the current settings of Code 93.

Syntax

```
HRESULT IS9CConfig::GetCode93( ITC_CODE93_DECODING*  
    peDecode, DWORD* pdwLength );
```

Parameters

<i>peDecode</i>	[out]	Pointer to the ITC_CODE93_DECODING location to receive the decoding for Code 93 symbology.
<i>pdwLength</i>	[out]	Pointer to the DWORD location to receive a value for bar code length.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig::SetCode93

This function updates the Code 93 settings with new values.

Syntax

```
HRESULT IS9CConfig::SetCode93( ITC_CODE93_DECODING  
eDecode,DWORD dwLength );
```

Parameters

eDecode [in] Identifies the decoding for Code93 Symbology.

dwLength [in] Identifies the bar code length.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the IS9CConfig::GetCode93 and IS9CConfig::SetCode93 functions.

Code 93 Default Settings

Parameter	Default	Valid Range
Decoding	Not Active	ITC_CODE93_DECODING
Bar Code Length	Any Bar Code Length	0x00–0xFE ITC_BC_LENGTH_NO_CHANGE

Code 93 Enumerations

Use this when the bar code length does not require any change.

```
typedef enum tagCode93Decoding
{
    ITC_CODE93_NOTACTIVE = 0,        // Default
    ITC_CODE93_ACTIVE = 1,
    ITC_CODE93_NO_CHANGE = 255
} ITC_CODE93_DECODING;
#define ITC_BC_LENGTH_NO_CHANGE 255.
```

IS9CConfig::GetCode128

This function retrieves the current settings of Code 128 symbology.

Syntax

```
HRESULT IS9CConfig::GetCode128( ITC_CODE128_DECODING*
    peDecode, ITC_EAN128_IDENTIFIER* peEan128Ident,
    ITC_CODE128_CIP128 peCip128State, BYTE* pbyFNC1, DWORD*
    pdwLength );
```

Parameters

<i>peDecode</i>	[out]	Pointer to the ITC_CODE128_DECODING location to receive the decoding for Code 128 symbology.
<i>peEan128Ident</i>	[out]	Pointer to the ITC_EAN128_IDENTIFIER location to receive the EAN 128 identifier.
<i>peCip128State</i>	[out]	Pointer to the ITC_CODE128_CIP128 location to receive the CIP 128.
<i>pbyFNC1</i>	[out]	Pointer to the BYTE location to receive the FNC1 separator character.
<i>pdwLength</i>	[out]	Pointer to the DWORD location to receive a value for bar code length.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig::SetCode128

This function updates the Code 128 settings with new values.

Syntax

```
HRESULT IS9CConfig::SetCode128( ITC_CODE128_DECODING
eDecode, ITC_EAN128_IDENTIFIER eEan128Ident,
ITC_CODE128_CIP128 eCip128State, BYTE byFNC1, DWORD
dwLength );
```

Parameters

<i>eDecode</i>	[in]	Identifies the decoding for Code 128 symbology.
<i>eEan128Ident</i>	[in]	Identifies the EAN 128 identifier.
<i>eCip128State</i>	[in]	Identifies the CIP 128.
<i>byFNC1</i>	[in]	Identifies the FNC1 separator character, usually any ASCII value.
<i>dwLength</i>	[in]	Identifies the bar code length.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the `IS9CConfig::GetCode128` and `IS9CConfig::SetCode128` functions.

Code 128/EAN 128 Default Settings

Parameter	Default	Valid Range
Decoding	Not Active	ITC_CODE128_DECODING
EAN 128 Identifier	Include]C1	ITC_EAN128_IDENTIFIER
CIP 128 French Pharmaceutical	Not Active	ITC_CODE128_CIP128
FNC1 Separator Character (EAN 128 norms)	GS function Char ASCII 29 or 0x1D	0x00–0xFE ITC_CODE128_FNC1_NO_CHANGE
Bar Code Length	Any Bar Code Length	0x00–0xFE ITC_BC_LENGTH_NO_CHANGE

Code 128 Enumerations

```
typedef enum tagCode128Decoding
{
    ITC_CODE128_NOTACTIVE = 0, // Default
    ITC_CODE128_ACTIVE = 1,
    ITC_CODE128_NO_CHANGE = 255
} ITC_CODE128_DECODING;
```

```
typedef enum tagEan128Identifier
{
    ITC_EAN128_ID_REMOVE,
    ITC_EAN128_ID_INCLUDE, // Default
    ITC_EAN128_ID_NO_CHANGE = 255
} ITC_EAN128_IDENTIFIER;
```

```
typedef enum tagCode128Cip128
{
    ITC_CODE128_CIP128_NOTACTIVE = 0, // Default
    ITC_CODE128_CIP128_ACTIVE = 1,
    ITC_CODE128_CIP128_NO_CHANGE = 255
} ITC_CODE128_CIP128;
```

`#define ITC_CODE128_FNC1_NO_CHANGE 255.`
This definition can be used when the Code128 FNC1 does not require any change.

`#define ITC_BC_LENGTH_NO_CHANGE 255.` This definition can be used when the bar code length does not require any change.

This table shows what is expected for EAN 128 labels for various symbology identifier transmit configurations and EAN 128 Identifier options.

Setup			Application's Expected Result	
EAN 128]C1 ID		Symbology ID option	EAN 128 Label	Other Labels
1	Include]C1	Disabled	<data>	<data>
2	Remove]C1	Disabled	<data>	<data>
3	Include]C1	AIM ID Transmitted]C1<data>]XY<data>
4	Remove]C1	AID ID Transmitted]C1<data>]XY<data>
5	Include]C1	Custom ID Transmitted	Z]C1<data>	Z<data>
6	Remove]C1	Custom ID Transmitted	Z<data>	Z<data>

where "X" is the symbology identifier, "Y" is the modifier character, and "Z" is the 1-byte symbology identifier.

IS9CConfig::GetI2of5

This function retrieves the current settings of Interleaved 2 of 5.

Syntax

```
HRESULT IS9CConfig::GetI2of5 (
    ITC_INTERLEAVED2OF5_DECODING* peDecode,
    ITC_INTERLEAVED2OF5_CHECK_DIGIT* peCheck,
    ITC_BARCODE_LENGTH_ID* peLengthId, BYTE rgbLengthBuff[],
    DWORD* pdwNumBytes );
```

Parameters

<i>peDecode</i>	[out]	Pointer to the ITC_INTERLEAVED2OF5_DECODING location to receive the decoding for Interleaved 2 of 5 symbology.
<i>peCheck</i>	[out]	Pointer to the ITC_INTERLEAVED2OF5_CHECK_DIGIT location to receive the check digit.
<i>peLengthId</i>	[out]	Pointer to the ITC_BARCODE_LENGTH_ID location to receive an indicator of either ITC_BARCODE_LENGTH or ITC_BARCODE_FIXED_LENGTH.
<i>rgbLengthBuff</i>	[out,size_is(3)]	An array of bytes to receives 1 byte of data for ITC_BARCODE_LENGTH or 3 bytes of data for ITC_BARCODE_FIXED_LENGTH.
<i>pdwNumBytes</i>	[out]	Pointer to the DWORD location to receive a number indicating number of bytes in <i>rgbLengthBuff</i> : 1 byte for ITC_BARCODE_LENGTH or 3 bytes for ITC_BARCODE_FIXED_LENGTH.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig::SetI2of5

This function updates the Interleaved 2 of 5 settings with new values.

Syntax

```
HRESULT IS9CConfig::SetI2of5( ITC_INTERLEAVED2OF5_DECODING
eDecode, ITC_INTERLEAVED2OF5_CHECK_DIGIT eCheck,
ITC_BARCODE_LENGTH_ID eLengthId, BYTE rgbLengthBuff[],
DWORD dwNumBytes );
```

Parameters

<i>eDecode</i>	[in]	Identifies the decoding for Interleaved 2 of 5 symbology.
<i>eCheck</i>	[in]	Identifies the check digit.
<i>eLengthId</i>	[in]	Use ITC_BARCODE_LENGTH_NO_CHANGE to indicate no change for bar code length. Use ITC_BARCODE_LENGTH for any length and minimum length, and set <i>rgbLengthBuff[0]</i> to a valid length value. Use ITC_BARCODE_FIXED_LENGTH to compose 1 or 2 or 3 fixed lengths, and set 3 bytes: <i>rgbLengthBuff[0]</i> , <i>rgbLengthBuff[1]</i> , <i>rgbLengthBuff[2]</i> with valid values.
<i>rgbLengthBuff</i>	[in, size_is(dwNumBytes)]	Contains bar code lengths when <i>eLengthId</i> = Use ITC_BARCODE_LENGTH or Use ITC_BARCODE_FIXED_LENGTH.
<i>dwNumBytes</i>	[in]	Number of bytes in <i>rgbLengthBuff[]</i> . For S9C, this value is 1 when <i>eLengthId</i> = ITC_BARCODE_LENGTH or 3 when <i>eLengthId</i> = ITC_BARCODE_FIXED_LENGTH.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the IS9CConfig::GetI2of5 and IS9CConfig::SetI2of5 functions.

Interleaved 2 of 5 Default Settings

Parameter	Default	Valid Range
Decoding	Not Active	ITC_INTERLEAVED2OF5_DECODING
Check Digit	Not Used	ITC_INTERLEAVED2OF5_CHECK_DIGIT
Bar Code Length	Minimum Length = 6	0x00–0xFE ITC_BC_LENGTH_NO_CHANGE

Interleaved 2 of 5 Enumerations

```
typedef enum tagInterleaved2of5Decoding
{
    ITC_INTERLEAVED2OF5_NOTACTIVE = 0,           // Default
    ITC_INTERLEAVED2OF5_ACTIVE = 1,
    ITC_INTERLEAVED2OF5_NO_CHANGE = 255
} ITC_INTERLEAVED2OF5_DECODING;
typedef enum tagInterleaved2of5CheckDigit
{
    ITC_INTERLEAVED2OF5_CHECK_NOTUSED,           // Default
    ITC_INTERLEAVED2OF5_CHECK_MOD10_XMIT,
    ITC_INTERLEAVED2OF5_CHECK_MOD10_NOTXMIT,
    ITC_INTERLEAVED2OF5_CHECK_FRENCH_CIP_XMIT,
    ITC_INTERLEAVED2OF5_CHECK_FRENCH_CIP_NOTXMIT,
    ITC_INTERLEAVED2OF5_CHECK_NO_CHANGE = 255
} ITC_INTERLEAVED2OF5_CHECK_DIGIT;
typedef enum tagBarcodeLengthId
{
    ITC_BARCODE_LENGTH = 0,
    ITC_BARCODE_FIXED_LENGTH,
    ITC_BARCODE_LENGTH_NO_CHANGE = 255
} ITC_BARCODE_LENGTH_ID;
```


IS9CConfig::GetMatrix2of5

This function retrieves the current settings of Matrix 2 of 5.

Syntax

```
HRESULT IS9CConfig::GetMatrix2of5(
    ITC_MATRIX2OF5_DECODING* peDecode, DWORD* pdwLength );
```

Parameters

<i>peDecode</i>	[out]	Pointer to the ITC_MATRIX2OF5_DECODING location to receive the decoding for Matrix 2 of 5 symbology.
<i>pdwLength</i>	[out]	Pointer to the DWORD location to receive a value for the bar code length.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig::SetMatrix2of5

This function updates the Matrix 2 of 5 settings with new values.

Syntax

```
HRESULT IS9CConfig::SetMatrix2of5( ITC_MATRIX2OF5_DECODING  
eDecode, DWORD dwLength );
```

Parameters

eDecode [in] Identifies the decoding for Matrix 2 of 5 symbology.
dwLength [in] Identifies the bar code length.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the IS9CConfig::GetMatrix2of5 and IS9CConfig::SetMatrix2of5 functions.

Matrix 2 of 5 Default Settings

Parameter	Default	Valid Range
Decoding	Not Active	ITC_MATRIX2OF5_DECODING
Bar Code Length	Minimum Length = 6	0x00–0xFE ITC_BC_LENGTH_NO_CHANGE

Matrix 2 of 5 Enumerations

```
typedef enum tagMatrix2of5Decoding
{
    ITC_MATRIX2OF5_NOTACTIVE = 0, // Default
    ITC_MATRIX2OF5_ACTIVE = 1,
    ITC_MATRIX2OF5_NO_CHANGE = 255
} ITC_MATRIX2OF5_DECODING;
#define ITC_BC_LENGTH_NO_CHANGE 255. This definition can be used when the bar
code length does not require any change.
```

IS9CConfig::GetMSI

This function retrieves the current MSI settings.

Syntax

```
HRESULT IS9CConfig::GetMSI( ITC_MSI_DECODING* peDecode,  
ITC_MSI_CHECK_DIGIT* peCheck, DWORD* pdwLength );
```

Parameters

<i>peDecode</i>	[out]	Pointer to the ITC_MSI_DECODING location to receive the decoding for MSI symbology.
<i>peCheck</i>	[out]	Pointer to the ITC_MSI_CHECK_DIGIT location to receive the check digit.
<i>pdwLength</i>	[out]	Pointer to the DWORD location to receive the bar code length.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig::SetMSI

This function updates the MSI settings with new values.

Syntax

```
HRESULT IS9CConfig::SetMSI( ITC_MSI_DECODING eDecode,  
ITC_MSI_CHECK_DIGIT eCheck, DWORD dwLength );
```

Parameters

eDecode [in] Identifies the decoding for MSI symbology.

eCheck [in] Identifies the check digit.

dwLength [in] Identifies the bar code length.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the IS9CConfig::GetMSI and IS9CConfig::SetMSI functions.

MSI Default Settings

Parameter	Default	Valid Range
Decoding	Not Active	ITC_MSI_DECODING
Check Digit	MOD 10 checked and transmitted	ITC_MSI_CHECK_DIGIT
Bar Code Length	Minimum Length = 6	0x00–0xFE ITC_BC_LENGTH_NO_CHANGE

MSI Enumerations

```
typedef enum tagMsiDecoding
{
    ITC_MSI_NOTACTIVE = 0, // Default
    ITC_MSI_ACTIVE = 1,
    ITC_MSI_NO_CHANGE = 255
} ITC_MSI_DECODING;
typedef enum tagMsiCheckDigit
{
    ITC_MSI_CHECK_MOD10_XMIT, // Default
    ITC_MSI_CHECK_MOD10_NOTXMIT,
    ITC_MSI_CHECK_DOUBLEMOD10_XMIT,
    ITC_MSI_CHECK_DOUBLEMOD10_NOTXMIT,
    ITC_MSI_CHECK_NO_CHANGE = 255
} ITC_MSI_CHECK_DIGIT;
#define ITC_BC_LENGTH_NO_CHANGE 255. This definition can be used when the bar
code length does not require any change.
```

IS9CConfig::GetPDF417

This function retrieves the current PDF417 settings.

Syntax

```
HRESULT IS9CConfig::GetPDF417( ITC_PDF417_DECODING*
    pePdf417Decode, ITC_PDF417_MACRO_PDF* peMacroPdf,
    ITC_PDF417_CTRL_HEADER* pePdfControlHeader,
    ITC_PDF417_FILE_NAME* pePdfFileName,
    ITC_PDF417_SEGMENT_COUNT* pePdfSegmentCount,
    ITC_PDF417_TIME_STAMP* pePdfTimeStamp, ITC_PDF417_SENDER*
    pePdfSender, ITC_PDF417_ADDRESSEE* pePdfAddressee,
    ITC_PDF417_FILE_SIZE* pePdfFileSize, ITC_PDF417_CHECKSUM*
    pePdfChecksum );
```

Parameters

<i>pePdf417Decode</i>	[out]	Pointer to the ITC_PDF417_DECODING location to receive the decoding for PDF417 symbology.
<i>peMacroPdf</i>	[out]	Pointer to the ITC_PDF417_MACRO_PDF location to receive the Macro PDF.
<i>pePdfControlHeader</i>	[out]	Pointer to the ITC_PDF417_CTRL_HEADER location to receive the control header.
<i>pePdfFileName</i>	[out]	Pointer to the ITC_PDF417_FILE_NAME location to receive the file name.
<i>pePdfSegmentCount</i>	[out]	Pointer to the ITC_PDF417_SEGMENT_COUNT location to receive the segment count.
<i>pePdfTimeStamp</i>	[out]	Pointer to the ITC_PDF417_TIME_STAMP location to receive the time stamp.
<i>pePdfSender</i>	[out]	Pointer to the ITC_PDF417_SENDER location to receive the sender.
<i>pePdfAddressee</i>	[out]	Pointer to the ITC_PDF417_ADDRESSEE location to receive the addressee.
<i>pePdfFileSize</i>	[out]	Pointer to the ITC_PDF417_FILE_SIZE location to receive the file size.
<i>pePdfChecksum</i>	[out]	Pointer to the ITC_PDF417_CHECKSUM location to receive the checksum.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig::SetPDF417

This function updates the PDF417 settings with new values.

Syntax

```
HRESULT IS9CConfig::SetPDF417( ITC_PDF417_DECODING
ePdf417Decode, ITC_PDF417_MACRO_PDF eMacroPdf,
ITC_PDF417_CTRL_HEADER ePdfControlHeader,
ITC_PDF417_FILE_NAME ePdfFileName,
ITC_PDF417_SEGMENT_COUNT ePdfSegmentCount,
ITC_PDF417_TIME_STAMP ePdfTimeStamp, ITC_PDF417_SENDER
ePdfSender, ITC_PDF417_ADDRESSEE ePdfAddressee,
ITC_PDF417_FILE_SIZE ePdfFileSize, ITC_PDF417_CHECKSUM
ePdfChecksum );
```

Parameters

<i>ePdf417Decode</i>	[in]	Identifies the decoding for PDF417 symbology.
<i>eMacroPdf</i>	[in]	Identifies the Macro PDF.
<i>ePdfControlHeader</i>	[in]	Identifies the control header.
<i>ePdfFileName</i>	[in]	Identifies the file name.
<i>ePdfSegmentCount</i>	[in]	Identifies the segment count.
<i>ePdfTimeStamp</i>	[in]	Identifies the time stamp.
<i>ePdfSender</i>	[in]	Identifies the sender.
<i>ePdfAddressee</i>	[in]	Identifies the addressee.
<i>ePdfFileSize</i>	[in]	Identifies the file size.
<i>ePdfChecksum</i>	[in]	Identifies the checksum.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the IS9CConfig::GetPDF417 and IS9CConfig::SetPDF417 functions.

PDF417 Default Settings

Parameter	Default	Valid Range
Decoding	Not Active	ITC_PDF417_DECODING
Macro PDF	Macro PDF Buffered	ITC_PDF417_MACRO_PDF
Control Header	Not Transmitted	ITC_PDF417_CTRL_HEADER
*File Name	Not Transmitted	ITC_PDF417_FILE_NAME
*Segment Count	Not Transmitted	ITC_PDF417_SEGMENT_COUNT
*Time Stamp	Not Transmitted	ITC_PDF417_TIME_STAMP
*Sender	Not Transmitted	ITC_PDF417_SENDER
*Address	Not Transmitted	ITC_PDF417_ADDRESSEE
*File Size	Not Transmitted	ITC_PDF417_FILE_SIZE
*Check Sum	Not Transmitted	ITC_PDF417_CHECKSUM
<i>* These are Macro PDF Optional Fields.</i>		

PDF417 Enumerations

```
typedef enum tagPdf417Decoding
{
    ITC_PDF417_NOTACTIVE = 0,
    ITC_PDF417_ACTIVE = 1,           // Default
    ITC_PDF417_NO_CHANGE = 255
} ITC_PDF417_DECODING;
typedef enum tagPdf417MacroPdf
{
    ITC_PDF417_MACRO_UNBUFFERED = 0,
    ITC_PDF417_MACRO_BUFFERED = 1,   // Default
    ITC_PDF417_MACRO_NO_CHANGE = 255
} ITC_PDF417_MACRO_PDF;
typedef enum tagPdf417ControlHeader
{
    ITC_PDF417_CTRL_HEADER_NOTXMIT = 0, // Default
    ITC_PDF417_CTRL_HEADER_XMIT = 1,
    ITC_PDF417_CTRL_HEADER_NO_CHANGE = 255
} ITC_PDF417_CTRL_HEADER;
typedef enum tagPdf417FileName
{
    ITC_PDF417_FILE_NAME_NOTXMIT = 0, // Default
    ITC_PDF417_FILE_NAME_XMIT = 1,
    ITC_PDF417_FILE_NAME_NO_CHANGE = 255
} ITC_PDF417_FILE_NAME;
typedef enum tagPdf417SegmentCount
{
    ITC_PDF417_SEGMENT_COUNT_NOTXMIT = 0, // Default
    ITC_PDF417_SEGMENT_COUNT_XMIT = 1,
    ITC_PDF417_SEGMENT_COUNT_NO_CHANGE = 255
} ITC_PDF417_SEGMENT_COUNT;
typedef enum tagPdf417TimeStamp
```

```

{
ITC_PDF417_TIME_STAMP_NOTXMIT = 0, // Default
ITC_PDF417_TIME_STAMP_XMIT = 1,
ITC_PDF417_TIME_STAMP_NO_CHANGE = 255
} ITC_PDF417_TIME_STAMP;
typedef enum tagPdf417Sender
{
ITC_PDF417_SENDER_NOTXMIT = 0, // Default
ITC_PDF417_SENDER_XMIT = 1,
ITC_PDF417_SENDER_NO_CHANGE = 255
} ITC_PDF417_SENDER;
typedef enum tagPdf417Addressee
{
ITC_PDF417_ADDRESSEE_NOTXMIT = 0, // Default
ITC_PDF417_ADDRESSEE_XMIT = 1,
ITC_PDF417_ADDRESSEE_NO_CHANGE = 255
} ITC_PDF417_ADDRESSEE;
typedef enum tagPdf417FileSize
{
ITC_PDF417_FILE_SIZE_NOTXMIT = 0, // Default
ITC_PDF417_FILE_SIZE_XMIT = 1,
ITC_PDF417_FILE_SIZE_NO_CHANGE = 255
} ITC_PDF417_FILE_SIZE;
typedef enum tagPdf417Checksum
{
ITC_PDF417_CHECKSUM_NOTXMIT = 0, // Default
ITC_PDF417_CHECKSUM_XMIT = 1,
ITC_PDF417_CHECKSUM_NO_CHANGE = 255
} ITC_PDF417_CHECKSUM;

```

IS9CConfig::GetPlessey

This function retrieves the current Plessey settings.

Syntax

```
HRESULT IS9CConfig::GetPlessey( ITC_PLESSEY_DECODING*  
    peDecode, ITC_PLESSEY_CHECK_DIGIT* peCheck, DWORD*  
    pdwLength );
```

Parameters

<i>peDecode</i>	[out]	Pointer to the ITC_PLESSEY_DECODING location to receive the decoding for Plessey symbology.
<i>peCheck</i>	[out]	Pointer to the ITC_PLESSEY_CHECK_DIGIT location to receive the check digit.
<i>pdwLength</i>	[out]	Pointer to the DWORD location to receive the bar code length.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig::SetPlessey

This function updates the Plessey settings with new values.

Syntax

```
HRESULT IS9CConfig::SetPlessey( ITC_PLESSEY_DECODING  
eDecode, ITC_PLESSEY_CHECK_DIGIT eCheck, DWORD dwLength );
```

Parameters

eDecode [in] Identifies the decoding for Plessey symbology.

eCheck [in] Identifies the check digit.

dwLength [in] Identifies the bar code length.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the IS9CConfig::GetPlessey and IS9CConfig::SetPlessey functions.

Plessey Default Settings

Parameter	Default	Valid Range
Decoding	Not Active	ITC_PLESSEY_DECODING
Check Digit	Not Transmitted	ITC_PLESSEY_CHECK_DIGIT
Bar Code Length	Any Bar Code Length	0x00–0xFE ITC_BC_LENGTH_NO_CHANGE

Plessey Enumerations

```
typedef enum tagPlesseyDecoding
{
    ITC_PLESSEY_NOTACTIVE = 0,           // Default
    ITC_PLESSEY_ACTIVE = 1,
    ITC_PLESSEY_NO_CHANGE = 255
} ITC_PLESSEY_DECODING;
typedef enum tagPlesseyCheckDigit
{
    ITC_PLESSEY_CHECK_NOTXMIT = 0,       // Default
    ITC_PLESSEY_CHECK_XMIT = 1,
    ITC_PLESSEY_CHECK_NO_CHANGE = 255
} ITC_PLESSEY_CHECK_DIGIT;
#define ITC_BC_LENGTH_NO_CHANGE 255. This definition can be used when the bar
code length does not require any change.
```

IS9CConfig::GetStandard2of5

This function retrieves the current Standard 2 of 5 settings.

Syntax

```
HRESULT IS9CConfig::GetStandard2of5 (
    ITC_STANDARD2OF5_DECODING* peDecode,
    ITC_STANDARD2OF5_FORMAT* peFormat,
    ITC_STANDARD2OF5_CHECK_DIGIT* peCheck,
    ITC_BARCODE_LENGTH_ID* peLengthId, BYTE rgbLengthBuff,
    DWORD* pdwNumBytes );
```

Parameters

<i>peDecode</i>	[out]	Pointer to the ITC_STANDARD2OF5_DECODING location to receive the decoding for Standard 2 of 5 symbology.
<i>peFormat</i>	[out]	Pointer to the ITC_STANDARD2OF5_FORMAT location to receive the format.
<i>peCheck</i>	[out]	Pointer to the ITC_STANDARD2OF5_CHECK_DIGIT location to receive Modulo 10 check digit.
<i>peLengthId</i>	[out]	Pointer to the ITC_BARCODE_LENGTH_ID location to receive an indicator of either ITC_BARCODE_LENGTH or ITC_BARCODE_FIXED_LENGTH.
<i>rgbLengthBuff</i>	[out,size_is(3)]	An array of bytes to receives 1 byte of data for ITC_BARCODE_LENGTH, or 3 bytes of data for ITC_BARCODE_FIXED_LENGTH.
<i>pdwNumBytes</i>	[out]	Pointer to the DWORD location to receive a number indicating number of bytes in <i>rgbLengthBuff</i> : 1 byte for ITC_BARCODE_LENGTH or 3 bytes for ITC_BARCODE_FIXED_LENGTH.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig::SetStandard2of5

This function updates the Standard 2 of 5 settings with new values.

Syntax

```
HRESULT IS9CConfig::SetStandard2of5 (
    ITC_STANDARD2OF5_DECODING eDecode, ITC_STANDARD2OF5_FORMAT
    eFormat, ITC_STANDARD2OF5_CHECK_DIGIT eCheck,
    ITC_BARCODE_LENGTH_ID eLengthId, BYTE rgbLengthBuff[],
    DWORD dwNumBytes );
```

Parameters

<i>eDecode</i>	[in]	Identifies the decoding for Standard 2 of 5 symbology.
<i>eFormat</i>	[in]	Identifies the format.
<i>eCheck</i>	[in]	Identifies the Modulo 10 check digit.
<i>eLengthId</i>	[in]	Use ITC_BARCODE_LENGTH_NO_CHANGE to indicate no change for bar code length. Use ITC_BARCODE_LENGTH for any length and minimum length, and set <i>rgbLengthBuff</i> [0] to a valid length value. Use ITC_BARCODE_FIXED_LENGTH to compose 1 or 2 or 3 fixed lengths, and set 3 bytes: <i>rgbLengthBuff</i> [0], <i>rgbLengthBuff</i> [1], <i>rgbLengthBuff</i> [2] with valid values.
<i>rgbLengthBuff</i>	[in, size_is(dwNumBytes)]	An array of bytes containing bar code lengths when <i>eLengthId</i> = ITC_BARCODE_LENGTH or ITC_BARCODE_FIXED_LENGTH.
<i>dwNumBytes</i>	[in]	Number of bytes in <i>rgbLengthBuff</i> []. For S9C, this value is 1 when <i>eLengthId</i> = ITC_BARCODE_LENGTH or 3 when <i>eLengthId</i> = ITC_BARCODE_FIXED_LENGTH.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the `IS9CConfig::GetStandard2of5` and `IS9CConfig::SetStandard2of5` functions.

Standard 2 of 5 Default Settings

Parameter	Default	Valid Range
Decoding	Not Active	ITC_STANDARD2OF5_DECODING
Format	Identicon (6 Start/Stop bars)	ITC_STANDARD2OF5_FORMAT
Check Digit	Not Used	ITC_STANDARD2OF5_CHECK_DIGIT
Bar Code Length	Minimum Length = 6	0x00-0xFE ITC_BC_LENGTH_NO_CHANGE

Standard 2 of 5 Enumerations

```
typedef enum tagStandard2of5Decoding
{
    ITC_STANDARD2OF5_NOTACTIVE = 0,    // Default
    ITC_STANDARD2OF5_ACTIVE = 1,
    ITC_STANDARD2OF5_NO_CHANGE = 255
} ITC_STANDARD2OF5_DECODING;
typedef enum tagStandard2of5Format
{
    ITC_STANDARD2OF5_FORMAT_IDENTICON, // Default
    ITC_STANDARD2OF5_FORMAT_COMPUTER_IDENTICS,
    ITC_STANDARD2OF5_FORMAT_NO_CHANGE = 255
} ITC_STANDARD2OF5_FORMAT;
typedef enum tagStandard2of5CheckDigit
{
    ITC_STANDARD2OF5_CHECK_NOTUSED,    // Default
    ITC_STANDARD2OF5_CHECK_XMIT,
    ITC_STANDARD2OF5_CHECK_NOTXMIT,
    ITC_STANDARD2OF5_CHECK_NO_CHANGE = 255
} ITC_STANDARD2OF5_CHECK_DIGIT;
typedef enum tagBarcodeLengthId
{
    ITC_BARCODE_LENGTH = 0,
    ITC_BARCODE_FIXED_LENGTH,
    ITC_BARCODE_LENGTH_NO_CHANGE = 255
} ITC_BARCODE_LENGTH_ID;
```

IS9CConfig::GetTelepen

This function retrieves the current Telepen settings.

Syntax

```
HRESULT IS9CConfig::GetTelepen( ITC_TELEPEN_DECODING*  
    peDecode, ITC_TELEPEN_FORMAT* peFormat );
```

Parameters

<i>peDecode</i>	[out]	Pointer to the ITC_TELEPEN_DECODING location to receive the decoding for TELEPEN symbology.
<i>peFormat</i>	[out]	Pointer to the ITC_TELEPEN_FORMAT location to receive the format.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig::SetTelepen

This function updates the Telepen settings with new values.

Syntax

```
HRESULT IS9CConfig::SetTelepen( ITC_TELEPEN_DECODING*  
eDecode, ITC_TELEPEN_FORMAT* eFormat );
```

Parameters

eDecode [in] Identifies the decoding for Telepen symbology.

eFormat [in] Identifies the format.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the IS9CConfig::GetTelepen and IS9CConfig::SetTelepen functions.

Telepen Default Settings

Parameter	Default	Valid Range
Decoding	Not Active	ITC_TELEPEN_DECODING
Format	ASCII	ITC_TELEPEN_FORMAT

Telepen Enumerations

```
typedef enum tagTelepenDecoding
{
    ITC_TELEPEN_NOTACTIVE = 0,           // Default
    ITC_TELEPEN_ACTIVE = 1,
    ITC_TELEPEN_NO_CHANGE = 255
} ITC_TELEPEN_DECODING;
typedef enum tagTelepenDecoding
{
    ITC_TELEPEN_FORMAT_ASCII,           // Default
    ITC_TELEPEN_FORMAT_NUMERIC,
    ITC_TELEPEN_FORMAT_NO_CHANGE = 255
} ITC_TELEPEN_FORMAT;
```

IS9CConfig::GetUpcEan

This function retrieves the current UPC/EAN settings.

Syntax

```
HRESULT IS9CConfig::GetUpcEan( ITC_UPCEAN_DECODING*
upceanDecode, ITC_UPCA_SELECT* upcASelect,
ITC_UPCE_SELECT* upcESelect, ITC_EAN8_SELECT* ean8Select,
ITC_EAN13_SELECT* ean13Select, ITC_UPCEAN_ADDON_DIGITS*
upcAddOnDigits, ITC_UPCEAN_ADDON_TWO* upcAddOn2,
ITC_UPCEAN_ADDON_FIVE* upcAddOn5, ITC_UPCA_CHECK_DIGIT*
upcACheck, ITC_UPCE_CHECK_DIGIT* upcECheck,
ITC_EAN8_CHECK_DIGIT* ean8Check, ITC_EAN13_CHECK_DIGIT*
ean13Check, ITC_UPCA_NUMBER_SYSTEM* upcANumSystem,
ITC_UPCE_NUMBER_SYSTEM* upcENumSystem, ITC_UPCA_REENCODE*
upcAReencode, ITC_UPCE_REENCODE* upcEReencode,
ITC_EAN8_REENCODE* ean8Reencode );
```

Parameters

<i>upceanDecode</i>	[out]	Pointer to the ITC_UPCEAN_DECODING location to receive the decoding for UPC/EAN symbology.
<i>upcASelect</i>	[out]	Pointer to the ITC_UPCA_SELECT location to receive the UPC-A selection state.
<i>upcESelect</i>	[out]	Pointer to the ITC_UPCE_SELECT location to receive the UPC-E selection state.
<i>ean8Select</i>	[out]	Pointer to the ITC_EAN8_SELECT location to receive the EAN-8 selection state.
<i>ean13Select</i>	[out]	Pointer to the ITC_EAN13_SELECT location to receive the EAN-13 selection state.
<i>upcAddOnDigits</i>	[out]	Pointer to the ITC_UPCEAN_ADDON_DIGITS location to receive the add-on digits.
<i>upcAddOn2</i>	[out]	Pointer to the ITC_UPCEAN_ADDON_TWO location to receive the add-on 2 digits.
<i>upcAddOn5</i>	[out]	Pointer to the ITC_UPCEAN_ADDON_FIVE location to receive the add-on 5 digits.
<i>upcACheck</i>	[out]	Pointer to the ITC_UPCA_CHECK_DIGIT location to receive the UPC-A check digit.
<i>upcECheck</i>	[out]	Pointer to the ITC_UPCE_CHECK_DIGIT location to receive the UPC-E check digit.
<i>ean8Check</i>	[out]	Pointer to the ITC_EAN8_CHECK_DIGIT location to receive the EAN-8 check digit.
<i>ean13Check</i>	[out]	Pointer to the ITC_EAN13_CHECK_DIGIT location to receive the EAN-13 check digit.
<i>upcANumSystem</i>	[out]	Pointer to the ITC_UPCA_NUMBER_SYSTEM location to receive the UPC-A number system.

<i>upcENumSystem</i>	[out]	Pointer to the ITC_UPCE_NUMBER_SYSTEM location to receive the UPC-E number system.
<i>upcAReencode</i>	[out]	Pointer to the ITC_UPCA_REENCODE location to receive the UPC-A reencoding.
<i>upcEReencode</i>	[out]	Pointer to the ITC_UPCE_REENCODE location to receive the UPC-E reencoding.
<i>ean8Reencode</i>	[out]	Pointer to the ITC_EAN8_REENCODE location to receive the EAN-8 reencoding.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig::SetUpcEan

This function updates the UPC/EAN settings with new values.

Syntax

```
HRESULT IS9CConfig::SetUpcEan( ITC_UPCEAN_DECODING
upceanDecode, ITC_UPCA_SELECT upcASelect, ITC_UPCE_SELECT
upcESelect, ITC_EAN8_SELECT ean8Select, ITC_EAN13_SELECT
ean13Select, ITC_UPCEAN_ADDON_DIGITS upcAddOnDigits,
ITC_UPCEAN_ADDON_TWO upcAddOn2, ITC_UPCEAN_ADDON_FIVE
upcAddOn5, ITC_UPCA_CHECK_DIGIT upcACheck,
ITC_UPCE_CHECK_DIGIT upcECheck, ITC_EAN8_CHECK_DIGIT
ean8Check, ITC_EAN13_CHECK_DIGIT ean13Check,
ITC_UPCA_NUMBER_SYSTEM upcANumSystem,
ITC_UPCE_NUMBER_SYSTEM upcENumSystem, ITC_UPCA_REENCODE
upcAReencode, ITC_UPCE_REENCODE upcEReencode,
ITC_EAN8_REENCODE ean8Reencode );
```

Parameters

<i>upceanDecode</i>	[in]	Identifies the decoding for UPC/EAN symbology.
<i>upcASelect</i>	[in]	Identifies the UPC-A selection state.
<i>upcESelect</i>	[in]	Identifies the UPC-E selection state.
<i>ean8Select</i>	[in]	Identifies the EAN-8 selection state.
<i>ean13Select</i>	[in]	Identifies the EAN-13 selection state.
<i>upcAddOnDigits</i>	[in]	Identifies the Add-on digits.
<i>upcAddOn2</i>	[in]	Identifies the Add-on 2 digits.
<i>upcAddOn5</i>	[in]	Identifies the Add-on 5 digits.
<i>upcACheck</i>	[in]	Identifies the UPC-A check digit.
<i>upcECheck</i>	[in]	Identifies the UPC-E check digit.
<i>ean8Check</i>	[in]	Identifies the EAN-8 check digit.
<i>ean13Check</i>	[in]	Identifies the EAN-13 check digit.
<i>upcANumSystem</i>	[in]	Identifies the UPC-A number system.
<i>upcENumSystem</i>	[in]	Identifies the UPC-E number system.
<i>upcAReencode</i>	[in]	Identifies the UPC-A reencoding.
<i>upcEReencode</i>	[in]	Identifies the UPC-E reencoding.
<i>ean8Reencode</i>	[in]	Identifies the EAN-8 reencoding.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the `IS9CConfig::GetUpcEan` and `IS9CConfig::SetUpcEan` functions.

UPC/EAN Default Settings

Parameter	Default	Valid Range
Decoding	ITC_UPCEAN_NO_CHANGE	This parameter is no longer used, set it to this value.
UPC-A	Active	ITC_UPCA_SELECT
UPC-E	Active	ITC_UPCE_SELECT
EAN-8	Active	ITC_EAN8_SELECT
EAN-13	Active	ITC_EAN13_SELECT
Add On Digits	Not Required	ITC_UPCEAN_ADDON_DIGITS
Add On 2 Digits	Not Active	ITC_UPCEAN_ADDON_TWO
Add On 5 Digits	Not Active	ITC_UPCEAN_ADDON_FIVE
UPC-A Check Digit	Transmitted	ITC_UPCA_CHECK_DIGIT
UPC-E Check Digit	Transmitted	ITC_UPCE_CHECK_DIGIT
EAN-8 Check Digit	Transmitted	ITC_EAN8_CHECK_DIGIT
EAN-13 Check Digit	Transmitted	ITC_EAN13_CHECK_DIGIT
UPC-A Number System	Transmitted	ITC_UPCA_NUMBER_SYSTEM
UPC-E Number System	Transmitted	ITC_UPCE_NUMBER_SYSTEM
Reencode UPC-A	UPC-A transmitted as EAN-13	ITC_UPCA_REENCODE
Reencode UPC-E	UPC-E transmitted as UPC-E	ITC_UPCE_REENCODE
Reencode EAN-8	EAN-8 transmitted as EAN-8	ITC_EAN8_REENCODE

UPC/EAN Enumerations

```
typedef enum tagUpcEanDecoding
{
    ITC_UPCEAN_NOTACTIVE = 0,
    ITC_UPCEAN_ACTIVE = 1,                // Default
    ITC_UPCEAN_NO_CHANGE = 255
} ITC_UPCEAN_DECODING;
typedef enum tagUpcASelect
{
    ITC_UPCA_DEACTIVATE,
    ITC_UPCA_ACTIVATE,                    // Default
    ITC_UPCA_NO_CHANGE = 255
} ITC_UPCA_SELECT;
typedef enum tagUpcESelect
{
    ITC_UPCE_DEACTIVATE,
    ITC_UPCE_ACTIVATE,                    // Default
    ITC_UPCE_NO_CHANGE = 255
} ITC_UPCE_SELECT;
typedef enum tagEan8Select
{
    ITC_EAN8_DEACTIVATE,
    ITC_EAN8_ACTIVATE,                    // Default
    ITC_EAN8_NO_CHANGE = 255
}
```



```

} ITC_EAN8_SELECT;
typedef enum tagEan13Select
{
    ITC_EAN13_DEACTIVATE,
    ITC_EAN13_ACTIVATE,                // Default
    ITC_EAN13_NO_CHANGE = 255
} ITC_EAN13_SELECT;
typedef enum tagUpcEanAddonDigits
{
    ITC_UPCEAN_ADDON_NOT_REQUIRED,    // Default
    ITC_UPCEAN_ADDON_REQUIRED,
    ITC_UPCEAN_ADDON_NO_CHANGE = 255
} ITC_UPCEAN_ADDON_DIGITS;
typedef enum tagUpcEanAddonTwo
{
    ITC_UPCEAN_ADDON_TWO_NOTACTIVE = 0, // Default
    ITC_UPCEAN_ADDON_TWO_ACTIVE = 1,
    ITC_UPCEAN_ADDON_TWO_NO_CHANGE = 255
} ITC_UPCEAN_ADDON_TWO;
typedef enum tagUpcEanAddonFive
{
    ITC_UPCEAN_ADDON_FIVE_NOTACTIVE = 0, // Default
    ITC_UPCEAN_ADDON_FIVE_ACTIVE = 1,
    ITC_UPCEAN_ADDON_FIVE_NO_CHANGE = 255
} ITC_UPCEAN_ADDON_FIVE;
typedef enum tagUpcACheckDigit
{
    ITC_UPCA_CHECK_NOTXMIT = 0,
    ITC_UPCA_CHECK_XMIT = 1,          // Default
    ITC_UPCA_CHECK_NO_CHANGE = 255
} ITC_UPCA_CHECK_DIGIT;
typedef enum tagUpcECheckDigit
{
    ITC_UPCE_CHECK_NOTXMIT = 0,
    ITC_UPCE_CHECK_XMIT = 1,          // Default
    ITC_UPCE_CHECK_NO_CHANGE = 255
} ITC_UPCE_CHECK_DIGIT;
typedef enum tagEan8CheckDigit
{
    ITC_EAN8_CHECK_NOTXMIT = 0,
    ITC_EAN8_CHECK_XMIT = 1,          // Default
    ITC_EAN8_CHECK_NO_CHANGE = 255
} ITC_EAN8_CHECK_DIGIT;
typedef enum tagEan13CheckDigit
{
    ITC_EAN13_CHECK_NOTXMIT = 0,
    ITC_EAN13_CHECK_XMIT = 1,          // Default
    ITC_EAN13_CHECK_NO_CHANGE = 255
} ITC_EAN13_CHECK_DIGIT;
typedef enum tagUpcANumberSystem
{
    ITC_UPCA_NUM_SYS_NOTXMIT = 0,
    ITC_UPCA_NUM_SYS_XMIT = 1,          // Default
    ITC_UPCA_NUM_SYS_NO_CHANGE = 255
} ITC_UPCA_NUMBER_SYSTEM;
typedef enum tagUpcENumberSystem
{
    ITC_UPCE_NUM_SYS_NOTXMIT = 0,
    ITC_UPCE_NUM_SYS_XMIT = 1,          // Default

```

```
ITC_UPCE_NUM_SYS_NO_CHANGE = 255
} ITC_UPCE_NUMBER_SYSTEM;
typedef enum tagUpcAReencode
{
    ITC_UPCA_XMIT_AS_EAN13,           // Default
    ITC_UPCA_XMIT_AS_UPCA,
    ITC_UPCA_XMIT_NO_CHANGE = 255
} ITC_UPCA_REENCODE;
typedef enum tagUpcEReencode
{
    ITC_UPCE_XMIT_AS_UPCE,           // Default
    ITC_UPCE_XMIT_AS_UPCA,
    ITC_UPCE_XMIT_NO_CHANGE = 255
} ITC_UPCE_REENCODE;
typedef enum tagEan8Reencode
{
    ITC_EAN8_XMIT_AS_EAN8,           //Default
    ITC_EAN8_XMIT_AS_EAN13,
    ITC_EAN8_XMIT_NO_CHANGE = 255
} ITC_EAN8_REENCODE;
```

IS9CConfig2 Functions

This interface is derived from the IS9CConfig interface and provides additional methods that can be used to set and retrieve the 700 Series Computer's bar code configuration. All supported symbologies are initialized to their defaults when the S9C firmware is loaded.

GET/SET functions use enumerations as their parameters. In most enumerations, there is an enumerator `xx_NO_CHANGE` (such as `ITC_CODE39_NO_CHANGE`), where `xx` refers to a particular enumeration. This enumerator can be used during a call to a SET to indicate that no change is to be made to that particular parameter. This prevents the called function from having to format the same S9C command and send it down to the scanner.

To specify a bar code length of “any length,” use a value of “0” for the bar code length argument.

IS9CConfig2 functions are the following. IS9CCONFIG.H is the header file and ITCUUID.LIB contains the IID_IADC Interface GUID value used to obtain the interface.

- IS9CConfig2::GetCode11 (*page 222*)
- IS9CConfig2::SetCode11 (*page 223*)
- IS9CConfig2::GetCustomSymIds (*page 225*)
- IS9CConfig2::SetCustomSymIds (*page 226*)
- IS9CConfig2::GetGlobalAmble (*page 229*)
- IS9CConfig2::SetGlobalAmble (*page 230*)
- IS9CConfig2::GetPDF417Ext (*page 232*)
- IS9CConfig2::SetPDF417Ext (*page 233*)
- IS9CConfig2::GetSymIdXmit (*page 235*)
- IS9CConfig2::SetSymIdXmit (*page 236*)

IS9CConfig2::GetCode11

This function retrieves the current settings for Code 11.

Syntax

```
HRESULT GetCode11( ITC_CODE11_DECODING* peDecode,
ITC_CODE11_CHECK_DIGIT* peCheck,
ITC_CODE11_CHECK_VERIFICATION* peVer );
```

Parameters

<i>peDecode</i>	[out]	Pointer to ITC_CODE11_DECODING location to receive Code 11 decoding.
<i>peCheck</i>	[out]	Pointer to ITC_CODE11_CHECK_DIGIT location to receive the check digit option.
<i>peVer</i>	[out]	Pointer to ITC_CODE11_CHECK_VERIFICATION location to receive the check verification option.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig2::SetCode11

This function updates the current setting of Code 11 symbology.

Syntax

```
HRESULT SetCode11( ITC_CODE11_DECODING eDecode,  
ITC_CODE11_CHECK_DIGIT eCheck,  
ITC_CODE11_CHECK_VERIFICATION eVer );
```

Parameters

eDecode [in] An enumeration that identifies decoding option for Code 11.

eCheck [in] An enumeration that identifies the check digit option.

eVer [in] An enumeration that identifies check verification option.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings and enumerations apply to both the IS9CConfig2::GetCode11 and IS9CConfig2::SetCode11 functions.

Code 11 Default Settings

Parameter	Default	Valid Range
Decoding	Not Active	ITC_CODE11_DECODING
Check Verification	1 Digit	ITC_CODE11_CHECK_VERIFICATION
Check Digit	Enable	ITC_CODE11_CHECK_DIGIT

Code 11 Enumerations

```
typedef enum tagCode11Decoding
{
    ITC_CODE11_NOTACTIVE = 0,
    ITC_CODE11_ACTIVE = 1,           // Default
    ITC_CODE11_NO_CHANGE = 255
} ITC_CODE11_DECODING;
typedef enum tagCode11CheckVerification
{
    ITC_CODE11_CHK_VERIFY_ONEDIGIT = 1,
    ITC_CODE11_CHK_VERIFY_TWODIGIT = 2, // Default
    ITC_CODE11_CHK_VERIFY_NO_CHANGE = 255
} ITC_CODE11_CHECK_VERIFICATION;
typedef enum tagCode11CheckDigit
{
    ITC_CODE11_CHECK_NOTXMIT = 0,     // Default
    ITC_CODE11_CHECK_XMIT = 1,
    ITC_CODE11_CHECK_NO_CHANGE = 255
} ITC_CODE11_CHECK_DIGIT;
```

IS9CConfig2::GetCustomSymIds

This function retrieves all the custom symbology identifiers defined for the currently supported symbologies. *This is not supported when using an imager on the 700 Series Computer.*

Syntax

```
HRESULT GetCustomSymIds( ITC_CUST_SYM_ID_PAIR*
pStructSymIdPair, DWORD dwMaxNumElement, DWORD*
pdwNumElement );
```

Parameters

<i>pStructSymIdPair</i>	[out]	Pointer to ITC_CUST_SYM_ID_PAIR location to receive the current defined symbology identifiers for the supported symbologies. The caller must preallocate this buffer with <i>dwMaxNumElement</i> elements.
<i>dwMaxNumElement</i>	[in]	Maximum number of elements allocated for the <i>pStructSymIdPair</i> buffer which should always be equal to the last defined enumeration constant + 1 of the enumeration ITC_CUSTOM_ID. In this case, it is ITC_CUSTOMID_LAST_ELEMENT.
<i>pdwNumElement</i>	[out]	Pointer to DWORD location to receive the actual number of elements returned in the <i>pStructSymIdPair</i> buffer, which should be the same as <i>dwMaxNumElement</i> .

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

- Custom Identifier Assignments (*page 227*)
- Custom Identifier Example (*page 228*)
- Custom Identifier Default Settings (*page 228*)

IS9CConfig2::SetCustomSymIds

This function updates the symbology identifiers (any ASCII values) for the currently supported symbologies. *This is not supported when using an imager on the 700 Series Computer.*

Syntax

```
HRESULT SetCustomSymIds( ITC_CUST_SYM_ID_PAIR*
    pStructSymIdPair, DWORD dwNumElement );
```

Parameters

<i>pStructSymIdPair</i>	[in]	Pointer to ITC_CUST_SYM_ID_PAIR location, containing the new symbology identifiers for any supported symbologies to update.
<i>dwNumElement</i>	[in]	Identifies the number of symbology identifiers to update in the <i>pStructSymIdPair</i> buffer.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following custom identifier assignments, default settings, and example apply to both the `IS9CConfig2::GetCustomSymId` and `IS9CConfig2::SetCustomSymId` functions.

Custom Identifier Assignments

Each custom identifier is a one byte ASCII value within the range from 0x00 to 0xff. The enumerations in the `ITC_CUSTOM_ID` enumerator can be used as symbology identifications in the `GetCustomSymIds()` and `SetCustomSymIds()` functions.

```
typedef enum tagCustomId
{
ITC_CUSTOMID_CODABAR = 0      Identifies the Codabar symbology
ITC_CUSTOMID_CODE39           Identifies the Code 39 symbology
ITC_CUSTOMID_CODE93           Identifies the Code 93 symbology
ITC_CUSTOMID_CODE128_EAN_128 Identifies the Code 128 symbology
ITC_CUSTOMID_EAN8             Identifies the EAN-8 symbology
ITC_CUSTOMID_EAN13           Identifies the EAN-13 symbology
ITC_CUSTOMID_I2OF5            Identifies the Interleaved 2 of 5 symbology
ITC_CUSTOMID_MATRIX2OF5      Identifies the Matrix 2 of 5 symbology
ITC_CUSTOMID_MSI              Identifies the MSI symbology
ITC_CUSTOMID_PDF417           Identifies the PDF417 symbology
ITC_CUSTOMID_PLESSEY          Identifies the Plessey symbology
ITC_CUSTOMID_CODE2OF5         Identifies the Standard 2 of 5 symbology
ITC_CUSTOMID_TELEPEN          Identifies the Telepen symbology
ITC_CUSTOMID_UPCA             Identifies the UPC-A symbology
ITC_CUSTOMID_UPCE             Identifies the UPC-E symbology
ITC_CUSTOMID_CODE11           Identifies the Code 11 symbology
ITC_CUSTOMID_LAST_ELEMENT     Identifies the last element. Use to preallocate
the buffer on GetCustomSymIds
}ITC_CUSTOM_ID;
typedef struct tagCustSymbIdPair
{
ITC_CUSTOM_ID eSymbology;      Identifies the symbology of interest

BYTE byteId;
    ASCII value (1 byte within the range 0x00 - 0xf)

}ITC_CUST_SYM_ID_PAIR;
```

Custom Identifier Default Settings

Symbology	Default	Valid Range
Codabar	D	0x00-0xFF
Code 11	*	0x00-0xFF
Code 39	*	0x00-0xFF
Code 93	D	0x00-0xFF
Code128/EAN 128	D	0x00-0xFF
EAN-8	0xFF	0x00-0xFF
EAN-13	F	0x00-0xFF
Interleaved 2 of 5	I	0x00-0xFF
Matrix 2 of 5	D	0x00-0xFF
MSI	D	0x00-0xFF
PDF417	*	0x00-0xFF
Plessey	D	0x00-0xFF
Standard 2 of 5	D	0x00-0xFF
Telepen	*	0x00-0xFF
UPC-A	A	0x00-0xFF
UPC-E	E	0x00-0xFF

Custom Identifier Example

The following code segment is an example of updating the UPC-E and UPC-A symbology identifiers with new values, and then retrieving the currently defined symbology identifiers for all the supported symbologies:

```
ITC_CUST_SYM_ID_PAIR oStructSymIdPair [ITC_CUSTOMID_LAST_ELEMENT];
oStructSymIdPair[0].eSymbology = ITC_CUSTOMID_UPCE;
oStructSymIdPair[0].byteId = 0x41; // ASCII char A
oStructSymIdPair[1].eSymbology = ITC_CUSTOMID_UPCA;
oStructSymIdPair[1].byteId = 0x42; // ASCII char B
HRESULT hr = pIS9CConfig2->SetCustomSymIds(&oStructSymIdPair[0], 2);
DWORD dwNum = 0;
HRESULT hr = pIS9CConfig2->GetCustomSymIds(&oStructSymIdPair[0],
ITC_CUSTOMID_LAST_ELEMENT, &dwNum);
```

IS9CConfig2::GetGlobalAmble

This retrieves the scanner's current preamble or postamble setting.

Syntax

```
HRESULT GetGlobalAmble( ITC_GLOBAL_AMBLE_ID eAmbleId, BYTE
  rgbBuffer[], DWORD dwBufferSize, DWORD* pdwBufferSize );
```

Parameters

<i>eAmbleId</i>	[in]	An enumeration of type ITC_GLOBAL_AMBLE_ID identifies whether the preamble or postamble setting is to be retrieved. Only one setting can be queried at a time.
<i>rgbBuffer</i>	[in]	Contains the buffer for the postamble or preamble setting to be queried.
<i>dwBufferSize</i>	[in]	The maximum number of bytes that <i>rgbBuffer</i> can store. Must be at least ITC_GLOBAL_AMBLE_MAX_CHARS bytes.
<i>pdwBufferSize</i>	[out]	A pointer to DWORD location to store the actual number of returned bytes in <i>rgbBuffer</i> .

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig2::SetGlobalAmble

This function updates the scanner's current preamble or postamble setting depending on the input parameters.

Syntax

```
HRESULT SetGlobalAmble( ITC_GLOBAL_AMBLE_ID eAmbleId, BYTE  
rgbBuffer[], DWORD dwBufferSize );
```

Parameters

- | | |
|---------------------|---|
| <i>eAmbleId</i> | [in] An enumeration of type ITC_GLOBAL_AMBLE_ID identifies whether the preamble or postamble setting is to be updated. Only one setting can be updated at a time. |
| <i>rgbBuffer</i> | [in] Contains the buffer for the postamble or preamble setting to be updated. |
| <i>dwBufferSize</i> | [in] Identifies number of bytes in <i>rgbBuffer</i> . |

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following defaults apply to both the IS9CConfig2::GetGlobalAmble and IS9CConfig2::SetGlobalAmble functions.

Postamble and Preamble Defaults

Parameter	Default	Valid Range
Preamble	Null	0 to 20 ASCII characters
Postamble	Null	0 to 20 ASCII characters

IS9CConfig2::GetPDF417Ext

This function is an extended function for retrieving the PDF417 settings not included in the IS9CConfig::GetPDF417.

Syntax

```
HRESULT GetPDF417Ext( ITC_MICRO_PDF417_DECODING* peDecode,  
ITC_MICRO_PDF417_CODE128_EMULATION* peCode128 );
```

Parameters

peDecode [out] Pointer to ITC_MICRO_PDF417_DECODING location to receive the Micro PDF417 decoding.

peCode128 [out] Pointer to ITC_MICRO_PDF417_CODE128_EMULATION* location to receive the Micro PDF417 Code 128 emulation option.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig2::SetPDF417Ext

This function is an extended function for updating the additional PDF417 settings not included in IS9CConfig::SetPDF417.

Syntax

```
HRESULT SetPDF417Ext( ITC_MICRO_PDF417_DECODING eDecode,  
ITC_MICRO_PDF417_CODE128_EMULATION eCode128 );
```

Parameters

- eDecode* [in] An enumeration that identifies decoding option for the Micro PDF417.
- eCode128* [in] An enumeration that identifies the Code 128 emulation option for the Micro PDF417.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following default settings apply to both the IS9CConfig2::GetPDF417Ext and IS9CConfig2::SetPDF417Ext functions.

PDF417 Extended: Micro PDF417 Default Settings

Parameter	Default	Valid Range
Decoding	Not Active	ITC_MICRO_PDF417_DECODING
Code 128 Emulation	Not Active	ITC_MICRO_PDF417_CODE128_EMULATION
<i>* These are Micro PDF417 parameters.</i>		

IS9CConfig2::GetSymIdXmit

This function retrieves the current symbology ID transmission option as described on the next page.

Syntax

```
HRESULT GetSymIdXmit( ITC_SYMBOLGY_ID_XMIT* peSymIdXmit
);
```

Parameters

<i>peSymIdXmit</i>	[out]	Pointer to ITC_SYMBOLGY_ID_XMIT location to receive the current symbology identifier transmission option.
--------------------	-------	---

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.

IS9CConfig2::SetSymIdXmit

This updates the symbology ID transmission option shown next page.

Syntax

```
HRESULT SetSymIdXmit( ITC_SYMBOLGY_ID_XMIT eSymIdXmit );
```

Parameters

eSymIdXmit [in] Identifies the symbology identifier transmission option to update.

Return Values

HRESULT that indicates success or failure.

Remarks

None.

See Also

None.



Note: The following information applies to both the IS9CConfig2::GetSymIdXmit and IS9CConfig2::SetSymIdXmit functions.

Symbology ID Transmission Option

The symbology identifier (or code mark) concept provides a standardized way for a device receiving data from a bar code reader to differentiate between the symbologies.

The following symbology ID transmission option specifies whether or not the symbology ID is transmitted as part of the scanned bar code label to all the connected data collection applications. Options for transmission are: do not transmit, transmit the standard AIM identifiers, or transmit the one byte custom defined identifiers. AIM and custom identifiers cannot be selected to be transmitted at the same time; only the last selected option will be active.

```
typedef enum tagSymbologyIdXmit
{
    ITC_ID_XMIT_DISABLE = 0    Symbology identifier will not be transmitted as part of the
                               label. This is the default setting.

    ITC_ID_XMIT_CUSTOM = 1     Activate custom symbology identifier transmission for all
                               symbologies. Example of the transmitted label:
                               [preamble] [Custom ID] <data> [postamble]

    ITC_ID_XMIT_AIM = 2        Activate AIM symbology identifier transmission for all
                               symbologies. Example of the transmitted label:
                               [preamble] [AIM symbology ID] <data> [postamble]

} ITC_SYMBOLGY_ID_XMIT;
```

IS9CConfig3 Functions

The IS9CConfig3 interface provides generic methods for retrieving and setting configuration using ISCP commands.

ISCP Commands

An ISCP Command is composed of three or more bytes formatted as <SG><FID><parameters> where:

- *SG* Setup group.
- *FID* Function ID.
- *parameters* One or more configuration value bytes depending on the configuration.

ISCP commands include the following:

Imager Settings

This dictates the start and end column positions for the image dimension.

<u>SG</u>	<u>FID</u>	<u>Parameter</u>	<u>Description</u>
0x7B	80	Value [0..639]	Start column position.
0x7B	81	Value [0..639]	End column position.

Trigger Settings

This sets the duration of the aiming beam before acquiring images to be decoded.

<u>SG</u>	<u>FID</u>	<u>Parameter</u>	<u>Description</u>
0x70	81	Value [0..65535]	Number of milliseconds.

QRCode Symbology

This enables or disables the QRCode symbology.

<u>SG</u>	<u>FID</u>	<u>Parameter</u>	<u>Description</u>
0x55	40	0	Disable this symbology.
0x55	40	1	Enable this symbology.

Data Matrix Symbology

This enables or disables the Data Matrix symbology.

<u>SG</u>	<u>FID</u>	<u>Parameter</u>	<u>Description</u>
0x54	40	0	Disable this symbology.
0x54	40	1	Enable this symbology.

MaxiCode Symbology

This enables or disables the MaxiCode symbology.

<u>SG</u>	<u>FID</u>	<u>Parameter</u>	<u>Description</u>
0x52	40	0	Disable this symbology.
0x52	40	1	Enable this symbology.

ISCP::GetConfig

This retrieves configurations using the ISCP commands format.

Syntax

```
HRESULT ISCPGetConfig( BYTE rgbCommandBuff[], DWORD
dwCommandBuffSize, BYTE rgbReplyBuff[], DWORD
dwReplyBuffMaxSize, DWORD *pdwReplyBuffSize );
```

Parameters

<i>rgbCommandBuff</i>	[in, size_is]	Contains ISCP commands in array of bytes.
<i>dwCommandBuffSize</i>	[in]	Number of bytes in <i>rgbCommandBuff</i> .
<i>rgbReplyBuff</i>	[in, out, size_is]	Results of query in array of bytes.
<i>dwReplyBuffMaxSize</i>	[in]	Maximum size of <i>rgbReplyBuff</i> .
<i>pdwReplyBuffSize</i>	[in, out]	Number of bytes placed in <i>rgbReplyBuff</i> .

Return Values

None.

Remarks

None.

See Also

None.

ISCP::SetConfig

This updates configurations using the ISCP commands format.

Syntax

```
HRESULT ISCPSetConfig( BYTE rgbCommandBuff[], DWORD
dwCommandBuffSize, BYTE rgbReplyBuff[], DWORD
dwReplyBuffMaxSize, DWORD *pdwReplyBuffSize );
```

Parameters

<i>rgbCommandBuff</i>	[in, size_is]	Contains ISCP commands in array of bytes.
<i>dwCommandBuffSize</i>	[in]	Number of bytes in <i>rgbCommandBuff</i> .
<i>rgbReplyBuff</i>	[in, out, size_is]	Results of request in array of bytes.
<i>dwReplyBuffMaxSize</i>	[in]	Maximum size of <i>rgbReplyBuff</i> .
<i>pdwReplyBuffSize</i>	[in, out]	Number of bytes placed in <i>rgbReplyBuff</i> .

Return Values

None.

Remarks

None.

See Also

None.

AIM Symbology ID Defaults

Refer to the official AIM documentation on symbology identifiers for full information on the different processing options supported.

Symbology	ID Character	Modifier Characters
Codabar	F	0 Standard Codabar symbol. No special processing. 1 ABC Codabar (American Blood commission) concatenate/message append performed. 2 Reader has validated the check character. 4 Reader has stripped the check character before transmission.
Code 11	H	0 Single modulo 11 check character validated and transmitted. 1 Two modulo 11 check characters validated and transmitted. 3 Check characters validated but not transmitted.
Code 39	A	0 No check character validation nor full ASCII processing. All data transmitted as decoded. 1 Modulo 43 check character validated and transmitted. 3 Modulo 43 check character validated but not transmitted. 4 Full ASCII character conversion performed. No check character validation. 5 Full ASCII character conversion performed. Modulo 43 check character validated and transmitted. 7 Full ASCII character conversion performed. Modulo 43 check character validated but not transmitted.
Code 93	G	0 No options specified. Always transmit 0.
Code128	C	0 Standard data packet. No FNC1 in first or second symbol character position after start character. 1 EAN/UCC-128 data packet. FNC1 in first symbol character position after start character. 2 FNC1 in second symbol character position after start character. 4 Concatenation according to International Society for Blood Transfusion specifications was performed. Concatenated data follows.
Interleaved 2 of 5	I	0 No check character validation. 1 Modulo 10 symbol check character validated and transmitted 3 Modulo 10 symbol check character validated but not transmitted.
Matrix 2 of 5	X	0–F For symbologies or symbology options not listed, a code character with the value 0-F may be assigned by the decoder manufacturer to identify those symbologies and options implemented in the reader.
MSI	M	0 Modulo 10 symbol check character validated and transmitted. 1 Modulo 10 symbol check character validated but not transmitted.

Symbology (continued)	ID Character	Modifier Characters
PDF417/ Micro PDF417	L	0 Reader set to conform with protocol defined in 1994 PDF417 specifications. 1 Reader set to follow protocol of ENV 12925 for Extended Channel Interpretation (all data characters 92 doubled). 2 Reader set to follow protocol of ENV 12925 for Basic Channel Interpretation (data characters 92 are not doubled). 3 Code 128 emulation: implied FNC1 in first position. 4 Code 128 emulation: implied FNC1 after initial letter or pair of digits. 5 Code 128 emulation: no implied FNC1.
Plessey	P	0 No options specified. Always transmit 0.
Standard 2 of 5 (2-bar start/stop)	R	0 No check character validation. 1 Modulo 7 check character validated and transmitted. 3 Modulo 7 check character validated but not transmitted.
Standard 2 of 5 (3-bar start/stop)	S	0 No options specified. Always transmit 0.
Telepen	B	0 Full ASCII mode 1 Double density numeric only mode 2 Double density numeric followed by full ASCII 4 Full ASCII followed by double density numeric
UPC/EAN	E	Consider UPC/EAN symbols with supplements as two separate symbols. The first symbol is the main data packet, and the second symbol is the 2 or 5 digit supplement. Transmit these two symbols separately, each with its own symbology identifier. Provision is made for the option of transmitting both symbols as a single data packet. 0 Standard data packet in full EAN format (13 digits for EAN-13, UPC-A, and UPC-E; does not include add-on data). 1 Two digit add-on data only. 2 Five digit add-on data only. 3 Combined data packet comprising 13 digits from EAN-13, UPC-A, or UPC-E symbol and 2 or 5 digits from add-on symbol. 4 EAN-8 data packet
IMPORTANT: The “symbology_id” character letter <i>must</i> be uppercase for the above definitions.		

IImage Interface

The IImage interface gives the application the capability to acquire images. The image acquired can be either a raw image as captured by the digital camera or it can be normalized. A normalized image is presented the same as if the picture were taken at right angles to the image and at the same distance. The normalized image is commonly used for signature capture applications.

- IImage::ReadSigCapBuffer (page 243)
- IImage::ReadSigCapFile (page 246)
- IImage::ReadImage (page 248)
- IImage::CancelReadImage (page 249)
- IImage::Start (page 250)
- IImage::Stop (page 251)
- IImage::Open (page 252)
- IImage::Close (page 253)

IImage::ReadSigCapBuffer

Syntax

```
HRESULT IImage::ReadSigCapBuffer( ITC_SIGCAP_SPEC
    *pSigCapSpec, ITC_IMAGE_SPEC *pImgBuffer, DWORD
    nMaxBuffSize );
```

Parameters

pSigCapSpec [in] Pointer to the structure that identifies the signature capture region. This structure is defined as follows:

```
typedef struct tagITCSigCapSpec
{
    DWORD dwStructSize;
    INT iAspectRatio;
    INT iOffsetX;
    INT iOffsetY;
    UINT uiWidth;
    UINT uiHeight;
    INT iResolution;
    ITCFileFormat eFormat;
    DWORD eDepth;
} ITC_SIGCAP_SPEC;
```

where:

- *dwStructSize* Size, in bytes, of this struct. This is for version control.
- *iAspectRatio* Ratio of the bar code height (linear bar codes) or row height (2D bar codes) to the narrow element width.
- *iOffsetX* Offset in X direction, relative to barcode center. Positive values are right of the bar code, negative values to the left.

- *iOffsetY* Offset in Y direction, relative to barcode center. Positive values are higher than the bar code, negative values lower.
- *uiWidth* Width of signature capture image region in intelligent bar code units.
- *uiHeight* Height of the signature capture image region in intelligent bar code units.
- *iResolution* Number of pixels per intelligent bar code unit.
- *eFormat* Format of the image buffer returned as follows. Currently, only ITC_FILE_RAW is supported.

```
ITC_FILE_KIM = 0, // Returns data a KIM file
ITC_FILE_TIFF_BIN = 1, // TIFF Binary file
ITC_FILE_TIFF_BIN_GROUP4 = 2, // TIFF Binary Group 4 compressed
ITC_FILE_TIFF_GRAY_SCALE = 3, // TIFF Gray Scale
ITC_FILE_RAW = 4, // Raw image
ITC_FILE_JPEG = 5, // JPEG image
```

- *eDepth* Number of bits per pixel. Currently, only one (monochrome) or eight (gray-scale) are supported.
- pImgBuffer* [out] Pointer to the buffer in which the signature capture image will be put.

```
typedef struct tagITCImageSpec
{
    DWORD dwStructSize;
    LONG biWidth;
    LONG biHeight;
    WORD biBitCount;
    ITC_FILE_FORMAT eFormat;
    DWORD biActualImageSize;
    DWORD biMaxImageBytes;
    BYTE rgbImageData[1];
} ITC_IMAGE_SPEC;
```

where:

- *dwStructSize* Size, in bytes, of this struct. This is for version control.
- *biWidth* The width of each row in pixels.
- *biHeight* The number of rows in the image data.
- *biBitCount* The number of bits per pixel.
- *eFormat* Identifies the image format.
- *biActualImageSize* Total bytes of image data returned.
- *biMaxImageBytes* Maximum bytes that can be stored in *rgbImageData[]*.
- *rgbImageData* Buffer containing the actual data, for example a 640x480 uses a 307200-byte buffer. The array size of this buffer is arbitrary so do *not* use this structure directly to reserve memory. The actual dimension of the buffer is identified by *biMaxImageBytes*.

Return Values

HRESULT identifying success or error. On error, the following codes will be returned:

- **S_OK**
Image successfully returned.
- **ITC_RESULT_ERR_BADREGION_E**
The specified region is not in the image.
- **ITC_RESULT_NO_BC_DECODED_E**
A bar code has not yet been decoded or the last bar code decoded was not a signature capture symbology.
- **ITC_IMGBUFF_TOO_SMALL_E**
pImgBuffer is too small to contain the signature captured image.
- **ITC_INV_PARAMETER_E**
One of the parameters is invalid.
- **S_DEVICE_NOT_OPENED_E**
The device had not been opened.

Remarks

ReadSigCapBuffer() will return the image from the last decoded label with dimensions identified by the calling parameter. This signature capture region must include the signature capture bar code. The supported bar codes for signature capture are: PDF417, Code 128, and Code 39. The caller specifies the width, height, and center of the image to be retrieved. This image is independent of any rotation of the bar code relative to the imager. Thus, if the bar code is decoded with the code itself upside down to the imager, the retrieved image will still be right side up. However, if the specified image is outside the field of view a result code of ITC_RESULT_ERR_BADREGION_E will be returned.

This function uses the dimensions of the last decoded bar code as its coordinate system. Thus, all the parameters describing the image size and position are in units called “Intelligent Bar Code Units.” An Intelligent Bar Code Unit is equivalent to the narrow element width of the bar code.

The dimensions of the resulting image can be calculated with this formula:

```
Resulting Width = Specified Width * Specified Resolution
Resulting Height = Specified Height * Specified Resolution
```

See Also

None.

IIImage::ReadSigCapFile

Syntax

```
HRESULT IIImage::ReadSigCapFile( ITC_SIGCAP_SPEC
    *pSigCapSpec, LPCTSTR pszFileName );
```

Parameters

pSigCapSpec [in] Pointer to the structure that identifies the signature capture region. See ReadSigCapFile (page 243) for a description of this structure.

pszFileName [in] Name of the file in which to copy the image.

Return Values

HRESULT identifying success or error. On error, the following codes will be returned:

- **S_OK**
Image successfully returned.
- **ITC_RESULT_ERR_BADREGION_E**
The specified region is not in the image.
- **ITC_RESULT_NO_BC_DECODED_E**
A bar code has not yet been decoded or the last bar code decoded was not a signature capture symbology.
- **ITC_FILE_OPEN_E**
The file could not be opened.
- **ITC_INV_PARAMETER_E**
One of the parameters is invalid.
- **S_DEVICE_NOT_OPENED_E**
The device had not been opened.

Remarks

ReadSigCapFile() will write the image from the last decoded label with dimensions identified by the calling parameter. If the file already exists, its contents will be overwritten.

This signature capture region must include the signature capture bar code. The supported bar codes for signature capture are: PDF417, Code 128, and Code 39. The caller specifies the width, height, and center of the image to be retrieved. This image is independent of any rotation of the bar code relative to the imager. Thus, if the bar code is decoded with the code itself upside down to the imager, the retrieved image will still be right side up. However, if the specified image is outside the field of view a result code of ITC_RESULT_ERR_BADREGION_E will be returned.

This function uses the dimensions of the last decoded bar code as its coordinate system. Thus, all the parameters describing the image size and position are in units called “Intelligent Bar Code Units”. An Intelligent Bar Code Unit is equivalent to the narrow element width of the bar code.

The dimensions of the resulting image can be calculated with this formula:

Resulting Width = Specified Width * Specified Resolution

Resulting Height = Specified Height * Specified Resolution



Note: This software is based in part on the work of the Independent JPEG Group.

See Also

None.

IIImage::ReadImage

Syntax

```
HRESULT IIImage::ReadImage( ITCFileFormat eFormat, DWORD
nDepth, ITC_IMAGE_SPEC *pImgBuffer, DWORD dwTimeout );
```

Parameters

<i>eFormat</i>	[in]	Format of the image buffer returned as follows. Currently, only ITC_FILE_RAW is supported.
ITC_FILE_KIM =	0,	// Returns data a KIM file
ITC_FILE_TIFF_BIN =	1,	// TIFF Binary file
ITC_FILE_TIFF_BIN_GROUP4 =	2,	// TIFF Binary Group 4 compressed
ITC_FILE_TIFF_GRAY_SCALE =	3,	// TIFF Gray Scale
ITC_FILE_RAW =	4,	// Raw image
ITC_FILE_JPEG =	5,	// JPEG image
<i>nDepth</i>	[in]	Number of bits per pixel. Currently, only eight (gray-scale) are supported.
<i>pImgBuffer</i>	[in/out]	Pointer to a ITC_IMAGE_SPEC structure. Enough memory to hold the entire image must be allocated by the calling application. For a 640x480 image, this is: sizeof(ITC_IMAGE_SPEC) + (640*480).
<i>dwTimeout</i>	[in]	Milliseconds to wait for the image to be returned.

Return Values

HRESULT identifying success or error. On error, these will be returned:

- S_OK Image successfully returned.
- ITC_IMGBUFF_TOO_SMALL_E *pImgBuffer* is too small to contain the signature captured image.
- ITC_TIMEOUT_E Timeout.
- ITC_INV_PARAMETER_E One of the parameters is invalid.
- S_DEVICE_NOT_OPENED_E The device had not been opened.

Remarks

The image is returned in *pImgBuffer* in the caller specified format.

See Also

None.

IImage::CancelReadImage

Syntax

```
HRESULT IImage::CancelReadImage ( );
```

Parameters

None.

Return Values

Status code indicating success or failure as follows:

- S_OK Imager closed.
- S_DEVICE_NOT_OPENED_E The device had not been opened.

Remarks

This function causes a pending image read of IImage::ReadImage() to return immediately with an error status. The purpose of this function is to allow the application to release a thread blocked on the ReadImage() call.

See Also

None.

IIImage::Start

Syntax

```
HRESULT IIImage::Start( );
```

Parameters

None.

Return Values

Status code indicating success or failure as follows:

- S_OK Imager started.
- S_DEVICE_NOT_OPENED_E The device had not been opened.

Remarks

This function starts the image continuously capturing images.

See Also

None.

IIImage::Stop

Syntax

```
HRESULT IIImage::Stop( );
```

Parameters

None.

Return Values

Status code indicating success or failure as follows:

- S_OK Imager started.
- S_IMG_NOT_PRESENT_E Unit does not contain an imager.
- S_DEVICE_NOT_OPENED_E Device had not been opened.

Remarks

This function stops the image continuously capturing images.

See Also

None.

IIImage::Open

Syntax

```
HRESULT IIImage::Open( BOOL fSigCapEnable );
```

Parameters

fSigCapEnable [in] When TRUE, signature capture is enabled. When FALSE, it is disabled. Bar code labels are decoded and images (via IIImage::ReadImage) the same.

Return Values

Status code indicating success or failure as follows:

- S_OK Imager opened.
- S_IMG_NOT_PRESENT_E Unit does not contain an imager.
- S_DEVICE_CONTENTION_E Device has already been opened.

Remarks

This function exclusively allocates the imager device so that the other IIImage methods can be safely called.

See Also

None.

IIImage::Close

Syntax

```
HRESULT IIImage::Close( );
```

Parameters

None.

Return Values

Status code indicating success or failure as follows:

- S_OK Imager closed.
- S_DEVICE_NOT_OPENED_E The device had not been opened.

Remarks

This function releases the imager device so that other applications can open it. An IIImage::Release() will also close the imager device.

See Also

None.

Data Collection Configuration



Scanner settings for the 700 Series Computer can be configured via the **Data Collection** control panel applet. From the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Data Collection** icon. See *Appendix A, “Configurable Settings”* for more information about the following parameters. *Note that these are in alphabetical order.*

- Codabar (*page 338*)
- Code 11 (*page 352*)
- Code 128 (*page 341*)
 - Code 128 Options (*page 342*)
 - Code 128 FNC1 Character (*page 343*)
- Code 39 (*page 336*)
- Code 93 (*page 340*)
 - Code 93 Length (*page 340*)
- Data Matrix (*page 354*)
- Interleaved 2 of 5 (*page 349*)
- Matrix 2 of 5 (*page 350*)
- MaxiCode (*page 355*)
- MSI (*page 345*)
- PDF417 (*page 346*)
 - Macro PDF (*page 346*)
 - Micro PDF417 (*page 348*)
- Plessey (*page 344*)
- QR Code (*page 353*)
- Standard 2 of 5 (*page 337*)
- Telepen (*page 351*)
- UPC/EAN (*page 339*)

Tethered Scanner

The Intermec Tethered Scanner feature allows Automatic Data Collection (ADC) by accepting data from the COM1 port and wedging it into the keyboard interface. This feature can be enabled or disabled from the Today Screen on the 700 Series Computer.

Enabling and Disabling



On the 700 Series Computer, tap **Start** → **Today**. Tap the bar code scanner icon in the System Tray (*circled in the following illustration*). Initially, the bar code scanner icon indicates that this feature is disabled (*shown to the left*).




- Select **Comm Port Wedge** to send any data, coming into the 700 Series Computer through the COM1 port from an external input device, as keyboard data to an application on the desktop.

For example, if you have Pocket Word running on your 700 Series Computer desktop, information scanned with a scanner connected to the COM1 port will appear in the Word document. If another data collection application is running and is active on the 700 Series Computer, the scanned information will appear in that application.



Note: When **Comm Port Wedge** is selected, regardless of the data sent by the external input device, you cannot control the device or the data format using any of the Intermec scanner control or data transfer APIs from the SDK or the internal Data Collection software. The external input device is governed by what software it has onboard to tell it how to scan, take pictures, or send the data elsewhere.

- Select **1551/1553** to enable the Sabre 1551E or 1553 Tethered Scanner to scan, then send data as keyboard data. The 1551/1553 Tethered Scanner has software onboard that translates scanned data into characters, so the running/active application does not need to know how to do that. All the scanner control and data transfer APIs will work with the 1551/1553 Tethered Scanner, so you can control the device.
- Select **Disable All** to disable this feature and use the COM1 port for another application, such as ActiveSync. An error message will result if this option were not selected, but this action was attempted. Similarly, if ActiveSync is using the COM1 port, and you select **Comm Port Wedge** or **1551/1553**, an error message will result. See “*Error Message*” on page 257 for more information.

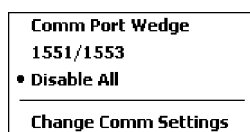


Changing Comm Settings

Tap **Change Comm Settings** to configure the settings for the COM1 port. Current settings are restored after a warm-boot, but are lost after a cold-boot. When these settings have not been changed, the **OK** button is disabled (grayed out). When changes are made, tap **OK** after it is enabled to accept these changes.

- **Baud Rate:** 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200
- **Data Bits:** 7 or 8
- **Parity:** None, Odd, Even, Mark, Space
- **Stop Bits:** 1 or 2
- **Flow Control:** None or Hardware


Tethered Scanner

The default settings for the Tethered Scanner are shown in the following illustration:

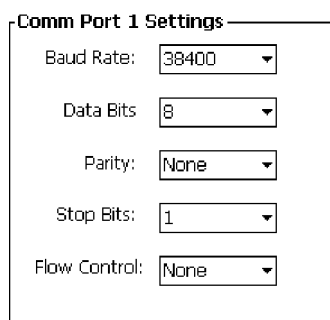

Sabre 1551E or 1553 Tethered Scanner

The default communication configuration for the Sabre 1551E or 1553 Tethered Scanner is shown in the following illustration. Scan the EasySet Reset Factory Defaults label to set the Sabre 1551E or 1553 tethered scanner communications settings to this configuration. The COM1 port configuration settings must also match those of the scanner to scan labels.

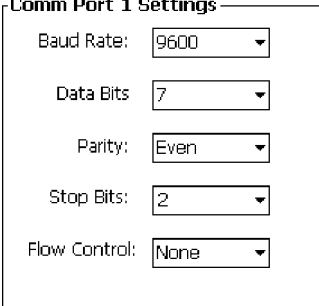

Comm Port 1 Settings

Baud Rate:	9600
Data Bits:	7
Parity:	Even
Stop Bits:	2
Flow Control:	None

Welch Allyn 1470 Imager Settings

The Welch Allyn 1470 Imager can be set to this configuration by scanning the Factory Default Settings label.

Error Message

If the COM1 port is used by another application, such as ActiveSync, neither the Comm Port Wedge nor the 1551/1553 Tethered Scanner can be enabled. As a result, the following message may appear. *Note that this message is for the Comm Port Wedge.* You must disable that application to free up the COM1 port before you can enable either the wedge or the scanner.



Scanner Cabling

A null modem cable is required for the Welch Allyn 1470 Imager to communicate with the 700 Series Computer when using the 700 Series Serial Cable (P/N: 226-999-001).

The Sabre 1551E / 1553 Cable connects directly to the Model 700 Comm Port.

Limitations and Capabilities

The Tethered Scanner has the following limitations:

- No auto detection of a scanner's physical connection to COM1 port. User needs to ensure the communication settings of COM1 port matched the settings of the device.
- The Pocket PC Pocket Office applications misbehave when control characters such as carriage return are wedged. This is a known Pocket PC problem, which is being worked with Microsoft and for which a work around is being developed.
- Communications port is COM1 and cannot be changed.
- A complete bar code label is detected when the time between bytes (the inter-byte gap) exceeds 100 ms. This allows that data could be concatenated if two labels were received while the Comm Port Wedge or the 1551/1553 Tethered Scanner was not performing a read. That is, it could be wedging data just read or the read thread could be preempted. Also, the labels could appear concatenated if the scanner itself were to buffer the labels before transmitting them.

When enabled, the Comm Port Wedge menu option has the following limitation:

- There is no bar code API to get bar code data from the bar code scanner. The Comm Port Wedge transmits the data through the keyboard interface only.

When enabled, the 1551/1553 menu option has the following capabilities:

- Grid Data Editing is available.
- The source of the symbology configurations is only available via the Easy Set command labels. Only the Virtual Wedge configurations can be configured via the Data Collection Control Panel Applet Virtual Wedge page. See Appendix A, "*Configurable Settings*," for more information.
- May transmit the data through the keyboard interface (via the Virtual Wedge).

- The bar code APIs, defined in the IADC interface, are available to get bar code data from the bar code scanner. The following example shows how to programmatically collect bar code data:

```
#include "IADC.h" // Linked with ITCUUID.LIB
#include "ITCAdcMgmt.h" // Linked with ITCAdcDevMgmt.lib

IADC* pIADC;
HRESULT hrStatus = S_OK;

// Create a ADC COM interface to collect bar code data from the 1551E/1553
// when the 1551/1553 menu option is enabled.
hrStatus =
ITCDeviceOpen(TEXT("ExtScanner"), // Name of the ADC device.
IID_IADC, // COM interface to return
ITC_DHDEVFLAG_READAHEAD, // Device's Flags
(LPVOID *) &pIADC); // the returned interface

if( SUCCEEDED(hrStatus) )
{
    BYTE byteBuffer[MAX_LABEL_SIZE];
    DWORD dwLength = 0;
    HRESULT hr = pIADC->Read(
        byteBuffer, // Buffer to put the ADC data.
        MAX_LABEL_SIZE, // Size of pDataBuffer in bytes.
        &dwLength, // Number bytes returned.
        NULL, // Time stamp of the received data. NULL.
        INFINITE // Number of milliseconds to wait.
    );
}

// when done using this COM interface, delete it:
ITCDeviceClose( (IUnknown **) pIADC);
```




7 Programming

The following programming information pertains to the 700 Series Color Mobile Computer:

- Creating CAB Files (*page 262*)
- FTP Server (*page 277*)
- Full Screen (*page 288*)
- Kernel I/O Control Functions (*page 290*)
- Network Selection APIs (*page 307*)
- Reboot Functions (*page 320*)
- Remapping the Keypad (*page 321*)
- Notifications (*page 328*)

Creating CAB Files

The Windows CE operating system uses a .CAB file to install an application on a Windows CE-based device. A .CAB file is composed of multiple files that are compressed into one file. Compressing multiple files into one file provides the following benefits:

- All application files are present.
- A partial installation is prevented.
- The application can be installed from several sources, such as a desktop computer or a Web site.

Use the CAB Wizard application (CABWIZ.EXE) to generate a .CAB file for your application.

Creating Device-Specific CAB Files

Do the following to create a device-specific .CAB file for an application, *in the order provided*:

- 1 Create an .INF file with Windows CE-specific modifications (*page 262*).
- 2 *Optional* Create a SETUP.DLL file to provide custom control of the installation process (*page 274*).
- 3 Use the CAB Wizard to create the .CAB file, using the .INF file, the optional SETUP.DLL file, and the device-specific application files as parameters (*page 275*).

Creating an .INF File

An .INF file specifies information about an application for the CAB Wizard. Below are the sections of an .INF file:

[Version]

This specifies the creator of the file, version, and other relevant information.

Required? Yes

- **Signature:** *"signature_name"*
Must be "\$Windows NT\$" as Windows CE is not available on Windows 95.
- **Provider:** *"INF_creator"*
The company name of the application, such as "Microsoft."
- **CESignature:** "\$Windows CE\$"

Example

[Version]

```
Signature = "$Windows NT$"  
Provider = "Microsoft"  
CESignature = "$Windows CE$"
```

[CEStrings]

This specifies string substitutions for the application name and the default installation directory.

Required? Yes

- **AppName:** *app_name*
Name of the application. Other instances of %AppName% in the .INF file will be replaced with this string value, such as RP32.
- **InstallDir:** *default_install_dir*
Default installation directory on the device. Other instances of %InstallDir% in the .INF file will be replaced with this string value. Example:
\\storage_card\\%AppName%

Example

```
[CEStrings]
AppName="Game Pack"
InstallDir=%CE1%\%AppName%
```

[Strings]

This section is optional and defines one or more string keys. A string key represents a string of printable characters.

Required? No

- **string_key:** *value*
String consisting of letters, digits, or other printable characters. Enclose *value* in double quotation marks "" if the corresponding string key is used in an item that requires double quotation marks. No string_keys is okay.

Example

```
[Strings]
reg_path = Software\Microsoft\My Test App
```

[CEDevice]

Describes the platform for the targeted application. All keys in this section are optional. If a key is nonexistent or has no data, Windows CE does not perform any checking with the exception being *UnsupportedPlatforms*. If the *UnsupportedPlatforms* key exists but no data, the previous value is not overridden.

Required? Yes

- **ProcessorType** : *processor_type*
The value that is returned by `SYSTEMINFO.dwProcessorType`. For example, the value for the SH3 CPU is 10003, the MIPS CPU is 4000, and the ARM CPU is 2577
- **UnsupportedPlatforms**: *platform_family_name*
This lists known unsupported platform family names. If the name specified in the `[CEDevice.xxx]` section is different from that in the `[CEDevice]` section, both *platform_family_name* values are unsupported for the microprocessor specified by xxx. That is, the list of unsupported platform family names is appended to the previous list of unsupported names. Application Manager will not display the application for an unsupported platform. Also, a user will be warned during the setup process if the .CAB file is copied to an unsupported device.

Example

[CEDevice]

`UnsupportedPlatforms = pltfrm1 ; pltfrm1 is unsupported`

[CEDevice.SH3]

`UnsupportedPlatforms = ; pltfrm1 is still unsupported`

- **VersionMin**: *minor_version*
Numeric value returned by `OSVERSIONINFO.dwVersionMinor`. The .CAB file is valid for the currently connected device if the version of this device is greater than or equal to **VersionMin**. For Windows CE Japanese language devices, set this to 2.01
- **VersionMax**: *major_version*
Numeric value returned by `OSVERSIONINFO.dwVersionMajor`. The .CAB file is valid for the currently connected device if the version of this device is less than or equal to **VersionMax**. For Windows CE Japanese language devices, set this to 2.01



Note: Supported Windows CE operating system versions include 1.0, 1.01, 2.0, 2.01, and 2.10. When using these numbers, be sure to include all significant digits.

- **BuildMin**: *build_number*
Numeric value returned by `OSVERSIONINFO.dwBuildNumber`. The .CAB file is valid for the currently connected device if the version of this device is greater than or equal to **BuildMin**.
- **BuildMax**: *build_number*
Numeric value returned by `OSVERSIONINFO.dwBuildNumber`. The .CAB file is valid for the currently connected device if the version of this device is less than or equal to **BuildMax**.

Example

The following code example shows three [CEDevice] sections: one that gives basic information for any CPU and two that are specific to the SH3 and the MIPS microprocessors.

```
[CEDevice]                                ; A "template" for all platforms
UnsupportedPlatforms = pltfrm1             ; Does not support pltfrm1

; The following specifies version 1.0 devices only.
VersionMin = 1.0
VersionMax = 1.0

[CEDevice.SH3]                            ; Inherits all [CEDevice] settings
; This will create a .CAB file specific to SH3 devices.
ProcessorType = 10003                      ; SH3 .cab file is valid for SH3 microprocessors.
UnsupportedPlatforms =                     ; pltfrm1 is still unsupported

; The following overrides the version settings so that no version checking is
; performed.
VersionMin =
VersionMax =

[CEDevice.MIPS]                           ; Inherits all [CEDevice] settings
; This will create a .CAB file specific to "MIPS" devices.
ProcessorType = 4000                      ; MIPS .CAB file is valid for MIPS
microprocessor.
UnsupportedPlatforms =pltfrm2 ; pltfrm1, pltfrm2 unsupported for MIPS .CAB
file.
```



Note: To create the two CPU-specific .CAB files for the SETUP.INF file in the previous example, run the CAB Wizard with the “/cpu sh3 mips” parameter.

[DefaultInstall]

This describes the default installation of your application. Note that under this section, you will list items expanded upon later in this description.

Required? Yes

- **Copyfiles:** *copyfile_list_section*
Maps to files defined later in the .INF file, such as Files.App, Files.Font, and Files.Bitmaps.
- **AddReg:** *add_registry_section*
Example: RegSettings.All
- **CEShortcuts:** *shortcut_list_section*
String that identifies one more section that defines shortcuts to a file, as defined in the [CEShortcuts] section.
- **CESetupDLL:** *setup_DLL*
Optimal string that specifies a SETUP.DLL file. It is written by the Independent Software Vendor (ISV) and contains customized functions for operations during installation and removal of the application. The file must be specified in the [SourceDisksFiles] section.
- **CESelfRegister:** *self_reg_DLL_filename*
String that identifies files that self-register by exporting the **DllRegisterServer** and **DllUnregisterServer** Component Object Model (COM) functions. Specify these files in the [SourceDiskFiles] section. During installation, if installation on the device fails to call the file's exported **DllRegisterServer** function, the file's exported **DllUnregisterServer** function will not be called during removal.

Example

```
[DefaultInstall]
AddReg = RegSettings.All
CEShortcuts = Shortcuts.All
```

[SourceDiskNames]

This section describes the name and path of the disk on which your application resides.

Required? Yes

- **disk_ordinal:** *disk_label,,path*
1=, "App files", C:\Appsoft\RP32\...
2=, "Font files", C:\RpTools\...
3=, "CE Tools", C:\windows ce tools...
- **CESignature:** "\$Windows CE\$"

Example

```
[SourceDisksNames]                                ; Required section
1 = , "Common files", , C:\app\common              ; Using an absolute path
[SourceDisksNames.SH3]
2 = , "SH3 files", , sh3                          ; Using a relative path
[SourceDisksNames.MIPS]
2 = , "MIPS files", , mips                        ; Using a relative path
```


[SourceDiskFiles]

This describes the name and path of the files in which your application resides.

Required? Yes

- **filename:** *disk_number[,subdir]*
 RPM.EXE = 1,c:\appsoft\...
 WCESTART.INI = 1
 RPMCE212.INI = 1
 TAHOMA.TTF = 2



Note: [,subdir] is relative to the location of the INF file.

Example

```
[SourceDisksFiles]           ; Required section
begin.wav = 1
end.wav = 1
sample.hlp = 1
[SourceDisksFiles.SH3]
sample.exe = 2               ; Uses the SourceDisksNames.SH3 identification of 2.
[SourceDisksFiles.MIPS]
sample.exe = 2               ; Uses the SourceDisksNames.MIPS identification of 2.
```

[DestinationDirs]

This describes the names and paths of the destination directories for the application on the target device. *Note Windows CE does not support directory identifiers.*

Required? Yes

- **file_list_section:** *0,subdir*

String that identifies the destination directory. The following list shows the string substitutions supported by Windows CE. These can be used only for the beginning of the path. \

%CE1% \Program Files

%CE2% \Windows

%CE3% \My Documents

%CE4% \Windows\Startup

%CE5% \My Documents

%CE6% \Program Files\Accessories

%CE7% \Program Files\Communication

%CE8% \Program Files\Games

%CE9% \Program Files\Pocket Outlook

%CE10% \Program Files\Office

%CE11% \Windows\Start Menu\Programs

%CE12% \Windows\Start Menu\Programs\Accessories

%CE13% \Windows\Start Menu\Programs\Communications

%CE14% \Windows\Start Menu\Programs\Games

%CE15% \Windows\Fonts

%CE16% \Windows\Recent

%CE17% \Windows\Start Menu

%InstallDir%

Contains the path to the target directory selected during installation. It is declared in the [CEStrings] section

%AppName%

Contains the application name defined in the [CEStrings] section.

Example**[DestinationDirs]**

```
Files.Common = 0,%CE1%\My Subdir      ; \Program Files\My Subdir
Files.Shared = 0,%CE2%                ; \Windows
```

[CopyFiles]

This section, under the **[DefaultInstall]** section, describes the default files to copy to the target device. Within the **[DefaultInstall]** section, files were listed that must be defined elsewhere in the INF file. This section identifies that mapping and may contain flags.

Required? Yes

- **copyfile_list_section:** *destination_filename,[source_filename]*
The *source_filename* parameter is optional if it is the same as *destination_filename*.
- **copyfile_list_section:** *flags*
The numeric value that specifies an action to be done while copying files. The following table shows values supported by Windows CE.

Flag	Value	Description
COPYFLG_WARN_IF_SKIP	0x00000001	Warn user if skipping a file is attempted after error.
COPYFLG_NOSKIP	0x00000002	Do not allow a user to skip copying a file.
COPYFLG_NO_OVERWRITE	0x00000010	Do not overwrite files in destination directory.
COPYFLG_REPLACEONLY	0x00000400	Copy the source file to the destination directory only if the file is already in the destination directory.
CE_COPYFLG_NO_DATE_DIALOG	0x20000000	Do not copy files if the target file is newer.
CE_COPYFLG_NODATECHECK	0x40000000	Ignore date while overwriting the target file.
CE_COPYFLG_SHARED	0x80000000	Create a reference when a shared DLL is counted.

Example

[DefaultInstall.SH3]

CopyFiles = Files.Common, Files.SH3

[DefaultInstall.MIPS]

CopyFiles = Files.Common, Files.MIPS

[AddReg]

This section, under the **[DefaultInstall]** section, is optional and describes the keys and values that the .CAB file adds to the device registry. Within the **[DefaultInstall]** section, a reference may have been made to this section, such as “AddReg=RegSettings.All”. This section defines the options for that setting.

Required? No

- **add_registry_section:** *registry_root_string*
String that specifies the registry root location. The following list shows the values supported by Windows CE.
 - HKCR Same as HKEY_CLASSES_ROOT
 - HKCU Same as HKEY_CURRENT_USER
 - HKLM Same as HKEY_LOCAL_MACHINE
- **add_registry_section:** *value_name*
Registry value name. If empty, the “default” registry value name is used.
- **add_registry_section:** *flags*
Numeric value that specifies information about the registry key. The following table shows the values that are supported by Window CE.

Flag	Value	Description
FLG_ADDREG_NOCLOBBER	0x00000002	If the registry key exists, do not overwrite it. Can be used with any of the other flags in this table.
FLG_ADDREG_TYPE_SZ	0x00000000	REG_SZ registry data type.
FLG_ADDREG_TYPE_MULTI_SZ	0x00010000	REG_MULTI_SZ registry data type. Value field that follows can be a list of strings separated by commas.
FLG_ADDREG_TYPE_BINARY	0x00000001	REG_BINARY registry data type. Value field that follows must be a list of numeric values separated by commas, one byte per field, and must not use the 0x hexadecimal prefix.
FLG_ADDREG_TYPE_DWORD	0x00010001	REG_DWORD data type. The noncompatible format in the Win32 Setup .INF documentation is supported.

Example

AddReg = RegSettings.All

[RegSettings.All]

```
HKLM,%reg_path%, ,0x00000000,alpha           ; <default> = "alpha"
HKLM,%reg_path%,test,0x00010001,3           ; Test = 3
HKLM,%reg_path%\new,another,0x00010001,6     ; New\another = 6
```

[CEShortcuts]

This section, a Windows CE-specific section under the **[DefaultInstall]** section, is optional and describes the shortcuts that the installation application creates on the device. Within the **[DefaultInstall]** section, a reference may have been made to this section, such as “Shortcuts.All”. This section defines the options for that setting.

Required? No

- **shortcut_list_section:** *shortcut_filename*
String that identifies the shortcut name. It does not require the .LNK extension.
- **shortcut_list_section:** *shortcut_type_flag*
Numeric value. Zero or empty represents a shortcut to a file; any non-zero numeric value represents a shortcut to a folder.
- **shortcut_list_section:** *target_file_path*
String value that specifies the destination location. Use the target file name for a file, such as MyApp.exe, that must be defined in a file copy list. For a path, use a *file_list_section* name defined in the **[DestinationDirs]** section, such as *DefaultDestDir*, or the *%InstallDir%* string.
- **shortcut_list_section:** *standard_destination_path*
Optional string value. A standard *%CEX%* path or *%InstallDir%*. If no value is specified, the *shortcut_list_section* name of the current section or the *DefaultDestDir* value from the **[DestinationDirs]** section is used.

Example

```

CEShortcuts = Shortcuts.All
[Shortcuts.All]
Sample App,0,sample.exe           ; Uses the path in DestinationDirs. Sample
App,0,sample.exe,%InstallDir%     ; The path is explicitly specified.

```

Sample .INF File

```

[Version]                ; Required section
Signature = "$Windows NT$"
Provider = "Intermec Technologies Corporation"
CESignature = "$Windows CE$"

; [CEDevice]
; ProcessorType =

[DefaultInstall]         ; Required section
CopyFiles = Files.App, Files.Fonts, Files.BitMaps, Files.Intl,
Files.TelecomNcsCE, Files.Windows, Files.Import, Files.Export, Files.Work,
Files.Database, Files.WinCE AddReg = RegSettings.All ;CEShortcuts =
Shortcuts.All

[SourceDisksNames]       ; Required section
1 = , "App files" , , c:\appsoft\...
2 = , "Font files" , , c:\WinNT\Fonts
3 = , "CE Tools" , , c:\windows ce tools\wce212\6110ie\mfc\lib\x86

[SourceDisksFiles]       ; Required section
rpm.exe = 1,C:\Appsoft\program\wce212\WCEX86Rel6110
wcestart.ini = 1

```

```
rpmce212.ini = 1
intermec.bmp = 1
rpmlogo.bmp = 1
rpmname.bmp = 1
import.bmp = 1
export.bmp = 1
clock.bmp = 1
printer.bmp = 1
filecopy.bmp = 1
readme.txt = 1
lang_eng.bin = 1
rpmdata.dbd = 1,database\wce1
tahoma.ttf = 2
mfcce212.dll = 3
olece212.dll = 3
olece211.dll = 1,c:\windows ce tools\wce211\NMSD61102.11\mfc\lib\x86
rdm45wce.dll = 1,c:\rptools\rdm45wce\4_50\lib\wce212\wcex86rel
picfmt.dll = 1,c:\rptools\picfmt\1_00\wce212\wcex86rel6110
fmtctrl.dll = 1,c:\rptools\fmtctrl\1_00\wce212\wcex86rel6110
ugrid.dll = 1,c:\rptools\ugrid\1_00\wce212\wcex86rel6110
simple.dll = 1,c:\rptools\pspbm0c\1_00\wce211\wcex86rel
psink.dll = 1,c:\rptools\psink\1_00\wce211\WCEX86RelMinDependency
pslpwce.dll = 1,c:\rptools\pslpm0c\1_00\wce211\WCEX86RelMinDependency
npcport.dll = 1,c:\rptools\cedk\212_03\installable drivers\printer\npcp
;dexcom.dll = 1,c:\rptools\psdxm0c\1_00\x86
ncsce.exe = 1,c:\rptools\ncsce\1_04
nrinet.dll = 1,c:\rptools\ncsce\1_04
```

```
[DestinationDirs] ; Required section
;Shortcuts.All = 0,%CE3% ; \Windows\Desktop
Files.App = 0,%InstallDir%
Files.DataBase = 0,%InstallDir%\DataBase
Files.BitMaps = 0,%InstallDir%\Bitmaps
Files.Fonts = 0,%InstallDir%\Fonts
Files.Intl = 0,%InstallDir%\Intl
Files.TelecomNcsCE = 0,%InstallDir%\Telecom\NcsCE
Files.Windows = 0,%InstallDir%\Windows
Files.Import = 0,%InstallDir%\Import
Files.Export = 0,%InstallDir%\Export
Files.Work = 0,%InstallDir%\Work
Files.WinCE = 0,\storage_card\wince
```

```
[CEStrings] ; Required section
AppName = Rp32
InstallDir = \storage_card\%AppName%
```

```
[Strings] ; Optional section
;[Shortcuts.All]
;Sample App,0,sample.exe ; Uses the path in DestinationDirs.
;Sample App,0,sample.exe,%InstallDir% ; The path is explicitly specified.
```

```
[Files.App]
rpm.exe,,,0
rpm.ini,rpmce212.ini,,,0
mfcce212.dll,,,0
olece212.dll,,,0
olece211.dll,,,0
rdm45wce.dll,,,0
picfmt.dll,,,0
```

```

fmtctrl.dll,,,0
ugrid.dll,,,0
simple.dll,,,0
psink.dll,,,0
pslpwce.dll,,,0
npcport.dll,,,0
;dexcom.dll,,,0

[Files.DataBase]
rpmdata.dbd,,,0

[Files.Fonts]
tahoma.ttf,,,0

[Files.BitMaps]
intermec.bmp,,,0
rpmlogo.bmp,,,0
rpmname.bmp,,,0
import.bmp,,,0
export.bmp,,,0
clock.bmp,,,0
printer.bmp,,,0
filecopy.bmp,,,0

[Files.Intl]
lang_eng.bin,,,0

[Files.TelecomNcsCE]
ncsce.exe,,,0
nrinet.dll,,,0

[Files.Windows]
readme.txt,,,0

[Files.Import]
readme.txt,,,0

[Files.Export]
readme.txt,,,0

[Files.Work]
readme.txt,,,0

[Files.WinCE]
wcestart.ini,,,0

[RegSettings.All]
HKLM,"SOFTWARE\Microsoft\Shell\AutoHide",,0x00010001,1
; Autohide the taskbar HKLM,"SOFTWARE\Microsoft\Shell\OnTop",,0x00010001,0
; Shell is not on top
HKLM,"SOFTWARE\Microsoft\Clock",SHOW_CLOCK,0x00010001,0
; Clock is not on taskbar

```

Using Installation Functions in SETUP.DLL

SETUP.DLL is an optional file that enables you to perform custom operations during installation and removal of your application. The following list shows the functions that are exported by SETUP.DLL.

- **Install_Init**
Called before installation begins. Use this function to check the application version when reinstalling an application and to determine if a dependent application is present.
- **Install_Exit**
Called after installation is complete. Use this function to handle errors that occur during application installation.
- **Uninstall_Init**
Called before the removal process begins. Use this function to close the application, if the application is running.
- **Uninstall_Exit**
Called after the removal process is complete. Use this function to save database information to a file and delete the database and to tell the user where the user data files are stored and how to reinstall the application.



Note; Use [DefaultInstall] → CEsSelfRegister (page 266) in the .INF file to point to SETUP.DLL.

After the CAB File Extraction

Cab files that need to cause a warm reset after cab extraction will need to create the __RESETMEPLEASE__.TXT file in the “\Windows” directory. The preferred method to create this file is within the DllMain portion of the SETUP.DLL file. It looks like this:

```

BOOL APIENTRY DllMain( HANDLE hModule, DWORD  ul_reason_for_call, LPVOID
lpReserved )
{
    switch (ul_reason_for_call)
    {
        case DLL_PROCESS_ATTACH:
            break;
        case DLL_THREAD_ATTACH:
            break;
        case DLL_THREAD_DETACH:
            break;
        case DLL_PROCESS_DETACH:
            if (bInstallSuccessful) {
                HANDLE h;
                h = CreateFile(L"\\Windows\\__resetmeplease__.txt",
                    GENERIC_READ|GENERIC_WRITE, 0, NULL, CREATE_ALWAYS,
                    FILE_ATTRIBUTE_HIDDEN, NULL);
                if (h != INVALID_HANDLE_VALUE)
                    CloseHandle(h);
            }
            break;
    }
    return TRUE;
}

```


The system software looks for the following directory structure and files on the installed media card whether it be an SD card or CF card or embedded flash file system. No other folders need exist.

```
\2577\autorun.exe
\2577\autorun.dat
\2577\autocab.exe
\2577\autocab.dat
\cabfiles\*.cab
```

Creating CAB Files with CAB Wizard

After you create the .INF file and the optional SETUP.DLL file, use the CAB Wizard to create the .CAB file. The command-line syntax for the CAB Wizard is as follows:

```
cabwiz.exe "inf_file" [/dest dest_directory] [/err error_file] [/cpu cpu_type
[cpu_type]]
```

A batch file, located in <program> directory, with the following commands, works well:

```
cd\ "Windows CE Tools" \WCE211 \ "MS HPC Pro" \support \appinst \bin
cabwiz.exe c:\appsoft\<program>\<inf_file_name>
cd \appsoft\<program>
```

- *“inf_file”*
The SETUP.INF file path.
- *dest_directory*
The destination directory for the .CAB files. If no directory is specified, the .CAB files are created in the “inf_file” directory.
- *error_file*
The file name for a log file that contains all warnings and errors that are encountered when the .CAB files are compiled. If no file name is specified, errors are displayed in message boxes. If a file name is used, the CAB Wizard runs without the user interface (UI); this is useful for automated builds.
- *cpu_type*
Creates a .CAB file for each specified microprocessor tag. A microprocessor tag is a label used in the Win32 SETUP.INF file to differentiate between different microprocessor types. The */cpu* parameter, followed by multiple *cpu_type* values, must be the last qualifier in the command line.

Example

This example creates .CAB files for the SH3 and MIPS microprocessors, assuming that the Win32 SETUP.INF file contains the SH3 and MIPS tags:

```
cabwiz.exe "c:\myfile.inf" /err myfile.err /cpu sh3 mips
```



Note: CABWIZ.EXE, MAKECAB.EXE, and CABWIZ.DDF (Windows CE files available on the Windows CE Toolkit) must be installed in the same directory on the desktop computer. Call CABWIZ.EXE using its full path for the CAB Wizard application to run correctly.

Troubleshooting the CAB Wizard

To identify and avoid problems that might occur when using the CAB Wizard, follow these guidelines:

- Use %% for a percent sign (%) character when using this character in an .INF file string, as specified in Win32 documentation. This will not work under the [Strings] section.
- Do not use .INF or .CAB files created for Windows CE to install applications on Windows-based desktop platforms.
- Ensure the MAKECAB.EXE and CABWIZ.DDF files, included with Windows CE, are in the same directory as CABWIZ.EXE.
- Use the full path to call CABWIZ.EXE.
- Do not create a .CAB file with the MAKECAB.EXE file included with Windows CE. You must use CABWIZ.EXE, which uses MAKECAB.EXE to generate the .CAB files for Windows CE.
- Do *not* set the read-only attribute for .CAB files.

FTP Server

FTP support is provided through the FTP Server application FTPDCE.EXE (MS Windows CE Versions) which is provided as part the base system.

FTPDCE is the Internet File Transfer Protocol (FTP) server process. The server can be invoked from an application or command line. Besides servicing FTP client requests the FTP Server also send a “network announcement” to notify prospective clients of server availability.



Note: You should consult the RFC959 specification for proper use of some of these commands at the following URL:

- <http://www.ietf.org/rfc/rfc959.txt> for the text version, or
- <http://www.w3.org/Protocols/rfc959/> for an html version

Do the following to send commands:

- 1 Start an FTP client and connect to the device FTP server.
- 2 Log in with “intermec” as the user name and “cr52401” for the password.
- 3 From the FTP client, send the command.
- 4 Enter the new user name (any user name) when prompted.
- 5 Wait for a response.

Synopsis

`ftpdce [options]`

Options

- *-Aaddr*
Sets the single target address to which to send the network announcement. *Default is broadcast.*
- *-Bbyte*
Sets the FTP data block size. Smaller sizes may be useful over slower links. *Default is 65536.*
- *-Cname*
Sets the device name. Used by Intermec management software.
- *-Fvalue*
Disables the default Intermec account. A value of “0” disables the account. *Default is “1”.*



Note: Disabling the default account without providing a working access control list on the server will result in a device that will not accept any FTP connections.

- *-Hsec*
Sets the interval between network announcements in seconds. A value of “0” turns the network announcement off. *Default is 30 seconds.*

- *-Iip*
Sets the preferred 6920 Communications Server (*optional*).
- *-Llog*
Sets the state of logging. *Default is 0 (disabled)*.
- *-Nsec*
Specifies the number of seconds to wait before starting FTP server services.
- *-Pport*
Sets the UDP port on which the network announcement will be sent. *Default port is 52401*.
- *-Qport*
Sets the port on which the FTP Server will listen for connections. *Default port is 21*.
- *-Rdir*
Sets the FTP mount point to this directory. Default is the root directory of the drive from which the FTP Server program was executed.
- *-Tscript*
Sets the script name for the 6920 Communications Server to process.
- *-Url*
Sets the default URL for this device.
- *-Z“parms”*
Sets extended parameters to be included in the network announcement.

Configurable Parameters Via the Registry Editor

The following parameters receive default values during the installation of the Intermec FTP Server components. A few of the parameters are visible in the registry by default, but most must be created in order to modify the default behavior of the FTP server.

BlockSize

Setting this parameter forces the Intermec FTP Server to transmit and receive Ethernet packets using the specified data block size. By default, the FTP server transmits and receives data using a 64K data block size. Adjusting this value may be useful in certain wireless TCP/IP installations.

Key

HKLM\Software\Intermec\IFTP

Value Type

REG_DWORD - data block size, in bytes.

Valid Range

0x100-0x10000 (256-65536 decimal).

Default

65536

DeviceName

This parameter forces the Intermec FTP Server to include the specified device name in the Intermec Device Network Announcement (IDNA). Adjusting this value may be useful in assigning a symbolic name to this device for asset tracking.

Key

HKLM\Software\Intermec\IFTP

Value Type

REG_SZ

Valid Range

None.

Default

None.

DeviceURL

This parameter forces the Intermec FTP Server to transmit the specified URL in the IDNA. This can be used by Intermec management software for asset management.

Key

HKLM\Software\Intermec\IFTP

Value Type

REG_SZ

Valid Range

None.

Default

None.

IDNATarget

This parameter forces the Intermec FTP Server to transmit the IDNA to a specific destination instead of a general UDP broadcast. This parameter is useful on networks that do not allow UDP broadcasts to be routed between subnets. The use of this parameter will restrict the reception of the IDNA to the target destination only.

Key

HKLM\Software\Intermec\IFTP

Value Type

REG_SZ

Valid Range

None.

Default

None.

ManifestName

This parameter forces the Intermec FTP Server to transmit the specified manifest name in the IDNA. This parameter is used by the Intermec 6920 Communications Server for communication transactions. See the 6920 Communications Server documentation for proper use of this parameter.

Key

HKLM\Software\Intermec\IFTP

Value Type

REG_SZ

Valid Range

None.

Default

iftp.ini

PauseAtStartup

This parameter forces the Intermecc FTP Server to sleep for the specified number of seconds before making the FTP service available on the device.

Key

HKLM\Software\Intermec\IFTP

Value Type

REG_DWORD - stored in seconds.

Valid Range

None.

Default

0

Root

This parameter forces the Intermecc FTP Server to set the root of the FTP mount point to the specified value. *Note that this must map to an existing directory or you will not be able to log into the FTP Server.*

Key

HKLM\Software\Intermec\IFTP

Value Type

REG_SZ

Valid Range

None.

Default

\

Transferring Files Over TCP/IP Networks

The File Transfer Protocol (FTP) server transfers files over TCP/IP networks. The FTPDCE.EXE program is a version that does not display a window, but can run in the background.

FTPDCE is the Internet File Transfer Protocol (FTP) server process. The server can be invoked from an application or command line. Besides servicing FTP client requests, the FTP Server also sends a “network announcement” to notify prospective clients of server availability.

Remarks

The FTP Server currently supports the following FTP requests:

- **CDUP**
Changes to the parent directory of the current working directory.
- **CWD**
Changes working directory.
- **DELE**
Deletes a file.
- **HELP**
Gives help information.
- **LIST** (*This FTP request is the same as the `ls -lgA` command*).
Gives list files in a directory.
- **MKD**
Makes a directory.
- **MODE** (*Always Uses Binary*).
Specifies data transfer mode.
- **NLST** (*Not supported*)
Gives a name list of files in directory (this FTP request is the same as the `ls` command).
- **NOOP**
Does nothing.
- **PASS**
Specifies a password.
- **PWD**
Prints the current working directory.
- **QUIT**
Terminates session.
- **RETR**
Retrieves a file.
- **RMD**
Removes a directory.
- **RNFR**
Specifies rename-from file name.

- **RNTO**
Specifies rename-to file name.
- **STOR**
Stores a file.
- **SYST**
Shows the operating system type of server system.
- **TYPE** (*Binary transfers only.*)
Specifies the data transfer type with the Type parameter.
- **USER**
Specifies user name.
- **XCUP** (*Not Normally Used*)
Changes the parent directory of the current working directory.
- **XCWD** (*Not Normally Used*)
Changes the current directory.
- **XMKD** (*Not Normally Used*)
Creates a directory.
- **XPWD** (*Not Normally Used*)
Prints the current working directory.
- **XRMD** (*Not Normally Used*)
Removes a directory.
- **SITE**
The following nonstandard or operating system (OS)-specific commands are supported by the SITE request. For Microsoft FTP clients, you can send site commands by preceding the command with “quote” such as “quote site status.”
- **ATTRIB**
Gets or sets the attributes of a given file. (SITE ATTRIB)

Usage: **QUOTE SITE ATTRIB** [+R | -R] [+A | -A] [+S | -S]
 [+H | -H] [[*path*] *filename*]
 + Sets an attribute.
 – Clears an attribute.
 R Read-only file attribute.
 A Archive file attribute.
 S System file attribute.
 H Hidden file attribute.

To retrieve the attributes of a file, only specify the file. The server response will be: *200-AD SHRCEIX filename*

If the flag exists in its position shown above, it is set. Also, in addition to the values defined above, there is also defined:

C Compressed file attribute.
E Encrypted file attribute.
I INROM file attribute.
X XIP file attribute (execute in ROM, not shadowed in RAM).

- **BOOT**

Reboots the server OS. This will cause the system on which the server is executing to reboot. The FTP Server will shut down cleanly before reboot. All client connections will be terminated. Cold boot is default except for the PocketPC build in which the default is warm boot. (SITE BOOT)

Usage: **QUOTE SITE BOOT** [*WARM* | *COLD*]

- **COPY**

Copies a file from one location to another. (SITE COPY)

Usage: **QUOTE SITE COPY** [*source*] [*destination*]

Example

```
QUOTE SITE COPY '\\Storage Card\one.dat' '\\Storage
Card\two.dat'
```

- **EXIT**

Exits the FTP Server. This command will shut down the FTP Server thus terminating all client connections. (SITE EXIT)

Usage: **QUOTE SITE EXIT**

- **HELP**

Gives site command help information. (SITE HELP)

Usage: **QUOTE SITE HELP** [*command*]

- **KILL**

Terminates a running program. (SITE KILL)

Usage: **QUOTE SITE KILL** [*program* | *pid*]

- **LOG**

Opens or closes the program log. (SITE LOG)

Usage: **QUOTE SITE LOG** [*open* [*filename*]| *close*]

- **PLIST**

Lists the running processes (*not supported on all platforms*). (SITE PLIST)

Usage: **QUOTE SITE PLIST**

- **RUN**

Starts a program running. If the program to run has spaces in path or filename, wrapping the name with single quotes is required.

Usage: **QUOTE SITE RUN** [*program*]

Example

```
QUOTE SITE RUN '\\Storage Card\app.exe'
```

- **STATUS**

Returns the current settings of the FTP Server. MAC, serial number, model, IP address, network announcement information as well as OS memory usage are returned. (SITE STATUS)

Usage: **QUOTE SITE STATUS**

- **TIMEOUT**

Toggles idle timeout between 120 to 1200 seconds (2 to 20 minutes). If this timer expires with no activity between the client and the server, the client connection will be disconnected. If the optional seconds argument is supplied, the server will set the connection timeout to the number of seconds specified. *Default is 120 seconds or 2 minutes.* (SITE TIMEOUT)

Usage: **QUOTE SITE TIMEOUT** [*seconds*]

The remaining FTP requests specified in RFC 959 are recognized, but not implemented.

The banner returned in the parenthetical portion of its greeting shows the version number of the FTP Server as well as the MAC address, serial number and OS of the machine hosting the server.

The FTP Server supports browsing from the latest Netscape and Microsoft web browsers. Drag-and-drop capability is available using this environment.

The FTPDCMDS subdirectory contains commands that can be used from the web browser.

- Click EXITME.BIN to execute a SITE EXIT command.
- Click REBOOTME.BIN to execute SITE BOOT command.
- Use the GET command on these files to have the FTP Server execute these commands.
- **Security:**
A customer configurable access control list may be installed on the 700 Series Computer. This list will allow customers to restrict access via the FTP Server to the users they wish. This is in addition to the default Intermecc account which can be disabled using the *-F0* option at runtime.

The access control list is named FTPDCE.TXT and is placed in the same directory on the 700 Series Computer as the FTPDCE.EXE server. The FTP Server will encrypt this file to keep the information safe from unauthorized users. This file is encrypted when the FTP Server is started so a file that is placed onto the 700 Series Computer after the FTP Server starts will require a restart of the FTP Server to take effect.

The format of the FTPDCE.TXT is as follows:

```
FTPDCE:user1!passwd1<cr><lf>user2!passwd2<cr><lf>user3!passwd3<cr><lf>...
```



Note: The user accounts and passwords are case sensitive. Once the access control list is encrypted on the 700 Series Computer, the FTP Server will hide this file from users. Once an access control list has been installed on the 700 Series Computer, a new one will not be accepted by the FTP Server until the previous one is removed. Encrypted access control lists are not portable between 700 Series Computers.

Stopping the FTP Server from Your Application

To allow application programmers the ability to programmatically shut down the FTP Server, the FTP Server periodically tests to see if a named event is signaled. The name for this event is “ITC_IFTP_STOP” (no quotes).

For examples on how to use events, consult the Microsoft Developer Network Library at <http://www.msdn.com>. The MSDN Library is an essential resource for developers using Microsoft tools, products, and technologies. It contains a bounty of technical programming information, including sample code, documentation, technical articles, and reference guides.

Autostart FTP



This automatically starts the FTP Server (FTPDCE.EXE) when the 700 Series Computer is powered on. This is provided with the NDISTRAY program (the Network Driver Interface Specification tray application), which displays the popup menu that currently allows you to load and unload the network drivers. Tap the antenna icon in the System Tray of the Today screen (*a sample antenna icon is circled below*) to get this pop-up menu.



The default is to start the FTP Server at boot time, unless the following registry entry is defined and set to “0” which disables AutoFTP. “1” enables the AutoFTP. The entry can be set from the NDISTRAY pop-up menu by selecting either **AutoFTP On** or **AutoFTP Off**.

HKEY_LOCAL_MACHINE\Software\Intermec\Ndistray\StartupIFTP


These new entries are located below the selections to load the network drivers. If the StartupIFTP registry key is not defined, the FTP Server is loaded by default, to provide “out-of-the-box” capability for customers who want to begin loading files to the 700 Series Computer without any prior configuration.




Note: If a network driver is unloaded using the NDISTRAY popup menu, and the FTP Server is running, the FTP Server is stopped.

On a resume, if AutoFTP is enabled and the FTP Server is running, it is stopped and restarted. NDISTRAY uses a helper application named RESE-TIFTP to implement the restart on resume feature. To do an AutoFTP Installation Check:

- 1 Ensure the FTP Server is running “out-of-the-box” the first time.
- 2 Tap **Start** → **Today** to access the Today screen, then tap the antenna icon in the System Tray to bring up the NDISTRAY pop-up menu. Select **AutoFTP Off** to disable AutoFTP. Do a warm boot and confirm the FTP Server is not running.

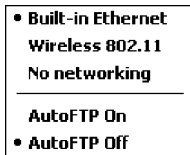

- 3 Tap **Start** → **Today** to access the Today screen, then tap the antenna icon in the System Tray to bring up the NDISTRAY pop-up menu. Select **AutoFTP On** to enable AutoFTP, reboot and confirm it is running.

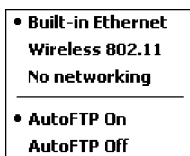

- 4 Unload the network driver when the FTP Server is running and confirm that it is not running any more.
- 5 Load the FTP Server, establish a connection, then suspend and resume. The server should still be running, but the FTP connection to the client should be dropped.

Full Screen

Pocket PC is a hardware specification created by Microsoft Corporation. Devices that wish to carry the Pocket PC logo must meet the minimum hardware requirements set in the Pocket PC specification. Manufacturers are free to add extra hardware functionality.

Pocket PC 2002 devices also use a specialized version of the CE operating system. This OS is built from Windows CE 3.0 but contains customizations, most notably the lack of a desktop and the addition of the Today Screen.

To carry the Pocket PC logo, all devices must be tested at an Independent Test Laboratory. The ITL testing is done based on Microsoft requirements. The test lab then reports the findings back to Microsoft Corporation and Intermec Technologies. If the 700 Series Computer passed all tests, Intermec is allowed to ship the device with the Pocket PC logo. Each time the operating system is modified, Intermec must resubmit to ITL testing.

This means we cannot change the operating system much and still be a Pocket PC device. For example, if we remove Word from the Start menu, the device would fail ITL testing and we would not be able to ship devices with the Pocket PC logo.

Although many customers want a Pocket PC device, some customers would prefer that their users not have access to all of the Pocket PC features. Intermec cannot customize the operating system in any way but a custom application can:

- Delete items from the Start menu, and Programs folder. These items are just shortcuts in the file system so the application is not really being deleted. Cold booting the device will bring these items back so the application will need to be run on every cold boot.
- Use the `RegFlushKey()` API to save a copy of the registry to a storage device. See the *Recovery CD Help* for more information on how to do this. Saving a copy of the registry will allow most system settings to be restored in a cold boot situation.
- Use the `SHFullScreen()` API in conjunction with other APIs to make the application take up the entire display and prevent the start menu from being available.
- Remap keys and disable keys on the keypad.
- Create a custom SIP.
- Make changes to the registry to configure the device.

Should you want your 700 Series Computer to display a full screen, keep in mind that your computer is Pocket-PC certified by Microsoft Corporation. Check out resources on programming for the Pocket PC, using the following links. These instructions give full instructions on how to display full screen.

- Instructions on how to create a full screen application for eVC++ applications using an SHFullScreen() API:
<http://support.microsoft.com/support/kb/articles/Q266/2/44.ASP>
- Instructions on how to create a full screen application for eVB applications also using the SHFullScreen() API:
<http://support.microsoft.com/support/kb/articles/Q265/4/51.ASP>

Kernel I/O Controls

This describes the `KernelIoControl()` functions available to application programmers. Most C++ applications will need to prototype the function as the following to avoid link and compile errors.

```
extern "C" BOOL KernelIoControl(DWORD dwIoControlCode, LPVOID lpInBuf, DWORD
nInBufSize, LPVOID lpOutBuf, DWORD nOutBufSize, LPDWORD lpBytesReturned);
```

IOCTL_HAL_GET_DEVICE_INFO

This IOCTL returns either the platform type or the OEMPLATFORM name based on an input value.

Syntax

```
BOOL KernelIoControl( IOCTL_HAL_GET_DEVICE_INFO, LPVOID
lpInBuf, DWORD nInBufSize, LPVOID lpOutBuf, DWORD
nOutBufSize, LPDWORD lpBytesReturned );
```

Parameters

- *lpInBuf*
Points to a DWORD containing either the SPI_GETPLATFORMTYPE or SPI_GETOEMINFO value.
- *lpInBufSize*
Must be set to sizeof(DWORD).
- *lpOutBuf*
Must point to a buffer large enough to hold the return data of the function. If SPI_GETPLATFORMTYPE is specified in *lpInBuf*, then the "PocketPC\0" Unicode string is returned. If SPI_GETOEMINFO is specified in *lpInBuf*, then the "Intermec 700\0" Unicode string is returned.
- *nOutBufSize*
The size of *lpOutBuf* in bytes. Must be large enough to hold the string returned.
- *lpBytesReturned*
The actual number of bytes returned by the function for the data requested.

Return Values

Returns TRUE if function succeeds. Returns FALSE if the function fails. GetLastError() may be used to get the extended error value.

IOCTL_HAL_ITC_READ_PARM

Usage

#include "oemioctl.h"

Syntax

```
BOOL KernelIoControl( IOCTL_HAL_ITC_READ_PARM, LPVOID
lpInBuf, DWORD nInBufSize, LPVOID lpOutBuf, DWORD
nOutBufSize, LPDWORD lpBytesReturned );
```

Parameters

- *lpInBuf*
Points to this structure. See “ID Field Values” below.

```
struct PARMS {
    BYTE id;
    BYTE ClassId;
};
```
- *nInBufSize*
Must be set to the size of the PARMS structure.
- *lpOutBuf*
Must point to a buffer large enough to hold the return data of the function. If this field is set to NULL and *nOutBufSize* is set to zero when the function is called the function will return the number bytes required by the buffer.
- *nOutBufSize*
The size of *lpOutBuf* in bytes.
- *lpBytesReturned*
The number of bytes returned by the function for the data requested.

Return Values

Returns TRUE if function succeeds. Returns FALSE if the function fails. GetLastError() may be used to get the error value. Either ERROR_INVALID_PARAMETER or ERROR_INSUFFICIENT_BUFFER may be returned when this function is used to get the error.

ID Field Values

The *id* field of the PARMS structure may be one of the following values:

- **ITC_NVPARM_ETHERNET_ID**
This IOCTL returns the Ethernet 802.11 MAC Address. Six bytes are returned in the buffer pointed to by the *lpOutBuffer* parameter.
- **ITC_NVPARM_SERIAL_NUM**
This IOCTL returns the serial number of the device in BCD format. Six bytes are returned in the buffer pointed to by the *lpOutBuffer* parameter.
- **ITC_NVPARM_MANF_DATE**
This IOCTL returns the device date of manufacture in the BCD YYYY/MM/DD format. Four bytes are returned in the buffer pointed to by the *lpOutBuffer* parameter.

- **ITC_NVPARM_SERVICE_DATE**
This IOCTL returns the device's date of last service in BCD YYYY/MM/DD format. Four bytes are returned in the buffer pointed to by the *lpOutBuffer* parameter.
- **ITC_NVPARM_DISPLAY_TYPE**
This IOCTL returns the device's display type. One byte is returned in the buffer pointed to by the *lpOutBuffer* parameter.
- **ITC_NVPARM_EDG_IP**
This IOCTL returns the device Ethernet debug IP address. Four bytes are returned in the buffer pointed to by the *lpOutBuffer* parameter.
- **ITC_NVPARM_EDBG_SUBNET**
This IOCTL returns the device Ethernet debug subnet mask. Four bytes are returned in the buffer pointed to by the *lpOutBuffer* parameter.
- **ITC_NVPARM_ECN**
This IOCTL returns ECNs applied to the device in a bit array format. Four bytes are returned in the buffer pointed to by the *lpOutBuffer* parameter.
- **ITC_NVPARM_CONTRAST**
This IOCTL returns the device default contrast setting. Two bytes are returned in the buffer pointed to by the *lpOutBuffer* parameter.
- **ITC_NVPARM_MCODE**
This IOCTL returns the manufacturing configuration code for the device. Sixteen bytes are returned in the buffer pointed to by the *lpOutBuffer* parameter.
- **ITC_NVPARM_VERSION_NUMBER**
This IOCTL returns the firmware version for various system components. These values for the *ClassId* field of the PARMS structure are allowed when ITC_NVPARM_VERSION_NUMBER is used in the *id* field:
 - **VN_CLASS_KBD**
Returns a five-byte string, including null terminator, that contains an ASCII value which represents the keypad microprocessor version in the system. The format of the string is *x.xx* with a terminating null character.
 - **VN_CLASS_ASIC**
Returns a five-byte string, including null terminator, that contains an ASCII value which represents the version of the FPGA firmware in the system. The format of the string is *x.xx* with a terminating null character.
 - **VN_CLASS_BOOTSTRAP**
Returns a five-byte string, including null terminator, that contains an ASCII value which represents the version of the Bootstrap Loader firmware in the system. The format of the string is *x.xx* with a terminating null character.

- **ITC_NVPARM_INTERMEC_SOFTWARE_CONTENT**
This IOCTL reads the manufacturing flag bits from the non-volatile data store that dictates certain software parameters. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer* that indicates if Intermec Content is enabled in the XIP regions. TRUE indicates that it is enabled. FALSE indicates that it is not enabled.
- **ITC_NVPARM_ANTENNA_DIVERSITY**
This IOCTL reads the state of the antenna diversity flag. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer* that indicates if there is a diversity antenna installed. TRUE indicates that it is installed. FALSE indicates that it is not installed.
- **ITC_NVPARM_WAN_RI**
This IOCTL reads the state of the WAN ring indicator flag. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer* that indicates the polarity of the WAN RI signal. TRUE indicates active high. FALSE indicates active low.
- **ITC_NVPARM_RTC_RESTORE**
This IOCTL reads the state of the real-time clock restore flag. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer*. TRUE indicates that the RTC will be restored upon a cold boot. FALSE indicates that the RTC will not be restored.
- **ITC_NVPARM_INTERMEC_DATACOLLECTION_SW**
This IOCTL reads the state of the data collection software enabled flag. A BOOLEAN DWORD is returned in the buffer pointer to by *lpOutBuffer* that indicates the data collection software is to be installed at boot time. FALSE indicates the data collection software should not be installed.
- **ITC_NVPARM_INTERMEC_DATACOLLECTION_HW**
This IOCTL reads the data collection hardware flags. A BYTE is returned in the buffer pointer to by *lpOutBuffer* that indicates the type of data collection hardware installed. The maximum possible value returned is ITC_DEVID_SCANHW_MAX.
 - **ITC_DEVID_SCANHW_NONE**
No scanner hardware is installed.
 - **ITC_DEVID_OEM2D_IMAGER**
OEM 2D imager is installed.
 - **ITC_DEVID_INTERMEC2D_IMAGER**
Intermec 2D imager is installed.
 - **ITC_DEVID_SE900_LASER**
SE900 laser is installed.
 - **ITC_DEVID_SE900HS_LASER**
SE900HS laser is installed.

The high bit indicates whether the S6 scanning engine is installed. The bit mask for this is ITC_DEVID_S6ENGINE_MASK. A non-zero value indicates that the S6 scanning engine is installed.

- **ITC_NVPARM_WAN_INSTALLED**
This IOCTL reads the state of the WAN radio installed flag. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer*. TRUE indicates that the WAN radio is installed. FALSE indicates that no WAN radio is installed.
- **ITC_NVPARM_WAN_FREQUENCY**
This IOCTL reads the state of the WAN radio frequency flag. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer*. TRUE indicates that the WAN radio frequency is United States. FALSE indicates that the WAN radio frequency is European.
- **ITC_NVPARM_WAN_RADIO_TYPE**
This IOCTL reads the WAN radio ID installed by manufacturing. A BYTE is returned in the buffer pointer to by *lpOutBuffer* which indicates the type of WAN radio hardware installed. The maximum possible value returned is ITC_DEVID_WANRADIO_MAX. The current definitions are:
 - **ITC_DEVID_WANRADIO_NONE**
No WAN radio installed.
 - **ITC_DEVID_WANRADIO_SIERRA_SB555**
CDMA Sierra Wireless radio.
 - **ITC_DEVID_WANRADIO_XIRCOM_GEM3503**
GSM/GPRS Intel (Xircom) radio.
 - **ITC_DEVID_WANRADIO_SIEMENS_MC45**
GSM/GPRS Siemens radio.
- **ITC_NVPARM_80211_INSTALLED**
This IOCTL reads the state of the 802.11b radio installed flag. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer*. TRUE indicates that the 802.11b radio is installed. FALSE indicates that no 802.11b radio is installed.
- **ITC_NVPARM_80211_RADIO_TYPE**
This IOCTL reads the 802.11b radio ID installed by manufacturing. A BYTE is returned in the buffer pointer to by *lpOutBuffer* that indicates the type of 802.11b radio hardware installed. The maximum possible value returned is ITC_DEVID_80211RADIO_MAX. The current definitions are:
 - **ITC_DEVID_80211RADIO_NONE**
No 802.11b radio installed.
 - **ITC_DEVID_80211RADIO_INTEL_2011B**
Intel 2011B radio installed.
- **ITC_NVPARM_BLUETOOTH_INSTALLED**
This IOCTL reads the state of the Bluetooth radio installed flag. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer*. TRUE indicates that the Bluetooth radio is installed. FALSE indicates that no Bluetooth radio is installed.

- **ITC_NVPARM_SERIAL2_INSTALLED**

This IOCTL reads the state of the serial 2 (COM2) device installed flag. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer*. TRUE indicates that the serial 2 device is installed. FALSE indicates that no serial 2 device is installed.

- **ITC_NVPARM_VIBRATE_INSTALLED**

This IOCTL reads the state of the vibrate device installed flag. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer*. TRUE indicates that the vibrate device is installed. FALSE indicates that no vibrate device is installed.

- **ITC_NVPARM_LAN9000_INSTALLED**

This IOCTL reads the state of the Ethernet device installed flag. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer*. TRUE indicates that the Ethernet device is installed. FALSE indicates that no Ethernet device is installed.

- **ITC_NVPARM_SIM_PROTECT_HW_INSTALLED**

This IOCTL reads the state of the SIM card protection hardware installed flag. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer*. TRUE indicates that the SIM card protection hardware is installed. FALSE indicates that no SIM card protection hardware is installed.

- **ITC_NVPARM_SIM_PROTECT_SW_INSTALLED**

This IOCTL reads the state of the SIM card protection software installed flag. A BOOLEAN DWORD is returned in the buffer pointed to by *lpOutBuffer*. TRUE indicates that the SIM card protection software is installed. FALSE indicates that no SIM card protection software is installed.

IOCTL_HAL_ITC_WRITE_SYSPARM

Describes and enables the registry save location.

Usage

#include "oemioctl.h"

Syntax

```
BOOL KernelIoControl( IOCTL_HAL_ITC_WRITE_SYSPARM, LPVOID
lpInBuf, DWORD nInBufSize, LPVOID lpOutBuf, DWORD
nOutBufSize, LPDWORD lpBytesReturned );
```

Parameters

- *lpInBuf*
A single byte that may be one of the *id* values. See “ID Field Values” below.
- *nInBufSize*
Must be set to the size of the *lpInBuf* in bytes.
- *lpOutBuf*
Must point to a buffer large enough to hold the data to be written to the non-volatile data store.
- *nOutBufSize*
The size of *lpOutBuf* in bytes.
- *lpBytesReturned*
The number of bytes returned by the function.

Return Values

Returns TRUE if function succeeds. Returns FALSE if the function fails. GetLastError() may be used to get the error value. Either ERROR_INVALID_PARAMETER or ERROR_INSUFFICIENT_BUFFER may be returned when this function is used to get the error.

ID Field Values

The *id* field of *lpInBuf* may be one of the following values:

- **ITC_REGISTRY_LOCATION**
This IOCTL sets the default location for where to write the registry when RegFlushKey() is called by an application. The registry may be saved to Flash, a CompactFlash storage card or a Secure Digital storage card. *lpOutBuf* must point to a buffer that contains a byte value of “1” for the CompactFlash card or “2” for the Secure Digital card to specify the location.
- **ITC_REGISTRY_SAVE_ENABLE**
This function enables or disables the save registry to non-volatile media feature of the RegFlushKey() function. *lpOutBuf* must be set to zero (FALSE) if the feature is to be disabled or one (TRUE) if the feature is to be enabled.

- **ITC_DOCK_SWITCH**

This IOCTL sets a position of the dock switch. The dock switch may be set to either “modem” or “serial” positions. *lpOutBuf* must point to a buffer that contains a byte value of either DOCK_MODEM or DOCK_SERIAL as defined in OEMIOCTL.H; the value specifies the position the switch is to be set. The call appears as follows:

```
// port = DOCK_MODEM or DOCK_SERIAL as defined in oemioctl.h
BOOL SetDockSwitch( BYTE port)
{
    DWORD cmd = ITC_DOCK_SWITCH;
    DWORD cbRet;

    return KernelIoControl( IOCTL_HAL_ITC_WRITE_SYSPARM, &cmd, sizeof(cmd),
        &port, sizeof(port), &cbRet)
}
```

- **ITC_WAKEUP_MASK**

This IOCTL sets a bit mask that represents the mask for the five programmable wakeup keys. The I/O key is not a programmable wakeup key. By default it is always the system resume key and all other keys are set to disable key wakeup. A zero in a bit position masks the wakeup for that key. A one in a bit position enables wakeup for that key. *lpOutBuf* must point to a buffer that contains a byte value of a wakeup mask consisting of the OR’ed constants as defined in OEMIOCTL.H. Only the following keys are programmable as wakeup events.

```
#define SCANNER_TRIGGER 1
#define SCANNER_LEFT 2
#define SCANNER_RIGHT 4
#define GOLD_A1 8
#define GOLD_A2 0x10
```

- **ITC_AMBIENT_KEYBOARD**

This IOCTL sets the threshold for the keypad ambient sensor. This can be a value from 0 (always off) to 255 (always on). *lpOutBuf* must point to a buffer that contains a byte value of the desired setting.

- **ITC_AMBIENT_FRONTLIGHT**

This IOCTL sets the threshold for the frontlight ambient sensor. This can be a value from 0 (always off) to 255. *lpOutBuf* must point to a buffer that contains a byte value of the desired setting.

IOCTL_HAL_GET_DEVICEID

This IOCTL returns the device ID. There are two types of device IDs supported, which are differentiated based on the size of the *output* buffer. The UUID is returned if the buffer size is set to *sizeof(UNIQUE_DEVICEID)*, otherwise the oldstyle device ID is returned.

Usage

```
#include "pkfuncs.h"
#include "deviceid.h"
```

Syntax

```
BOOL KernelIoControl( IOCTL_HAL_GET_DEVICEID, LPVOID
lpInBuf, DWORD nInBufSize, LPVOID lpOutBuf, DWORD
nOutBufSize, LPDWORD lpBytesReturned );
```

Parameters

- *lpInBuf*
Should be set to NULL. STRICT_ID settings are not supported.
- *lpInBufSize*
Should be set to zero.
- *lpOutBuf*
Must point to a UNIQUE_DEVICEID structure as defined by DEVICEID.H if the UUID is to be returned.
- *nOutBufSize*
The size of the UNIQUE_DEVICEID in bytes if the UUID is to be returned. A DEVICE_ID as defined by PKFUNCS.H is returned if the size in bytes is greater than or equal to *sizeof(DEVICE_ID)*.
- *lpBytesReturned*
The number of bytes returned by the function.

Return Values

Returns TRUE if function succeeds. Returns FALSE if the function fails. GetLastError() may be used to get the extended error value.

IOCTL_HAL_GET_OAL_VERINFO

Returns the HAL version information of the Pocket PC image.

Usage

#include "oemioctl.h"

Syntax

```
BOOL KernelIoControl( IOCTL_HAL_GET_OAL_VERINFO, LPVOID
lpInBuf, DWORD nInBufSize, LPVOID lpOutBuf, DWORD
nOutBufSize, LPDWORD lpBytesReturned );
```

Parameters

- *lpInBuf*
Should be set to NULL.
- *lpInBufSize*
Should be set to zero.
- *lpOutBuf*
Must point to a VERSIONINFO structure as defined by OEMIOCTL.H. The fields should have these values:

• cboemverinfo	sizeof (tagOemVerInfo);
• verinfover	1
• sig;	"ITC\0"
• id;	'N'
• tgtcustomer	"
• tgtplat	SeaRay
• tgtplatversion	Current build version number
• tgtcpu	"Intel\0"
• tgtcpu	"PXA250\0";
• tgtcoreversion	"
• date	Build time
• time	Build date
- *nOutBufSize*
The size of VERSIONINFO in bytes.
- *lpBytesReturned*
Returns *sizeof(PVERSIONINFO)*.

Return Values

Returns TRUE if function succeeds. Returns FALSE if the function fails. GetLastError() may be used to get the extended error value.

IOCTL_HAL_GET_BOOTLOADER_VERINFO

Returns the HAL version information of the Pocket PC image.

Usage

#include "oemioctl.h"

Syntax

```
BOOL KernelIoControl( IOCTL_HAL_GET_OAL_VERINFO, LPVOID
lpInBuf, DWORD nInBufSize, LPVOID lpOutBuf, DWORD
nOutBufSize, LPDWORD lpBytesReturned );
```

Parameters

- *lpInBuf*
Should be set to NULL.
- *lpInBufSize*
Should be set to zero.
- *lpOutBuf*
Must point to a VERSIONINFO structure as defined by OEMIOCTL.H. The fields should have these values:

• cboemverinfo	Sizeof (tagOemVerInfo);
• verinfover	1
• sig;	"ITC\0"
• id;	'B'
• tgtcustomer	"
• tgtplat	SeaRay
• tgtplatversion	Current build version number of the bootstrap loader
• tgtcputype[8];	"Intel\0";
• tgtcpu	"PXA250\0"
• tgtcoreversion	"
• date	Build time
• time	Build date
- *nOutBufSize*
The size of VERSIONINFO in bytes.
- *lpBytesReturned*
The number of bytes returned to *lpOutBuf*.

Return Values

Returns TRUE if function succeeds. Returns FALSE if the function fails. GetLastError() may be used to get the extended error value.

IOCTL_HAL_WARMBOOT

Causes the system to perform a warm-boot. The object store is retained.

Usage

#include "oemioctl.h"

Syntax

```
BOOL KernelIoControl( IOCTL_HAL_WARMBOOT, LPVOID  
lpInBuf, DWORD nInBufSize, LPVOID lpOutBuf, DWORD  
nOutBufSize, LPDWORD lpBytesReturned );
```

Parameters

- *lpInBuf*
Should be set to NULL.
- *lpInBufSize*
Should be set to zero.
- *lpOutBuf*
Should be NULL.
- *nOutBufSize*
Should be zero.

Return Values

None.

IOCTL_HAL_COLDBOOT

Causes the system to perform a cold-boot. The object store is cleared.

Usage

#include "oemioctl.h"

Syntax

```
BOOL KernelIoControl( IOCTL_HAL_COLDBOOT, LPVOID  
lpInBuf, DWORD nInBufSize, LPVOID lpOutBuf, DWORD  
nOutBufSize, LPDWORD lpBytesReturned );
```

Parameters

- *lpInBuf*
Should be set to NULL.
- *lpInBufSize*
Should be set to zero.
- *lpOutBuf*
Should be NULL.
- *nOutBufSize*
Should be zero.

Return Values

None.

IOCTL_HAL_GET_RESET_INFO

This IOCTL code allows software to check the type of the most recent reset.

Usage

#include "oemioctl.h"

Syntax

```
BOOL KernelIoControl( IOCTL_HAL_GET_RESET_INFO, LPVOID
lpInBuf, DWORD nInBufSize, LPVOID lpOutBuf, DWORD
nOutBufSize, LPDWORD lpBytesReturned );
```

Parameters

- *lpInBuf*
Should be set to NULL.
- *lpInBufSize*
Should be set to zero.
- *lpOutBuf*
Must point to a HAL_RESET_INFO structure:

```
typedef struct {
    DWORD ResetReason;           // most recent reset type
    DWORD ObjectStoreState;      // state of object store
} HAL_RESET_INFO, * PHAL_RESET_INFO;

// Reset reason types
#define HAL_RESET_TYPE_UNKNOWN 0
#define HAL_RESET_REASON_HARDWARE 1 // cold
#define HAL_RESET_REASON_SOFTWARE 2 // suspend
#define HAL_RESET_REASON_WATCHDOG 4
#define HAL_RESET_BATT_FAULT 8 // power fail
#define HAL_RESET_VDD_FAULT 16 // warm boot

// Object store state flags
#define HAL_OBJECT_STORE_STATE_UNKNOWN 0
#define HAL_OBJECT_STORE_STATE_CLEAR 1
```

- *nOutBufSize*
The size of HAL_RESET_INFO in bytes.
- *lpBytesReturned*
The number of bytes returned by the function.

Return Values

Returns TRUE if function succeeds. Returns FALSE if the function fails. GetLastError() may be used to get the extended error value.

IOCTL_HAL_GET_BOOT_DEVICE

This IOCTL code allows software to check which device CE booted from.

Usage

#include "oemioctl.h"

Syntax

```
BOOL KernelIoControl( IOCTL_HAL_GET_BOOT_DEVICE, LPVOID
lpInBuf, DWORD nInBufSize, LPVOID lpOutBuf, DWORD
nOutBufSize, LPDWORD lpBytesReturned );
```

Parameters

- *lpInBuf*
Should be set to NULL.
- *lpInBufSize*
Should be set to zero.
- *lpOutBuf*
Must point to a buffer large enough to hold a DWORD (4 bytes) that contains the boot device. The following boot devices are supported:

```
#define HAL_BOOT_DEVICE_UNKNOWN          0
#define HAL_BOOT_DEVICE_ROM_XIP          1
#define HAL_BOOT_DEVICE_ROM              2
#define HAL_BOOT_DEVICE_PCMCIA_ATA       3
#define HAL_BOOT_DEVICE_PCMCIA_LINEAR    4
#define HAL_BOOT_DEVICE_IDE_ATA          5
#define HAL_BOOT_DEVICE_IDE_ATAPI        6
```
- *nOutBufSize*
The size of lpOutBuf in bytes (4).
- *lpBytesReturned*
The number of bytes returned by the function.

Return Values

Returns TRUE if function succeeds. Returns FALSE if the function fails. GetLastError() may be used to get the extended error value.

IOCTL_HAL_REBOOT

Causes the system to perform a warm-boot. The object store is retained.

Usage

#include "oemioctl.h"

Syntax

```
BOOL KernelIoControl( IOCTL_HAL_REBOOT, LPVOID  
lpInBuf, DWORD nInBufSize, LPVOID lpOutBuf, DWORD  
nOutBufSize, LPDWORD lpBytesReturned );
```

Parameters

- *lpInBuf*
Should be set to NULL.
- *lpInBufSize*
Should be set to zero.
- *lpOutBuf*
Should be NULL.
- *nOutBufSize*
Should be zero.

Return Values

None.

IOCTL_PROCESSOR_INFORMATION

Returns processor information.

Usage

#include "pkfuncs.h"

Syntax

```
BOOL KernelIoControl( IOCTL_PROCESSOR_INFORMATION, LPVOID
lpInBuf, DWORD nInBufSize, LPVOID lpOutBuf, DWORD
nOutBufSize, LPDWORD lpBytesReturned );
```

Parameters

- *lpInBuf*
Should be set to NULL.
- *lpInBufSize*
Should be set to zero.
- *lpOutBuf*
Should be a pointer to the PROCESSOR_INFO structure. The PROCESSOR_INFO structure stores information that describes the CPU more descriptively.

```
typedef __PROCESSOR_INFO {
WORD    wVersion;           // Set to value 1
WCHAR   szProcessorCore[40]; // "ARM\0"
WORD    wCoreRevision;      // 4
WCHAR   szProcessorName[40]; // "PXA250\0"
WORD    wProcessorRevision;  // 0
WCHAR   szCatalogNumber[100]; // 0
WCHAR   szVendor[100];       // "Intel Corporation\0"
DWORD   dwInstructionSet;     // 0
DWORD   dwClockSpeed;        // 400
}
```

- *nOutBufSize*
Should be set to sizeof(PROCESSOR_INFO) in bytes.
- *lpBytesReturned*
Returns sizeof(PROCESSOR_INFO);

Return Values

Returns TRUE if function succeeds. Returns FALSE if the function fails. GetLastError() may be used to get the extended error value.

IOCTL_GET_CPU_ID

Returns Xscale processor ID.

Usage

#include "oemioctl.h"

Syntax

```
BOOL KernelIoControl( IOCTL_GET_CPU_ID, LPVOID lpInBuf,  
DWORD nInBufSize, LPVOID lpOutBuf, DWORD nOutBufSize, LPDWORD  
lpBytesReturned );
```

Parameters

- *lpInBuf*
Should point to a CPUIdInfo structure defined in OEMIOCTL.H.
- *lpInBufSize*
Should be *sizeof(CPUIdInfo)*.
- *lpOutBuf*
Should be NULL.
- *nOutBufSize*
Should be set to 0.
- *lpBytesReturned*
Returns *sizeof(PROCESSOR_INFO)*;

Return Values

Returns TRUE if function succeeds. Returns FALSE if the function fails. GetLastError() may be used to get the extended error value.

Network Selection APIs

The Network Selection APIs change the network adapter configuration programmatically. Both drivers support the same IOCTL function numbers for loading and unloading the drivers.

Loading and unloading of the 802.11b driver is performed by the FWL1: device in the system by performing DeviceIOControl() calls to the driver.

Loading and unloading of the driver for the built-in Ethernet adapter is performed by the SYI1: device in the system by performing DeviceIOControl() calls to the driver.

- For loading an NDIS driver associated with an adapter, the IOCTL is IOCTL_LOAD_NDIS_MINIPORT.
- For unloading NDIS drivers associated with an adapter the IOCTL is IOCTL_UNLOAD_NDIS_MINIPORT.

Example

```
#include <winioctl.h>
#include "sysio.h"
void DoLoad(int nDevice) {
    LPTSTR devs[] = { _T("SYI1:"), _T("FWL1:") };
    HANDLE hLoaderDev;
    DWORD bytesReturned;
    hLoaderDev = CreateFile(devs[nDevice], GENERIC_READ|GENERIC_WRITE, 0,
        NULL, OPEN_EXISTING, 0, NULL);
    if (hLoaderDev != INVALID_HANDLE_VALUE) {
        if (!DeviceIoControl(hLoaderDev, IOCTL_LOAD_NDIS_MINIPORT, NULL, -1, NULL, 0,
            &bytesReturned, NULL)){
            MessageBox(NULL, TEXT("SYSIO IoControl Failed"), TEXT("Network
                loader"), MB_ICONHAND);
            if (hLoaderDev!=INVALID_HANDLE_VALUE) CloseHandle(hLoaderDev);
            hLoaderDev = INVALID_HANDLE_VALUE; // bad handle
        }else {
            CloseHandle(hLoaderDev);
        }
    }
}

void DoUnload(int nDevice) {
    LPTSTR devs[] = { _T("SYI1:"), _T("FWL1:") };
    HANDLE hLoaderDev;
    DWORD bytesReturned;
    hLoaderDev = CreateFile(devs[nDevice], GENERIC_READ|GENERIC_WRITE, 0,
        NULL, OPEN_EXISTING, 0, NULL);
    if (hLoaderDev != INVALID_HANDLE_VALUE) {
        if (!DeviceIoControl(hLoaderDev, IOCTL_UNLOAD_NDIS_MINIPORT, NULL, -1, NULL, 0,
            &bytesReturned, NULL)){
            MessageBox(NULL, TEXT("SYSIO IoControl Failed"), TEXT("Network
                loader"), MB_ICONHAND);
            if (hLoaderDev!=INVALID_HANDLE_VALUE) CloseHandle(hLoaderDev);
            hLoaderDev = INVALID_HANDLE_VALUE; // bad handle
        }else {
            CloseHandle(hLoaderDev);
        }
    }
}
```

The API provided by Intermec Technologies exposes a limited set of routines that allows a programmer to access and affect the 802.11b network interface card from within their application. The routines provided will also read/write values to the CE registry that pertain to the 802.11b radio driver. By using the provided functions, a programmer can alter the 802.11b parameters of Network Name (SSID), WEP Keys, Infrastructure Modes, Radio Channel, and Power Management Modes. A programmer can also retrieve network connect status and signal strength indication from the RF network card.

The API is contained within the 80211API.DLL file that should be present in any load that has the 802.11b networking installed.

- **NETWLAN.DLL**
This file is the 802.11b driver. It will be present in all 700 CE loads that use the 802.11b network interface card.
- **80211API.DLL**
This file is an Intermec authored file that provides the programmer with a set of API calls to configure or monitor status of the 802.11b network.
- **MOD80211.DLL**
The CORE module for the 802.11b NIC. It provides the 802.11b status information displayed when the CORE application is running.
- **80211CONF.EXE**
This is the “Control Panel” for configuring the 802.11b network parameters. Note that it is an EXE file and is actually called by CPL802.CPL (see below). It is also called by the CORE application when the “Configuration” button is pressed.
- **CPL802.CPL**
A control panel application that does nothing but call 80211CONF.EXE.
- **80211SCAN.EXE**
Internally manages the Scan List activity.

The 80211API.DLL supports an unlimited number of radio configuration profiles. These profiles are the same as those set by the **Wireless Network** control panel applet that runs on the Windows CE unit. You can configure different 802.11b profiles and switch between them using the 802.11 API. See the `ConfigureProfile()` function on page 319 for more information.

Below are functions available for the 700 Series Color Computer when enabled with the 802.11b radio module.

RadioConnect()

Connects to the available radio. Use this function if you plan on using a lot of API calls that talk directly to the radio.

Syntax

```
UINT RadioConnect( );
```

Parameters

None.

Returns

ERROR_SUCCESS when successful, otherwise
ERR_CONNECT_FAILED.

RadioDisconnect()

Cleans up the connection from the RadioConnect() function after an application closes.

Syntax

```
UINT RadioDisconnect( );
```

Parameters

None.

Returns

ERROR_SUCCESS when successful, otherwise
ERR_CONNECT_FAILED.

GetMac()

Gets the radio MAC address.

Syntax

```
UINT GetMac( TCHAR * );
```

Parameters

Pointer to a character array, which is populated with MAC addresses.

Returns

ERROR_SUCCESS when successful,
ERR_QUERY_FAILED when the query failed, or
ERR_CONNECT_FAILED if a connection with the radio failed.

GetBSSID()

Gets the associated access point name, the BSSID.

Syntax

```
UINT GetBSSID( TCHAR * );
```

Parameters

Pointer to a character array, which is populated with the current BSSID.

Returns

ERROR_SUCCESS when successful,
ERR_QUERY_FAILED when the query failed, or
ERR_CONNECT_FAILED if a connection with the radio failed

GetSSID()

Gets the current SSID (network name).

Syntax

```
UINT GetSSID( TCHAR * );
```

Parameters

Pointer to a character array, which is populated with the current SSID.

Returns

ERROR_SUCCESS when successful,
ERR_QUERY_FAILED when the query failed, or
ERR_CONNECT_FAILED if a connection with the radio failed.


GetLinkSpeed()

Retrieves the current link speed of the radio connection.

Syntax

```
UINT GetLinkSpeed( int & );
```

Parameters

-  References an integer.

Returns

ERROR_SUCCESS when successful,
ERR_QUERY_FAILED when the query failed, or
ERR_CONNECT_FAILED if a connection with the radio failed.


GetNetworkType()

Retrieves the network type.

Syntax

```
UINT GetNetworkType( ULONG & );
```

Parameters

-  References a ULONG value, populated with one of the following:
 - NDIS_NET_TYPE_FH
Frequency Hopping Radio
 - NDIS_NET_TYPE_DS
Direct Sequence Radio
 - NDIS_NET_TYPE_UNDEFINED
Unknown or information not available.

Returns

ERROR_SUCCESS when successful,
 ERR_QUERY_FAILED when the query failed, or
 ERR_CONNECT_FAILED if a connection with the radio failed.


GetTXPower()

Gets the current TX power of the radio in milliwatts.

Syntax

```
UINT GetTXPower( ULONG & );
```

Parameters

-  References a ULONG value, populated with one of the following in milliwatts (mW):
 - NDIS_POWER_LEVEL_63
63 mW.
 - NDIS_POWER_LEVEL_30
30 mW.
 - NDIS_POWER_LEVEL_15
15 mW.
 - NDIS_POWER_LEVEL_5
5 mW.
 - NDIS_POWER_LEVEL_1
1 mW.
 - NDIS_POWER_LEVEL_UNKNOWN
Unknown Value or Error.

Returns

ERROR_SUCCESS when successful,
 ERR_QUERY_FAILED when the query failed, or
 ERR_CONNECT_FAILED if a connection with the radio failed.


GetNetworkMode()

Retrieves the network mode.

Syntax

```
UINT GetNetworkMode( ULONG & );
```

Parameters

-  References a ULONG value, populated with one of the following:
 - NDIS_NET_MODE_IBSS
802.11 Ad-Hoc Mode.
 - NDIS_NET_MODE_ESS
802.11 Infrastructure Mode.
 - NDIS_NET_MODE_UNKNOWN
Unknown Value or Error.
 - NDIS_NET_AUTO_UNKNOWN
Automatic Selection. *Use of this option is not recommended.*

Returns

ERROR_SUCCESS when successful,
ERR_QUERY_FAILED when the query failed, or
ERR_CONNECT_FAILED if a connection with the radio failed.


SetNetworkMode()

Sets the radio and updates the CE registry.

Syntax

```
UINT SetNetworkMode( ULONG & );
```

Parameters

-  References a ULONG value, populated with one of the values defined in GetNetworkMode().

Returns

ERROR_SUCCESS when successful,
ERR_QUERY_FAILED when the query failed, or
ERR_CONNECT_FAILED if a connection with the radio failed.

AddWep()

Adds a WEP key to the radio configuration.

Syntax

```
UINT AddWep( ULONG 1, BOOL 2, TCHAR * 3 );
```

Parameters

- *ULONG*
Pointer that identifies what key to be set.
- *BOOL*
Specifies whether the key being set is the default TX key.
- *TCHAR*
Pointer that specifies the key data either in hex (string lengths of 10 or 26) or ASCII (string lengths of 5 or 13).

Returns

ERROR_SUCCESS when successful,
ERR_QUERY_FAILED when the query failed, or
ERR_CONNECT_FAILED if a connection with the radio failed.

GetRSSI()

Sets the current RSSI (Received Signal Strength Indication).

Syntax

```
UINT GetRSSI( ULONG & );
```

Parameters

- 
References a ULONG value.

Returns

ERROR_SUCCESS when successful,
ERR_QUERY_FAILED when the query failed, or
ERR_CONNECT_FAILED if a connection with the radio failed.


GetAssociationStatus()

Gets the current connection, or association status.

Syntax

```
UINT GetAssociationStatus( ULONG & );
```

Parameters

-  References a ULONG value, a current connection status as follows:
 - **NDIS_RADIO_ASSOCIATED**
Radio is associated with an access point.
 - **NDIS_RADIO_SCANNING**
Radio is scanning for network.

Returns

ERROR_SUCCESS when successful,
ERR_QUERY_FAILED when the query failed, or
ERR_CONNECT_FAILED if a connection with the radio failed.


GetWepStatus()

Gets the current WEP status.

Syntax

```
UINT GetWepStatus( ULONG & );
```

Parameters

-  References a ULONG status value which include the following:
 - **NDIS_RADIO_WEP_ENABLED**
WEP is currently enabled.
 - **NDIS_RADIO_WEP_DISABLED**
WEP is currently disabled.
 - **NDIS_RADIO_WEP_ABSENT**
WEP key is absent.
 - **NDIS_RADIO_WEP_NOT_SUPPORTED**
WEP is not supported.

Returns

ERROR_SUCCESS when successful,
ERR_QUERY_FAILED when the query failed, or
ERR_CONNECT_FAILED if a connection with the radio failed.


GetAuthenticationMode()

Gets the current authentication mode.

Syntax

```
UINT GetAuthenticationMode( ULONG & );
```

Parameters

-  References a ULONG value which include the following current authentication mode:
 - NDIS_RADIO_AUTH_MODE_OPEN
Open System is in use.
 - NDIS_RADIO_AUTH_MODE_SHARED
Shared Key is in use.
 - NDIS_RADIO_AUTH_MODE_AUTO
Automatic Detection.
 - NDIS_RADIO_AUTH_MODE_ERROR
Unknown value/Error.

Returns

ERROR_SUCCESS when successful,
 ERR_QUERY_FAILED when the query failed, or
 ERR_CONNECT_FAILED if a connection with the radio failed.

SetAuthenticationMode()

Sets the radio authentication mode with a value defined in the GetAuthenticationMode() function.

Syntax

```
UINT SetAuthenticationMode( ULONG );
```

Parameters

Passes in a ULONG set to one of the values as defined in GetAuthenticationMode().

Returns

ERROR_SUCCESS when successful,
 ERR_QUERY_FAILED when the query failed, or
 ERR_CONNECT_FAILED if a connection with the radio failed.

SetChannel()

Sets the radio channel, ranging from 1 to 14.

Syntax

```
UINT SetChannel( USHORT );
```

Parameters

USHORT set to a desired channel (1-14).

Returns

ERROR_SUCCESS when successful,
ERR_QUERY_FAILED when the query failed, or
ERR_CONNECT_FAILED if a connection with the radio failed.

EnableWep()

Enables or disables WEP encryption.

Syntax

```
UINT EnableWep( BOOL );
```

Parameters

Set to TRUE (0) to enable WEP encryption or FALSE (1) to disabled WEP encryption.

Returns

ERROR_SUCCESS when successful,
ERR_QUERY_FAILED when the query failed, or
ERR_CONNECT_FAILED if a connection with the radio failed.


GetPowerMode()

Gets the current power management mode of the radio.

Syntax

```
UINT GetPowerMode( ULONG & );
```

Parameters

-  References a ULONG value which include the following current radio power management mode:
 - **NDIS_RADIO_POWER_MODE_CAM**
Continuous Access Mode (*uses most power*).
 - **NDIS_RADIO_POWER_MODE_MAX**
Maximum Power Savings.
 - **NDIS_RADIO_POWER_MODE_PSP**
Power Saving Mode, best balance of power and performance.
 - **NDIS_RADIO_POWER_UNKNOWN**
Unknown mode reported or error.

Returns

ERROR_SUCCESS when successful,
 ERR_QUERY_FAILED when the query failed, or
 ERR_CONNECT_FAILED if a connection with the radio failed.

SetSSID()

Passes the desired SSID (network name).

Syntax

```
UINT SetSSID( TCHAR * );
```

Parameters

Pointer to a character array that contains the desired SSID.

Returns

ERROR_SUCCESS when successful,
 ERR_QUERY_FAILED when the query failed, or
 ERR_CONNECT_FAILED if a connection with the radio failed.

isOrinoco()

Confirms whether the present radio is an ORiNOCO radio.

Syntax

```
UINT isOrinoco( );
```

Parameters

None.

Returns

TRUE when an ORiNOCO radio.

FALSE when other than an ORiNOCO radio.

EncryptWepKeyForRegistry()

Encrypts a key for registry storage. Requires TCHAR pointers for a destination and a source.

Syntax

```
UINT EncryptWepKeyForRegistry( TCHAR * szDest, TCHAR * szSource );
```

Parameters

- *szDest*
String for the destination.
- *szSource*
String for the source.

Returns

ERROR_SUCCESS when successful,

ERR_QUERY_FAILED when the query failed, or

ERR_CONNECT_FAILED if a connection with the radio failed.

SetRTSThreshold()

Sets the radio RTS (Request To Send) threshold.

Syntax

```
UINT SetRTSThreshold( USHORT & );
```

Parameters

- 
References a USHORT value.

Returns

None.

GetRTSThreshold()

Gets the radio RTS threshold.

Syntax

```
UINT GetRTSThreshold( USHORT & );
```

Parameters

-  References a USHORT value.

Returns

None.

ConfigureProfile()

If using the Intermec 802.11b Profile Management system, you can program the API to configure the radio to a specific profile by passing the profile name.

Syntax

```
UINT ConfigureProfile( TCHAR * );
```

Parameters

Pointer to a string that contains the name of the profile to be activated.

Returns

None.

StartScanList()

If a scan list is configured, this will start the API looking for a network on that scan list and configuring the radio appropriately. This call can take a long time to process.

Syntax

```
UINT StartScanList( );
```

Parameters

None.

Returns

None.

Reboot Functions

There are several methods, via Kernel I/O Control functions, that an application program can use to force the 700 Series Computer to reboot.

IOCTL_HAL_REBOOT

IOCTL_HAL_REBOOT performs a warm-boot. See page 304.

IOCTL_HAL_COLDBOOT

Invoking the KernelIOControl function with IOCTL_HAL_COLDBOOT forces a cold reboot. This resets the 700 Series Computer and reloads Windows CE as if a power-up had been performed. The contents of the Windows CE RAM-based object store are discarded. See page 301.

IOCTL_HAL_WARMBOOT

This function is supported on the 700 Series Computers. It performs a warm boot of the system, preserving the object store. See page 301.

Remapping the Keypad



Note; Use caution when remapping the keypad. Improper remapping may render the keypad unusable. Data within the 700 Series Computer could also be lost, should any problems occur.

Applications have the ability to remap keys on the 700 Color Numeric Keypad and 700 Color Alphanumeric Keypad. This will allow applications to enable keys that would otherwise not be available, such as the [F1] function key. Also, to disable keys that should not be available, such as the alpha key because no alpha entry is required. Care should be exercised when attempting to remap the keypad because improper remapping may cause the keypad to become unusable. This can be corrected by cold booting the device which will cause the default keymap to be loaded again.

Note that remapping the keys in this way affects the key mapping for the entire system, not just for the application that does the remapping.

There are three “planes” supported for the 700 Color Numeric Keypad and Alphanumeric Keypad. Keys that are to be used in more than one shift plane must be described in each plane.

Unshifted Plane

The unshifted plane contains values from the keypad when not pressed with other keys, such as the following:

Press the Keys		
Numeric Keypad	Alphanumeric Keypad	To Enter This
		1
		5
		9






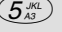



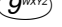


Gold Plane

The gold plane contains values from the keypad when a key is simultaneously pressed with the [Gold] key on the numeric keypad or the [Gold/White] key on the alphanumeric keypad, such as the following:

Press the Keys		
Numeric Keypad	Alphanumeric Keypad	To Enter This
[Gold]	[Gold/White]	Send
[Gold]	[Gold/White]	A3
[Gold]	[Gold/White]	PgDn

Alpha (Blue) Plane

The alpha plane contains values from the keypad when the keypad has been placed in alpha mode by pressing the blue alpha key, such as the following:

Press the Keys			
Numeric Keypad		Alphanumeric Keypad	To Enter This
[Alpha]  		[Alpha]  	Caps
[Alpha]  		[Alpha]  	j
[Alpha]  		[Alpha]  	w

Key Values

Key values for each plane are stored in the registry. All units ship with a default key mapping already loaded in the registry. Applications that wish to change the default mapping need to read the appropriate key from the registry into an array of Words, modify the values required and then write the updated values back into the registry. The registry access can be done with standard Microsoft API calls, such as `RegOpenKeyEx()`, `RegQueryValueEx()`, and `RegSetValueEx()`.

Numeric Keypad

For the 700 Color Numeric Keypad, the following registry keys contain the plane mappings:

- The unshifted plane mapping can be found in the registry at:

```
HKEY_LOCAL_MACHINE\HARDWARE\DEVICEMAP\KEYBD\Vkey
```

- The gold plane mapping can be found in the registry at:

```
HKEY_LOCAL_MACHINE\HARDWARE\DEVICEMAP\KEYBD\VkeyGold
```

- The alpha plane mapping can be found in the registry at:

```
HKEY_LOCAL_MACHINE\HARDWARE\DEVICEMAP\KEYBD\VkeyAlpha
```

Alphanumeric Keypad

For the 700 Color Alphanumeric Keypad, the following registry keys contain the plane mappings:

- The unshifted plane mapping can be found in the registry at:

```
HKEY_LOCAL_MACHINE\HARDWARE\DEVICEMAP\KEYBD\ALPHA\Vkey
```

- The gold plane mapping can be found in the registry at:

```
HKEY_LOCAL_MACHINE\HARDWARE\DEVICEMAP\KEYBD\ALPHA\VkeyGold
```

- The alpha plane mapping can be found in the registry at:

```
HKEY_LOCAL_MACHINE\HARDWARE\DEVICEMAP\KEYBD\ALPHA\VkeyAlpha
```


How Key Values Are Stored in Registry

To know which fields to update in the registry, you must know what Scan Codes are assigned to each physical key (see the “*Keypad Scan Codes and Meanings*” table on the next page). The Scan Code is used at the lowest level of the system to let the keypad driver know which physical key has been pressed. The keypad driver takes that scan code and looks it up in a table (a copy of the one stored in the registry) to determine which values to pass on to the operating system.

Each registry key is just an array that describes to the keypad driver what value needs to be passed for each physical key. The key values are indexed by the scan code, this is a zero-based index. For example in the unshifted plane, the [4] key has a scan code of 0x06. This means that the seventh word under the “Vkey” registry key will have the value for the [4] key. Taking a sample of the “Vkey” registry key shows the following values:

```
00, 00, 0B, 05, 02, 03, C1, 07, 04, 03, BE, 00, 34, 00, 00, 00, . . .
```

The value is 34,00. The values are in reverse byte order because that is the way the processor handles data. When writing an application, nothing needs to be done to swap the bytes, as this will happen automatically when the data is read into a byte value. This is something you just need to be aware of this when looking at the registry. Knowing this, we can see that the value that the keypad driver will pass to the system is a hex 34. Looking that up on an UNICODE character chart, we see that it maps to a “4”. If you wanted the key, labeled “4”, to output the letter “A” instead, you would need to change the seventh word to “41” (the hexadecimal representation of “A” from the UNICODE chart), then put the key back into the registry.



Note: Do not remap scan codes 0x01, 0x41, 0x42, 0x43, 0x44. Remapping these scan codes could render your 700 Series Computer unusable until a cold-boot is performed.

If you wish to disable a certain key, remap its scan code to 0x00.

Change Notification

Just changing the registry keys will not immediately change the key mappings. To notify the keypad driver that the registry has been updated, signal the “ITC_KEYBOARD_CHANGE” named event using the CreateEvent() API.

Advanced Keypad Remapping

It is also possible to map multiple key presses to one button and to map named system events to a button. The multiple key press option could be useful to cut down on the number of keys needed to press in a given situation or to remap which key behaves like the action key. Mapping events to a button could be useful to change which buttons will fire the scanner, control volume, and allow for suspending and resuming the device. If you need help performing one of these advanced topics please contact Intermec Technical Support.




















Scan Codes

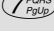At the lowest driver level, the 700 Color Numeric Keypad and the 700 Color Alphanumeric Keypad identifies keys as scan codes. These scan codes are sent via the keypad microcontroller, and cannot be changed without modifying the keypad firmware.





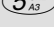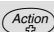

Numeric Keypad

The following scan codes pertain to the 700 Color Numeric keypad:

Numeric Keypad Scan Codes and Meanings

Press this Key	Meaning	ScanCode
	Reserved	0x00
	I/O button	0x01
	Scanner Handle Trigger	0x02
	Scanner Left	0x03
	Scanner Right	0x04
	4/GHI/A2	0x06
	None	0x07
	Left arrow/Back Tab	0x08
	None	0x09
	BkSp// (forward slash)	0x0A
	[Gold] key	0x0B
	None	0x0C
	Esc/- (minus sign)	0x0D
	Down arrow/Volume decrease	0x0E
	1/Caps/Send	0x0F
	7/PQRS/PgUp	0x10
	[Alpha] key	0x11
	None	0x12
	Up arrow/Volume increase	0x13
	Right arrow/Tab	0x14
	2/ABC/End	0x15
	8/TUV/* (asterisk)	0x16
	0/Win	0x17
	5/JKL/A3	0x18
	None	0x19
	Action/+ (plus symbol)	0x1A
	3/DEF/backlight	0x1B
	9/WXYZ/PgDn	0x1C









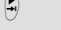






Numeric Keypad Scan Codes and Meanings (continued)

Press this Key	Meaning	ScanCode
	Enter/@ (at symbol)	0x1D
	6/MNO/A4	0x1E
	None	0x1F–0x40
	Charge Detect	0x41
	LCD frontlight	0x42
	Ambient light	0x42
	Threshold crossed	0x42
	Headset detected	0x43
	Keypad Backlight	0x44
	Ambient Light	0x44
	Threshold Crossed	0x44

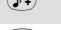

















 








Alphanumeric Keypad

The following scan codes pertain to the 700 Color Alphanumeric keypad:

Alphanumeric Keypad Scan Codes and Meanings

Press this Key	Meaning	ScanCode
	Reserved	0x00
	I/O button	0x01
	Scanner Handle Trigger	0x02
	Scanner Left	0x03
	Scanner Right	0x04
	A/A1 key	0x05
	B/A2 key	0x06
	Escape/Send	0x07
	Left arrow/Back Tab	0x08
	Up arrow/Volume increase	0x09
	Down arrow/Volume decrease	0x0A
	Right arrow/Tab	0x0B
	Action/End	0x0C
	E/Win	0x0D
	F/= (equal sign)	0x0E
	G/* (asterisk)	0x0F
	C/A3	0x10
	H// (forward slash)	0x11
	D/A4	0x12

Alphanumeric Keypad Scan Codes and Meanings (continued)

Press this Key	Meaning	ScanCode
	J/PgUp	0x13
	K/@ (as symbol)	0x14
	L/- (minus sign)	0x15
	M/1	0x16
	N/2	0x17
	I/backlight	0x18
	P/PgDn	0x19
	Q/, (comma)	0x1A
	R/+ (plus sign)	0x1B
	S/4	0x1C
	T/5	0x1D
	O/3	0x1E
	Caps/Lock	0x1F
	BkSp	0x20
	V/. (period)	0x21
	W/7	0x22
	X/8	0x23
	U/6	0x24
	Gold/White	0x25
	NumLock	0x26
	Space	0x27
	Z/0	0x28
	Enter	0x29
	Y/9	0x2A
	None	0x2B–0x40
	Charge Detect	0x41
	LCD frontlight	0x42
	Ambient light	0x42
	Threshold crossed	0x42
	Headset detected	0x43
	Keypad Backlight	0x44
	Ambient Light	0x44
	Threshold Crossed	0x44

Sample View of Registry Keys

The following is a sample view of the current default key mapping for the 700 Color Numeric Keypad. See the registry on your device for the latest key mappings.

```
[HKEY_LOCAL_MACHINE\HARDWARE\DEVICEMAP\KEYBD]
"ResumeMask"=dword:7
"Vkey"=hex: 00,00,0B,05,02,03,C1,07,04,03,BE,00,34,00,00,00,\
 25,00,00,00,08,00,03,02,00,00,1B,00,28,00,31,00,\
 37,00,01,02,00,00,26,00,27,00,32,00,38,00,30,00,\
 35,00,00,00,01,03,33,00,39,00,0D,00,36,00,00,00,\
 00,00,00,00,00,00,00,00,00,00,00,00,00,00,00,\
 00,00,00,00,00,00,00,00,00,00,00,00,00,00,00,\
 00,00,00,00,00,00,00,00,00,00,00,00,00,00,00,\
 00,00,00,00,00,00,00,00,00,00,00,00,00,00,00,\
 00,00,07,05,01,05,03,05,02,05
"VkeyGold"=hex: 00,00,0B,05,02,03,C1,07,04,03,BE,00,34,00,00,00,\
 09,01,00,00,BF,00,03,02,00,00,BD,00,75,00,72,00,\
 21,00,01,02,00,00,76,00,09,00,73,00,38,01,5B,00,\
 35,00,00,00,BB,01,09,05,22,00,32,01,36,00,00,00,\
 00,00,00,00,00,00,00,00,00,00,00,00,00,00,00,\
 00,00,00,00,00,00,00,00,00,00,00,00,00,00,00,\
 00,00,00,00,00,00,00,00,00,00,00,00,00,00,00,\
 00,00,00,00,00,00,00,00,00,00,00,00,00,00,00,\
 00,00,07,05,01,05,03,05,02,05
"VkeyAlpha"=hex: 00,00,0B,05,02,03,C1,07,04,03,BE,00,47,00,00,00,\
 25,00,00,00,08,00,03,02,00,00,1B,00,28,00,02,02,\
 50,00,01,02,00,00,26,00,27,00,41,00,54,00,20,00,\
 4A,00,00,00,01,03,44,00,57,00,0D,00,4D,00,00,00,\
 00,00,00,00,00,00,00,00,00,00,00,00,00,00,00,\
 00,00,00,00,00,00,00,00,00,00,00,00,00,00,00,\
 00,00,00,00,00,00,00,00,00,00,00,00,00,00,00,\
 00,00,00,00,00,00,00,00,00,00,00,00,00,00,00,\
 00,00,07,05,01,05,03,05,02,05
```

Notifications

Use the following information to programmatically control the vibrator, to write an application to turn on the vibrator when a message is received via the WLAN radio link, and turn it off when the user hits a key.

Vibrator support is implemented in the NLED driver as a false LED. The vibrator is LED 5 and is identified with an CycleAdjust of -1. The vibrate option is only available in the notifications panel when the vibrator is present in the system.

Regarding an applications interface to NLED.DLL, LEDs must be available for use by applications. This is possible via two functions exported by the COREDLL.DLL file. To use the LED functions, declare these as extern "C" as follows:

```
extern "C" BOOL WINAPI NLEDGetDeviceInfo(UINT nInfoId,
void *pOutput);
extern "C" BOOL WINAPI NLEDSetDevice( UINT nDeviceId, void
*pInput);
```

The LEDs are enumerated for access through the data structures associated with these APIs:

- Notification LED 0
- Radio On LED 1
- Alpha Lock LED 2
- Scanner LED 3
- Low Battery 4
- Vibrator 5

NLEDGetDeviceInfo()

Usage

#include “nled.h”

Syntax

```
BOOL NLEDGetDeviceInfo ( UINT nInfoId, void *pOutput );
```

Parameters

- *nInfoId*
Integer specifying the information to be returned. The following values are defined:
 - **NLED_COUNT_INFO**
Indicates that the *pOutput* buffer specifies the number of LEDs on the device.
 - **NLED_SUPPORTS_INFO_ID**
Indicates that the *pOutput* buffer specifies information about the capabilities supported by the LED.
 - **NLED_SETTINGS_INFO_ID**
Indicates that the *pOutput* buffer contains information about the LED current settings.
- *pOutput*
Pointer to the buffer to which the information is returned. The buffer points to various structure types defined in “nled.h”, depending on the value of *nId*, as detailed in the following table:

Value of <i>nId</i>	Structure in <i>pOutput</i>
NLED_COUNT_INFO	NLED_COUNT_INFO
NLED_SUPPORTS_INFO	NLED_SUPPORTS_INFO
NLED_SETTINGS_INFO	NLED_SETTINGS_INFO

NLEDSetDevice()

Usage

#include “nled.h”

Syntax

```
BOOL NLEDSetDevice ( UINT nDeviceId, void *pInput );
```

Parameters

- *nDeviceId*
Integer specifying the device identification. The following is defined:
 - **NLED_SETTINGS_INFO_ID**
Contains information about the desired LED settings.
- *pInput*
Pointer to the buffer that contains the NLED_SETTINGS_INFO structure.



A Configurable Settings

This appendix contains information about the Data Collection, SNMP, Unit Information, Utilities, and Wireless Network control panel applets that may be on your 700 Series Color Mobile Computer.

SNMP and Data Collection settings that can appear under **Settings** are dependent on what hardware configuration is done for each 700 Series Computer at the time of shipment. These settings will currently only appear if a scanner or an imager option is present.

Likewise, other control panel applets that are specifically related to the 802.11b radio module will appear when a 802.11b radio module is installed in a 700 Series Computer. Control panel applets that are specific for Wireless Printing, CDMA/1xRTT, and GSM/GPRS radio modules will only appear when each respective hardware configuration is done on the 700 Series Computer. *See Chapter 4, “Network Support,” for more information about the radio modules or the wireless printing.*

Information about using reader commands to configure some of your settings is also in this appendix.

Configuration Parameters

A configuration parameter changes the way the 700 Series Color Mobile Computer operates, such as configuring a parameter to have the 700 Series Computer emit a very loud beep in a noisy environment. Use any of the following methods to execute configuration parameters:

- Change Data Collection and SNMP parameters via control panel applets later in this appendix.
- Send parameters from an SNMP management station. See “*SNMP Configuration on the 700 Series Computer*” starting on page 132.
- Scan EasySet bar codes. You can use the EasySet bar code creation software from Intermec Technologies Corporation to print configuration labels. Scan the labels to change the scanner configuration and data transfer settings.

Changing a Parameter Setting


Menus of available parameters for each group are listed. Use the scroll bars to go through the list. Expand each menu (+) to view its parameter settings. Tap a parameter to select, or expand a parameter (+) to view its subparameters.

Note that each parameter or subparameter is shown with its default setting or current setting in (< >) brackets. Tap a parameter or subparameter to select that parameter, then do any of the following to change its setting: Tap **Apply** to apply any changes. *Note that these illustrations are from a Symbolologies parameter.*

- Typing a new value in an entry field.
- Choosing a new value from the drop-down list.
- Selecting a different option. The selected option contains a bullet.
- Tap **Defaults**, then **Apply** to restore factory-default settings. Tap **Yes** when you are prompted to verify this action.



- Tap **Refresh** to discard changes and start again. Tap **Yes** when you are prompted to verify this action.

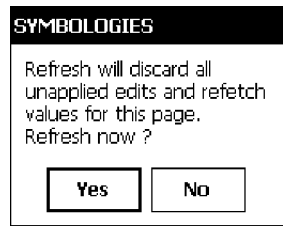

About Configuration Parameters

You can find the following information about each configuration parameter:

- **Name and Purpose:**
Describes the parameter and its function.
- **Action:**
Describes what to do with a parameter once that parameter is selected.
- **SNMP OID:**
Lists the SNMP OID for the parameter.
- **Syntax or Options:**
Syntax lists the two-character code for the parameter, if the parameter is configurable by scanning a bar code or by sending parameters through a network. Both **Syntax** and **Options** list acceptable values for the parameter. *Default settings are noted in italic.*


Data Collection Control Panel Applet

See “Scanner Control and Data Transfer” in the *Intermec Windows CE/ Pocket PC Software Developer’s Kit (SDK) User’s Manual* shipped with the Software Developer’s Kit (SDK) for information about data collection functions.

Note: Icons are shown to the left.



To access the settings from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Data Collection** icon to access its control panel applet.

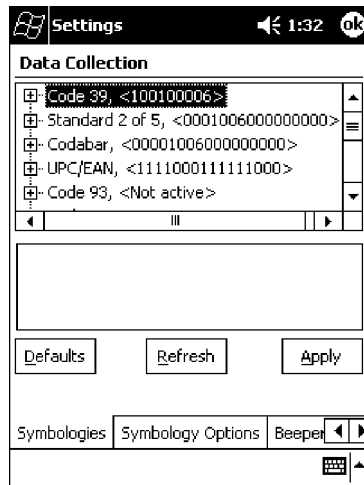

Use the left and right arrows to scroll through the tabs along the bottom of the control panel applet, then tap a tab to access its menus. These tabs represent the following groups of settings or parameters:

- **Symbologies** (starting on page 335)
- **Symbology Options** (starting on page 356)
- **Beeper/LED** (starting on page 364)
- **Imager** (starting on page 370)
- **Virtual Wedge** (starting on page 372)

Symbologies

You can change bar code symbology parameter settings in your 700 Series Computer via the **Data Collection** control panel applet. The following parameters are for bar code symbologies. Additional information about the more common bar code symbologies are in Appendix B, “*Bar Codes*.” *Note that these parameters are listed in the order of their appearance within this tab.*

Most of these symbologies apply to both the imager and the laser scanner tools. However, when using an imager, the Macro PDF (*page 346*), Micro PDF417 (*page 348*), Matrix 2 of 5 (*page 350*), Telepen (*page 351*), and Code 11 (*page 352*) symbologies are not supported. Likewise, when using a laser scanner, the QR Code (*page 353*), Data Matrix (*page 354*), and MaxiCode (*page 355*) symbologies are not supported.

The following table shows which bar code symbologies are supported either by an imager or by a laser scanner.

Bar Code Symbology	Imager	Laser Scanner
Code 39	X	X
Interleaved 2 of 5	X	X
Standard 2 of 5	X	X
Matrix 2 of 5		X
Code 128	X	X
Code 93	X	X
Codabar	X	X
MSI		X
Plessey		X
UPC	X	X
EAN/EAN 128	X	X
Code 11		X
PDF417	X	X
Micro PDF417		X
Telepen		X
Data Matrix	X	
QR Code	X	
MaxiCode	X	

Code 39

Code 39 is a discrete, self-checking, variable length symbology. The character set is uppercase A–Z, 0–9, dollar sign (\$), period (.), slash (/), percent (%), space (), plus (+), and minus (-).

Action

Tap (+) to expand the **Code 39** parameter, select the setting to be changed, then tap an option to change this setting or select an option from the drop-down list.

SNMP OID


1.3.6.1.4.1.1963.15.3.3.1.1.3.1

Options

Decoding	0	Not active
	1	Active (<i>default</i>)
Format	0	Standard 43 characters (<i>default</i>)
	1	Full ASCII
Start/Stop	0	Not transmitted (<i>default</i>)
	1	Transmitted
Start/Stop characters (<i>Not supported when using an imager</i>)	0	\$ (dollar sign) only
	1	* (asterisk) only (<i>default</i>)
	2	\$ and * (dollar sign and asterisk)
Check digit	0	Not used (<i>default</i>)
	1	Mod 43 transmitted
	2	Mod 43 not transmitted
	3	French CIP transmitted
	4	French CIP not transmitted
	5	Italian CPI transmitted
	6	Italian CPI not transmitted
Bar code length	0	Any length (<i>default</i>)
	1	Minimum length
Minimum length	000–254	Minimum length 1–254 (6)



Note: If Bar code length = “1” then Minimum length is entered.

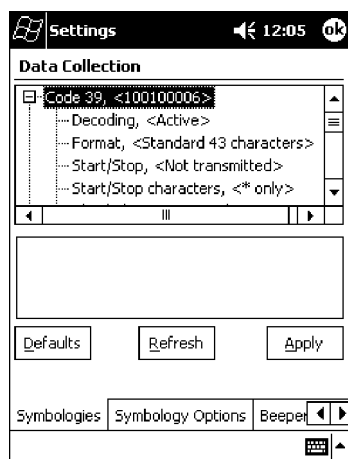

Standard 2 of 5

Standard 2 of 5 is a discrete and self-checking symbology that uses the bars to encode information and the spaces to separate the individual bars.

Action

Tap (+) to expand the **Standard 2 of 5** parameter, select the setting to be changed, then tap an option to change this setting or select an option from the drop-down list.

SNMP OID


1.3.6.1.4.1.1963.15.3.3.1.1.4.1

Options

Decoding	0	Not active (<i>default</i>)
	1	Active
Format	0	Identicon, 6 start/stop bars (<i>default</i>)
	1	Computer Identics, 4 start/stop bars
Check digit	0	Not used (<i>default</i>)
	1	Mod 10 transmitted
	2	Mod 10 not transmitted
Bar code length	0	Any length
	1	Minimum length (<i>default</i>)
	2	Fixed lengths
Minimum length	000–254	Minimum length 1–254 (6)
Fixed length 1	000–254	Fixed bar code length 0–254 (0)
Fixed length 2	000–254	Fixed bar code length 0–254 (0)
Fixed length 3	000–254	Fixed bar code length 0–254 (0)



Note: If Bar code length = “1” then Minimum length is entered. If Bar code length = “2” then Fixed length 1, Fixed length 2, or Fixed length 3 is entered.

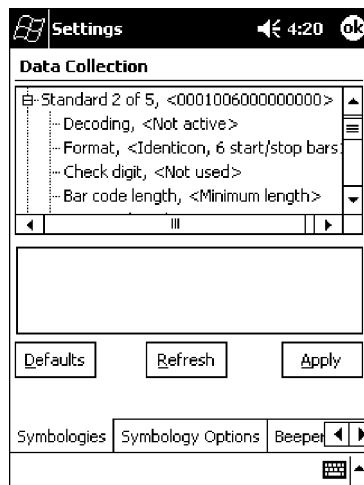

Codabar

Codabar is a self-checking, discrete symbology.

Action

Tap (+) to expand the **Codabar** parameter, select a setting to be changed, then select an option from the drop-down list to change this setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.5.1

Options

Decoding	0	Not active (<i>default</i>)
	1	Active
Start/Stop	0	Not transmitted (<i>default</i>)
	1	abcd transmitted
	2	ABCD transmitted
	3	abcd/tn*e transmitted
	4	DC1–DC4 transmitted
CLSI library system (<i>Not supported when using an imager</i>)	0	Not active (<i>default</i>)
	1	Active
Check digit	0	Not used (<i>default</i>)
	1	Transmitted
	2	Not transmitted
Bar code length	0	Any length
	1	Minimum length (<i>default</i>)
	2	Fixed lengths
Minimum length	003–254	Minimum length 3–254 (6)
Fixed length 1	000–254	Fixed bar code length 0–254 (0)
Fixed length 2	000–254	Fixed bar code length 0–254 (0)
Fixed length 3	000–254	Fixed bar code length 0–254 (0)



Note: If Bar code length = “1” then Minimum length is entered. If Bar code length = “2” then Fixed length 1, Fixed length 2, or Fixed length 3 is entered.

Settings 4:29 **ok**

Data Collection

Codabar, <0000100600000000>

- Decoding, <Not active>
- Start/Stop, <Not transmitted>
- CLSI library system, <Not active>
- Check digit, <Not used>

Defaults Refresh Apply

Symbologies Symbology Options Beep

UPC/EAN

UPC/EAN are fixed-length, numeric, continuous symbologies that use four element widths.

Action


Tap (+) to expand the **UPC/EAN** parameter, select the setting to be changed, then select an option to change this setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.6.1

Options

UPC A	0	Not Active
	1	Active (<i>default</i>)
UPC E	0	Not Active
	1	Active (<i>default</i>)
EAN 8	0	Not Active
	1	Active (<i>default</i>)
EAN 13	0	Not Active
	1	Active (<i>default</i>)
Add-on digits	0	Not required (<i>default</i>)
	1	Required
Add-on 2 digits	0	Not active (<i>default</i>)
	1	Active
Add-on 5 digits (<i>Not supported when using an imager</i>)	0	Not active (<i>default</i>)
	1	Active
UPC A check digit	0	Not transmitted
	1	Transmitted (<i>default</i>)
UPC E check digit	0	Not transmitted
	1	Transmitted (<i>default</i>)
EAN 8 check digit	0	Not transmitted
	1	Transmitted (<i>default</i>)
EAN 13 check digit	0	Not transmitted
	1	Transmitted (<i>default</i>)
UPC A number system	0	Not transmitted
	1	Transmitted (<i>default</i>)
UPC E number system	0	Not transmitted
	1	Transmitted (<i>default</i>)
UPC A re-encoding	0	UPC A transmitted as EAN 13 (<i>default</i>)
	1	UPC A transmitted as UPC A
UPC E re-encoding	0	UPC E transmitted as UPC E (<i>default</i>)
	1	UPC E transmitted as UPC A
EAN 8 re-encoding	0	EAN 8 transmitted as EAN 8 (<i>default</i>)
	1	EAN 8 transmitted as EAN 13

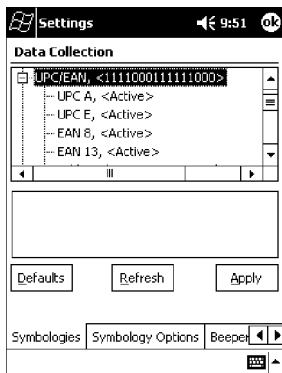

Code 93

Code 93 is a variable length, continuous symbology that uses four element widths.

Action

Tap the **Code 93** parameter, then select an option to change this parameter setting. Tap (+) to access the **Code 93 Lengths** parameter.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.7.1

Options

- 0 Not active (*default*)
- 1 Active

Code 93 Length

Sets the Code 93 bar code length.

Action

Tap (+) to expand the **Code 93** parameter, then tap (+) to expand the **Code 93 Lengths** parameter. Tap the setting to be changed, then tap an option to change this setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.19.1

Options

Bar code length	0	Any length
	1	Minimum length (<i>default</i>)
Minimum length	001–254	Minimum length 1–254 (6)



Note: If Bar code length = “1” then Minimum length is entered.

Settings 12:10 ok

Data Collection

- Code 93, <Not active>
 - Code 93 length, <0006>
 - Bar code length, <Any length>
 - Minimum length, <6>
 - Code 128, <Not active>

Change 'Code 93' Setting

☒ Not active

☐ Active

Defaults Refresh Apply

Symbologies Symbology Options Beep

Code 128

Code 128 is a variable-length, continuous, high-density, alphanumeric symbology that uses multiple element widths and supports the extended ASCII character set.

Action


Tap the **Code 128** parameter, then select an option to change this parameter setting. *The following illustration is for a 700 Series Computer using a laser scanner.*

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.9.1

Options

- 0 Not active (*default*)
- 1 Active

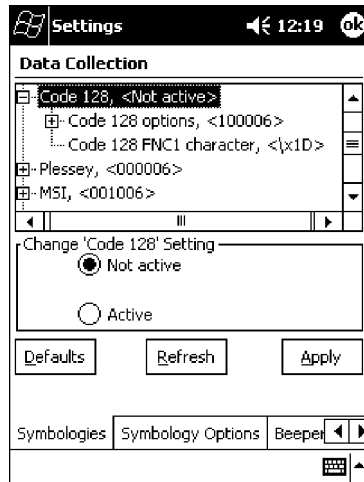

Code 128 Options

Set the following for the Code 128 parameter. *Note that the EAN 128 JCI and CIP 128 French Pharmaceutical options are not available when you use an imager with your 700 Series Computer.*

Action


Tap (+) to expand the **Code 128 Options** parameter, select a setting, then select an option to change this setting.

SNMP OID

None.

Options

EAN 128 JCI Identifier (Not supported when using an imager)	0	Remove
	1	Include (default)
CIP 128 French Pharmaceutical (Not supported when using an imager)	0	Not active (default)
	1	Active
Bar code length	0	Any length
	1	Minimum length (default)
Minimum length	001–254	Minimum length 1–254 (6)

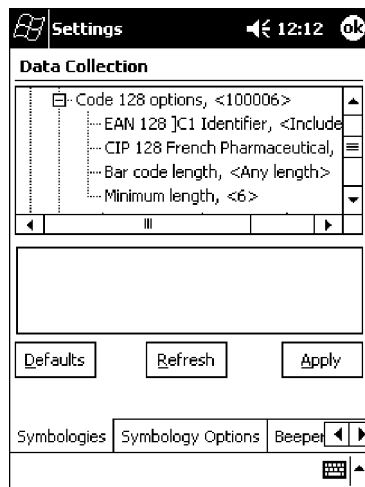

Code 128 FNC1 Character

The Code 128 FNC1 character (EAN 128 norms) can be any ASCII character and is used as a separator when multiple identifiers and their fields are concatenated. *Note that this is not available when you use an imager with your 700 Series Computer.*

Non-printable ASCII characters can be entered using the following syntax where *HH* is the hexadecimal value of the character.

\xHH

For example, the GS character, whose hexadecimal value is 1D, would be entered as \x1D. In addition, the following characters have their own identifiers:

- BEL \a
- BS \b
- FF \f
- LF \n
- CR \r
- HT \t
- VT \v

Action


Tap (+) to expand the **Code 128** parameter, then type the ASCII characters to be set for the **Code 128 FNC1 character** parameter.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.21.1

Options

Any ASCII character (*default is the GS function character - ID hex*)

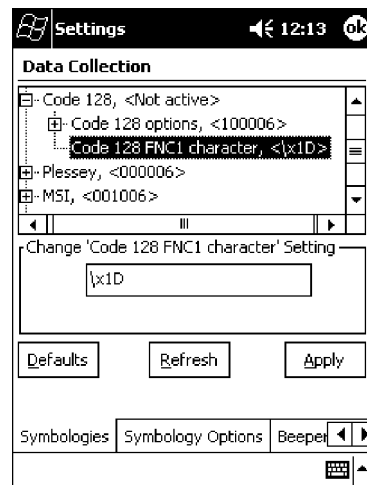

Plessey

Plessey is a pulse-width modulated symbology like most other bar codes. It includes a start character, data characters, an eight-bit cyclic check digit, and a termination bar. The code is continuous and not self-checking. You need to configure two parameters for Plessey code: Start Code and Check Digit. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action

Tap (+) to expand the **Plessey** parameter, select the setting to be changed, then select an option to change this setting or select an option from the drop-down list.

SNMP OID


1.3.6.1.4.1.1963.15.3.3.1.1.10.1

Options

Decoding	0	Not active (<i>default</i>)
	1	Active
Check digit	0	Not transmitted (<i>default</i>)
	1	Transmitted
Bar code length	0	Any length
	1	Minimum length (<i>default</i>)
Minimum length	001–254	Minimum length 1–254 (6)



Note: If Bar code length = “1” then Minimum length is entered.

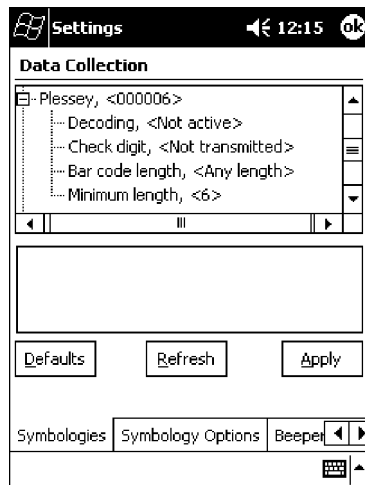

MSI

MSI is a symbology similar to Plessey code (page 344) that includes a start pattern, data characters, one or two check digits, and a stop pattern. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action

Tap (+) to expand the **MSI** parameter, select the setting to be changed, then select an option to change this setting or select an option from the drop-down list.

SNMP OID


1.3.6.1.4.1.1963.15.3.3.1.1.15.1

Options

Decoding	0	Not active (<i>default</i>)
	1	Active
Check digit	0	Mod 10 transmitted (<i>default</i>)
	1	Mod 10 not transmitted
	2	Double Mod 10 transmitted
	3	Double Mod 10 not transmitted
Bar code length	0	Any length
	1	Minimum length (<i>default</i>)
Minimum length	001–254	Minimum length 1–254 (6)



Note: If Bar code length = “1” then Minimum length is entered.

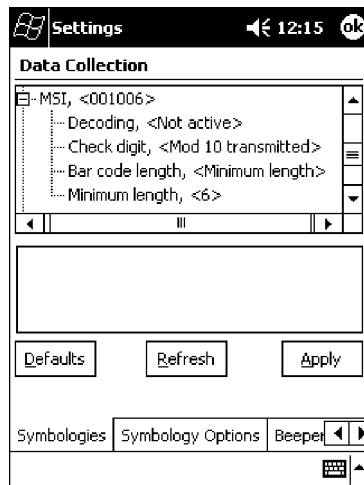

PDF417

PDF417 is a stacked two-dimensional symbology that provides the ability to scan across rows of code. Each row consists of start/stop characters, row identifiers, and symbol characters, which consist of four bars and four spaces each and contain the actual data. This symbology uses error correction symbol characters appended at the end to recover loss of data.

Because the virtual wedge translates incoming data into keypad input, the size of the keypad buffer limits the effective length of the label to 128 characters. Longer labels may be truncated. For PDF417 labels of more than 128 characters, you can develop an application that bypasses the keypad buffer.



Note: The following illustration is for a 700 Series Computer using a laser scanner.

Action


Tap the **PDF417** parameter, then select an option to change this parameter setting. Tap (+) to access either the **Macro PDF options** parameter or the **Micro PDF417** parameter.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.17.1

Options

- 0 Not active
- 1 Active (*default*)

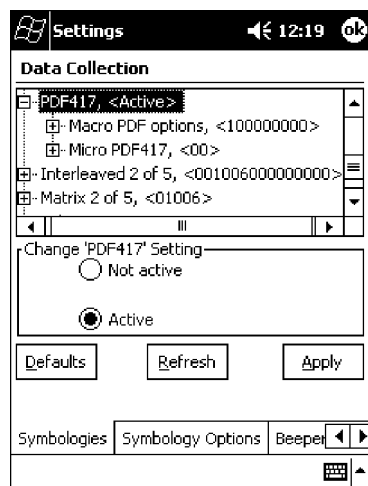

Macro PDF options

Macro PDF is used when a long message requires more than one PDF417 label. *Note that this is not available when you use an imager with your 700 Series Computer.*

- Select **Buffered** to store a multi-label PDF417 message in the Sabre buffer, thus transmitting the entire message when all labels have been read.

- Select **Unbuffered** for multi-label PDF417 messages that are too long for the Sabre buffer (memory overflow). Each part of the PDF417 label is transmitted separately, and the host application must then assemble the message using the macro PDF control header transmitted with each label. *Control Header is only present in macro PDF codes and is always transmitted with unbuffered option.*

Action


Tap (+) to expand the **PDF417** parameter, tap (+) to expand the **Macro PDF** parameter, select a setting to be changed, then select an option to change this setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.22.1

Options

Macro PDF	0	Unbuffered
	1	Buffered (<i>default</i>)
Control header	0	Not transmitted (<i>default</i>)
	1	Transmitted
File name	0	Not transmitted (<i>default</i>)
	1	Transmitted
Segment count	0	Not transmitted (<i>default</i>)
	1	Transmitted
Time stamp	0	Not transmitted (<i>default</i>)
	1	Transmitted
Sender	0	Not transmitted (<i>default</i>)
	1	Transmitted
Addressee	0	Not transmitted (<i>default</i>)
	1	Transmitted
File size	0	Not transmitted (<i>default</i>)
	1	Transmitted
Checksum	0	Not transmitted (<i>default</i>)
	1	Transmitted

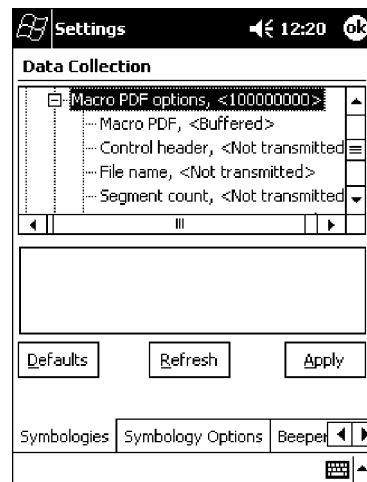

Micro PDF417

Micro PDF417 is a multi-row symbology derived from and closely based on PDF417 (page 346). A limited set of symbology sizes is available, together with a fixed level of error correction for each symbology size. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action


Tap (+) to expand the PDF417 parameter, tap (+) to expand the Micro PDF417 parameter, select a setting to be changed, then select an option to change this setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.27.1

Options

Decoding	0	Not active (default)
	1	Active
Code 128 Emulation	0	Not active (default)
	1	Active

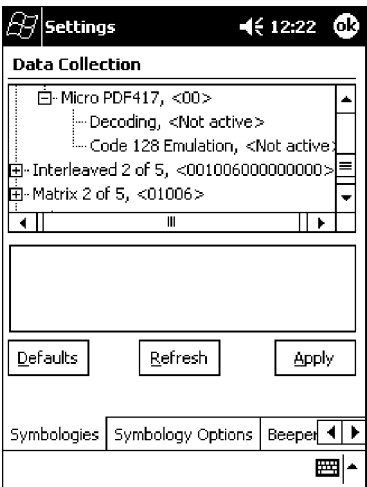

Interleaved 2 of 5

Interleaved 2 of 5 (I 2 of 5) is a high-density, self-checking, continuous, numeric symbology used mainly in inventory distribution and the automobile industry.



Note: An Interleaved 2 of 5 bar code label must be at least three characters long for the 700 Series Computer to scan and decode correctly.

Action

Tap (+) to expand the **Interleaved 2 of 5** parameter, select the setting to be changed, then tap an option to change this setting or select an option from the drop-down list.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.23.1

Options

Decoding	0	Not active (<i>default</i>)
	1	Active
Check digit	0	Not used (<i>default</i>)
	1	Mod 10 transmitted
	2	Mod 10 not transmitted
	3	French CIP transmitted
	4	French CIP not transmitted
Bar code length	0	Any length
	1	Minimum length (<i>default</i>)
	2	Fixed lengths
Minimum length	003–254	Minimum length 3–254 (6)
Fixed length 1	003–254	Fixed bar code length 3–254 (0)
Fixed length 2	003–254	Fixed bar code length 3–254 (0)
Fixed length 3	003–254	Fixed bar code length 3–254 (0)



Note: If **Bar code length** = “1” then **Minimum length** is entered. If **Bar code length** = “2” then **Fixed length 1**, **Fixed length 2**, or **Fixed length 3** is entered.

The screenshot shows the 'Settings' application interface. At the top, there's a status bar with 'Settings', a back arrow, '12:22', and an 'OK' button. Below this is the 'Data Collection' section. A list shows 'Interleaved 2 of 5, <001006000000000>' with a plus icon to its left. Expanding this list shows four items: 'Decoding, <Not active>', 'Check digit, <Not used>', 'Bar code length, <Minimum length>', and 'Minimum length, <6>'. Below the list is a large empty text input field. At the bottom of the section are three buttons: 'Defaults', 'Refresh', and 'Apply'. Below these buttons are three tabs: 'Symbologies', 'Symbology Options', and 'Beep', with 'Symbologies' currently selected. To the right of the tabs are left and right arrow buttons. At the very bottom is a keyboard icon.

Matrix 2 of 5

Matrix 2 of 5 is a numerical symbology. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action

Tap (+) to expand the **Matrix 2 of 5** parameter, select the setting to be changed, then tap an option to change this setting or select an option from the drop-down list.

SNMP OID


1.3.6.1.4.1.1963.15.3.3.1.1.24.1

Options

Decoding	0	Not active (<i>default</i>)
	1	Active
Bar code length	0	Any length
	1	Minimum length (<i>default</i>)
Minimum length	001–254	Minimum length 1–254 (6)



Note: If Bar code length = “1” then Minimum length is entered.

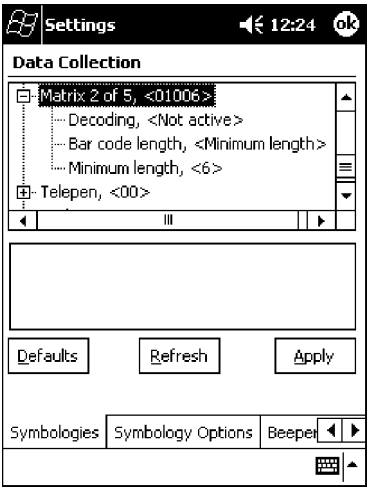

Telepen

Telepen is an alphanumeric, case-sensitive, full ASCII symbology. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action


Tap (+) to expand the **Telepen** parameter, select the setting to be changed, then tap an option to change this setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.25.1

Options

Decoding	0	Not active (<i>default</i>)
	1	Active
Format	0	ASCII (<i>default</i>)
	1	Numeric

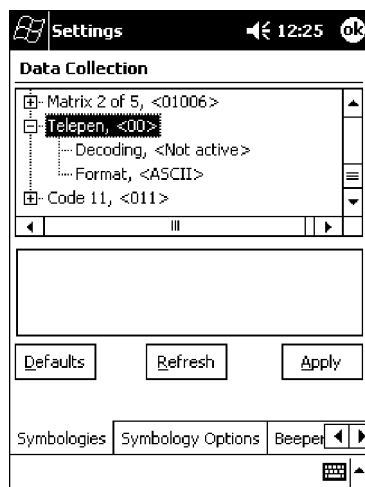

Code 11

Code 11 is a high density, discrete numeric symbology that is extensively used in labeling telecommunications components and equipment. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action


Tap (+) to expand the **Code 11** parameter, select the setting to be changed, then tap an option to change this setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.26.1

Options

Decoding	0	Not active (<i>default</i>)
	1	Active
Check digit verification	1	1 digit (<i>default</i>)
	2	2 digits
Check digit transmit	0	Disable (<i>default</i>)
	1	Enable

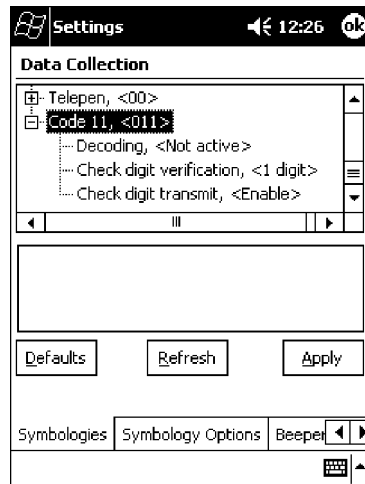

QR Code

QR Code (Quick Response Code) is a two-dimensional matrix symbology containing dark and light square data modules. It has position detection patterns on three of its four corners and features direct encodation of the Japanese Kana-Kanji character set. It can encode up to 2509 numeric or 1520 alphanumeric characters and offers three levels of error detection.

Note that this is not available when you use a laser scanner with your 700 Series Computer.

Action


Tap (+) to expand the **QR Code** parameter, select the setting to be changed, then tap an option to change this setting or select an option from the drop-down list.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.35.1

Options

Decoding	0	Not active (<i>default</i>)
	1	Active

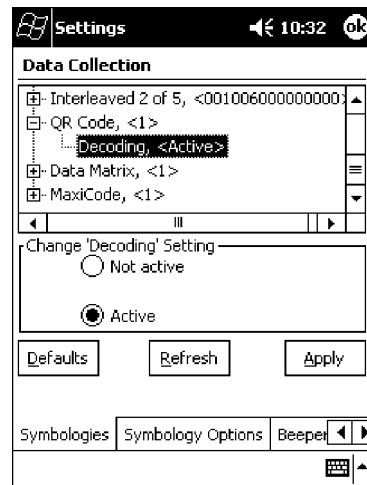

Data Matrix

A two-dimensional matrix symbology, which is made of square modules arranged within a perimeter finder pattern. The symbology utilizes Error Checking and Correcting (ECC) algorithm with selectable levels for data error recovery and Cyclic Redundancy Check algorithm to validate the data. The character set includes either 128 characters conforming to ISO 646 (ANSI X3.4 - 1986) or 256 extended character set. Maximum capacity of a symbol is 2335 alphanumeric characters, 1556 8-bit byte characters or 3116 numeric digits. *Note that this is not available when you use a laser scanner with your 700 Series Computer.*

Action


Tap (+) to expand the **Data Matrix** parameter, select the setting to be changed, then tap an option to change this setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.34.1

Options

Decoding	0	Not active (<i>default</i>)
	1	Active

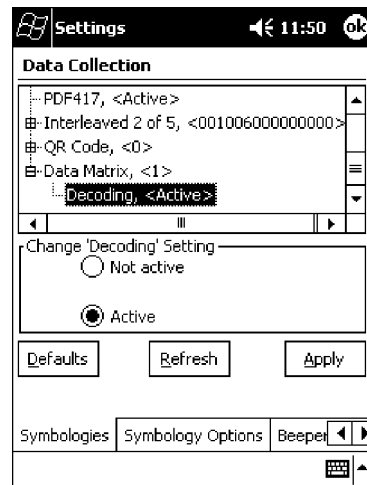

MaxiCode

MaxiCode is a fixed-size 2-D matrix symbology which is made up of offset rows of hexagonal elements arranged around a unique circular finder pattern. ASCII data is encoded in six-bit symbol characters. The symbol contains 33 rows which are alternately 30 and 29 elements wide. There are five different code sets. A single MaxiCode symbol can encode up to 93 characters of data. *Note that this is not available when you use a laser scanner with your 700 Series Computer.*

Action


Tap (+) to expand the **MaxiCode** parameter, select the setting to be changed, then tap an option to change this setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.1.1.33.1

Options

Decoding	0	Not active (<i>default</i>)
	1	Active

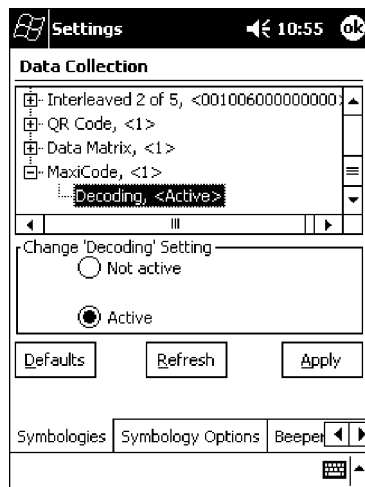

Symbology Options



To access the settings from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Data Collection** icon to access its control panel applet.

Use the right and left arrows to scroll to the **Symbology Options** tab, then tap this tab to access its parameters. The following are parameters for bar code symbology options. *Note that these are listed in the order of their appearance within the Symbology Options tab.*

Symbology ID

Identifies the bar code symbology in which data has been encoded by prepending a user-specified symbology identifier to the data. You can prepend one of these types of character strings to identify the symbology:

- **User-defined ASCII Character (Option 1):**
A user-defined symbology identifier is a single ASCII character. You can assign a custom identifier character to each bar code symbology. *Note that this is not available when you use an imager with your 700 Series Computer.*
- **AIM ISO/IEC Standard (Option 2 — Required to define symbology IDs):**
The AIM Standard has a three-character structure which indicates the symbology and optional features. See the *AIM ISO/IEC Standard* for more information.

Action


Select **Symbology ID**, then select an option to change this parameter setting. Tap (+) to expand the **Symbology ID** parameter, then select any of the user ID parameters listed. *See the top of the next page for a sample screen of the Code 39 user ID.*


SNMP OID

1.3.6.1.4.1.1963.15.3.3.4.1.22.1

Options

- 0 Disable (*default*)
- 1 User defined (*disabled when using an imager*)
- 2 ISO/IEC Standard

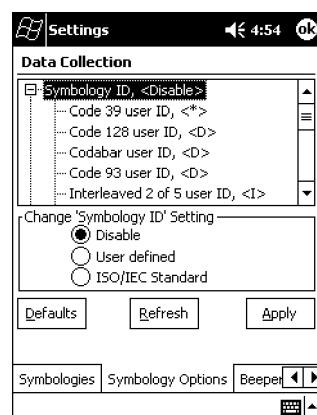

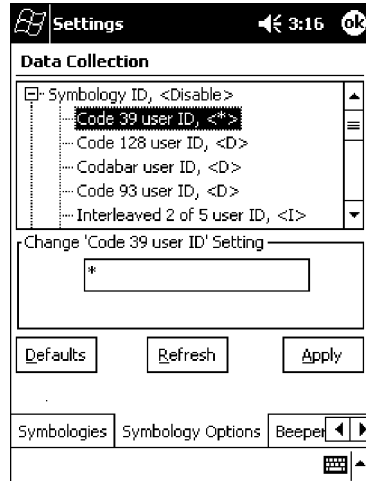

Code 39 User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify Code 39 bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **Code 39 user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.3.1

Options: x where x is a single ASCII character. *Default is asterisk (*).*

Code 128 User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify Code 128 bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **Code 128 user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.5.1

Options: x where x is a single ASCII character. *Default is asterisk (*).*

Codabar User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify Codabar bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **Codabar user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.2.1

Options: x where x is a single ASCII character. *Default is D.*

Code 93 User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify Code 93 bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **Code 93 user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.4.1

Options: x where x is a single ASCII character. *Default is asterisk (*)*.

Interleaved 2 of 5 User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify Interleaved 2 of 5 bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **Interleaved 2 of 5 user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.10.1

Options: x where x is a single ASCII character. *Default is I (not lowercase L)*.

PDF417 User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify PDF417 bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **PDF417 user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.12.1

Options: x where x is a single ASCII character. *Default is an asterisk (*)*.

MSI User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify MSI bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **MSI user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.11.1

Options: x where x is a single ASCII character. *Default is D*.

Plessey User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify Plessey bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **Plessey user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.13.1

Options: x where x is a single ASCII character. *Default is D.*

Standard 2 of 5 User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify Standard 2 of 5 bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **Standard 2 of 5 user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.23.1

Options: x where x is a single ASCII character. *Default is D.*

UPC A User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify UPC-A (Universal Product Code) bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **UPC A user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.6.1

Options: x where x is a single ASCII character. *Default is A.*

UPC E User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify UPC-E bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **UPC E user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.7.1

Options: x where x is a single ASCII character. *Default is E.*

EAN 8 User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify EAN-8 bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **EAN 8 user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.8.1

Options: x where x is a single ASCII character. *Default is \xFF.*

EAN 13 User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify EAN-13 (European Article Numbering) bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **EAN 13 user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.9.1

Options: x where x is a single ASCII character. *Default is F.*

Matrix 2 of 5 User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify Matrix 2 of 5 bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **Matrix 2 of 5 user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.24.1

Options: x where x is a single ASCII character. *Default is D.*

Telepen User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify Telepen bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **Telepen user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.25.1

Options: x where x is a single ASCII character. *Default is an asterisk (*).*

Code 11 User ID

If “1” was selected in the **Symbology ID** parameter, you can set your own ASCII character to identify Code 11 bar code data. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action: Tap (+) to expand the **Symbology ID** parameter, select the **Code 11 user ID** parameter, then enter a user ID value to change this parameter setting.

SNMP OID: 1.3.6.1.4.1.1963.15.3.3.4.1.16.1

Options: *x* where *x* is a single ASCII character. *Default is asterisk (*)*.

Prefix

Prepends a string of up to 20 ASCII characters to all scanned data.

Action

Tap the **Prefix** parameter, then enter a prefix value to change this parameter setting.

SNMP OID


1.3.6.1.4.1.1963.15.3.3.4.1.29.1

Options

Acceptable values are up to 20 ASCII characters.

Embedded null (<NUL >) characters are not allowed.

Default is no characters (disabled).

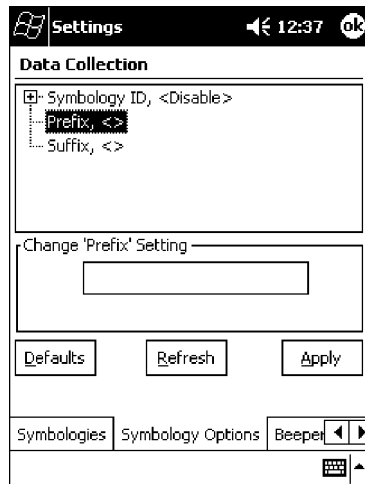

Suffix

Appends a string of up to 20 ASCII characters to all scanned data.

Action


Tap the **Suffix** parameter, then enter a suffix value to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.4.1.30.1

Options

Acceptable values are up to 20 ASCII characters. Embedded null (<NUL>) characters are not allowed. *Default is no characters (disabled).*

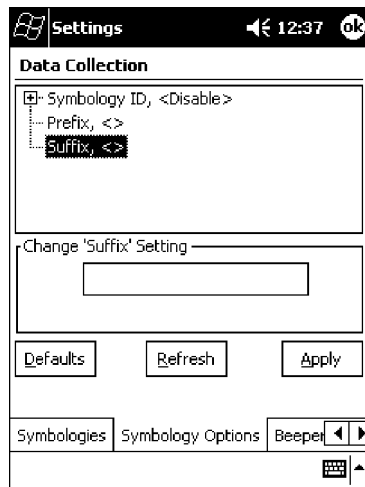

Beeper/LED



To access the settings from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Data Collection** icon to access its control panel applet.

Use the right and left arrows to scroll to the **Beeper/LED** tab, then tap this tab to access its parameters.

Most of these functions are not available when using an imager. The following table shows which functions are supported either by an imager or by a laser scanner.

Beeper Function	Imager	Laser Scanner
Beeper	X	
Beeper Volume		X
Beeper Frequency		X
Good Read Beeps		X
Good Read Beep Duration		X

The following are parameters for features on the 700 Series Computer.
Note that these are listed in the order of their appearance.

Beeper

Sets the volume for the good read beep. *Note that this is not available when you use a laser scanner with your 700 Series Computer.*

Action


Tap the **Beeper** parameter, then select an option to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.1.4.1.6.1

Options

- 1 Beeper (*default*)
- 4 Vibrate

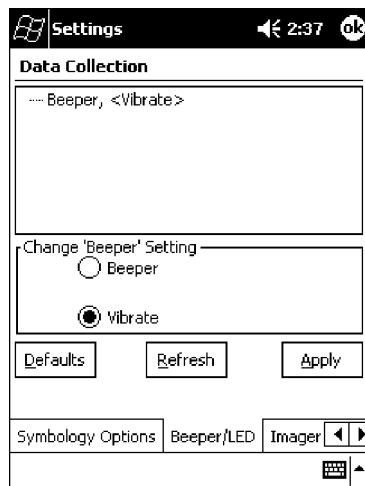

Beeper Volume

Sets the volume for the good read beep. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action


Tap the **Beeper volume** parameter, then select an option to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.1.4.1.6.1

Options

- 0 Low
- 1 High (*default*)
- 2 Medium
- 3 Off
- 4 Vibrate

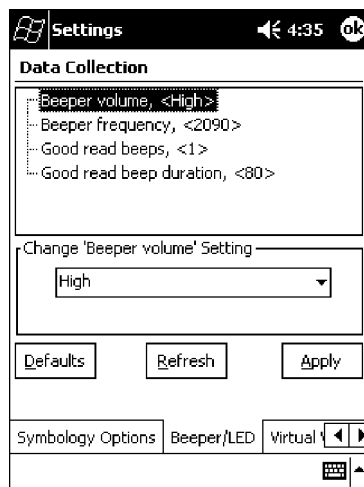

Disabling the Volume

To disable the beeper, tap **Start** → **Settings** → the **Personal** tab → **Sounds & Notifications** → the **Volume** tab, drag the **System volume** slider bar to the left “Silent” position, then tap **ok** to exit this applet. See Chapter 1, “*Introduction*” for more information.

Beeper Frequency

Sets the frequency for the good read beep. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action

Tap the **Beeper frequency** parameter, then enter a frequency value to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.1.4.1.7.1

Options

1000–4095 (*default is 2090*)

The screenshot shows a handheld device screen with a 'Settings' application. At the top, there's a status bar with a signal strength icon, the time '10:45', and an 'ok' button. The main window has a title bar with a 'Settings' icon and the word 'Settings'. Below the title bar is a section titled 'Data Collection'. Inside this section, there's a list of settings: 'Beeper volume, <High>', 'Beeper frequency, <2090>', 'Good read beeps, <1>', and 'Good read beep duration, <80>'. The 'Beeper frequency, <2090>' setting is highlighted with a black background. Below this list is a section titled 'Change 'Beeper frequency' Setting' which contains a text input field with the value '2090'. At the bottom of this section are three buttons: 'Defaults', 'Refresh', and 'Apply'. Below these buttons is a row of tabs: 'Symbology Options', 'Beeper/LED', and 'Virtual'. The 'Beeper/LED' tab is currently selected. At the very bottom of the screen is a 'New' button and a row of icons representing different device functions.

Good Read Beeps

Sets the number of good read beeps. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action


Tap the **Good read beeps** parameter, then select an option to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.1.4.1.8.1

Options

- 0 No beeps
- 1 One beep (*default*)
- 2 Two beeps

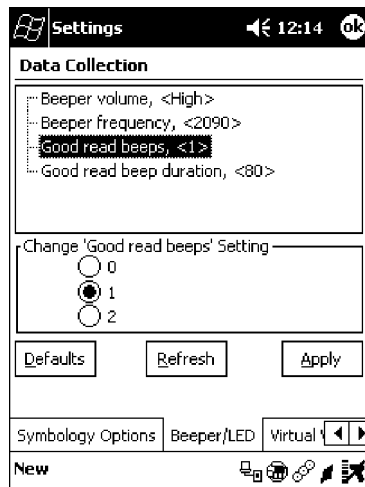

Good Read Beep Duration

Sets the duration of the good read beep. *Note that this is not available when you use an imager with your 700 Series Computer.*

Action

Tap the **Good read beep duration** parameter, then enter a duration value to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.1.4.1.9.1

Options

0–2550 Beep duration in milliseconds. (*default is 80*)

The screenshot shows a mobile device screen with a 'Settings' application. At the top, there's a status bar with a signal strength indicator, the time '12:22', and a battery icon. The 'Settings' app has a title bar with a back arrow, the word 'Settings', and an 'OK' button. Below the title bar is a section titled 'Data Collection'. Inside this section, there's a list of parameters: 'Beeper volume, <High>', 'Beeper frequency, <2090>', 'Good read beeps, <1>', and 'Good read beep duration, <80>'. The 'Good read beep duration, <80>' parameter is highlighted with a black background. Below this list, there's a section titled 'Change 'Good read beep duration' Setting' which contains a text input field with the value '80'. At the bottom of this section are three buttons: 'Defaults', 'Refresh', and 'Apply'. Below these buttons are three tabs: 'Symbology Options', 'Beeper/LED', and 'Virtual'. The 'Beeper/LED' tab is currently selected. At the very bottom of the screen, there's a 'New' button and a row of five icons: a printer, a scanner, a network icon, a power icon, and a settings icon.

Imager



To access the settings from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Data Collection** icon to access its control panel applet.

Use the right and left arrows to scroll to the **Imager** tab, then tap this tab to access its parameters.

The following are parameters for the imager. Note that these are listed in the order of their appearance within the Imager tab.

Aimer LED duration

The Aimer LED duration controls the time the Aimer LED is turned on when the scan button is pressed. After this time, images are captured for decoding. The purpose is to position the Aimer LED on the bar code symbol before attempting to decode the bar code. *Note that this is not available when you use a laser scanner with your 700 Series Computer.*

Action

Tap the **Aimer LED duration** parameter, then enter a value to change this setting. Note that values must be in 50 ms increments, such as 500, 650, or 32500. Values not entered in 50 ms increments will be rounded down. For example, 2489 ms would be rounded down to 2450 ms, 149 ms would be rounded down to 100 ms, etc..

SNMP OID

1.3.6.1.4.1.1963.15.3.3.3.1.1.21.1

Options

0–65500 ms (*Default is 0*)

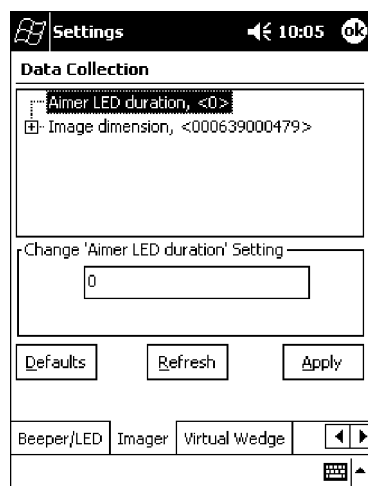


Image Dimension

The image dimensions control the vertical size of the image for decoding. This can restrict the image to one bar code when otherwise, there might be more than one bar code in the image to be decoded. *Note that this is not available when you use a laser scanner with your 700 Series Computer.*

Action


Tap the **Image dimension** parameter, select the position to be changed, then tap an option or enter a value to change this position.

SNMP OID

1.3.6.1.4.1.1963.15.3.3.3.1.1.22.1

Options

Left position	0	Not supported
Right position	0	Not supported
Top position	0–478	Position in pixels (0)
Bottom position	0–479	Position in pixels (479)

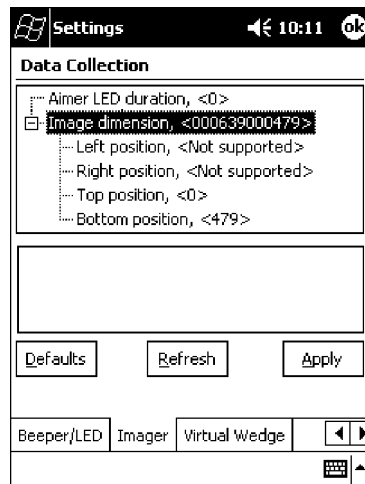

Virtual Wedge



To access the settings from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Data Collection** icon to access its control panel applet.

Use the right and left arrows to scroll to the **Virtual Wedge** tab, then tap this tab to access its parameters.

The following are parameters for the virtual wedge scanner. *Note that these are listed in the order of their appearance within the Virtual Wedge tab.*

Virtual Wedge

Enables or disables the virtual wedge for the internal scanner. The virtual wedge retrieves scanned Automatic Data Collection (ADC) data and sends it to the keypad driver so that the 700 Series Computer can receive and interpret the data as keypad input.

Because the virtual wedge translates incoming data into keypad input, the size of the keypad buffer limits the effective length of the label to 128 characters. Longer labels may be truncated. For labels of more than 128 characters, you need to develop an application that bypasses the keypad buffer.

Action


Tap the **Virtual Wedge** parameter, then tap an option to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.2.1.1.2.1

Options

- 0 Disable
- 1 Enable (*default*)

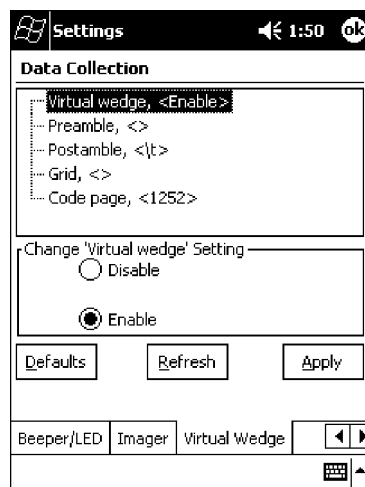

Preamble

Sets the preamble that precedes any data you scan with the 700 Series Computer. Common preambles include a data location number or an operator number.

Action

Tap the **Preamble** parameter, then enter a preamble value to change this parameter setting.


SNMP OID

1.3.6.1.4.1.1963.15.3.2.1.1.3.1

Syntax

ADdata

where *data* is acceptable values up to 31 ASCII characters. Embedded null (<NUL >) characters are not allowed. *Default is no characters (disabled).*

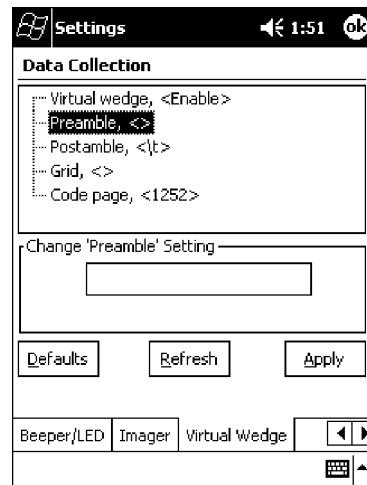

Note: When you enter the AD command without data, the preamble is disabled. If you want to use quotation marks or the following combinations of characters as part of the appended data, separate those characters from the AD command with quotes. If you do not use quotes as described here, the 700 Series Computer will interpret the characters as another configuration command:

AD
AE
AF
KC
BV
EX
DF

Example

To use the two-character string BV as a preamble, scan this command (as a Code 39 label) or send this command through the network: \$+AD"BV"

Postamble

Sets the postamble that is appended to any data you scan with the 700 Series Computer. Common postambles include cursor controls, such as tabs or carriage return line feeds.

Action

Tap the **Postamble** parameter, then enter a postamble value to change this parameter setting.


SNMP OID

1.3.6.1.4.1.1963.15.3.2.1.1.4.1

Syntax

AEdata

where *data* is any acceptable values up to 31 ASCII characters. Embedded null (<NUL >) characters are not allowed. *Default is the tab character (\t).*

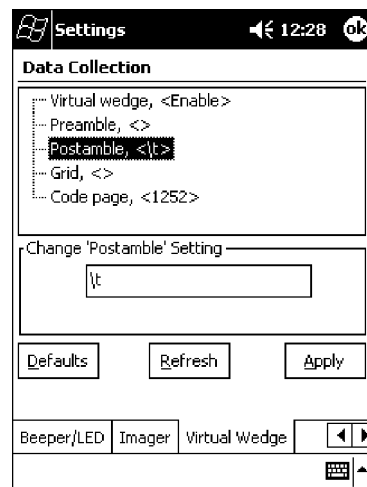

Note: When you enter the AE command without data, the postamble is disabled. If you want to use quotation marks or the following combinations of characters as part of the appended data, separate those characters from the AE command with quotes. If you do not use quotes as described here, the 700 Series Computer will interpret the characters as another configuration command.

AD

AE

AF

KC

BV

EX

DF

Example

To use the two-character string BV as a postamble, scan this command (as a Code 39 label) or send this command through the network: \$+AE"BV"

Grid

Sets the virtual wedge grid, which filters the data coming from this 700 Series Computer. The data server supports data filtering, which allows you to selectively send scanned data. The virtual wedge grid is similar to the “format” argument of the C Runtime Library scan function.

Action

Tap the **Grid** parameter, then enter a grid value to change this parameter setting.


SNMP OID

1.3.6.1.4.1.1963.15.3.2.1.1.5.1

Syntax

AF<symID> filter-expression= > editing-expression
where:

- *<symID>*
The AIM symbology ID.
- *filter-expression*
Any character string that includes valid filter expression values, and editing-expression is any character string that includes valid editing expression values.
- *<width>*
Any positive integer or NULL. A NULL width means that the field type (defined next) applies all the way to the end of the data string. A non-NULL width means that the field applies to that many characters of data. The grid can be up to 240 characters in length. *Default is NULL.*

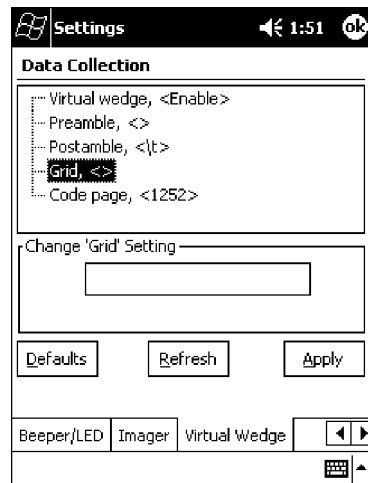

Code Page

Sets the virtual wedge code page. The code page controls the translation from the character set of the raw collected data to Unicode, which is the character set expected by Windows CE applications. The default code page is 1252, which is the Windows Latin 1 (ANSI) character set.

Action


Tap the **Code Page** parameter, then select an option to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.15.3.2.1.1.6.1

Options

The only acceptable value for the code page parameter is “1252,” which is the default.

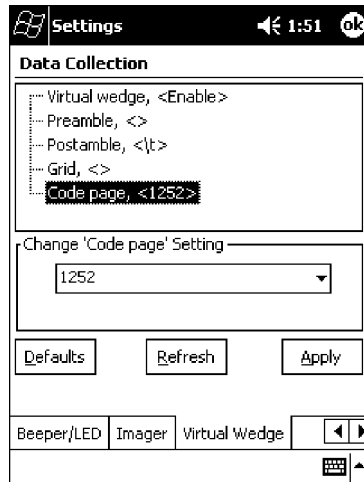

SNMP Control Panel Applet

Simple Network Management Protocol (SNMP) parameters include identification information, security encryption, security community strings, and traps.



SNMP

To access the settings from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **SNMP** icon to access its control panel applet.

Tap a tab to access its menus. These tabs represent three groups of settings or parameters:

- **Security** (*starting on the next page*)
- **Traps** (*starting on page 383*)
- **Identification** (*starting on page 385*)

Security



SNMP

To access the settings from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **SNMP** icon → the **Security** tab to access its parameters.

The following are parameters that affect encryption and community strings. *Note that these are listed in the order of their appearance within the Security tab.*

Read Only Community

Sets the read-only community string for this 700 Series Computer, which is required for processing of SNMP get and get next requests.

Action


Tap the **Read Only Community** parameter, then enter a community string to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.10.5.1.2.0

Options

The read-only community string can be up to 128 ASCII characters. *Default is Public.*

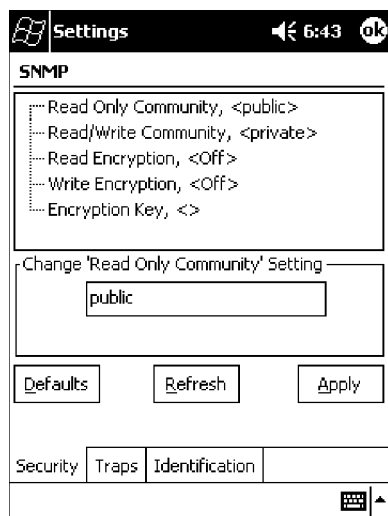

Read/Write Community

Sets the read/write community string, which is required for processing of SNMP set requests by this 700 Series Computer. An SNMP packet with this name as the community string will also process SNMP get and next requests.

Action

Tap the **Read/Write Community** parameter, then enter a community string to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.10.5.1.3.0

Options

The read/write community string can be up to 128 ASCII characters. *Default is Private.*

The screenshot shows the 'Settings' application interface. At the top, there's a status bar with a signal icon, the word 'Settings', a speaker icon, the time '6:43', and an 'ok' button. Below this is the 'SNMP' section. It contains a list of settings: 'Read Only Community, <public>', 'Read/Write Community, <private>' (which is highlighted with a black box), 'Read Encryption, <Off>', 'Write Encryption, <Off>', and 'Encryption Key, <>'. Below the list is a section titled 'Change Read/Write Community Setting' with a text input field containing the word 'private'. At the bottom of the screen are three buttons: 'Defaults', 'Refresh', and 'Apply'. Below these buttons is a tabbed interface with three tabs: 'Security', 'Traps', and 'Identification'. The 'Security' tab is currently selected. At the very bottom, there's a keyboard icon and an upward-pointing arrow.

Read Encryption

Sets the packet-level mode of security for SNMP read-only requests. If you enable read encryption, all received SNMP get and get next packets have to be encrypted or the packet will not be authorized. If encryption is enabled, you can only use software provided by Intermec Technologies.



Note: To enable security encryption, you also need to set the Security Encryption Key (page 382).

Action

Tap the **Read Encryption** parameter, then select an option to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.10.5.1.4.0

Options

1	On	SNMP get and get next packets must be encrypted
2	Off	SNMP packets do not have to be encrypted (<i>default</i>)

The screenshot shows the 'Settings' application with the 'SNMP' section selected. The 'Read Encryption' option is highlighted, and a dialog box is open to change its setting. The 'Off' option is selected.

Settings 6:43 ok

SNMP

- Read Only Community, <public>
- Read/Write Community, <private>
- Read Encryption, <Off>
- Write Encryption, <Off>
- Encryption Key, <>

Change 'Read Encryption' Setting

☐ On

☒ Off

Defaults Refresh Apply

Security Traps Identification

Write Encryption

Sets the packet-level mode of security for SNMP read/write requests. If you enable write encryption, all SNMP packets that are received with the read/write community string have to be encrypted or the packet will not be authorized. You need to use software from Intermec Technologies that supports encryption.



Note: To enable security encryption, you also need to set the Security Encryption Key (page 382).

Action

Tap the **Write Encryption** parameter, then select an option to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.10.5.1.5.0

Options

1	On	SNMP packets must be encrypted
2	Off	SNMP packets do not have to be encrypted (<i>default</i>)

Settings 6:43 ok

SNMP

- Read Only Community, <public>
- Read/Write Community, <private>
- Read Encryption, <Off>
- Write Encryption, <Off>**
- Encryption Key, <>

Change 'Write Encryption' Setting

☐ On

☒ Off

Defaults Refresh Apply

Security Traps Identification

Encryption Key

Identifies the key that this 700 Series Computer uses to encrypt or decipher SNMP packets. Encryption is used only by software provided by Intermecc Technologies. If encryption is enabled, SNMP management platforms will not be able to communicate with the 700 Series Computer. The encryption key is returned encrypted.

Action

Tap the **Encryption Key** parameter, then enter a security encryption key value to change this parameter setting.



Note: You also need to set either **Read Encryption** (page 380) or **Write Encryption** (page 381) or both.

SNMP OID

1.3.6.1.4.1.1963.10.5.1.6.0

Options

The encryption key can be from 4 to 20 ASCII characters. *Default is NULL.*

Traps



SNMP

To access the settings from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **SNMP** icon → the **Traps** tab to access its parameters.

The following are authentication and threshold parameters for traps. *Note that these are listed in the order of their appearance within the Traps tab.*

Authentication

Determines whether to send authentication traps. When trap authentication is enabled, an authentication trap is sent if an SNMP packet is received by the master agent with an invalid community string.

Action


Tap the **Authentication** parameter, then select an option to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.10.5.2.2.0

Options

- 1 On (*default*)
- 2 Off

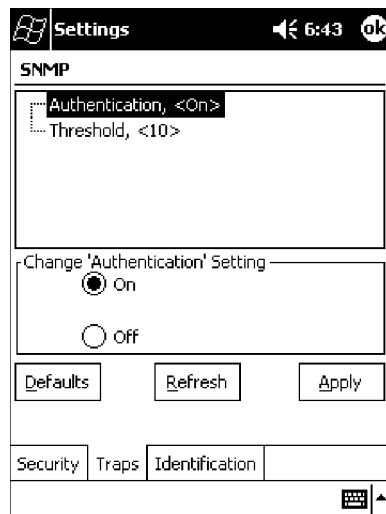

Threshold

Determines the maximum number of traps per second that the master agent generates. If the threshold is reached, the trap will not be sent.

Action

Tap the **Threshold** parameter, then enter a threshold value to change this parameter setting.

SNMP OID

1.3.6.1.4.1.1963.10.5.2.3.0

Options

Any positive integer value. *Default is 10.*

Identification



SNMP

To access the settings from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **SNMP** icon → the **Identification** tab to access its parameters.

The following are parameters for contact, location, and name information for support purposes. *Note that these are listed in the order of their appearance within the Identification tab.*

Contact

Sets the contact information for the person responsible for this 700 Series Computer.

Action

Tap the **Contact** parameter, then enter the name of your contact representative to change this parameter setting.

SNMP OID

1.3.6.1.2.1.1.4.0

Options

The identification contact may be up to 255 ASCII characters. *Default is no characters or blank.*

The screenshot shows the 'Settings' application with the 'SNMP' section selected. The 'Identification' tab is active, displaying the following fields:

- Contact:** <Add an administrator here>
- Name:** <Pocket_PC>
- Location:** <Add a location if applicable>

Below these fields is a section titled 'Change 'Contact' Setting' with a text input field containing 'Add an administrator here'. At the bottom of the screen are three buttons: 'Defaults', 'Refresh', and 'Apply'. The bottom navigation bar shows 'Security', 'Traps', and 'Identification' (which is highlighted).

Name

Sets the assigned name for this 700 Series Computer.

Action

Tap the **Name** parameter, then enter the name of your 700 Series Computer to change this parameter setting.

SNMP OID

1.3.6.1.2.1.1.5.0

Options

The identification name may be up to 255 ASCII characters. *Default is no characters or blank.*

The screenshot shows the 'Settings' application interface. At the top is a title bar with the word 'Settings', a speaker icon, the time '6:44', and an 'ok' button. Below the title bar is the 'SNMP' configuration section. It contains three labeled text input fields: 'Contact, <Add an administrator here>', 'Name, <Pocket_PC>', and 'Location, <Add a location if applicable>'. The 'Name' field is currently filled with 'Pocket_PC'. Below these fields is a section titled 'Change Name Setting' which contains a single text input field also containing 'Pocket_PC'. Underneath this section are three buttons: 'Defaults', 'Refresh', and 'Apply'. At the bottom of the screen is a navigation bar with four tabs: 'Security', 'Traps', 'Identification', and an empty tab. In the bottom right corner of the screen, there is a keyboard icon and an upward-pointing arrow.

Location

Sets the identification location for this 700 Series Computer, such as “Shipping.”

Action

Tap the **Location** parameter, then enter the location of where your 700 Series Computer to change this parameter setting.

SNMP OID

1.3.6.1.2.1.1.6.0

Options

The identification location may be up to 255 ASCII characters. *Default is no characters or blank.*

Settings 6:44 ok

SNMP

Contact, <Add an administrator here>

Name, <Pocket_PC>

Location, <Add a location if applicable>

Change 'Location' Setting

Add a location if applicable

Defaults Refresh Apply


Security Traps Identification

Unit Information Control Panel Applet



Unit Information is a read-only control panel applet that provides information about your 700 Series Computer, such as software version builds, available CAB files, and the internal battery status.

To access the settings from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Unit Information** icon to access its control panel applet.

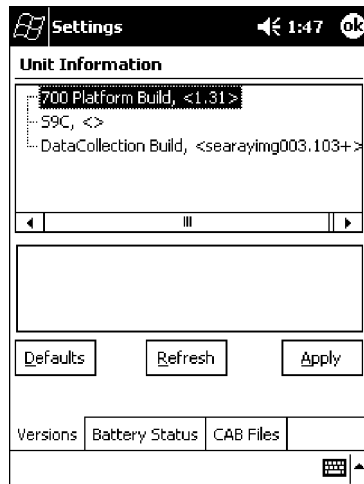

Tap a tab to access its menus. These tabs represent three groups of settings or parameters:


- **Versions** (*starting on the next page*)
- **Battery Status** (*starting on page 390*)
- **CAB Files** (*starting on page 391*)

Versions



You can view the latest software build version on your 700 Series Computer by accessing the **Unit Information** control panel applet.

To access the settings from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Unit Information** icon → the **Versions** tab to view the latest software build version. Tap **ok** to exit this information.

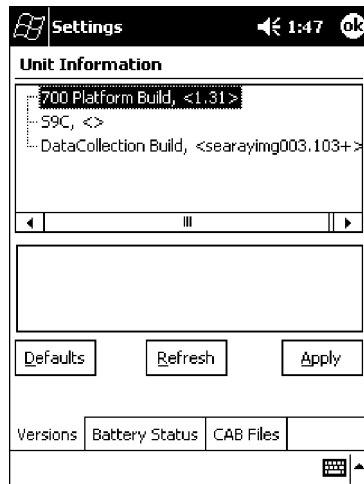

Below are some of the software applications you may find on this screen:


- **700 Platform Build:**
Shows the latest development or released version of the software build for the 700 Series Computer.
- **S9C:**
Provides the name and version of the scanner file built into this 700 Series Computer, along with the current CPU version.
- **DataCollection Build:**
Shows the latest development or released version of the software build for the Data Collection control panel applet.

Battery Status



You can view the battery status for your 700 Series Computer by accessing the **Unit Information** control panel applet.

To access the settings from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Unit Information** icon → the **Battery Status** tab to view the current status. Tap **ok** to exit this information.

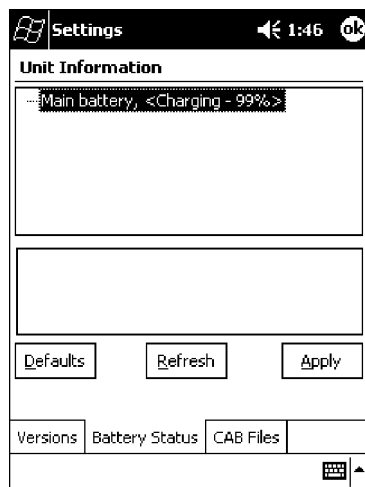


CAB Files

You can view the latest developer or released version of each CAB file from Intermec Technologies Corporation that are installed in your 700 Series Computer via the **Unit Information** control panel applet. *Custom CAB files are not displayed in this applet.* See the *Software Tools User's Manual* for more information about these files.



To access the information from the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Unit Information** icon → the **CAB Files** tab to view the current CAB file versions. Tap **ok** to exit this information.

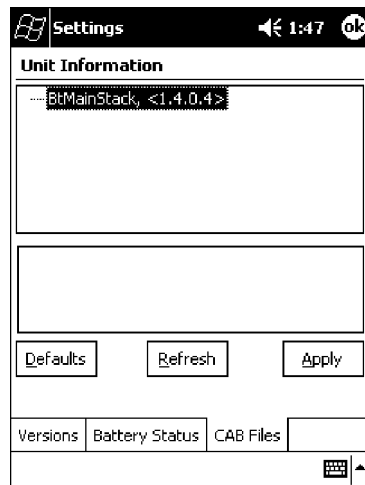

When a CAB file is built, a registry entry is created with a build number for that file. This CAB Files control panel applet looks for a registry key for each CAB file installed. When the registry entry is found, the CAB file name and version number information are displayed. If a CAB file has not been installed, then its information is not displayed.

Below is a list of CAB files from Intermec Technologies that are available for your 700 Series Computer with their latest developer or released version of the software build. Should you need to add any of these to your 700 Series Computer, contact an Intermec representative.


- **BtMainStack:**
Installation of the Main Bluetooth Stack is handled automatically as part of the operating system boot-up procedure. *See Chapter 4, "Network Support," for more information about Bluetooth wireless printing.*
- **Comm Port Wedge:**
The software build for the Comm Port Wedge. *Note that the Comm Port Wedge CAB file is available on the 700 Color Software Tools CD.*
- **NPCPTest:**
This installs a Norand® Portable Communications Protocol (NPCP) Printing test application which will print to an Intermec® 4815, 4820, or 6820 Printer. *See Chapter 5, "Printer Support," for more information.*



- **PDWPM0C:**
This is the installer for the Wireless Printing Demo application. To run this demonstration, tap **Start → Programs → the Wireless Printing Demo** icon. *Press Help in the demo application for more information.*
- **S9C Upgrade:**
Installs the files needed to upgrade the S9C scanner firmware. *See the Recovery CD Help for more information about upgrading the firmware.*
- **SDK:**
Installs the Intermec Software Developer's Kit (SDK). *See the SDK User's Manual for more information.*
- **WinCfg:**
Configures the NRINET.INI file, launches the NRINet client, and loads and unloads the LAN and WLAN device drivers.
- **Wireless Printing Sample:**
Installs a sample application that developers can use for reference when they are developing their own Wireless Printing applications. The source code for this application is included as part of the Wireless Printing SDK on the 700 Color Software Tools CD. *See the SDK User's Manual for more information.*
- **ActiveX Control Tools:**
This lists some of the CAB files that may be available with which to install ActiveX Control Tools. *See the SDK Online Help for more information.*
 - **AXCommunication:**
Communication controls that transmit or receive messages from input connections.
 - **AXFileTransfer:**
File transfer controls that transmit and receive files using the Trivial File Transfer Protocol (TFTP).
 - **AXReaderCommand:**
Reader command functions that modify and retrieve configuration information from your 700 Series Computer.
 - **AXVWedge:**
The virtual wedge control that retrieves scanned ADC data and sends it to the keyboard driver to interpret data as keyboard input.

Utilities Control Panel Applet

The Utilities control panel applet examines and modifies settings and operational modes of specific hardware and software on the 700 Color Computer, including the dock switch, registry storage, wakeup mask, and application launch keys.

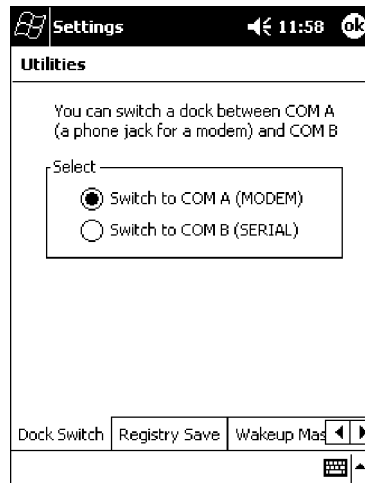

Use the left and right arrows to scroll through the tabs along the bottom of the control panel applet, then tap a tab to access its menus. These tabs represent the following groups of settings or parameters:

- **Dock Switch** (*page 394*)
- **Registry Save** (*page 395*)
- **Wakeup Mask** (*page 396*)
- **App Launch** (*page 397*)

Dock Switch




From the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Utilities** icon → the **Dock Switch** tab to access the Dock Switch control panel applet.

Use this applet to control the position of the dock switch. This can be set either to a COM A (phone jack for a modem) position or to a COM B (serial) position.

If switched to COM B and suspended the terminal will have the following behavior:

- If the 700 Series Computer is on charge, the dock switch will remain switched to COM B.
- If the 700 Series Computer is off charge, the dock switch will switch to COM A and remain in this position until the 700 Series Computer resumes charge.

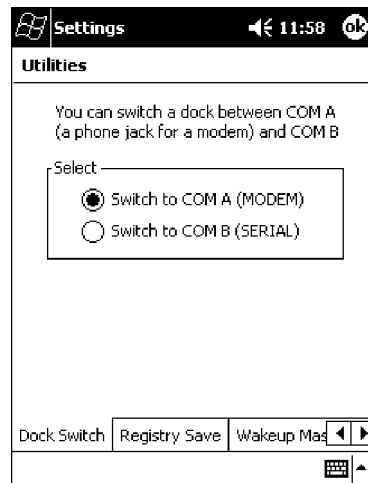

Registry Save




Utilities

From the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Utilities** icon → the **Registry Save** tab to access the Registry Save control panel applet.

If the **Enable Registry Storage** is initially checked after a cold-boot, the **FL** flash file system option is selected by default. To switch from the flash file system (PSM) to a media storage card, select either **SD** for a Secure Digital (SD) storage card or **CF** for a CompactFlash (CF) storage card.

If **Enable Registry Storage** is clear (unchecked), the **FL**, **SD**, and **CF** options are disabled (grayed-out).

To ensure that the 700 Series Computer restores the real-time clock after a cold-boot, check the **Enable RTC Restore** option.

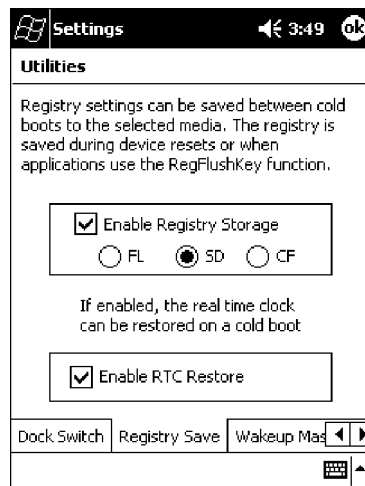

Wakeup Mask




Utilities


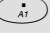

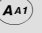




From the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Utilities** icon → the **Wakeup Mask** tab to access the Wakeup Mask control panel applet.

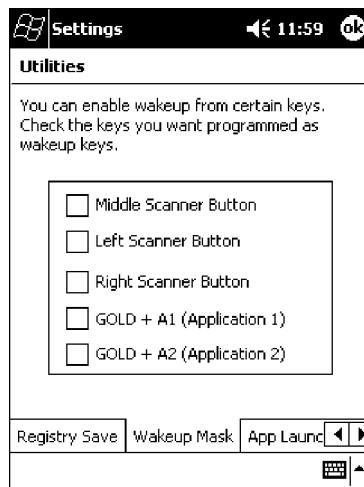This applet programs three scanner buttons and the A1 and A2 application keys to be “wakeup” or resume keys. That is, to prompt the 700 Series Computer to “wake up” or resume activity after going to “sleep” as a result of being inactive after a length of time. This information will remain between warm and cold boots.

Check the appropriate box, then tap **ok** to apply your settings.



Based on your setting, do the following to “wake up” the 700 Series Computer.

If you select:	Then do this on Numeric Keyboard	Then do this on Alphanumeric Keyboard
Middle Scanner Button	Squeeze the button on the Scan Handle	Squeeze the button on the Scan Handle
Left Scanner Button	Squeeze the left scanner button	Squeeze the left scanner button
Right Scanner Button	Squeeze the right scanner button	Squeeze the right scanner button
GOLD + A1 (Application 1)	Press [Gold]  	Press [Gold/White]  
GOLD + A2 (Application 2)	Press [Gold]  	Press [Gold/White]  

App Launch




Utilities

From the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Utilities** icon, then scroll to the right to tap the **App Launch** tab to access the Application Launch control panel applet.

This applet programs or maps two scanner buttons and four application keys to start up to six applications.

For 700 Series Computers with either a laser scanner or an imager, applications are as follows and default mappings are shown in the following illustration:

- Left Scanner Trigger
- Right Scanner Trigger
- Record (*see Note*)
- Calendar (*see Note*)
- Contacts (*see Note*)
- Tasks (*see Note*)

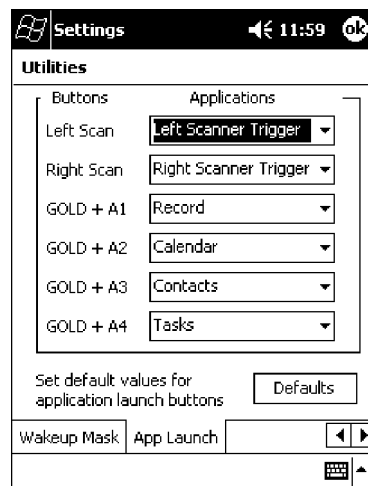

For 700 Series Computers without either a laser scanner or an imager, the default maps the Record, Calendar, Contacts, and Tasks applications the top four and the A3 and A4 buttons are "unassigned" or available for two more applications.



Note: Record, Calendar, Contacts, and Tasks are Pocket PC applications. See Chapter 2, "*Pocket PC 2002*," for more information about these applications.

- To assign an application to a button, select an application from the applicable drop-down list box.
- To assign a new application, select the "Add new application" option, which brings up an Open File dialog and browse SD or CF storage cards for new applications.

- To disable or unmap a currently mapped application from a corresponding button, select "unassigned" from the applicable drop-down list.
- To restore these buttons to their defaults, tap **Defaults** in the lower right corner.



Note; You cannot map an application to more than one button. Should you assign the same application to two buttons, a verification prompt will appear after the second button to confirm whether you want to remap the application. If you tap **Yes**, the applet will change the first button to "unassigned" and map the application to the second button.



Note: All changes will be activated immediately upon selection.

Wireless Network Control Panel Applet



Note: See Chapter 4, “*Network Support*,” for information about the 802.11b radio module.




To start 802.11b communications on the 700 Series Computer, tap **Start** → **Settings** → the **System** tab → the **Wireless Network** icon to access the Profile Wizard for the 802.11b radio module. The Profile Wizard defaults to the Profiles page.

Profiles

Use the Profiles page to add, edit, or delete multiple networking environments for this 802.11b radio. To add a profile from this screen, enter up to 32 alphanumeric characters in the **Profile** field, then tap **Add**. See “*Basic*” on page 401 and “*Security*” on page 402 for more information.


Leave **Use Profile Name for SSID** checked for the SSID (or Network Name) to use this profile name. If this is cleared (check mark removed), the SSID will default to using the factory-assigned “INTERMEC” network name.

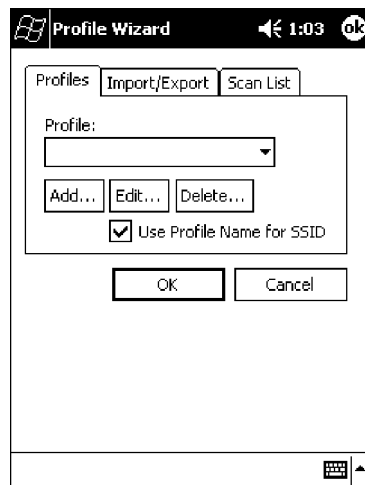

- **To add a profile:**

Tap **Add**, enter up to 32 alphanumeric characters to name this profile if you have not already entered a description in the Profiles page, configure the basic and security information for this profile, then click **Done** to configure its basic and security information.

- Leave **Use Profile Name for SSID** checked for the SSID to use this assigned profile name. If this is cleared (check mark removed), the SSID will default to using the factory-assigned “INTERMEC” network name. Go to the next page to continue.

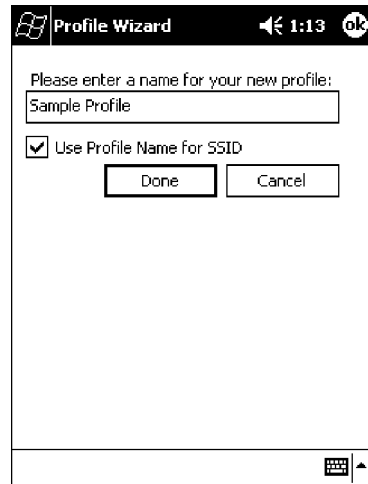
The image shows a screenshot of a mobile device screen displaying the 'Profile Wizard' dialog box. The title bar at the top is black with a white icon on the left, the text 'Profile Wizard' in the center, and a speaker icon, the text '1:13', and an 'OK' button on the right. The main content area is white and contains the text 'Please enter a name for your new profile:' followed by a text input field containing 'Sample Profile'. Below the input field is a checked checkbox labeled 'Use Profile Name for SSID'. At the bottom of the dialog are two buttons: 'Done' and 'Cancel'. A small keyboard icon is visible in the bottom right corner of the screen.

- **To edit a profile:**
Select an existing profile from the **Profile** drop-down list, tap **Edit**, make the changes needed for this profile (starting in the next paragraph), then tap **OK** to return to the Profiles page.
- **To delete a profile:**
Select a profile from the **Profile** drop-down list, tap **Delete**, then tap **Yes** to remove the selected profile.

Basic

Use the Basic page to set the network type and radio channel for this profile. Click **OK** to return to the Profiles page.


- **Network type:**
Tap the drop-down list to select either Infrastructure or Ad-hoc.
- **SSID (Network Name):**
This assumes the profile name when **Use Profile Name for SSID** is checked on the previous screen, *unless another name is entered in this field*. If you want to connect to the next available network or are not familiar with the network name, enter “ANY” in this field. Consult your LAN administrator for network names.
- **Channel:**
If “Ad-hoc” were selected as the network type, then this is enabled. Tap the drop-down list to select a channel, from 1–15, through which to handle connections (*default is 3*).
- **Enable Power Management:**
Check this box to conserve battery power (*default*), or clear this box to disable this feature.

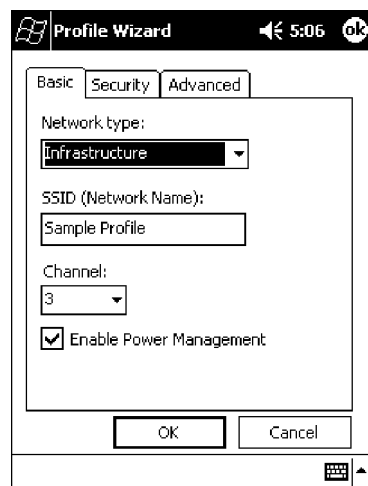

Security

Use the Security page to set this profile as read-only or to enable WEP (Wired Equivalent Privacy) encryption. Click **OK** to return to the Profiles page. The following securities are available from the **Security Method** drop-down list. *Note that the last three methods are available if you have purchased the security package. Contact your Intermec representative for more information.*


- 802.11 WEP Encryption (*next page*)
- 802.1x TLS (*page 404*)
- 802.1x TTLS (*page 405*)
- LEAP (*page 405*)

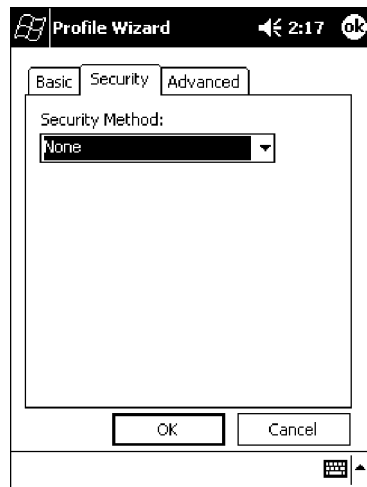

802.11 WEP Encryption

WEP keys are only needed if they are expected by your clients. There are two types available: 64-bit (5-character strings, 12345) (*default*) and 128-bit (13-character strings, 1234567890123). These can be entered as either ASCII (12345) or Hex (0x31323333435).

To enter WEP keys, select “802.11 WEP Encryption” from the **Security Method** drop-down list. Select a data transmission key from the **Data TX Key** drop-down list near the bottom of this screen, then enter the encryption key for that data transmission in the appropriate **Key #** field.

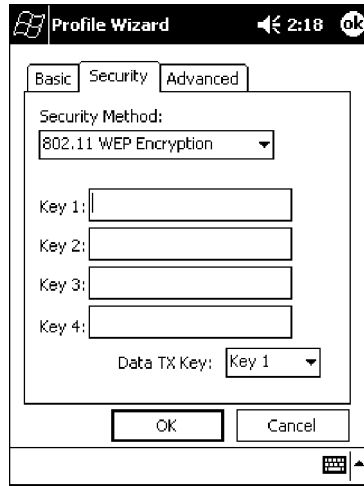


The screenshot shows the 'Profile Wizard' window with the 'Security' tab selected. The 'Security Method' dropdown is set to '802.11 WEP Encryption'. Below this, there are four input fields for 'Key 1', 'Key 2', 'Key 3', and 'Key 4'. At the bottom, the 'Data TX Key' dropdown is set to 'Key 1'. The window has 'OK' and 'Cancel' buttons at the bottom right. The title bar shows 'Profile Wizard' and a timer '2:18'.

802.1x TLS (Transport Layer Security)

TLS is a protocol that ensures privacy between communicating applications and their users on the Internet. To use this protocol, select “802.1x TLS” from the Security Method drop-down list, then enter the following:

- **Client Key File:**
Enter the file location where the certificate for your identity is stored.
- **Password:**
Enter the password for the certificate in this field.
- **Supplicant ID:**
Enter the user ID associated with this certificate.
- **Server Cert CN (*Certificate Common Name*):**
Enter the common name of your authentication server.
- **CA List (*Certificate Authority*):**
Enter the file location, or path, of the server certificates.

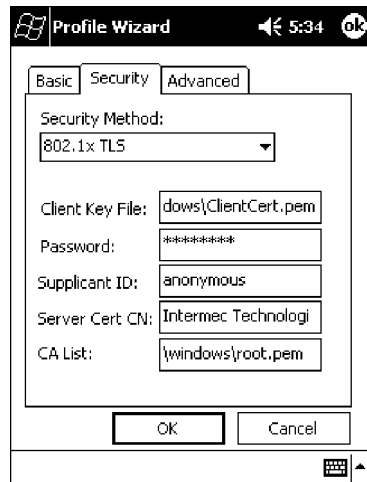

802.1x TTLS (EAP-Tunneled TLS)

To use this protocol, select “802.1x TTLS” from the Security Method drop-down list, then enter the following:

- **Username:**
Enter your user name for this security protocol.
- **Password:**
Enter your password for this security protocol.
- **Supplicant ID:**
Enter “anonymous” unless your administrator indicates otherwise.
- **Server Cert CN (Certificate Common Name):**
Enter the common name of your authentication server.
- **CA List:**
Enter the file location, or path, of the server certificates.

The screenshot shows the 'Profile Wizard' dialog box with the 'Security' tab selected. The 'Security Method' dropdown is set to '802.1x TTLS'. The 'Username' field contains 'anonymous', the 'Password' field contains '*****', the 'Supplicant ID' field contains 'anonymous', the 'Server Cert CN' field contains 'Intermec Technologie', and the 'CA List' field contains '\\windows\\root.pem'. The 'Save Password' checkbox is checked. The 'OK' and 'Cancel' buttons are at the bottom.

LEAP (Cisco Wireless EAP (Extensible Authentication Protocol))

Enter your unique user name and password to use this protocol.

The screenshot shows the 'Profile Wizard' dialog box with the 'Security' tab selected. The 'Security Method' dropdown is set to 'LEAP'. The 'Username' field contains 'anonymous' and the 'Password' field contains '*****'. The 'Save Password' checkbox is checked. The 'OK' and 'Cancel' buttons are at the bottom.

Advanced


Use this page to secure the configuration for this profile or to make all fields read-only.

- **Make Profile Read-Only:**

Check this box, then enter and reenter a password to “lock” or render “read-only” all configurations for this profile. To reverse this step, clear the check box, then enter the password assigned with the “read-only” status.

- **Certificates:**

If “802.1x TLS,” “802.1x TTLS,” or “LEAP” were enabled via the **Security** tab, then this button will appear. Tap this button to configure the available certificates. See “*Certificates*” on the next page for more information.

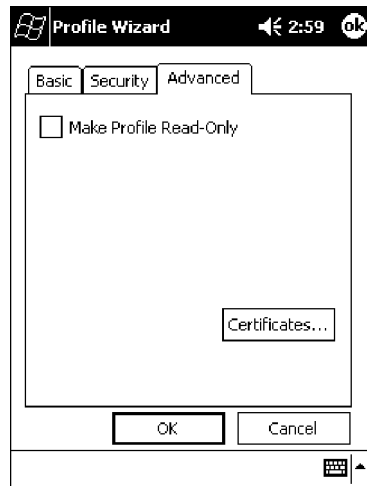

Certificates

Use this page to view, modify, or remove certificates assigned to your particular security method. *Note that you can also access this page by tapping **Start** → **certificates** from the **Today** screen.*

- **CA Name/IP:**
Enter a valid CA name or IP address assigned to the certificate in question. This allows you to enroll the certificate or to browse for its latest information.
- **Enroll File Name:**
Enter the file name of the certificate to be enrolled.
- **Store Location:**
Enter the path where the certificate is to be stored within your 700 Series Computer.
- **Enroll:**
Tap this to assign the file entered in **Enroll File Name** to the location specified in **Store Location**.
- **CA Vert:**
Tap this to view the contents of the certificate via the Internet Explorer.
- **View:**
Tap this to view information about the certificate, such as to whom this certificate was issued, who issued the certificate, and the span of time the certificate is valid.
- **Remove:**
Select a file from the list, then tap this button to delete that file.


The screenshot displays the 'Certificates' application interface. At the top, there is a status bar with a signal strength indicator, the time '3:00', and a battery icon. The title bar reads 'Certificates'. Below the title bar, there are three input fields: 'CA Name/IP:' (empty), 'Enroll File Name:' (containing 'client.pem'), and 'Store Location:' (containing '\Windows'). Below these fields is a list of files: '\Windows\random.pem' and '\Windows\root.pem'. At the bottom of the screen, there are four buttons: 'Enroll..', 'CA Cert', 'View..', and 'Remove'. A keyboard icon is visible in the bottom right corner.

Import/Export

Use this page to send a profile or to retrieve a profile to or from another location within your 700 Series Computer.




- **To export a profile:**
Select to highlight a profile, then tap **Export**. Select from the drop-down lists, the folder, type of files, and location within the folder where the profile is to go, tap **OK** to export the profile, tap **ok** to close the confirmation screen, then tap **OK** again to exit the Profile Wizard.

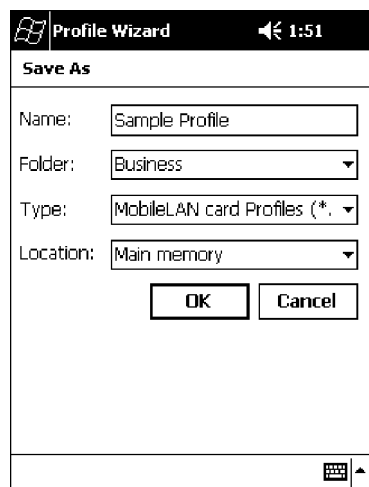

- **To import a profile:**

Tap **Import** to access the Open screen, from the drop-down lists, select a folder and file type, then tap a profile from the list provided. Tap **ok** to close the confirmation screen, then tap **OK** again to exit the Profile Wizard.

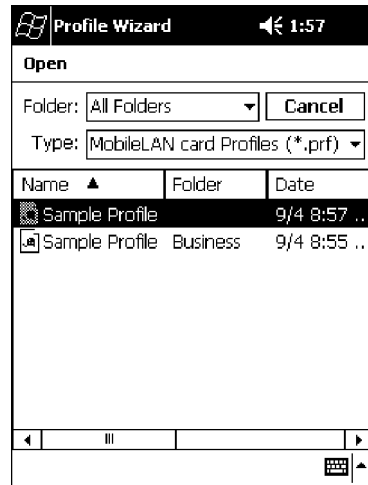


Scan List

Use this Scan List page to monitor network connections, and if lost, to attempt to reestablish connections with these networks.

Selected Profile


Select this option to use the profile defined in the Profiles page, then tap **OK** to exit the Profile Wizard. When connections are lost, attempts will be made to connect to the specified profile.

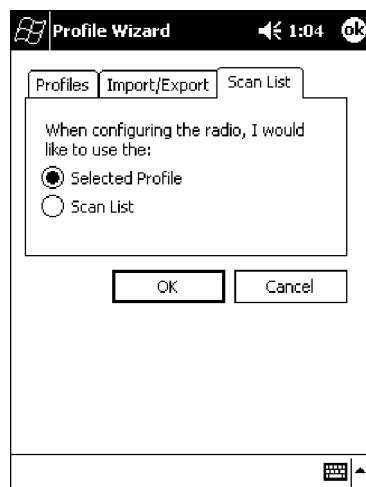

Scan List

Use this option to select a number of profiles with which to establish connections. When connections are lost, attempts will be made to contact each of the profiles listed, in the order they appear in the list.

- 1 Tap this option, then tap **Edit Scan List**.
- 2 Select profiles from the **Available Profiles** drop-down list, then tap **Add** to include each selection in the Scan List.
- 3 To arrange the hierarchy of profiles, tap to select a profile, then tap either **Move Up** or **Move Down** to move each profile. To remove a profile from the list, tap to select that profile, then tap **Delete**.
- 4 Click either **ok** or **Close** to return to the Scan List page, then click **OK** to exit the Profile Wizard.

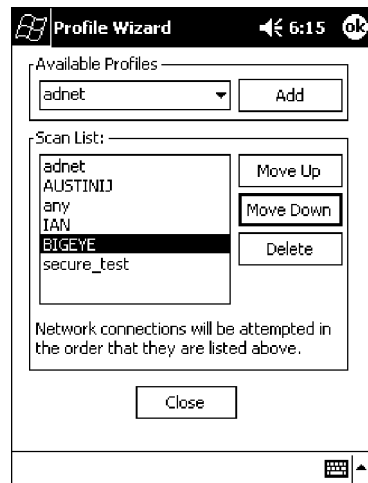

Other Configurable Parameters

The following parameters can be configured by sending reader commands through the network or from an application. See “*Reader Commands*” on page for more information.

Audio Volume

Changes the volume of all audio signals.

SNMP OID

1.3.6.1.4.1.1963.15.3.1.3.0

Options (Syntax Data for Reader Commands)

- 0 Off
- 1 Very quiet
- 2 Quiet
- 3 Normal (*default*)
- 4 Loud
- 5 Very loud

Automatic Shutoff

Sets the length of time the 700 Series Computer remains on when there is no activity. When you turn on the 700 Computer, it either resumes exactly where it was when you turned it off or boots and restarts your application.

SNMP OID

1.3.6.1.4.1.1963.15.11.3.0

Options (Syntax Data for Reader Commands)

- 1 1 minute
- 2 2 minutes
- 3 3 minutes (*default*)
- 4 4 minutes
- 5 5 minutes

Backlight Timeout

Sets the length of time that the display backlight remains on. If you set a longer timeout value, you use the battery power at a faster rate.

SNMP OID

1.3.6.1.4.1.1963.15.13.1.0

Options (Syntax Data for Reader Commands)

10	10 seconds
30	30 seconds
60	1 minute (<i>default</i>)
120	2 minutes
180	3 minutes
240	4 minutes
300	5 minutes

Date/Time

Sets the current date and time.

SNMP OID

Date: 1.3.6.1.4.1.1963.15.501.2.1.0

Time: 1.3.6.1.4.1.1963.15.501.2.2.0

Options (Syntax Data for Reader Commands)

Date	Year	0000–9999 (<i>1999</i>)
	Month	1–12 (<i>6</i>)
	Day	1–31 (<i>1</i>)
Time	Hour	0–23 (<i>0</i>)
	Minute	0–59 (<i>00</i>)
	Second	0–59 (<i>00</i>)

Key Clicks

Enables or disables the keypad clicks. The 700 Series Computer emits a click each time you press a key or decode a row of a two-dimensional symbology.

SNMP OID

1.3.6.1.4.1.1963.15.12.1.0

Options (Syntax Data for Reader Commands)

0	Disable clicks
1	Enable soft key clicks
2	Enable loud key clicks (<i>default</i>)

Using Reader Commands

After the 700 Series Computer is connected to your network, you can send the 700 Series Computer a reader command from an application to perform a task, such as changing the time and date. Some reader commands temporarily override the configuration settings and some change the configuration settings.

Change Configuration

The Change Configuration command must precede any configuration command. If you enter a valid string, the 700 Series Computer configuration is modified and the computer emits a high beep. To send the Change Configuration command through the network, use the `$+ [command]` syntax where *command* is the two-letter command syntax for the configuration command followed by the value to be set for that command.

You can also make changes to several different commands by using the `$+ [command]...[command n]` syntax. There are seven configuration command settings that can be changed in this way. *See each command for information on respective acceptable “data” values.*

Command	Syntax
Audio Volume	BV <i>data</i>
Automatic Shutoff	EZ <i>data</i>
Backlight Timeout	DF <i>data</i>
Key Clicks	KC <i>data</i>
Virtual Wedge Grid	AF <i>data</i>
Virtual Wedge Postamble	AE <i>data</i>
Virtual Wedge Preamble	AD <i>data</i>



Note: See pages 373 and 374 for more information about the **Virtual Wedge Postamble** and **Virtual Wedge Preamble** commands.

Example 1

To change the Beep Volume to Off, you can send this string to the 700 Series Computer through the network: `$+BV0`

where:

<code>\$+</code>	Indicates Change Configuration.
<code>BV</code>	Specifies the Audio Volume parameter.
<code>0</code>	Specifies a value of Off.

Example 2

To change the Beep Volume to Very Quiet and the Virtual Wedge Grid to 123: `$+BV1AF123`

where:

<code>\$+</code>	Indicates Change Configuration
<code>BV1</code>	Specifies Audio Volume, set to Very Quiet (1)
<code>AF123</code>	Specifies Virtual Wedge Grid, set to a value of 123.

Set Time and Date

This command sets the date and time on the 700 Series Computer. The default date and time is *June 1, 1999 at 12:00 AM*.

From the network, send the following:

```
/+ yyyyymmddhhmmss
```


where acceptable values for the date are:

yyyy	0000–9999	Year
mm	01–12	Month of the year
dd	01–31	Day of the month
hh	00–23	Hour
mm	00–59	Minutes
ss	00–59	Seconds



Clock

You can also set the time and date by using Configuration Management in Unit Manager, or by using the **Clock** control panel applet in the Settings menu. To access this control panel applet, tap **Start** → **Settings** → the **System** tab → the **Clock** icon to access its control panel applet.

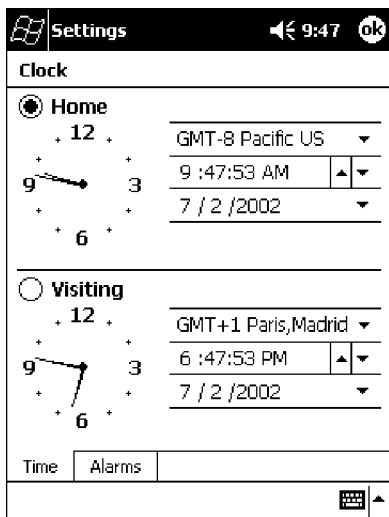



B Bar Codes

This appendix contains a brief explanation of some of the bar code symbologies that the 700 Series Color Mobile Computer decodes and explains some of the general characteristics and uses of these bar code types. It also includes several bar code labels that can be scanned into your 700 Series Computer.

Bar Code Symbolologies

Specific bar code algorithms can be enabled using the setup menus or the host computer. Once the computer correctly decodes a bar code, the computer encodes data with descriptive information about the symbol. Response time is improved by limiting the computer to the bar codes being used.

Bar Code Data String Formats

Data Bar Code Type	Data Format	Data Length
UPC short (UPC-E)	n d d d d d d c	8
EAN short (EAN-8)	f n d d d d d c	8
UPC long (UPC-A)	n d d d d d d d d d c	12
EAN long (EAN-13)	f n d d d d d d d d d c	13
UPC short add-on 2	n d d d d d d c a a	10
EAN short add-on 2	f n d d d d d c a a	10
UPC long add-on 2	n d d d d d d d d d d c a a	14
EAN long add-on 2	f n d d d d d d d d d d c a a	15
UPC short add-on 5	n d d d d d d c a a a a a	13
EAN short add-on 5	f n d d d d d c a a a a a	13
UPC long add-on 5	n d d d d d d d d d d c a a a a a	17
EAN long add-on 5	f n d d d d d d d d d d c a a a a a	18
Interleaved 2 of 5	d.....d	Scan device dependent
Standard 2 of 5	d.....d	Scan device dependent
Plessey	d.....d c	Scan device dependent
Codabar	s d....d s	Scan device dependent
Code 11	d.....d	Scan device dependent
Code 39	d.....d	Scan device dependent
Extended Code 39	d.....d	Scan device dependent
Code 93	d.....d	Scan device dependent
Code 128	d.....d	Scan device dependent



Note: These bar code data definitions apply to the Data Format column in the previous table

- a Add-on code digits
- c Check digits
- d Bar code digits
- f EAN flag 1 characters
- n Number system digits
- s Start and stop digits

If MOD 10 or MOD 11 check digits are enabled, the digit falls at the end of a bar code data string. Each check digit enabled extends the bar code data string length by one character.

The 700 Series Computer recognizes eleven of the most widely used bar code symbologies. With bar code symbologies, like languages, there are many different types. A bar code symbology provides the required flexibility for a particular inventory tracking system.

A symbology may be for particular industries, such as food and beverage, automotive, railroad, or aircraft. Some of these industries have established their own bar code symbology because other symbologies did not meet their needs.

Without going into great detail on the bar code structure, note that no two products use the same bar code. Each product gets a unique bar code.

Industries that use a particular type of bar code symbology have formed regulating committees or are members of national institutes that issue and keep track of bar codes. This ensures that each organization that contributes to a particular industry conforms to its standard. Without some form of governing body, bar coding would not work.

- UPC (Universal Product Code) with/without add-ons
- EAN (European Article Numbering Code) with/without add-ons
- Codabar
- C11 (Code 11)
- C39 (Code 39)
- C93 (Code 93)
- C128 (Code 128)
- I 2 of 5 (Interleaved 2 of 5 Code)
- S 2 of 5 (Standard 2 of 5)
- Plessey
- MSI (a variant of Plessey)

UPC

The UPC (Universal Product Code) is the symbology used throughout the grocery and retail industries. This bar code symbology contains two pieces of numerical information encoded on the bar code, producer identification, and product identification information.

The UPC symbol is 12 characters long. The first character of the UPC symbol is a number system character, such as “0” for grocery items and “3” for drug- and health-related items.

The UPC symbology is for retail environments such as grocery stores, convenience stores, and general merchandise stores.

Some retail items are so small that a standard UPC bar code cannot fit on the packaging. When this occurs there is a permitted shorter version of the UPC symbology, referred to as UPC-E. UPC-E is six characters long (eight including number system and check digit), approximately half the size of a standard UPC bar code.

EAN

EAN (European Article Numbering) symbology is similar to UPC symbology, except that it contains 13 characters and uses the first two to identify countries.

The EAN symbology is used in the retail environment throughout most of Europe. Though similar to UPC symbology, these are not interchangeable.

Codabar

Codabar was for retail price-labeling systems. Today it is widely accepted by libraries, medical industries, and photo finishing services.

Codabar is a discrete, self-checking code with each character represented by a stand-alone group of four bars and three intervening spaces.

Four different start or stop characters get defined and designated “a”, “b”, “c”, and “d”. These start and stop characters are constructed using one wide bar and two wide spaces. A complete Codabar symbol begins with one of the start or stop characters followed by some number of data characters and ending in one of the start or stop characters.

Any of the start or stop characters may be used on either end of the symbol. It is possible to use the 16 unique start or stop combinations to identify label type or other information.

Since Codabar is variable-length, discrete, and self-checking, it is a versatile symbology. The width of space between characters is not critical and may vary significantly within the same symbol. The character set consists of “0” through “9”, “-”, “\$”, “:”, “/”, “.”, and “+”.

The specific dimensions for bars and spaces in Codabar optimize performance of certain early printing and reading equipment. Codabar has 18 different dimensions for bar and space widths. So many different dimensions often result in labels printed out of specification and cause Codabar printing equipment to be more expensive.

Code 11

Code 11 satisfies the requirements for a very high density, discrete numeric bar code. The name Code 11 derives from 11 different data characters that can be represented, in addition to a start or stop character.

The character set includes the 10 digits and the dash symbol. Each character is represented by a stand-alone group of three bars and two intervening spaces. Although Code 11 is discrete, it is not self-checking. A single printing defect can transpose one character into another valid character. One or two check digits obtain data security.

The specifications for Code 11 suggest that this code should have a narrow element width of 7.5 mils. This results in an information density of 15 characters per inch.

Code 39

Code 39 (C39) is the most widely used symbology among the industrial bar codes. Most major companies, trade associations, and the federal government find this code to fit their needs. The main feature of this symbology is the ability to encode messages using the full alphanumeric character set, seven special characters, and ASCII characters.

Programming for this symbology can be for any length that the application requires. The application program for the 700 Series Computer handles symbology at least one character but no more than 32 characters in length.

When programming the computer for Code 39, it is important to set the symbology limit as close as possible (minimum and maximum bar code lengths being scanned). Doing so keeps the computer bar code processing time to a minimum and conserves battery power.

Bar code readers can respond to Uniform Symbology Specification symbols in non-standard ways for particular applications. These methods are not for general applications, because of the extra programming required. Code 39 Full ASCII is one example of non-standard code.



Note: See page 424 to scan several Code 39 bar code labels available to change settings on your 700 Series Computer.

Encoded Code 39 (Concatenation)

If the first data character of a symbol is a space, the reader may be programmed to append the information contained in the remainder of the symbol to a storage buffer. This operation continues for all successive symbols that contain a leading space, with messages being added to the end of previously stored ones. When a message is read which does not contain a leading space, the contents are appended to the buffer, the entire buffer is transmitted, and the buffer is cleared.

Encoded Code 39 (Full ASCII)

If the bar code reader is programmed for the task, the entire ASCII character set (128 characters) could be coded using two character sequences: a symbol (“\$”, “.”, “%”, “/”) followed by a letter of the alphabet.

Code 93

The introduction of Code 93 provided a higher density alphanumeric symbology designed to supplement Code 39. The set of data characters in Code 93 is identical with that offered with Code 39. Each character consists of nine modules arranged into three bars and three spaces.

Code 93 uses 48 of the 56 possible combinations. One of these characters, represented by a square, is reserved for a start or stop character, four are used for control characters, and the remaining 43 data characters coincide with the Code 39 character set. An additional single module termination bar after the stop character concludes the final space.

Code 93 is a variable length, continuous code that is not self-checking. Bar and spaces widths may be one, two, three, or four modules wide. Its structure uses edge-to-similar-edge decoding. This makes the bar code immune to uniform ink spread, which allows liberal bar width tolerances.

Code 93 uses two check characters. Its supporters believe this makes it the highest density alphanumeric bar code. The dual check digit scheme provides for high data integrity. All substitution errors in a single character are detected for any message length.

Code 128

Code 128 (C128) is one of the newest symbologies used by the retail and manufacturing industries. It responds to the need for a compact alphanumeric bar code symbol that could encode complex product identification.

The fundamental requirement called for a symbology capable of being printed by existing data processing printers (primarily dot-matrix printers) that produce daily, work-in-progress, job, and product traceability documents. The ability to print identification messages between 10 and 32 characters long, on existing forms and labels deemed an important requirement.

Code 128 uniquely addresses this need as the most compact, complete, alphanumeric symbology available.

Additionally, the Code 128 design with geometric features, improves scanner read performance, does self-checking, and provides data message management function codes.

Code 128 encodes the complete set of 128 ASCII characters without adding extra symbol elements. Code 128 contains a variable-length symbology and the ability to link one message to another for composite message transmission. Code 128, being a double-density field, provides two numeric values in a single character.

Code 128 follows the general bar code format of start zone, data, check digit, stop code, and quiet zone. An absolute minimum bar or space dimension of nine mils (0.010 inch minimum nominal \pm 0.001 inch tolerance) must be maintained.

Characters in Code 128 consist of three bars and three spaces so that the total character set includes three different start characters and a stop character.

UCC/EAN-128 Shipping Container Labeling is a versatile tool that can ease movement of products and information. The Shipping Container Labeling bar code can take any form and usually has meaning only within the company or facility where applied.

Because this *random* data can get mistaken later for an industry standard code format, the UCC and EAN chose a symbology uniquely identified from these other bar codes. This standard is for maximum flexibility, to handle the diversity of distribution in global markets by cost efficiency.

The UCC/EAN-128 Container Labeling specification calls for a FUNC1 to immediately follow the bar code's start character. FUNC1 also follows any variable-length application field. The specification also calls for the computer to send "JC1" for the first FUNC1. The specification requires that the computer send a "<GS>" (hex 1D) for subsequent FUNC1 codes in the bar code.

Because "<GS>" is not compatible with computer emulation data streams, the Uniform Code Council has been asked to change the specification. This change is made to send the same three character sequence "JC1" to identify the embedded FUNC1 codes.

This implementation should provide for clean application coding by identifying the same sequences for the same scanned codes. If the communication of Norand bar code types is enabled, the Shipping Container Label codes precede with a "J". These strings will appear on the computer display. The application may have to allow for strings longer than 48 characters (maximum length indicated in the specification). Actual length variance depends on the number of variable-length data fields. Allowing for 60 characters should be sufficient. Within the Code 128 specification, the computer can link bar codes together. If this is to happen, allow for more characters (computer limit is 100 characters).

The Application Identifier Standard, that is part of the UCC/EAN Shipping Label concept, complements, rather than replaces, other UCC/EAN standards. Most UCC/EAN standards primarily identify products.

Several industries expressed the need to standardize more than product identification. The UCC/EAN Code 128 Application Identifier Standard supplies this tool. The standard adds versatility for inter-enterprise exchanges of perishability dating, lot and batch identification, units of use measure, location codes, and several other information attributes.

For more detailed information on Code 128 UCC/EAN Shipping Label bar code and Application Identifier Standard, refer to the UCC/EAN-128 Application Identifier Standard specification.

I 2 of 5 (Interleaved)

I 2 of 5 (Interleaved 2 of 5 Code) is an all-numeric symbology, widely used for warehouse and heavy industrial applications. Its use has been particularly prevalent in the automobile industry. The I 2 of 5 symbology can be placed on smaller labels than what the standard UPC symbology requires.

I 2 of 5 also provides a little more flexibility on the type of material it can print on. Interleaved 2 of 5 Code has its name because of the way the bar code is configured.

I 2 of 5 bars and spaces both carry information. The bars represent the odd number position digits, while spaces represent the even number position digits. The two characters are interleaved as one. Messages encoded with this symbology have to use an even number of characters since two numeric characters always get interleaved together.

S 2 of 5 (Standard 2 of 5)

The code S 2 of 5 (Standard 2 of 5 Code) is designed primarily for:

- Warehouse inventory handling
- Identification of photo finishing envelopes
- Airline tickets
- Baggage and cargo handling

The code S 2 of 5 is simple and straightforward. All information is contained in the widths of the bars, with the spaces serving only to separate the individual bars.

Bars can either be wide or narrow, and the wide bars are usually three times the widths of the narrow bars. Spaces may be any reasonable width but are typically equal to the narrow bars. Narrow bars are identified as zero bits and wide bars as one bits.

Remember the code structure by associating the bar positions from left to right with weighting factors 1, 2, 4, 7, and parity. Exceptions to this rule are zero, start, and stop. This code is a discrete code, since the white spaces between the characters are not part of the code. Because the white spaces carry no information, their dimensions are not critical.

The S 2 of 5 code is self-checking, meaning a scanner passing through a printing void would detect the proper ratio of wide bars to total bars. When the scanner spots an error, a non-read will occur.

Plessey

Plessey finds its origin in the pulse width modulated (PWM) code developed in England. It is widely used for shelf markings in grocery stores. Pulse width modulated codes represent each bit of information by a bar and space pair. A zero bit consists of a narrow bar followed by a wide space, while a one bit consists of a wide bar followed by a narrow space. It is mainly a numeric symbology (0-9) with six extra characters available for assigning any symbol or letter desired.

Plessey codes are not self-checking and employ a variety of check characters. Plessey employs a polynomial-based Cyclic Redundancy Check (CRC). For start and stop characters, Plessey employs a 1101 and previously used a 0101.

This symbology is very limited about what information can be encoded. It is not considered for new applications.

MSI Code (Variant of Plessey)

In addition to Plessey characteristics, the MSI Code employs a Modulus 10 Check. For start and stop checks, MSI employs a single bit pair of 1 as a start symbol and a single bit pair of 0 as a stop symbol. MSI reverses the 1-2-4-8 BCD pattern for bit pair weighting to 8-6-2-1.

Bar Code Labels

You can change some settings on your 700 Series Computer by scanning the following Code 39 bar code labels.

- You can use the Data Collection control panel to set the three Virtual Wedge parameters (*starting on page 372*).



Note: When you use a bar code creation utility to make a scannable bar code label, the utility probably adds opening and closing asterisks automatically. Asterisks are included here for translation purposes.

Audio Volume



Note: The Audio Volume parameter information is on page 411.

Turn Audio Off



\$+BV0

Set Audio Volume to very quiet



\$+VB1

Set Audio Volume to quiet



\$+BV2

Set Audio Volume to normal (*default*)



\$+BV3

Set Audio Volume to loud



\$+BV4

Set Audio Volume to very loud



\$+BV5

Automatic Shutoff



Note: The Automatic Shutoff parameter information is on page 411.

Set Automatic Shutoff to 1 minute



\$+EZ1

Set Automatic Shutoff to 2 minutes



\$+EZ2

Set Automatic Shutoff to 3 minutes (*default*)



\$+EZ3

Set Automatic Shutoff to 4 minutes



\$+EZ4

Set Automatic Shutoff to 5 minutes



\$+EZ5

Backlight Timeout



Note: The Backlight Timeout parameter information is on page 412.

Backlight Timeout 10 seconds



\$+DF10

Backlight Timeout 30 seconds



\$+DF30

Backlight Timeout 1 minute (*default*)



\$+DF60

Backlight Timeout 2 minutes



\$+DF120

Backlight Timeout 3 minutes



\$+DF180

Backlight Timeout 4 minutes



\$+DF240

Backlight Timeout 5 minutes



\$+DF300

Key Clicks



Note: The Key Clicks parameter information is on page 412.

Disable key clicks



\$+KC0

Enable soft key clicks



\$+KC1

Enable loud key clicks (*default*)



\$+KC2

Virtual Wedge Grid, Preamble, Postamble

The following parameters are user-configurable strings. Refer to a full ASCII chart for more information.

Grid

For Virtual Wedge Grid, the first part of the bar code would be the following, which can include a string of up to 240 characters. *Parameter information starts on page 375.*



*\$+AF

Preamble

For Virtual Wedge Preamble, the first part of the bar code would be below, followed by a string of up to 31 characters (*no <NUL>*) and an asterisk. *Default is no characters. Parameter information is on page 373.*




*\$+AD

Postamble

For Virtual Wedge Postamble, the first part of the bar code would be below, followed by a string of up to 31 characters (*no <NUL>*) and an asterisk. *Default is no characters. Parameter information is on page 374.*



*\$+AE

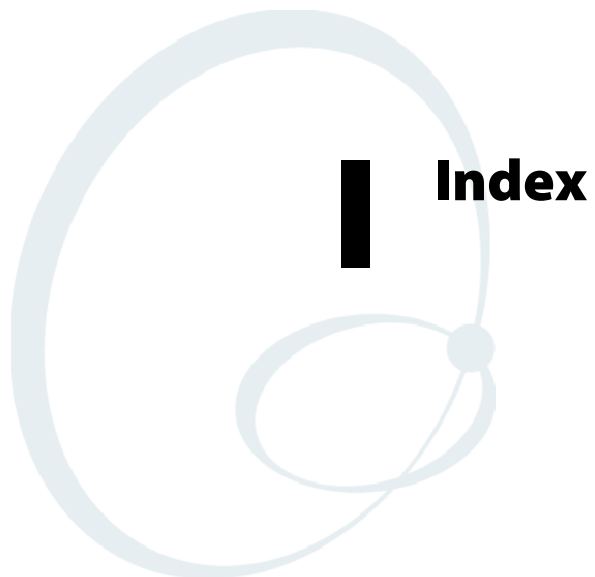

Index

The Classes and Functions Index covers classes and functions for the 700 Series Color Mobile Computer.

The General Index covers all topics. Those in italics are figures, those in bold are tables.

The Files Index is to assist you in locating descriptions for device drivers, applications, utilities, batch files, or other files within this publication.

Classes and Functions

A

add_registry_section, [AddReg]
 flags, 270
 registry_root_string, 270
 value_name, 270
 AddReg, [DefaultInstall], 266
 [AddReg], add_registry_section
 flags, 270
 registry_root_string, 270
 value_name, 270
 AddWep(), 313
 AppName, [CEStrings], 263

B

BuildMax, [CEDevice], 264
 BuildMin, [CEDevice], 264

C

CancelReadImage, IImage, 249
 CancelReadRequest
 IADC, 160
 IBarcodeReaderControl, 168
 [CEDevice]
 BuildMax, 264
 BuildMin, 264
 ProcessorType, 264
 UnsupportedPlatforms, 264
 VersionMax, 264
 VersionMin, 264
 CEMSelfRegister, [DefaultInstall], 266
 CESetupDLL, [DefaultInstall], 266
 CESHortcuts, [DefaultInstall], 266
 [CEShortcuts], shortcut_list_section
 shortcut_filename, 271
 shortcut_type_flag, 271
 target_file/path, 271
 target_file_path, 271
 CESignature
 [SourceDiskNames], 266
 [Version], 262
 [CEStrings]
 AppName, 263
 InstallDir, 263
 Close, IImage, 253
 CloseHandle()
 DTR printing, 142, 143
 IrDA printing, 136
 NPCP printing, 137, 138
 ConfigureProfile(), 319
 ControlLED, IBarcodeReaderControl, 169
 Copyfiles, [DefaultInstall], 266
 [CopyFiles], file_list_section
 destination_filename, 269
 flags, 269
 source_filename, 269
 create/delete ADC COM objects, 157
 CreateEvent(), 323

CreateFile()
 DTR printing, 142, 143
 IrDA printing, 136
 NPCP printing, 137, 138

D

[DefaultInstall]
 AddReg, 266
 CESelfRegister, 266
 CESetupDLL, 266
 CEShortcuts, 266
 Copyfiles, 266
 DeregisterDevice(), 137
 DTR printing, 142
 [DestinationDirs], file_list_section, 268
 DeviceIOControl(), 307
 DTR printing, 142
 NPCP printing, 137
 DeviceIoControl(), NPCP printing, 138, 139
 disk_ordinal, [SourceDiskNames], 266
 DllRegisterServer, 266
 DllUnregisterServer, 266

E

EnableWep(), 316
 EncryptWepKeyForRegistry(), 318

F

file_list_section
 [CopyFiles]
 destination_filename, 269
 flags, 269
 source_filename, 269
 [DestinationDirs], 268
 filename, [SourceDiskFiles], 267

G

GetAssociationStatus(), 314
 GetAuthenticationMode(), 315
 GetBSSID(), 310
 GetCodabar, IS9CConfig, 180
 GetCode11, IS9CConfig2, 222
 GetCode128, IS9CConfig, 189
 GetCode39, IS9CConfig, 183, 217
 GetCode93, IS9CConfig, 186
 GetConfig, ISCP, 239
 GetCustomSymIds, IS9CConfig2, 225
 GetGlobalAmble, IS9CConfig2, 229
 GetI2of5, IS9CConfig, 192
 GetLinkSpeed(), 310
 GetMac(), 309
 GetMatrix2of5, IS9CConfig, 195
 GetMSI, IS9CConfig, 198
 GetNetworkMode(), 312
 GetNetworkType(), 311
 GetPDF417, IS9CConfig, 201
 GetPDF417Ext, IS9CConfig2, 232
 GetPlessey, IS9CConfig, 206
 GetPowerMode(), 317
 GetRSSI(), 313
 GetRTSThreshold(), 319
 GetSSID(), 310

GetStandard2of5, IS9CConfig, 209
 GetSymIdXmit, IS9CConfig2, 235
 GetTelepen, IS9CConfig, 212
 GetTXPower(), 311
 GetUpcEan, IS9CConfig, 215
 GetWepStatus(), 314

I

IADC, 159
 CancelReadRequest, 160
 Initialize, 161
 QueryAttribute, 162
 QueryData, 163
 Read, 164
 SetAttribute, 165
 IBARCODEREADER.H, IBarCodeReaderControl functions, 167
 IBarCodeReaderControl, 167
 CancelReadRequest, 168
 ControlLED, 169
 Initialize, 170
 IssueBeep, 171
 QueryAttribute, 172
 Read, 173
 SetAttribute, 175
 TriggerScanner, 178
 IImage
 CancelReadImage, 249
 Close, 253
 Open, 252
 ReadImage, 248
 ReadSigCapBuffer, 243
 ReadSigCapFile, 246
 Start, 250
 Stop, 251
 Imager, settings, IS9CConfig3, 238
 Initialize
 IADC, 161
 IBarCodeReaderControl, 170
 InstallDir, [CEStrings], 263
 IS9CConfig, 179
 GetCodabar, 180
 GetCode128, 189
 GetCode39, 183, 217
 GetCode93, 186
 GetI2of5, 192
 GetMatrix2of5, 195
 GetMSI, 198
 GetPDF417, 201
 GetPlessey, 206
 GetStandard2of5, 209
 GetTelepen, 212
 GetUpcEan, 215
 SetCodabar, 181
 SetCode128, 190
 SetCode39, 184
 SetCode93, 187
 SetI2of5, 193
 SetMatrix2of5, 196
 SetMSI, 199

 SetPDF417, 203
 SetPlessey, 207
 SetStandard2of5, 210
 SetTelepen, 213
 IS9CConfig2, 221
 GetCode11, 222
 GetCustomSymIds, 225
 GetGlobalAmble, 229
 GetPDF417Ext, 232
 GetSymIdXmit, 235
 SetCode11, 223
 SetCustomSymIds, 226
 SetGlobalAmble, 230
 SetPDF417Ext, 233
 SetSymIdXmit, 236
 IS9CConfig3, 238
 ISCP
 GetConfig, 239
 SetConfig, 240
 isOrinoco(), 318
 IssueBeep, IBarCodeReaderControl, 171
 ITCDeviceClose, 158
 ITCDeviceOpen, 148, 157
 ITCUUID.LIB, IBarCodeReaderControl functions, 167

K

KernelIoControl(), 290

N

NLEDGetDeviceInfo (), 329
 NLEDSetDevice(), 329

O

Open, IImage, 252
 OSVERSIONINFO.dwBuildNumber, 264
 OSVERSIONINFO.dwVersionMajor, 264
 OSVERSIONINFO.dwVersionMinor, 264

P

ProcessorType, [CEDevice], 264
 Provider, [Version], 262

Q

QueryAttribute
 IADC, 162
 IBarCodeReaderControl, 172
 QueryData, IADC, 163

R

RadioConnect(), 309
 RadioDisconnect(), 309
 Read, 148
 IADC, 164
 IBarCodeReaderControl, 173
 ReadFile(), NPCP printing, 137
 ReadImage, IImage, 248
 ReadSigCapBuffer, IImage, 243
 ReadSigCapFile, IImage, 246
 RegFlushKey(), 103, 288, 296
 RegisterDevice(), 137
 DTR printing, 142
 RegOpenKeyEx(), 322

RegQueryValueEx(), 322
RegSetValueEx(), 322

S

SetAttribute
 IADC, 165
 IBarcodeReaderControl, 175
SetAuthenticationMode(), 315
SetChannel(), 316
SetCodabar, IS9CConfig, 181
SetCode11, IS9CConfig2, 223
SetCode128, IS9CConfig, 190
SetCode39, IS9CConfig, 184
SetCode93, IS9CConfig, 187
SetConfig, ISCP, 240
SetCustomSymIds, IS9CConfig2, 226
SetGlobalAmble, IS9CConfig2, 230
SetI2of5, IS9CConfig, 193
SetMatrix2of5, IS9CConfig, 196
SetMSI, IS9CConfig, 199
SetNetworkMode(), 312
SetPDF417, IS9CConfig, 203
SetPDF417Ext, IS9CConfig2, 233
SetPlessey, IS9CConfig, 207
SetRTSThreshold(), 318
SetSSID(), 317
SetStandard2of5, IS9CConfig, 210
SetSymIdXmit, IS9CConfig2, 236
SetTelepen, IS9CConfig, 213
SHFullScreen(), 288, 289
shortcut_list_section, [CEShortcuts]
 shortcut_filename, 271
 shortcut_type_flag, 271
 target_file/path, 271

 target_file_path, 271
Signature, [Version], 262
[SourceDiskFiles], filename, 267
[SourceDiskNames]
 CESignature, 266
 disk_ordinal, 266
SourceDisksNames.MIPS, 267
SourceDisksNames.SH3, 267
Start, IImage, 250
StartScanList(), 319
Stop, IImage, 251
string_key, [Strings], 263
[Strings], string_key, 263
SYSTEMINFO.dwProcessorType, 264

T

Trigger settings, IS9CConfig3, 238
TriggerScanner, IBarcodeReaderControl, 178

U

UnsupportedPlatforms, [CEDevice], 264

V

[Version]
 CESignature, 262
 Provider, 262
 Signature, 262
VersionMax, [CEDevice], 264
VersionMin, [CEDevice], 264

W

WriteFile()
 DTR printing, 142, 143
 IrDA printing, 136
 NPCP printing, 137, 138

General Index

Numbers

1470 Imager. *See* Imager
 1551/1553 Tethered Scanner. *See* Tethered scanner
 1D laser scanner, about, 145
 2D Imager
 about, 145
 data collection features, 154
 aimer LED, 154
 scaled illumination LED, 154
 window size and position, 154
 image acquisition features, 155
 overview, 154
 4820 printer, NPCP driver, 137
 6804DM printer
 DTR driver, 142
 IrDA driver, 136
 6804T printer
 DTR driver, 142
 IrDA driver, 136
 6805A printer
 DTR driver, 142
 IrDA driver, 136
 6806 printer
 DTR driver, 142
 IrDA driver, 136
 6808 printer
 DTR driver, 142
 IrDA driver, 136
 printer support, 135
 681T printer, DTR driver, 142
 6820 printer
 IrDA driver, 136
 NPCP driver, 137
 printer support, 135
 6920 Communications Server, ManifestName parameter, 280
 700 Platform Build, version number, 389
 740 Color Computer, 321
 781 printers, DTR driver, 142
 782T printer, printer support, 135
 802.11 CR radio CORE module, 110
 installing available modules, 106
 loading a module, 106
 802.11 WEP Encryption, profile security information, 403
 802.11b
 antenna color code, 107
 API, 308
 channel, 401
 communications setup, 110, 399
 configuration profiles, 308
 CORE module, 110
 network type, 401
 profiles, 399
 basic information, 401

 certificates, 407
 exporting, 408
 import/export, 408
 importing, 409
 read-only, 406
 scan list, 409, 410
 security information, 402
 selected, 409
 SSID (network name), 401
 WEP encryption, 403
 802.1x TLS, profile security information, 404
 802.1x TTLS, profile security information, 405

A

Abstract Syntax Notation.1. *See* ASN.1
 Accessory list, 19
 ActiveSync
 ActiveSync Help, 44
 adding programs, 40
 adding programs to Start menu, 42
 Folder behavior connected to e-mail server, 60
 installing applications, 99
 Microsoft Reader, 72
 Pocket Internet Explorer
 favorite links, 76
 Mobile Favorites folder, 76
 Pocket PC, 43
 Pocket PC icon, 27
 Pocket PC status icons, 26
 URL, 43
 ActiveX control tools, unit information control panel, CAB files, 392
 AD command, with/without data, 373
 ADC COM interfaces, 146
 functions
 create/delete objects, 157
 IADC, 159
 IBarcodeReaderControl, 167
 IS9CConfig, 179
 IS9CConfig2, 221
 IS9CConfig3, 238
 Adding a profile, 399
 Adding bookmarks, Microsoft Reader, 75
 Adding drawings to text, Microsoft Reader, 75
 Adding programs
 ActiveSync, 40
 Pocket Internet Explorer, 41
 Pocket PC, 40
 to the Start menu, 42
 via ActiveSync, 42
 via File Explorer, 42
 Adjusting settings, Pocket PC, 40
 Adobe Acrobat Reader, URL, 121
 AE command, with/without data, 374
 Aimer LED duration, configuration parameter, 370
 Alpha plane on keypad, 322

- Alphanumeric keypad
 - alpha (blue) key sequences, 15
 - [gold/white] key sequences, 13
 - registry settings
 - alpha plane, 322
 - gold plane, 322
 - unshifted plane, 322
 - scan codes, 325
- Ambient lighting, 2
- Annotations index, Microsoft Reader, 75
- Antenna, radio type, 107
- APIs
 - 802.11b, 308
 - AT command interface, 121
 - IrSock, 136
- App launch, control panel applet, 397
- Application keys
 - app launch control panel applet, 397
 - wakeup mask control panel applet, 396
- Appointments, via Calendar, 45
- APS linear imager, about, 145
- ASCII
 - printing, 136
 - printing to a port, port print method, 136
 - raw text to printer, 136
- ASN.1, 132
- Asset management, DeviceURL parameter, 279
- AT command interface, 121
 - terminal application, 119
 - testing, 122
- Attaching notes to text, Microsoft Reader, 75
- Audio control panel applet, input mixing, 8
- Audio files, Windows Media Player, 71
- Audio system
 - external headset jack, 4
 - microphone, 3
 - speaker, 3
- AutoCab, command line syntax, 104
- AutoFTP, 286
- AutoIP, 131
- Automatic Data Collection. *See* ADC COM interfaces
- Automatic Private IP. *See* AutoIP
- Automatic shutoff
 - bar code configuration, 411, 425
 - configuration parameter, 411
- Autostart FTP, 286
- AvantGo channels, Pocket Internet Explorer, 78
- AXCommunication, 392
- AXFileTransfer, 392
- AXReaderCommand, 392
- AXVWedge, 392
- B**
- Backlight control panel applet
 - ambient light sensor, 2
 - keypad, 11
- Backlight timeout
 - bar code configuration, 412, 425
 - configuration parameter, 412
- Bar Code
 - scanning labels, 424
 - supported symbologies, 155, 335
 - symbologies, 416
 - Codabar, 418
 - Code 11, 419
 - Code 128, 420
 - Code 39, 419
 - Code 39 concatenation, 419
 - Code 39 full ASCII, 419
 - Code 93, 420
 - data string formats, 416
 - EAN, 418
 - I 2 of 5, 422
 - MSI code, 423
 - Plessey, 423
 - S 2 of 5, 422
 - UPC, 418
- Bar code configuration
 - audio volume, 411, 424
 - automatic shutoff, 411, 425
 - backlight timeout, 412, 425
 - Code 39, 424
 - key clicks, 412, 426
- BARCODE_DATA_TYPE_ASCII, IBarCodeReaderControl::Read, 173
- BARCODE_DATA_TYPE_UNICODE, IBarCodeReaderControl::Read, 173
- BARCODE_DATA_TYPE_UNKNOWN, IBarCodeReaderControl::Read, 173
- Battery
 - ambient lighting, 2
 - low battery conditions, 6
 - Pocket PC status icons, 26
 - RAM maintenance, 6
 - status, 5
- Battery status, unit information control panel applet, 390
- Beeper
 - configuration parameter
 - frequency, 367
 - volume, 365, 366
 - disabling the volume, 366
 - selecting a volume, 9
 - silencing the volume, 10
 - supported functions, 364
 - volume, turning it on, 7
 - when not available
 - beeper frequency, 367
 - good read beep duration, 369
 - good read beeps, 368
- biActualImageSize, pImgBuffer, IImage::ReadSigCapBuffer, 244
- biBitCount, pImgBuffer, IImage::ReadSigCapBuffer, 244
- biHeight, pImgBuffer, IImage::ReadSigCapBuffer, 244
- biMaxImageBytes, pImgBuffer, IImage::ReadSigCapBuffer, 244
- biWidth, pImgBuffer, IImage::ReadSigCapBuffer, 244
- Block recognizer, Pocket PC input panel, 31
- BlockSize, FTP Server, 278

- Bluealps CORE module, 129
 - installing available modules, 106
 - loading a module, 106
- Bluetooth
 - CORE module, 129
 - setting up the 700 Computer, 126
 - unit information control panel, main stack CAB file, 391
- Bluetooth compatibility, network support, 125
- Bluetooth Device Manager
 - discover device, 127
 - documentation, 125
 - set device as favorite, 128
- Books, Microsoft Reader
 - adding bookmarks, 75
 - adding drawings, 75
 - annotations index, 75
 - attaching notes, 75
 - copying, 75
 - downloading, 72
 - highlighting, 75
 - reading, 74
 - removing, 75
 - searching, 75
- Browsing the Internet, Pocket Internet Explorer, 80
- BTctrl program, documentation, 125
- Build information, 17
- byFNC1, IS9CConfig::SetCode128, 190
- C**
- CAB files
 - after the extraction, 274
 - creating, 262
 - INF files, 262
 - with CAB Wizard, 275
 - installation functions, SETUP.DLL, 274
 - placing files onto storage card, 101
 - unit information control panel applet, 391
- Cabinet Wizard
 - creating CAB files, 275
 - troubleshooting, 276
 - using the application, 262
- Cabling, scanner, 257
- Calendar
 - creating
 - an appointment, 46
 - meeting requests, 47
 - Pocket Outlook, 45
 - Pocket PC icon, 27
 - scheduling a meeting, 47
 - using the summary screen, 47
- Capacitor, internal super, 6
- Capturing thoughts and ideas, via Notes, 54
- Card support
 - CompactFlash cards, 16
 - MultiMediaCards, 16
 - radios, 18
 - Secure Digital cards, 16
- CDMA/1xRTT, 113
 - antenna color code, 107
 - AT command set, 121
 - CORE module, 113
- CEImager
 - location of the executable file, 101
 - migrating AUTORUN.DAT files, 101
- Channel, 802.11 radio module, 401
- ClassID field values
 - VN_CLASS_ASIC, 292
 - VN_CLASS_BOOTSTRAP, 292
 - VN_CLASS_KBD, 292
- Clock
 - Pocket PC settings, 40
 - restore real-time after cold-boot, 395
 - setting date and time, 414
- Closing drivers, NPCP, 138
- Codabar, 418
 - configuration parameter, 338
 - user ID, 357
 - default S9C settings, 182
 - enumerations, 182
 - IS9CConfig::GetCodabar, 180
 - IS9CConfig::SetCodabar, 181
 - modifier characters, 241
- Code 11, 419
 - configuration parameter, 352
 - user ID, 361
 - default S9C settings, 224
 - enumerations, 224
 - IS9CConfig2::GetCode11, 222
 - IS9CConfig2::SetCode11, 223
 - modifier characters, 241
- Code 128, 420
 - configuration parameter, 341
 - FNC1 character, 343
 - user ID, 357
 - default S9C settings, 191
 - enumerations, 191
 - IIImage::ReadSigCapBuffer, 245
 - IIImage::ReadSigCapFile, 246
 - IS9CConfig::GetCode128, 189
 - IS9CConfig::SetCode128, 190
 - modifier characters, 241
- Code 39, 419
 - configuration parameter, 336
 - user ID, 357
 - default S9C settings, 185
 - enumerations, 185
 - IIImage::ReadSigCapBuffer, 245
 - IIImage::ReadSigCapFile, 246
 - IS9CConfig::GetCode39, 183
 - IS9CConfig::SetCode39, 184
 - modifier characters, 241

- Code 93, 420
 - configuration parameter, 340
 - length, 340
 - user ID, 358
 - default S9C settings, 188
 - enumerations, 188
 - IS9CConfig::GetCode93, 186
 - IS9CConfig::SetCode93, 187
 - modifier characters, 241
- Code Division Multiple Access. *See* CDMA/1xRTT
- Codes
 - 11, 419
 - 128, 420
 - 39, 419
 - 39 concatenation, 419
 - 39 full ASCII, 419
 - 93, 420
- Cold boot, IOCTL_HAL_COLDBOOT, 301
- COM A, modem position, 394
- COM B, serial position, 394
- COM port
 - configuration, 256
 - wedge settings, 256
- COM1, NPCP parameter, 137
- COM1 port, 136
- Comm port wedge
 - disabling, 256
 - enabling, 255
 - error messages, 257
 - limitations, 258
 - settings, 256
 - unit information control panel, 391
- Command line syntax, AutoCab, 104
- Common Object Resource Environment. *See* CORE
- Communications
 - DTR, 143
 - NPCP, 140
- Communications options, 105
- CompactFlash cards
 - card support, 16
 - installing applications, 100
 - migrating applications, 101
 - packaging an application, 98
 - Utilities control panel applet, 395
- Composing Messages, via Inbox, 59
- Computer shutdown, 6
- Concatenation, 419
- Configuration parameters
 - aimer LED duration, 370
 - automatic shutoff, 411
 - backlight timeout, 412
 - beeper, 365
 - frequency, 367
 - volume, 366
 - codabar, 338
 - user ID, 357
 - code 11, 352
 - user ID, 361
 - code 128, 341
 - FNC1 character, 343
 - user ID, 357
 - code 39, 336
 - user ID, 357
 - code 93, 340
 - length, 340
 - user ID, 358
 - datamatrix, 354
 - date/time, 412
 - EAN
 - 13 user ID, 360
 - 8 user ID, 360
 - good read
 - beep duration, 369
 - beeps, 368
 - identification
 - contact, 385
 - location, 387
 - name, 386
 - image dimension, 371
 - interleaved 2 of 5, 349
 - user ID, 358
 - key clicks, 412
 - macro PDF, 346
 - matrix 2 of 5, 350
 - user ID, 360
 - maxicode, 355
 - micro PDF417, 348
 - MSI, 345
 - user ID, 358
 - PDF417, 346
 - user ID, 358
 - plessey, 344
 - user ID, 359
 - prefix, 362
 - QR code, 353
 - security
 - encryption key, 382
 - read encryption, 380
 - read-only community string, 378
 - read/write community string, 379
 - write encryption, 381
 - SNMP, security subnet mask, 356
 - standard 2 of 5, 337
 - user ID, 359
 - suffix, 363
 - telepen, 351
 - user ID, 360
 - trap
 - authentication, 383
 - threshold, 384
 - UPC
 - A user ID, 359
 - E user ID, 359
 - UPC/EAN, 339
 - virtual wedge, 372
 - code page, 376
 - grid, 375
 - postamble, 374
 - preamble, 373
 - volume, 411

- Connecting directly to e-mail server, via Inbox, 56
- Connecting to
 - an ISP, 82
 - e-mail server, 93
 - work, 87
- Connections
 - See also* Getting connected
 - directly to e-mail server, 93
 - ending, 93
 - setting up an e-mail service, 94
 - status icon, 26
 - to an ISP, 82
 - via Ethernet, 86
 - via modem, 82
 - to work, 87
 - via Ethernet, 91
 - via modem, 87
 - via Ethernet
 - to an ISP, 86
 - to work, 91
 - via modem
 - to an ISP, 82
 - to work, 87
- Conserving battery power, 2
- Contacts
 - creating a contact, 48
 - finding a contact, 49
 - MSN Messenger
 - chatting with, 69
 - working with, 68
 - Pocket Outlook, 48
 - Pocket PC icon, 27
 - using the summary screen, 50
- Control panel applets
 - Audio, 8
 - backlight, 2, 11
 - clock, 414
 - data collection, 334
 - beeper/LED, 364
 - imager, 370
 - symbolologies, 335
 - symbolology options, 356
 - virtual wedge, 372
 - power
 - battery status, 5
 - RAM maintenance, 6
 - SNMP, 377
 - identification, 385
 - security, 378
 - traps, 383
 - system, wireless network, 110, 399
 - unit information, 388
 - battery status, 5, 390
 - CAB files, 391
 - versions, 17, 389
 - utilities, 393
 - app launch, 397
 - dock switch, 394
 - registry save, 103, 395
 - wakeup mask, 396
 - wireless network, 399
- Converting writing to text, 34
- Copying text, Microsoft Reader, 75
- CORE, 106
 - 802.11b radio module, 110
 - details, 112
 - general, 111
 - accessing from
 - Programs panel, 106
 - Today screen, 107
 - Bluealps module, 129
 - Bluetooth, 129
 - installing available modules, 106
 - loading a module, 106
 - module for 802.11b NIC, 308
 - WAN monitor, GSM/GPRS, 116
 - WAN radio module
 - CDMA/1xRTT, 113
 - general, 116
- Creating
 - a modem connection
 - to an ISP, 82
 - to work, 87
 - an Ethernet connection
 - to an ISP, 86
 - to work, 91
 - appointment via Calendar, 46
 - CAB files, 262
 - with CAB Wizard, 275
 - contact via Contacts, 48
 - document via Pocket Word, 61
 - drawing via Notes, 36
 - INF files, 262
 - meeting requests, 47
 - note via Notes, 55
 - recording via Notes, 37
 - task via Tasks, 52
 - workbook via Pocket Excel, 66

D

Data collection

- 2D imager features, 154
- ADC COM interfaces, 146
- build version number, 389
- configuration parameters
 - aimer LED duration, 370
 - beeper, 365
 - beeper frequency, 367
 - beeper volume, 366
 - codabar, 338
 - codabar user ID, 357
 - code 11, 352
 - code 11 user ID, 361
 - code 128, 341
 - code 128 FNC1 character, 343
 - code 128 user ID, 357
 - code 39, 336
 - code 39 user ID, 357
 - code 93, 340
 - code 93 length, 340
 - code 93 user ID, 358
 - datamatrix, 354
 - EAN-13 user ID, 360
 - EAN-8 user ID, 360
 - good read beep duration, 369
 - good read beeps, 368
 - image dimension, 371
 - interleaved 2 of 5, 349
 - interleaved 2 of 5 user ID, 358
 - macro PDF, 346
 - matrix 2 of 5, 350
 - matrix 2 of 5 user ID, 360
 - maxicode, 355
 - micro PDF417, 348
 - MSI, 345
 - MSI user ID, 358
 - PDF417, 346
 - PDF417 user ID, 358
 - plessey, 344
 - plessey user ID, 359
 - prefix, 362
 - QR code, 353
 - standard 2 of 5, 337
 - standard 2 of 5 user ID, 359
 - suffix, 363
 - telepen, 351
 - telepen user ID, 360
 - UPC-E user ID, 359
 - UPC-A user ID, 359
 - UPC/EAN, 339
 - virtual wedge, 372
 - virtual wedge code page, 376
 - virtual wedge grid, 375
 - virtual wedge postamble, 374
 - virtual wedge preamble, 373
- functions
 - create/delete ADC COM objects, 157
 - IADC, 159

- IBarcodeReaderControl, 167
- IS9CConfig, 179
- IS9CConfig2, 221
- IS9CConfig3, 238
- initialization, 146
- Data filtering, virtual wedge grid, 149
- Data Matrix
 - configuration parameter, 354
 - IS9CConfig3 function, 238
- Date, setting, 414
- Date/Time, configuration parameter, 412
- Deleting a profile, 400
- DeviceName, FTP Server, 279
- DeviceURL, FTP Server, 279
- DHCP, 131
- Display full screen, 289
- Dock switch, control panel applet, 394
- Docks, modem support, 16
- DRAM
 - low battery shutdown, 6
 - maintenance, 6
- Drawing mode, Pocket Word, 65
- Drawing on the screen
 - See also* Notes
 - Pocket Word, 65
- Drivers
 - DTR
 - communications, 143
 - installing, 142
 - opening, 143
 - removing, 142
 - writing to, 143
 - NPCP
 - closing, 138
 - communications, 140
 - I/O controls, 139
 - installing, 137
 - opening, 138
 - reading from, 138
 - removing, 137
 - writing to, 138
 - O'Neil. *See* DTR printing
- DTR printing, 142
 - closing driver, 143
 - communications, 143
 - opening driver, 143
 - removing driver, 142
 - writing to driver, 143
- dwAttrBufferSize
 - IBarcodeReaderControl::QueryAttribute, 172
 - IBarcodeReaderControl::SetAttribute, 177
- dwBufferSize
 - IADC::QueryAttribute, 162
 - IS9CConfig2::GetGlobalAmble, 229
 - IS9CConfig2::SetGlobalAmble, 230
- dwCommandBuffSize
 - ISCP::GetConfig, 239
 - ISCP::SetConfig, 240

- dwDataBufferSize
 - IADC::Read, 164
 - IBarCodeReaderControl::Read, 173
 - dwLength
 - IS9CConfig::SetCode128, 190
 - IS9CConfig::SetCode39, 184
 - IS9CConfig::SetCode93, 187
 - IS9CConfig::SetMatrix2of5, 196
 - IS9CConfig::SetMSI, 199
 - IS9CConfig::SetPlessey, 207
 - dwMaxNumElement, IS9CConfig2::GetCustomSymIds, 225
 - dwNextMessageSize, IADC::QueryData, 163
 - dwNumberOfBeeps, IBarCodeReaderControl::IssueBeep, 171
 - dwNumBytes
 - IS9CConfig::SetCodabar, 181
 - IS9CConfig::SetI2of5, 193
 - IS9CConfig::SetStandard2of5, 210
 - dwNumElement, IS9CConfig2::SetCustomSymIds, 226
 - dwReplyBuffMaxSize
 - ISCP::GetConfig, 239
 - ISCP::SetConfig, 240
 - dwStructSize
 - pImgBuffer, IImage::ReadSigCapBuffer, 244
 - pSigCapSpec, IImage::ReadSigCapBuffer, 243
 - dwTimeout
 - IADC::Read, 164
 - IBarCodeReaderControl::Read, 174
 - IImage::ReadImage, 248
 - dwTotalBufferedBytes, IADC::QueryData, 163
- E**
- E-mail server
 - getting connected, 93
 - setting up a service, 94
 - eAmbleId
 - IS9CConfig2::GetGlobalAmble, 229
 - IS9CConfig2::SetGlobalAmble, 230
 - EAN, 418
 - configuration parameter, 339
 - 13 user ID, 360
 - 8 user ID, 360
 - default S9C settings, 191, 218
 - enumerations, 218
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - modifier characters, 242
 - ean13Check
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - ean13Select
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - ean8Check
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - ean8Reencode
 - IS9CConfig::GetUpcEan, 216
 - IS9CConfig::SetUpcEan, 217
 - ean8Select
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - eAttr
 - IBarCodeReaderControl::QueryAttribute, 172
 - IBarCodeReaderControl::SetAttribute, 175
 - eAttribID
 - IADC::QueryAttribute, 162
 - IADC::SetAttribute, 165
 - eCheck
 - IS9CConfig::SetCodabar, 181
 - IS9CConfig::SetI2of5, 193
 - IS9CConfig::SetMSI, 199
 - IS9CConfig::SetPlessey, 207
 - IS9CConfig::SetStandard2of5, 210
 - IS9CConfig2::SetCode11, 223
 - eCip128State, IS9CConfig::SetCode128, 190
 - eCLSI, IS9CConfig::SetCodabar, 181
 - eCode128, IS9CConfig2::SetPDF417Ext, 233
 - eDataType, IBarCodeReaderControl::Read, 173
 - eDecode
 - IS9CConfig::SetCodabar, 181
 - IS9CConfig::SetCode128, 190
 - IS9CConfig::SetCode39, 184
 - IS9CConfig::SetCode93, 187
 - IS9CConfig::SetI2of5, 193
 - IS9CConfig::SetMatrix2of5, 196
 - IS9CConfig::SetMSI, 199
 - IS9CConfig::SetPlessey, 207
 - IS9CConfig::SetStandard2of5, 210
 - IS9CConfig::SetTelepen, 213
 - IS9CConfig2::SetCode11, 223
 - IS9CConfig2::SetPDF417Ext, 233
 - eDepth, pSigCapSpec, IImage::ReadSigCapBuffer, 244
 - eDeviceFlags
 - IADC::Initialize, 161
 - IBarCodeReaderControl::Initialize, 170
 - ITCDeviceOpen, 157
 - Editing a profile, 400
 - Edition information, 22
 - eEan128Ident, IS9CConfig::SetCode128, 190
 - eFormat
 - IImage::ReadImage, 248
 - IS9CConfig::SetCode39, 184
 - IS9CConfig::SetStandard2of5, 210
 - IS9CConfig::SetTelepen, 213
 - pImgBuffer, IImage::ReadSigCapBuffer, 244
 - pSigCapSpec, IImage::ReadSigCapBuffer, 244
 - eLED, IBarCodeReaderControl::ControlLED, 169
 - eLengthId
 - IS9CConfig::SetCodabar, 181
 - IS9CConfig::SetI2of5, 193
 - IS9CConfig::SetStandard2of5, 210
 - eMacroPdf, IS9CConfig::SetPDF417, 203
 - Encoded Code 39
 - concatenation, 419
 - full ASCII, 419
 - Ending a connection, 93

Enumerations

- Codabar, 182
- Code 11, 224
- Code 128, 191
- Code 39, 185
- Code 93, 188
- Interleaved 2 of 5, 194
- Matrix 2 of 5, 197
- MSI, 200
- PDF417, 204
- Plessey, 208
- Standard 2 of 5, 211
- Telepen, 214
- UPC/EAN, 218

ePdf417Decode, IS9CConfig::SetPDF417, 203

ePdfAddressee, IS9CConfig::SetPDF417, 203

ePdfChecksum, IS9CConfig::SetPDF417, 203

ePdfControlHeader, IS9CConfig::SetPDF417, 203

ePdfFileName, IS9CConfig::SetPDF417, 203

ePdfFileSize, IS9CConfig::SetPDF417, 203

ePdfSegmentCount, IS9CConfig::SetPDF417, 203

ePdfSender, IS9CConfig::SetPDF417, 203

ePdfTimeStamp, IS9CConfig::SetPDF417, 203

Epson Escape Sequences, 136

Error messages

- comm port wedge, 257
- tethered scanner, 257

ERROR_INSUFFICIENT_BUFFER

- IOCTL_HAL_ITC_READ_PARM, 291
- IOCTL_HAL_ITC_WRITE_SYSPARM, 296

ERROR_INVALID_PARAMETER

- IOCTL_HAL_ITC_READ_PARM, 291
- IOCTL_HAL_ITC_WRITE_SYSPARM, 296

eSS

- IS9CConfig::SetCodabar, 181
- IS9CConfig::SetCode39, 184

eSSChars, IS9CConfig::SetCode39, 184

eSymbology, IBarCodeReaderControl::Read, 173

eSymIdXmit, IS9CConfig2::SetSymIdXmit, 236

Ethernet

- communications setup, 108
- creating a connection
 - to an ISP, 86
 - to work, 91

ETSI GSM 07.05 interface specifications, 121

ETSI GSM 07.07 interface specifications, 121

European Article Numbering code. *See* EAN

eVer, IS9CConfig2::SetCode11, 223

Excel. *See* Pocket Excel

Exporting a profile, 802.11 radio module, 408

F

Favorite links, Pocket Internet Explorer, 76

File Explorer

- adding programs to Start menu, 42
- Pocket PC, 39
- removing programs, 42

File Transfer Protocol. *See* FTP

Filter expression values, virtual wedge grid, 150

Find feature, Pocket PC, 39

Flash File Store

- migrating applications, 101
- packaging an application, 98

Flash file system, control panel applet, 395

fLedOn, IBarCodeReaderControl::ControlLED, 169

FlushBufferedData

- IADC::CancelReadRequest, 160

- IBarCodeReaderControl::CancelReadRequest, 168

Folder behavior connected to e-mail server

- ActiveSync, 60

- IMAP4, 60

- POP3, 60

- SMS, 60

FRAME_NOT_ACKED, 139

fScannerOn, IBarCodeReaderControl::TriggerScanner, 178

fSigCapEnable, IImage::Open, 252

FTP

- client, 282

- configurable parameters, 278

- BlockSize, 278

- DeviceName, 279

- DeviceURL, 279

- IDNATarget, 280

- ManifestName, 280

- PauseAtStartup, 281

- Root, 281

- FTPDCMDS subdirectory, 285

- heartbeat, 282

- RTC 959, 285

- server, 282

- installing applications, 100

- server requests

- CDUP, 282

- CWD, 282

- DELE, 282

- HELP, 282

- LIST, 282

- MKD, 282

- MODE, 282

- NLST, 282

- NOOP, 282

- PASS, 282

- PWD, 282

- QUIT, 282

- RETR, 282

- RMD, 282

- RNFR, 282

- RNTO, 283

- SITE, 283

- SITE ATTRIB, 283

- SITE BOOT, 284

- SITE COPY, 284

- SITE EXIT, 284

- SITE HELP, 284

- SITE KILL, 284

- SITE LOG, 284

- SITE PLIST, 284

- SITE RUN, 284

- SITE STATUS, 285

SITE TIMEOUT, 285
 STOR, 283
 SYST, 283
 TYPE, 283
 USER, 283
 XCUP, 283
 XCWD, 283
 XMKD, 283
 XPWD, 283
 XRMD, 283
 stopping server from application, 286
 support, 282
 web browsers, 285
 FTPDCMDS subdirectory, FTP support, 285
 Full screen display, 289

G

GDI approach, 136
 General Packet Radio Service. *See* GSM/GPRS
 Getting connected
 directly to an e-mail server, 93
 infrared (IR) port, 81
 ISP, 81
 Pocket PC, 81
 setting up an e-mail service, 94
 to an ISP, 82
 creating a modem connection, 82
 creating an Ethernet connection, 86
 to work, 87
 creating a modem connection, 87
 creating an Ethernet connection, 91
 transfer items using infrared, 81
 Gold plane on keypad, 321
 Good read, configuration parameter
 beep duration, 369
 beeps, 368
 Grid data
 configuration parameter, 375
 filtering, 149
 GSM/GPRS, 116
 antenna color code, 107
 AT command set, MC45, 121
 CORE module, 116

H

HAL, version of Pocket PC
 IOCTL_HAL_GET_BOOTLOADER_VERINFO,
 300
 IOCTL_HAL_GET_OAL_VERINFO, 299
 Header files
 IADC.H, IADC functions, 159
 IBARCODEREADER.H, IBarCodeReaderControl
 functions, 167
 IS9CCONFIG.H
 IS9CConfig functions, 179
 IS9CConfig2 functions, 221
 ITCDEVMGMT.H, 157
 Headset jack, external, 4
 Highlighting text, Microsoft Reader, 75
 Hotmail account, 67

I

I 2 of 5. *See* Interleaved 2 of 5
 I/O controls, NPCP driver, 139
 iAspectRatio, pSigCapSpec, IImage::ReadSigCapBuffer,
 243
 ID field values
 IOCTL_HAL_ITC_READ_PARM
 ITC_NVPARM_80211_INSTALLED, 294
 ITC_NVPARM_80211_RADIOTYPE, 294
 ITC_NVPARM_ANTENNA_DIVERSITY, 293
 ITC_NVPARM_BLUETOOTH_INSTALLED,
 294
 ITC_NVPARM_CONTRAST, 292
 ITC_NVPARM_DISPLAY_TYPE, 292
 ITC_NVPARM_ECN, 292
 ITC_NVPARM_EDBG_SUBNET, 292
 ITC_NVPARM_EDG_IP, 292
 ITC_NVPARM_ETHERNET_ID, 291
 ITC_NVPARM_INTERMEC_DATACOLLEC-
 TION_HW, 293
 ITC_NVPARM_INTERMEC_DATACOLLEC-
 TION_SW, 293
 ITC_NVPARM_INTERMEC_SOFT-
 WARE_CONTENT, 293
 ITC_NVPARM_LAN9000_INSTALLED, 295
 ITC_NVPARM_MANF_DATE, 291
 ITC_NVPARM_MCODE, 292
 ITC_NVPARM_RTC_RESTORE, 293
 ITC_NVPARM_SERIAL_NUM, 291
 ITC_NVPARM_SERIAL2_INSTALLED, 295
 ITC_NVPARM_SERVICE_DATE, 292
 ITC_NVPARM_SIM_PRO-
 TECT_HW_INSTALLED, 295
 ITC_NVPARM_SIM_PRO-
 TECT_SW_INSTALLED, 295
 ITC_NVPARM_VERSION_NUMBER, 292
 ITC_NVPARM_VIBRATE_INSTALLED, 295
 ITC_NVPARM_WAN_FREQUENCY, 294
 ITC_NVPARM_WAN_INSTALLED, 294
 ITC_NVPARM_WAN_RADIOTYPE, 294
 ITC_NVPARM_WAN_RI, 293
 IOCTL_HAL_ITC_WRITE_SYSPARM
 ITC_DOCK_SWITCH, 297
 ITC_WAKEUP_MASK, 297
 ITC_AMBIENT_FRONTLIGHT, 297
 ITC_AMBIENT_KEYBOARD, 297
 ITC_REGISTRY_LOCATION, 296
 ITC_REGISTRY_SAVE_ENABLE, 296
 Identification, configuration parameter
 contact, 385
 location, 387
 name, 386
 IDNA
 DeviceName, 279
 DeviceURL, 279
 IDNATarget, 280
 ManifestName, 280
 IDNATarget, FTP Server, 280
 iid, ITCDeviceOpen, 157

- Image interface, 243
- Image, acquisition features, 155
- Image dimension, configuration parameter, 371
- Imager
 - beeper functions not available
 - beeper frequency, 367
 - good read beep duration, 369
 - good read beeps, 368
 - beeper/LED parameters, beeper, 365
 - control panel appet, data collection, 370
 - data collection parameters
 - aimer LED duration, 370
 - datamatrix, 354
 - image dimension, 371
 - maxicode, 355
 - QR code, 353
 - settings, 257
 - supported
 - beeper functions, 364
 - functions, 370
 - symbolologies, 335
 - supported symbolologies, 155
 - symbolologies not available
 - CIP 128 French Pharmaceutical, 342
 - Code 11, 352
 - Code 128 FNC1 character, 343
 - EAN 128 JCI, 342
 - Macro PDF, 346
 - Matrix 2 of 5, 350
 - micro PDF417, 348
 - Telepen, 351
 - symbology user IDs not available
 - Codabar, 357
 - Code 11, 361
 - Code 128, 357
 - Code 39, 357
 - Code 93, 358
 - EAN 13, 360
 - EAN 8, 360
 - Interleaved 2 of 5, 358
 - Matrix 2 of 5, 360
 - MSI, 358
 - PDF417, 358
 - Plessey, 359
 - Standard 2 of 5, 359
 - Telepen, 360
 - UPC A, 359
 - UPC E, 359
 - vibrator, enabling, 18
- IMAP4, Folder behavior connected to e-mail server, 60
- Import libraries
 - ITCDEVMGMT.LIB, 157
 - ITCUUID.LIB
 - IADC functions, 159
 - IBarCodeReaderControl functions, 167
 - IS9CConfig functions, 179
 - IS9CConfig2 functions, 221
- Importing a profile, 802.11 radio module, 409
- Inbox
 - composing messages, 59
 - connecting directly to e-mail server, 56
 - Folder behavior connected to e-mail server, 60
 - getting connected, 81
 - managing e-mail messages and folders, 60
 - Pocket Outlook, 56
 - Pocket PC icon, 27
 - synchronizing e-mail messages, 56
 - using a message list, 57
 - using My Text, 38
- INF files, creating, 262
- Infrared (IR) port
 - Pocket PC, 81
 - transfer items using, 81
 - receiving information, 82
 - sending information, 81
- Input Mixing, Audio control panel applet, 8
- Input panel
 - block recognizer, 31
 - keyboard, 31
 - letter recognizer, 32
 - methods available, 30
 - Pocket PC, 28
 - Pocket Word, 63
 - selecting typed text, 32
 - transcriber, 32
 - word suggestions, 31
- Installation functions, SETUP.DLL, 274
- Installing applications
 - using a storage card, 100
 - using CompactFlash cards, 100
 - using Secure Digital cards, 101
 - with ActiveSync, 99
 - with FTP Server, 100
- Installing drivers
 - DTR, 142
 - NPCP, 137
- Instant messaging, 67
 - Pocket PC icon, 26
- Intelliget Bar Code Unit
 - Image::ReadSigCapBuffer, 245
 - Image::ReadSigCapFile, 246
- Interface specifications, ETSI GSM 07.0x, 121
- Interleaved 2 of 5, 422
 - configuration parameter, 349
 - user ID, 358
 - default S9C settings, 194
 - enumerations, 194
 - IS9CConfig::GetI2of5, 192
 - IS9CConfig::SetI2of5, 193
 - modifier characters, 241
- Intermec Device Network Announcement. *See* IDNA
- Intermec part numbers, 19
- Internet Explorer. *See* Pocket Internet Explorer
- Internet explorer
 - Pocket PC 2002 edition, 22
 - software build version, 17
- Internet Service Provider. *See* ISP
- IOCTL_GET_CPU_ID, 306
- IOCTL_HAL_COLDBOOT, 301, 320
- IOCTL_HAL_GET_BOOT_DEVICE, 303

- IOCTL_HAL_GET_BOOTLOADER_VERINFO, 300
- IOCTL_HAL_GET_DEVICE_INFO, 290
- IOCTL_HAL_GET_DEVICEID, 298
- IOCTL_HAL_GET_OAL_VERINFO, 299
- IOCTL_HAL_GET_RESET_INFO, 302
- IOCTL_HAL_ITC_READ_PARM, 291
- IOCTL_HAL_ITC_WRITE_SYSPARM, 296
- IOCTL_HAL_REBOOT, 304, 320
- IOCTL_HAL_WARMBOOT, 301, 320
- IOCTL_LOAD_NDIS_MINIPORT, 307
- IOCTL_NPCP_BIND, 139
- IOCTL_NPCP_CANCEL, 139
- IOCTL_NPCP_CLOSE, 139
- IOCTL_NPCP_ERROR, 139
- IOCTL_NPCP_FLUSH, 139
- IOCTL_PROCESSOR_INFORMATION, 305
- IOCTL_UNLOAD_NDIS_MINIPORT, 307
- iOffsetX, pSigCapSpec, IImage::ReadSigCapBuffer, 243
- iOffsetY, pSigCapSpec, IImage::ReadSigCapBuffer, 244
- IrDA printing, 136
- iResolution, pSigCapSpec, IImage::ReadSigCapBuffer, 244
- IS9CConfig3
 - Data Matrix symbology, 238
 - imager settings, 238
 - MaxiCode symbology, 238
 - QRCode symbology, 238
 - trigger settings, 238
- ISP
 - connecting to via Pocket PC, 82
 - creating
 - a modem connection, 82
 - an Ethernet connection, 86
 - Pocket Internet Explorer, 76
 - Pocket PC, 81
- ITC_DOCK_SWITCH, 297
- ITC_WAKEUP_MASK, 297
- ITC_AMBIENT_FRONTLIGHT, 297
- ITC_AMBIENT_KEYBOARD, 297
- ITC_BARCODE_LASER_GOOD_READ_LED, IBarCodeReaderControl::ControlLED, 169
- ITC_DEVID_80211RADIO_INTEL_2011B, 294
- ITC_DEVID_80211RADIO_MAX values
 - ITC_DEVID_80211RADIO_INTEL_2011B, 294
 - ITC_DEVID_80211RADIO_NONE, 294
- ITC_DEVID_80211RADIO_NONE, 294
- ITC_DEVID_INTERMEC2D_IMAGER, 293
- ITC_DEVID_OEM2D_IMAGER, 293
- ITC_DEVID_SCANHW_MAX values
 - ITC_DEVID_INTERMEC2D_IMAGER, 293
 - ITC_DEVID_OEM2D_IMAGER, 293
 - ITC_DEVID_SCANHW_NONE, 293
 - ITC_DEVID_SE900_LASER, 293
 - ITC_DEVID_SE900HS_LASER, 293
- ITC_DEVID_SCANHW_NONE, 293
- ITC_DEVID_SE900_LASER, 293
- ITC_DEVID_SE900HS_LASER, 293
- ITC_DEVID_WANRADIO_NONE, 294
- ITC_DEVID_WANRADIO_SIEMENS_MC45, 294
- ITC_DEVID_WANRADIO_SIERRA_SB555, 294
- ITC_DEVID_WANRADIO_XIRCOM_GEM3503, 294
- ITC_DHATTR_READFILTER
 - IADC::SetAttribute, rgbData, 165
 - IBarCodeReaderControl::SetAttribute, 175
- ITC_DHDEVFLAG_NODATA, ITCDeviceOpen, 157
- ITC_DHDEVFLAG_READAHEAD
 - IADC::Initialize, 161
 - IBarCodeReaderControl::Initialize, 170
 - ITCDeviceOpen, 157
- ITC_FILE_OPEN_E, IImage::ReadSigCapFile, 246
- ITC_IFTP_STOP, 286
- ITC_IMGBUFF_TOO_SMALL_E
 - IImage::ReadImage, 248
 - IImage::ReadSigCapBuffer, 245
- ITC_INV_PARAMETER_E
 - IImage::ReadImage, 248
 - IImage::ReadSigCapBuffer, 245
 - IImage::ReadSigCapFile, 246
- ITC_KEYBOARD_CHANGE, CreateEvent(), 323
- ITC_MAXFILTER, IBarCodeReaderControl::SetAttribute, 175
- ITC_MULTICLIENT_ENABLE, IADC::SetAttribute eAttribID, 165
 - rgbData, 165
- ITC_NVPARM_80211_INSTALLED, 294
- ITC_NVPARM_80211_RADIOTYPE, 294
- ITC_NVPARM_ANTENNA_DIVERSITY, 293
- ITC_NVPARM_BLUETOOTH_INSTALLED, 294
- ITC_NVPARM_CONTRAST, 292
- ITC_NVPARM_DISPLAY_TYPE, 292
- ITC_NVPARM_ECN, 292
- ITC_NVPARM_EDBG_SUBNET, 292
- ITC_NVPARM_EDG_IP, 292
- ITC_NVPARM_ETHERNET_ID, 291
- ITC_NVPARM_INTERMEC_DATACOLLECTION_HW, 293
- ITC_NVPARM_INTERMEC_DATACOLLECTION_SW, 293
- ITC_NVPARM_INTERMEC_SOFTWARE_CONTENT, 293
- ITC_NVPARM_LAN9000_INSTALLED, 295
- ITC_NVPARM_MANF_DATE, 291
- ITC_NVPARM_MCODE, 292
- ITC_NVPARM_RTC_RESTORE, 293
- ITC_NVPARM_SERIAL_NUM, 291
- ITC_NVPARM_SERIAL2_INSTALLED, 295
- ITC_NVPARM_SERVICE_DATE, 292
- ITC_NVPARM_SIM_PROTECT_HW_INSTALLED, 295
- ITC_NVPARM_SIM_PROTECT_SW_INSTALLED, 295
- ITC_NVPARM_VERSION_NUMBER, 292
- ITC_NVPARM_VIBRATE_INSTALLED, 295
- ITC_NVPARM_WAN_FREQUENCY, 294
- ITC_NVPARM_WAN_INSTALLED, 294
- ITC_NVPARM_WAN_RADIOTYPE, 294
- ITC_NVPARM_WAN_RI, 293
- ITC_RDRATTR_GOOD_READ_BEEP_DURATION, IBarCodeReaderControl::SetAttribute, 175
- ITC_RDRATTR_GOOD_READ_BEEPS_NUMBER, IBarCodeReaderControl::SetAttribute, 175

ITC_RDRATTR_GOOD_READ_LED_ENABLE, IBarCodeReaderControl::SetAttribute, 175
ITC_RDRATTR_SCANNER_ENABLE, IBarCodeReaderControl::SetAttribute, 175
ITC_RDRATTR_TONE_ENABLE, IBarCodeReaderControl::SetAttribute, 175
ITC_RDRATTR_TONE_FREQUENCY, IBarCodeReaderControl::SetAttribute, 175
ITC_RDRATTR_VOLUME_LEVEL, IBarCodeReaderControl::SetAttribute, 175
ITC_REGISTRY_LOCATION, 296
ITC_REGISTRY_SAVE_ENABLE, 296
ITC_RESULT_ERR_BADREGION_E
 IImage::ReadSigCapBuffer, 245
 IImage::ReadSigCapFile, 246
ITC_RESULT_NO_BC_DECODED_E
 IImage::ReadSigCapBuffer, 245
 IImage::ReadSigCapFile, 246
ITC_TIMEOUT_E, IImage::ReadImage, 248
ITU-T interface specifications, 121

K

Keeping a to-do list, via Tasks, 51
KernelIoControl
 IOCTL_GET_CPU_ID, 306
 IOCTL_HAL_COLDBOOT, 301, 320
 IOCTL_HAL_GET_BOOT_DEVICE, 303
 IOCTL_HAL_GET_BOOTLOADER_VERINFO, 300
 IOCTL_HAL_GET_DEVICE_INFO, 290
 IOCTL_HAL_GET_DEVICEID, 298
 IOCTL_HAL_GET_OAL_VERINFO, 299
 IOCTL_HAL_GET_RESET_INFO, 302
 IOCTL_HAL_ITC_READ_PARM, 291
 IOCTL_HAL_ITC_WRITE_SYSPARM, 296
 IOCTL_HAL_REBOOT, 304, 320
 IOCTL_HAL_WARMBOOT, 301, 320
 IOCTL_PROCESSOR_INFORMATION, 305
Key clicks
 bar code configuration, 412, 426
 configuration parameter, 412
Key sequences
 alpha (blue) keys
 alphanumeric, 15
 numeric, 14
 [gold] keys, numeric, 12
 [gold/white] keys, alphanumeric, 13
Keyboard
 See also Keypad
 Pocket PC input panel, 31
Keypad
 advanced remapping, 323
 alphanumeric
 alpha (blue) key sequences, 15
 [gold/white] key sequences, 13
 scan codes, 325
 backlight control panel applet, 11
 change notification, 323

driver registry settings, 323
numeric
 alpha (blue) key sequences, 14
 [gold] key sequences, 12
 scan codes, 324
planes, 321
remapping, 321
sample registry keys, 327

L

Laser scanner
 configuration parameters, 332
 data collection parameters
 beeper frequency, 367
 beeper volume, 366
 codabar, 338
 codabar user ID, 357
 code 11, 352
 code 11 user ID, 361
 code 128, 341
 code 128 FNC1 character, 343
 code 128 user ID, 357
 code 39, 336
 code 39 user ID, 357
 code 93, 340
 code 93 length, 340
 code 93 user ID, 358
 EAN-13 user ID, 360
 EAN-8 user ID, 360
 good read beep duration, 369
 good read beeps, 368
 interleaved 2 of 5, 349
 interleaved 2 of 5 user ID, 358
 macro PDF, 346
 matrix 2 of 5, 350
 matrix 2 of 5 user ID, 360
 micro PDF417, 348
 MSI, 345
 MSI user ID, 358
 PDF417, 346
 PDF417 user ID, 358
 plessey, 344
 plessey user ID, 359
 prefix, 362
 standard 2 of 5, 337
 standard 2 of 5 user ID, 359
 suffix, 363
 telepen, 351
 telepen user ID, 360
 UPC-E user ID, 359
 UPC-A user ID, 359
 UPC/EAN, 339
 virtual wedge, 372
 virtual wedge code page, 376
 virtual wedge grid, 375
 virtual wedge postamble, 374
 virtual wedge preamble, 373

- SNMP configuration parameters
 - identification contact, 385
 - identification location, 387
 - identification name, 386
 - security encryption key, 382
 - security read encryption, 380
 - security read-only community string, 378
 - security read/write community string, 379
 - security subnet mask, 356
 - security write encryption, 381
 - trap authentication, 383
 - trap threshold, 384
 - supported
 - beeper functions, 364
 - symbolologies, 335
 - supported symbolologies, 155
 - symbolologies not available
 - Datamatrix, 353
 - datamatrix, 354
 - maxicode, 355
 - LEAP, 802.1x profile, security information, 405
 - Letter recognizer, Pocket PC input panel, 32
 - Library, Microsoft Reader, 73
 - Line printing, 136
 - lpBytesReturned
 - IOCTL_GET_CPU_ID, 306
 - IOCTL_HAL_GET_BOOT_DEVICE, 303
 - IOCTL_HAL_GET_BOOTLOADER_VERINFO, 300
 - IOCTL_HAL_GET_DEVICE_INFO, 290
 - IOCTL_HAL_GET_DEVICEID, 298
 - IOCTL_HAL_GET_OAL_VERINFO, 299
 - IOCTL_HAL_GET_RESET_INFO, 302
 - IOCTL_HAL_ITC_READ_PARM, 291
 - IOCTL_HAL_ITC_WRITE_SYSPARM, 296
 - IOCTL_PROCESSOR_INFORMATION, 305
 - lpInBuf
 - IOCTL_GET_CPU_ID, 306
 - IOCTL_HAL_COLDBOOT, 301
 - IOCTL_HAL_GET_BOOT_DEVICE, 303
 - IOCTL_HAL_GET_BOOTLOADER_VERINFO, 300
 - IOCTL_HAL_GET_DEVICE_INFO, 290
 - IOCTL_HAL_GET_DEVICEID, 298
 - IOCTL_HAL_GET_OAL_VERINFO, 299
 - IOCTL_HAL_GET_RESET_INFO, 302
 - IOCTL_HAL_ITC_READ_PARM, 291
 - IOCTL_HAL_ITC_WRITE_SYSPARM, 296
 - IOCTL_HAL_REBOOT, 304
 - IOCTL_HAL_WARMBOOT, 301
 - IOCTL_PROCESSOR_INFORMATION, 305
 - lpInBufSize
 - IOCTL_GET_CPU_ID, 306
 - IOCTL_HAL_COLDBOOT, 301
 - IOCTL_HAL_GET_BOOT_DEVICE, 303
 - IOCTL_HAL_GET_BOOTLOADER_VERINFO, 300
 - IOCTL_HAL_GET_DEVICE_INFO, 290
 - IOCTL_HAL_GET_DEVICEID, 298
 - IOCTL_HAL_GET_OAL_VERINFO, 299
 - IOCTL_HAL_GET_RESET_INFO, 302
 - IOCTL_HAL_REBOOT, 304
 - IOCTL_HAL_WARMBOOT, 301
 - IOCTL_PROCESSOR_INFORMATION, 305
 - lpOutBuf
 - IOCTL_GET_CPU_ID, 306
 - IOCTL_HAL_COLDBOOT, 301
 - IOCTL_HAL_GET_BOOT_DEVICE, 303
 - IOCTL_HAL_GET_BOOTLOADER_VERINFO, 300
 - IOCTL_HAL_GET_DEVICE_INFO, 290
 - IOCTL_HAL_GET_DEVICEID, 298
 - IOCTL_HAL_GET_OAL_VERINFO, 299
 - IOCTL_HAL_GET_RESET_INFO, 302
 - IOCTL_HAL_ITC_READ_PARM, 291
 - IOCTL_HAL_ITC_WRITE_SYSPARM, 296
 - IOCTL_HAL_REBOOT, 304
 - IOCTL_HAL_WARMBOOT, 301
 - IOCTL_PROCESSOR_INFORMATION, 305
 - LPT9 printer device, 137
- ## M
- Macro PDF, configuration parameter, 346
 - Managing e-mail messages and folders, via Inbox, 60
 - ManifestName, FTP Server, 280
 - Matrix 2 of 5
 - configuration parameter, 350
 - user ID, 360
 - default S9C settings, 197
 - enumerations, 197
 - IS9CConfig::GetMatrix2of5, 195
 - IS9CConfig::SetMatrix2of5, 196
 - modifier characters, 241
 - MaxiCode
 - configuration parameter, 355
 - IS9CConfig3 function, 238
 - Meetings, via Calendar, 45
 - Menus, Pocket PC settings, 40
 - MIBs
 - ASN.1, 132
 - files, 132
 - object identifier, 133
 - OIDs, 133
 - Micro PDF417, configuration parameter, 348
 - Microphone, 3
 - Microsoft Developer Network Library. *See* MSDN library
 - Microsoft Exchange e-mail account, 67
 - Microsoft Passport account, 67

- Microsoft Reader
 - books
 - downloading, 72
 - reading, 74
 - removing, 75
 - features, 75
 - adding bookmarks, 75
 - adding drawings, 75
 - annotations index, 75
 - attaching notes, 75
 - copying text, 75
 - highlighting text, 75
 - searching for text, 75
 - Pocket PC, 72
 - using the library, 73
- Microsoft Word. *See* Pocket Word
- Migrating applications
 - Flash File Store, 101
 - CompactFlash storage cards, 101
 - Secure Digital storage cards, 101
- Migrating to a 700 Color Computer, 104
- Mobile Favorites folder, Pocket Internet Explorer, 76
- Modem position, COM A, 394
- Modems, creating a connection
 - to an ISP, 82
 - to work, 87
- MP3 files, Windows Media Player, 71
- MSDN library, 286
- MSDN Windows CE documentation, 131
- MSI, 423
 - configuration parameter, 345
 - user ID, 358
 - default S9C settings, 200
 - enumerations, 200
 - IS9CConfig::GetMSI, 198
 - IS9CConfig::SetMSI, 199
 - modifier characters, 241
- MSN account, 67
- MSN Messenger
 - about, 67
 - accounts
 - Hotmail, 67
 - Microsoft Exchange e-mail, 67
 - Microsoft Passport, 67
 - MSN, 67
 - contacts
 - chatting with, 69
 - working with, 68
 - Pocket PC icon, 27
 - setting up, 68
 - using My Text, 38
- MultiMediaCards, card support, 16
- N**
 - nBufferSize, IADC::SetAttribute, 165
 - nDepth, IImage::ReadImage, 248
 - nDeviceId, NLEDGetDeviceInfo(), 329
 - NDIS_NET_AUTO_UNKNOWN, GetNetworkMode(), 312
 - NDIS_NET_MODE_ESS, GetNetworkMode(), 312
 - NDIS_NET_MODE_IBSS, GetNetworkMode(), 312
 - NDIS_NET_MODE_UNKNOWN, GetNetworkMode(), 312
 - NDIS_NET_TYPE_DS, GetNetworkType(), 311
 - NDIS_NET_TYPE_FH, GetNetworkType(), 311
 - NDIS_NET_TYPE_UNDEFINED, GetNetworkType(), 311
 - NDIS_POWER_LEVEL_1, GetTXPower(), 311
 - NDIS_POWER_LEVEL_15, GetTXPower(), 311
 - NDIS_POWER_LEVEL_30, GetTXPower(), 311
 - NDIS_POWER_LEVEL_5, GetTXPower(), 311
 - NDIS_POWER_LEVEL_63, GetTXPower(), 311
 - NDIS_POWER_LEVEL_UNKNOWN, GetTXPower(), 311
 - NDIS_RADIO_ASSOCIATED, GetAssociationStatus(), 314
 - NDIS_RADIO_AUTH_MODE_AUTO, GetAuthenticationMode(), 315
 - NDIS_RADIO_AUTH_MODE_ERROR, GetAuthenticationMode(), 315
 - NDIS_RADIO_AUTH_MODE_OPEN, GetAuthenticationMode(), 315
 - NDIS_RADIO_AUTH_MODE_SHARED, GetAuthenticationMode(), 315
 - NDIS_RADIO_POWER_MODE_CAM, GetPowerMode(), 317
 - NDIS_RADIO_POWER_MODE_MAX, GetPowerMode(), 317
 - NDIS_RADIO_POWER_MODE_PSP, GetPowerMode(), 317
 - NDIS_RADIO_POWER_MODE_UNKNOWN, GetPowerMode(), 317
 - NDIS_RADIO_SCANNING, GetAssociationStatus(), 314
 - NDIS_RADIO_WEP_ABSENT, GetWepStatus(), 314
 - NDIS_RADIO_WEP_DISABLED, GetWepStatus(), 314
 - NDIS_RADIO_WEP_ENABLED, GetWepStatus(), 314
 - NDIS_RADIO_WEP_NOT_SUPPORTED, GetWepStatus(), 314
 - Network adapters
 - 802.11b, 110
 - antenna color code, 107
 - Ethernet communications, 108
 - wireless printing, 125
 - WWAN radio options, 113
 - Network type, 802.11 radio module, 401
 - nFilterChars
 - IADC::SetAttribute, 165
 - IBarCodeReaderControl::SetAttribute, 175
 - nInBufSize
 - IOCTL_HAL_ITC_READ_PARM, 291
 - IOCTL_HAL_ITC_WRITE_SYSPARM, 296
 - nInfold, NLEDGetDeviceInfo(), 329
 - NLED driver, vibrator, 328
 - NLED_COUNT_INFO, NLEDGetDeviceInfo (), 329
 - NLED_SETTINGS_INFO_ID
 - NLEDGetDeviceInfo (), 329
 - NLEDSetDevice(), 329
 - NLED_SUPPORTS_INFO_ID, NLEDGetDeviceInfo (), 329

Notes

- creating a note, 55
- drawing on the screen, 36
 - creating a drawing, 36
 - selecting a drawing, 36
- Pocket Outlook, 54
- Pocket PC icon, 27
- recording a message, 37
 - creating a recording, 37
- writing on the screen, 33
 - alternate writing, 35
 - converting writing to text, 34
 - selecting the writing, 33
 - tips for good recognition, 35

nOutBufSize

- IOCTL_GET_CPU_ID, 306
- IOCTL_HAL_COLDBOOT, 301
- IOCTL_HAL_GET_BOOT_DEVICE, 303
- IOCTL_HAL_GET_BOOTLOADER_VERINFO, 300
- IOCTL_HAL_GET_DEVICE_INFO, 290
- IOCTL_HAL_GET_DEVICEID, 298
- IOCTL_HAL_GET_OAL_VERINFO, 299
- IOCTL_HAL_GET_RESET_INFO, 302
- IOCTL_HAL_ITC_READ_PARM, 291
- IOCTL_HAL_ITC_WRITE_SYSPARM, 296
- IOCTL_HAL_REBOOT, 304
- IOCTL_HAL_WARMBOOT, 301
- IOCTL_PROCESSOR_INFORMATION, 305

NPCP printing, 137

- about, 137
- closing driver, 138
- COM1 parameters, 137
- communications, 140
- driver I/O controls, 139
- installation, 137
- LPT9, 137
- opening driver, 138
- reading from driver, 138
- removal, 137
- sample code, 140
- unit information control panel, NPCPTEST CAB file, 391
- writing to driver, 138

Numeric keypad

- alpha (blue) key sequences, 14
- [gold] key sequences, 12
- registry settings
 - alpha plane, 322
 - gold plane, 322
 - unshifted plane, 322
- scan codes, 324

O

O'Neil printing

- See also* DTR printer
- installing driver, 142

Object Store, packaging an application, 98

Object store

- IOCTL_HAL_COLDBOOT, 301
- IOCTL_HAL_REBOOT, 304
- IOCTL_HAL_WARMBOOT, 301

Oldstyle device ID, 298

Opening drivers

- DTR, 143
- NPCP, 138

Operators, virtual wedge grid, 151

Owner information, Pocket PC settings, 40

P

Packaging an application

- CompactFlash storage cards, 98
- Flash File Store, 98
- Object Store, 98
- Persistent Storage Manager, 98
- Secure Digital storage cards, 98

Page format printing, 136

Password

- Pocket Excel, 67
- Pocket PC settings, 40

PauseAtStartup, FTP Server, 281

PB20 printers, printer support, 135

pBarcodeDataDetails, IBarcodeReaderControl::Read, 173

pbyFNC1, IS9CConfig::GetCode128, 189

PDF417

- about the laser scanner, 145
- configuration parameter, 346
 - user ID, 358
- default S9C settings, 204
- enumerations, 204
- extensions
 - IS9CConfig2::GetPDF417ext, 232
 - IS9CConfig2::SetPDF417ext, 233
- IImage::ReadSigCapBuffer, 245
- IImage::ReadSigCapFile, 246
- IS9CConfig::GetPDF417, 201
- IS9CConfig::SetPDF417, 203
- modifier characters, 242

pdwBufferSize, IS9CConfig2::GetGlobalAmble, 229

pdwLength

- IS9CConfig::GetCode128, 189
- IS9CConfig::GetCode93, 186
- IS9CConfig::GetMatrix2of5, 195
- IS9CConfig::GetMSI, 198
- IS9CConfig::GetPlessey, 206

pdwNumBytes

- IS9CConfig::GetCodabar, 180
- IS9CConfig::GetI2of5, 192
- IS9CConfig::GetStandard2of5, 209

pdwNumElement, IS9CConfig2::GetCustomSymIds, 225

pdwReplyBuffSize

- ISCP::GetConfig, 239
- ISCP::SetConfig, 240

pdwTotalDiscardedBytes, IADC::CancelReadRequest, 160

- peCheck
 - IS9CConfig::GetCodabar, 180
 - IS9CConfig::GetCode39, 183
 - IS9CConfig::GetI2of5, 192
 - IS9CConfig::GetMSI, 198
 - IS9CConfig::GetPlessey, 206
 - IS9CConfig::GetStandard2of5, 209
 - IS9CConfig2::GetCode11, 222
- peCip128State, IS9CConfig::GetCode128, 189
- peCLSI, IS9CConfig::GetCodabar, 180
- peCode128, IS9CConfig2::GetPDF417Ext, 232
- peDecode
 - IS9CConfig::GetCodabar, 180
 - IS9CConfig::GetCode128, 189
 - IS9CConfig::GetCode39, 183
 - IS9CConfig::GetCode93, 186
 - IS9CConfig::GetI2of5, 192
 - IS9CConfig::GetMatrix2of5, 195
 - IS9CConfig::GetMSI, 198
 - IS9CConfig::GetPlessey, 206
 - IS9CConfig::GetStandard2of5, 209
 - IS9CConfig::GetTelepen, 212
 - IS9CConfig2::GetCode11, 222
 - IS9CConfig2::GetPDF417Ext, 232
- peEan128Ident, IS9CConfig::GetCode128, 189
- peFormat
 - IS9CConfig::GetCode39, 183
 - IS9CConfig::GetStandard2of5, 209
 - IS9CConfig::GetTelepen, 212
- peLengthId
 - IS9CConfig::GetCodabar, 180
 - IS9CConfig::GetI2of5, 192
 - IS9CConfig::GetStandard2of5, 209
- peMacroPdf, IS9CConfig::GetPDF417, 201
- pePdf417Decode, IS9CConfig::GetPDF417, 201
- pePdfAddressee, IS9CConfig::GetPDF417, 201
- pePdfChecksum, IS9CConfig::GetPDF417, 201
- pePdfControlHeader, IS9CConfig::GetPDF417, 201
- pePdfFileName, IS9CConfig::GetPDF417, 201
- pePdfFileSize, IS9CConfig::GetPDF417, 201
- pePdfSegmentCount, IS9CConfig::GetPDF417, 201
- pePdfSender, IS9CConfig::GetPDF417, 201
- pePdfTimeStamp, IS9CConfig::GetPDF417, 201
- Persistent Store Manager, packaging an application, 98
- peSS
 - IS9CConfig::GetCodabar, 180
 - IS9CConfig::GetCode39, 183
- peSSChars, IS9CConfig::GetCode39, 183
- peSymIdXmit, IS9CConfig2::GetSymIdXmit, 235
- peVer, IS9CConfig2::GetCode11, 222
- Phone jack position, control panel applet, 394
- pImgBuffer
 - Image::ReadImage, 248
 - Image::ReadSigCapBuffer, 244
- pInput, NLEDSetDevice(), 329
- Planes, keypad, 321
- Plessey, 423
 - configuration parameter, 344
 - user ID, 359
 - default S9C settings, 208
 - enumerations, 208
 - IS9CConfig::GetPlessey, 206
 - IS9CConfig::SetPlessey, 207
 - modifier characters, 242
- pnBufferData, IADC::QueryAttribute, 162
- pnBytesReturned
 - IADC::Read, 164
 - IBarCodeReaderControl::Read, 173
- Pocket Excel
 - about, 66
 - creating a workbook, 66
 - Pocket PC icon, 27
- Pocket Internet Explorer
 - about, 76
 - adding programs, 41
 - AvantGo channels, 78
 - browsing the Internet, 80
 - favorite links, 76
 - getting connected, 81
 - Mobile Favorites folder, 76
 - Pocket PC icon, 27
 - software build, 17
 - viewing mobile favorites and channels, 80
- Pocket Outlook, 45
 - Calendar, 45
- Pocket PC
 - about, 22
 - ActiveSync, 43
 - basic skills, 25
 - Calendar, 45
 - command bar, 28
 - Contacts, 48
 - edition information, 22
 - getting connected, 81
 - Inbox, 56
 - input panel. *See* Input panel
 - IOCTL_HAL_GET_BOOTLOADER_VERINFO, 300
 - IOCTL_HAL_GET_OAL_VERINFO, 299
 - MSN Messenger, 67
 - navigation bar, 28
 - Notes, 54
 - notifications, 29
 - status icon, 26
 - Pocket Excel, 66
 - Pocket Word, 61
 - pop-up menus, 29
 - programs, 27
 - status icons, 26
 - support URLs, 24
 - Tasks, 51
 - Today screen, 25
 - where to find information, 24
 - Windows Media Player, 71
 - writing on the screen, 33

- Pocket Word
 - about, 61
 - creating a document, 61
 - drawing mode, 65
 - Pocket PC icon, 27
 - recording mode, 65
 - tips, 67
 - typing mode, 63
 - writing mode, 64
- POP3, Folder behavior connected to e-mail server, 60
- Postamble
 - configuration parameter, 374
 - with/without data, 374
- pOutput, NLEDGetDeviceInfo(), 329
- Power
 - control panel
 - battery status, 5
 - RAM maintenance, 6
 - Pocket PC settings, 40
- ppvObject
 - ITCDeviceClose, 158
 - ITCDeviceOpen, 157
- Preamble
 - configuration parameter, 373
 - with/without data, 373
- Prefix, configuration parameter, user ID, 362
- Printer support, 136
 - IrDA printer driver, 136
 - NPCP printer driver, 137
 - O'Neil printer driver, 142
- Processor information, IOCTL_PROCESSOR_INFORMATION, 305
- Profiles
 - 802.11 radio module, 399
 - basic information, 401
 - certificates, 407
 - import/export, 408
 - read-only, 406
 - scan list, 409
 - security information, 402
 - adding to unit, 399
 - deleting, 400
 - editing, 400
- Programs, adding or removing, Pocket PC, 40
- pSigCapSpec
 - IIImage::ReadSigCapBuffer, 243
 - IIImage::ReadSigCapFile, 246
- pStructSymIdPair
 - IS9CConfig2::GetCustomSymIds, 225
 - IS9CConfig2::SetCustomSymIds, 226
- pSystemTime, IADC::Read, 164
- pszDevice, ITCDeviceOpen, 157
- pszDeviceName
 - IADC::Initialize, 161
 - IBarCodeReaderControl::Initialize, 170
- pszFileName, IIImage::ReadSigCapFile, 246
- pwLength, IS9CConfig::GetCode39, 183
- pwTotalDiscardedBytes, IBarCodeReaderControl::CancelReadRequest, 168
- pwTotalDiscardedMessages
 - IADC::CancelReadRequest, 160
 - IBarCodeReaderControl::CancelReadRequest, 168
- Q**
- QR code
 - configuration parameter, 353
 - IS9CConfig3 function, 238
- Quick Response code. *See* QR code
- R**
- Radios
 - See also* Network adapters
 - card support, 18
- Reader commands, 413
 - configuration change, 413
 - date and time settings, 414
- Reading from drivers, NPCP, 138
- Real-Time Clock, restore after cold-boot, 395
- Reboot methods
 - IOCTL_HAL_COLDBOOT, 320
 - IOCTL_HAL_REBOOT, 320
 - IOCTL_HAL_WARMBOOT, 320
- Record button, recording a message, 37
- Recording a message
 - See also* Notes
 - Pocket Word, 65
- Recording mode, Pocket Word, 65
- Recovery CD
 - AutoCab method, 104
 - AutoRun system, 98
 - AUTOUSER.DAT file, 102
 - RegFlushKey() API, 288
 - S9C upgrade, 392
 - updating the system software, 101
- RegFlush utility, 103
- Registry
 - FTP Server parameters, 278
 - keypad remapping, 323
 - sample view of key mapping, 327
 - save location, IOCTL_HAL_ITC_WRITE_SYSPARM, 296
 - writing to a storage card, 103
- Registry Save, control panel applet, 395
- Registry settings
 - AutoCfg, 131
 - AutoFTP, 287
 - AutoInterval, 131
 - AutoIP/DHCP, 131
 - DhcpMaxRetry, 131
 - DhcpRetryDialogue, 131
 - EnableDHCP, 131
 - keypad driver, 323
 - keypad planes
 - alpha, 322
 - gold, 322
 - unshifted, 322
- Removing drivers
 - DTR, 142
 - NPCP, 137

- Removing programs, Pocket PC, 40, 42
- RFC 959, 285
- rgbAttrBuffer
 - IBarcodeReaderControl::QueryAttribute, 172
 - IBarcodeReaderControl::SetAttribute, 176
- rgbBuffer
 - IADC::QueryAttribute, 162
 - IS9CConfig2::GetGlobalAmble, 229
 - IS9CConfig2::SetGlobalAmble, 230
- rgbCommandBuff
 - ISCP::GetConfig, 239
 - ISCP::SetConfig, 240
- rgbData, IADC::SetAttribute, 165
- rgbDataBuffer
 - IADC::Read, 164
 - IBarcodeReaderControl::Read, 173
- rgbBeepRequests, IBarcodeReaderControl::IssueBeep, 171
- rgbImageData, pImgBuffer, IImage::ReadSigCapBuffer, 244
- rgbLengthBuff
 - IS9CConfig::GetCodabar, 180
 - IS9CConfig::GetI2of5, 192
 - IS9CConfig::GetStandard2of5, 209
 - IS9CConfig::SetCodabar, 181
 - IS9CConfig::SetI2of5, 193
 - IS9CConfig::SetStandard2of5, 210
- rgbReplyBuff
 - ISCP::GetConfig, 239
 - ISCP::SetConfig, 240
- Root, FTP Server, 281
- RTC. *See* Real-Time Clock
- S**
- S 2 of 5. *See* Standard 2 of 5
- S_DEVICE_CONTENTION_E, IImage::Open, 252
- S_DEVICE_NOT_OPENED_E
 - IImage::CancelReadImage, 249
 - IImage::Close, 253
 - IImage::ReadImage, 248
 - IImage::ReadSigCapBuffer, 245
 - IImage::ReadSigCapFile, 246
 - IImage::Start, 250
 - IImage::Stop, 251
- S_IMG_NOT_PRESENT_E
 - IImage::Open, 252
 - IImage::Stop, 251
- S_OK
 - IImage::CancelReadImage, 249
 - IImage::Close, 253
 - IImage::Open, 252
 - IImage::ReadImage, 248
 - IImage::ReadSigCapBuffer, 245
 - IImage::ReadSigCapFile, 246
 - IImage::Start, 250
 - IImage::Stop, 251
- S9C
 - initialization, 146
 - IS9CConfig functions, 179
 - IS9CConfig2 functions, 221
 - IS9CConfig3 functions, 238
 - unit information control panel, upgrade files, 392
 - version number, 389
- Sabre 1551E or 1553
 - See also* Tethered scanner
 - cabling, 257
 - settings, 257
- Sample code, NPCP printing, 140
- Scan codes
 - alphanumeric keypad, 325
 - numeric keypad, 324
- Scan list of profiles, 802.11 radio module, 410
- SCAN Mute, Audio control panel applet, 8
- Scanner
 - beeper volume
 - selecting, 9
 - turning it off, 10
 - turning it on, 7
 - mute feature, turning it off, 8
 - unit configuration parameters
 - automatic shutoff, 411
 - backlight timeout, 412
 - date/time, 412
 - key clicks, 412
 - volume, 411
 - utilities configuration, button wakeup mask, 396
- Scanner cabling, 257
- Scheduling appointments and meetings, via Calendar, 45
- SDK, unit information control panel, 392
- SDMMC Disk, 101
- Searching for text, Microsoft Reader, 75
- Secure Digital cards
 - card support, 16
 - installing applications, 100, 101
 - migrating applications, 101
 - packaging an application, 98
 - Utilities control panel applet, 395
- Security, configuration parameter
 - encryption key, 382
 - read encryption, 380
 - read-only community string, 378
 - read/write community string, 379
 - subnet mask, 356
 - write encryption, 381
- Selected profile, 802.11 radio module, 409
- Selecting, drawing via Notes, 36
- Sending and receiving messages, via Inbox, 56
- Serial port, modem support, 16
- Serial position, COM B, 394
- Setting date and time, 414
- Setting up an e-mail service, 94
- Setting up for Bluetooth printing, 126
- SETUP.DLL, installation functions, 274

- Signature capture
 - IImage interface, 243
 - IImage::CancelReadImage, 249
 - IImage::Close, 253
 - IImage::Open, 252
 - IImage::ReadImage, 248
 - IImage::ReadSigCapBuffer, 243
 - IImage::ReadSigCapFile, 246
 - IImage::Start, 250
 - IImage::Stop, 251
- Simple Network Management Protocol. *See* SNMP
- SMS, Folder behavior connected to e-mail server, 60
- Snap-on modems, 16
- SNMP, 132
 - configuration parameters
 - identification contact, 385
 - identification location, 387
 - identification name, 386
 - security encryption key, 382
 - security read encryption, 380
 - security read-only community string, 378
 - security read/write community string, 379
 - security subnet mask, 356
 - security write encryption, 381
 - trap authentication, 383
 - trap threshold, 384
- SNMP OIDs
 - aimer LED duration, 370
 - automatic shutoff, 411
 - backlight timeout, 412
 - beeper, 365
 - frequency, 367
 - volume, 366
 - codabar, 338
 - user ID, 357
 - code 11, 352
 - user ID, 361
 - code 128, 341
 - FNC1 character, 343
 - user ID, 357
 - code 39, 336
 - user ID, 357
 - code 93, 340
 - length, 340
 - user ID, 358
 - datamatrix, 354
 - date/time, 412
 - default S9C settings, 228
- EAN
 - 13 user ID, 360
 - 8 user ID, 360
- good read
 - beep duration, 369
 - beeps, 368
- identification
 - contact, 385
 - location, 387
 - name, 386
- image dimension, 371
- interleaved 2 of 5, 349
 - user ID, 358
- IS9CConfig2::GetCustomSymIds, 225
- IS9CConfig2::GetSymIdXmit, 235
- IS9CConfig2::SetCustomSymIds, 226
- IS9CConfig2::SetSymIdXmit, 236
- key clicks, 412
- macro PDF, 346
- matrix 2 of 5, 350
 - user ID, 360
- maxicode, 355
- micro PDF417, 348
- MSI, 345
 - user ID, 358
- PDF417, 346
 - user ID, 358
- plessey, 344
 - user ID, 359
- prefix, 362
- QR code, 353
- security
 - encryption key, 382
 - read encryption, 380
 - read-only community string, 378
 - read/write community string, 379
 - write encryption, 381
- security subnet mask, 356
- standard 2 of 5, 337
 - user ID, 359
- suffix, 363
- telepen, 351
 - user ID, 360
- transmission option, 237
- trap
 - authentication, 383
 - threshold, 384
- UPC
 - A user ID, 359
 - E user ID, 359
- UPC/EAN, 339
- virtual wedge, 372
 - code page, 376
 - grid, 375
 - postamble, 374
 - preamble, 373
 - volume, 411
- Symbology ID defaults, 241
- Software Developer's Kit. *See* SDK
- Software versions, 17, 389
 - 700 Series Computer, 17
 - unit information control panel applet, 389, 391
- Speaker, 3
- SSID (network name), 802.11 radio module, 401

- Standard 2 of 5, 422
 - configuration parameter, 337
 - user ID, 359
- default S9C settings, 211
- enumerations, 211
- IS9CConfig::GetStandard2of5, 209
- IS9CConfig::SetStandard2of5, 210
- modifier characters, 242
- Start Menu, adding programs, 42
 - via ActiveSync, 42
 - via File Explorer, 42
- Status icons, Pocket PC, 26
- Storage media, 16
- Stream device driver
 - NPCPPORT.DLL, 137
 - ONEIL.DLL, 142
- stTimeStamp, IBarcodeReaderControl::Read, 173
- Suffix, configuration parameter, 363
- Summary screen
 - Calendar, 47
 - Contacts, 50
 - Tasks, 53
- Symbolologies, 416
 - scanning labels, 424
 - user IDs
 - Codabar, 357
 - Code 11, 361
 - Code 128, 357
 - Code 39, 357
 - Code 93, 358
 - EAN 13, 360
 - EAN 8, 360
 - Interleaved 2 of 5, 358
 - Matrix 2 of 5, 360
 - MSI, 358
 - PDF417, 358
 - Plessey, 359
 - Standard 2 of 5, 359
 - Telepen, 360
 - UPC A, 359
 - UPC E, 359
 - when not available
 - imager, 344, 345, 346, 348, 350, 351, 352
 - laser scanner, 353, 354, 355
- Synchronizing e-mail messages, via Inbox, 56
- szDest, EncryptWepKeyForRegistry(), 318
- szFilter
 - IADC::SetAttribute, 165
 - IBarCodeReaderControl::SetAttribute, 175
- szSource, EncrypWepKeyForRegistry(), 318

T

- Tasks
 - creating a task, 52
 - Pocket Outlook, 51
 - Pocket PC icon, 27
 - using the summary screen, 53
- TCP/IP client, DHCP server, 131

- Telepen
 - configuration parameter, 351
 - user ID, 360
- default S9C settings, 214
- enumerations, 214
- IS9CConfig::GetTelepen, 212
- IS9CConfig::SetTelepen, 213
- modifier characters, 242
- Testing AT commands, 122
- Tethered scanner
 - capabilities, 258
 - disabling, 256
 - enabling, 256
 - error messages, 257
 - limitations, 258
 - settings, 256
- Text messages, Pocket PC, 38
- Time, setting, 414
- Tips for working, Pocket Excel, 67
- TLS, 802.1x profile, 404
- Today, Pocket PC settings, 40
- Today screen, Pocket PC, 25
- Tools CD
 - Bluetooth documentation, 125
 - CAB files, 100, 391
 - CE Imager, 101
 - Comm Port Wedge CAB file, 391
 - management tools installed on desktop, 99
 - MIB files, 132
 - sample NPCP code, 140
 - Wireless Printing Development Guide, 125
 - wireless printing sample, 392
 - wireless printing SDK, 125
- Tracking people, via Contacts, 48
- Transcriber, Pocket PC input panel, 32
- Transfer items using infrared
 - getting connected, 81
 - receiving information, 82
 - sending information, 81
- Trap configuration parameters
 - authentication, 383
 - threshold, 384
- Traps, control panel appet, SNMP, 383
- Troubleshooting, CAB Wizard, 276
- TTLS, 802.1x profile, 405
- Typing mode, Pocket Word, 63
- Typing on the screen, Pocket Word, 63

U

- UDP, FTPDCE, 282
- UDP broadcasts, IDNATarget parameter, 280
- uiHeight, pSigCapSpec, IImage::ReadSigCapBuffer, 244
- uiWidth, pSigCapSpec, IImage::ReadSigCapBuffer, 244
- Unit, configuration parameters
 - automatic shutoff, 411
 - backlight timeout, 412
 - date/time, 412
 - key clicks, 412
 - volume, 411

- Unit information
 - battery status, 390
 - CAB files, 391
 - ActiveX control tools, 392
 - Bluetooth stack, 391
 - Comm Port Wedge, 391
 - NPCP printer, 391
 - S9C Upgrade, 392
 - SDK, 392
 - Windows configuration, 392
 - wireless printing demo, 392
 - wireless printing sample, 392
 - versions, 17, 389
 - 700 Platform Build, 389
 - DataCollection Build, 389
 - S9C, 389
 - Unit Manager, date/time, 412
 - Universal Product Code. *See* UPC
 - Unshifted plane on keypad, regular keypad, 321
 - UPC, 418
 - configuration parameter, 339
 - A user ID, 359
 - E user ID, 359
 - default S9C settings, 218
 - enumerations, 218
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - modifier characters, 242
 - upcACheck
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - upcAddOn2
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - upcAddOn5
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - upcAddOnDigits
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - upcANumSystem
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - upcAReencode
 - IS9CConfig::GetUpcEan, 216
 - IS9CConfig::SetUpcEan, 217
 - upcASelect
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - upceanDecode
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - upcECheck
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - upcENumSystem
 - IS9CConfig::GetUpcEan, 216
 - IS9CConfig::SetUpcEan, 217
 - upcEReencode
 - IS9CConfig::GetUpcEan, 216
 - IS9CConfig::SetUpcEan, 217
 - upcESelect
 - IS9CConfig::GetUpcEan, 215
 - IS9CConfig::SetUpcEan, 217
 - Updating, bootloader, 99
 - URLs
 - ActiveSync, 43
 - Adobe Acrobat Reader, 121
 - AT command interface
 - CDMA/1xRTT SB555, 121
 - GPRS/GSM MC45, 121
 - full screen display, 289
 - MIBs, 132
 - Microsoft Exchange e-mail account, 67
 - Microsoft Passport account, 67
 - Microsoft support, 24
 - MSDN library, 286
 - MSDN Windows CE documentation, 131
 - Pocket PC, 24
 - Pocket PC support, 24
 - Using a message list, via Inbox, 57
 - Utilities control panel applet
 - app launch, 397
 - dock switch, 394
 - registry save, 395
 - wakeup mask, 396
 - UUID, 298
- ## V
- Vibrator
 - enabling, 18
 - programming, 328
 - Video files, Windows Media Player, 71
 - Viewing mobile favorites and channels, Pocket Internet Explorer, 80
 - Virtual wedge
 - bar code configuration
 - grid, 427
 - postamble, 427
 - preamble, 427
 - configuration parameter, 372
 - code page, 376
 - grid, 375
 - postamble, 374
 - preamble, 373
 - data filtering, 149
 - filter expression values, 150
 - global amble
 - IS9CConfig2::GetGlobalAmble, 229
 - IS9CConfig2::SetGlobalAmble, 230
 - operators, 151
 - VN_CLASS_ASIC, 292
 - VN_CLASS_BOOTSTRAP, 292
 - VN_CLASS_KBD, 292
 - Volume
 - bar code configuration, 411, 424
 - configuration parameter, 411
- ## W
- Wakeup mask, control panel applet, 396

- WAN monitor CORE module
 - CDMA/1xRTT, 113
 - GSM/GPRS, 116
 - installing available modules, 106
 - loading a module, 106
 - WAN radio IDs
 - ITC_DEVID_WANRADIO_NONE, 294
 - ITC_DEVID_WANRADIO_SIEMENS_MC45, 294
 - ITC_DEVID_WANRADIO_SIERRA_SB555, 294
 - WAN rado CORE module
 - installing available modules, 106
 - loading a module, 106
 - phone application, 120
 - terminal application, 119
 - WAP pages, 76
 - connecting to an ISP, 82
 - Warm boot
 - IOCTL_HAL_REBOOT, 304
 - IOCTL_HAL_WARMBOOT, 301
 - Web browsers, FTP support, 285
 - Web pages, 76
 - connecting to an ISP, 82
 - Welch Allyn 1470 Imager
 - cabling, 257
 - settings, 257
 - WEP encryption, 802.11 radio module, 403
 - Windows CE documentation (MSDN), 131
 - Windows configuration, unit information control panel,
 - WinCfg CAB file, 392
 - Windows Media files, Windows Media Player, 71
 - Windows Media Player, Pocket PC, 71
 - Wireless Application Protocol. *See* WAP pages
 - Wireless network, 110, 399
 - Wireless printing
 - Bluetooth compatible module, 125
 - unit information control panel
 - PDWPM0C CAB file, 392
 - WP_SAMPLE.CAB file, 392
 - Wireless TCP/IP installations, BlockSize parameter, 278
 - Wireless WAN
 - AT command interface
 - CDMA/1xRTT SB555, 121
 - GPRS/GSM MC45, 121
 - CDMA/1xRTT, 113
 - GSM/GPRS, 116
 - testing AT commands, 122
 - wNumberOfMessages, IADC::QueryData, 163
 - Word documents. *See* Pocket Word
 - Work
 - creating
 - a modem connection, 87
 - an Ethernet connection, 91
 - getting connected, 87
 - Writing mode, Pocket Word, 64
 - Writing on the screen
 - See also* Notes
 - Pocket Word, 64
 - Writing to drivers
 - DTR, 143
 - NPCP, 138
 - wStructSize, IBarcodeReaderControl::Read, 173
 - WWAN. *See* Wireless WAN
- ## X
- Xscale processor ID, IOCTL_GET_CPU_ID, 306

Files Index

Numbers

80211API.DLL, 308
 80211CONF.EXE, 308
 80211SCAN.EXE, 308

A

AUTOUSER.DAT, 100

C

CABWIZ.DDF, 275
 CABWIZ.EXE, 262, 275
 CEIMAGER.EXE, 101
 COREDLL.DLL, 328
 CPL802.CPL, 308

D

DEVICEID.H, 298

E

EXITME.BIN, 285

F

FTPDCE.EXE, 282, 285
 AutoFTP, 287
 FTP Server, 277
 FTPDCE.TXT, 285

I

IADC.H, IADC functions, 159
 IADCDEVICE.H
 IADC::SetAttribute, 165
 IBarcodeReaderControl::SetAttribute, 175
 INTERMEC.MIB, 132
 IS9CCONFIG.H
 IS9CConfig functions, 179
 IS9CConfig2 functions, 221
 ITCADC.MIB, 132
 ITCDEVMGMT.H, 157
 ITCDEVMGMT.LIB, 157
 ITCSNMP.MIB, 132
 ITCTERMINAL.MIB, 132
 ITCUUID.LIB
 IADC functions, 159
 IS9CConfig functions, 179

IS9CConfig2 functions, 221

M

MAKECAB.EXE, 275
 MOD80211.DLL, 308

N

NETWLAN.DLL, 308
 NLED.H, 329
 NLEDGetDeviceInfo(), 329
 NLEDSetDevice(), 329
 NPCPPORT.DLL, 137
 NRINET.INI, 392

O

OEMIOCTL.H
 IOCTL_GET_CPU_ID, 306
 IOCTL_HAL_COLDBOOT, 301
 IOCTL_HAL_GET_BOOT_DEVICE, 303
 IOCTL_HAL_GET_BOOTLOADER_VERINFO, 300
 IOCTL_HAL_GET_OAL_VERINFO, 299
 IOCTL_HAL_GET_RESET_INFO, 302
 IOCTL_HAL_ITC_READ_PARM, 291
 IOCTL_HAL_ITC_WRITE_SYSPARM, 296
 IOCTL_HAL_REBOOT, 304
 IOCTL_HAL_WARMBOOT, 301
 ONEIL.DLL, 142

P

PKFUNCS.H
 IOCTL_HAL_GET_DEVICEID, 298
 IOCTL_PROCESSOR_INFORMATION, 305

R

REBOOTME.BIN, 285
 __RESETMEPLEASE__.TXT, 274
 RPM.EXE, 267
 RPMCE212.INI, 267

S

SETUP.DLL, 266, 274
 DllMain, 274

T

TAHOMA.TTF, 267

W

WCESTART.INI, 267



Corporate Headquarters
6001 36th Avenue West
Everett, Washington 98203
tel 425.348.2600
fax 425.355.9551
www.intermec.com

700 Series Color Mobile Computer User's Manual - April 2003



961054031 REV C