

POWER






ARM

LAUNCH

STATUS

POWER

CONTINUITY CHECK

 Flashing Blue:	Looking for Controller
 Flashing Yellow:	No continuity
 Flashing Green:	Ready (slow beeps)
 Flashing Red:	Armed (fast beeps)
 Solid White:	Done