

WARTHOG

UNMANNED GROUND VEHICLE

USER MANUAL

CONTENTS

1	Introduction	4
1.1	What's Included	4
1.2	Hardware Overview	5
1.2.1	Battery Charger	6
1.2.2	Bilge Pump	6
1.2.3	User Bay	6
1.2.4	Payload Integration Racks	6
1.3	Technical Specifications	8
2	Getting Started	9
2.1	Futaba Controller	9
2.2	Wireless Access	9
2.3	Remote ROS Connectivity	9
2.4	Visualizing Warthog	10
3	Safety Considerations	12
3.1	General Warnings	12
3.2	Maneuverability in Water	12
3.3	Pinch Points	12
3.4	Stop Buttons	12
3.5	Electrical System	13
3.6	Lifting and Transport	13
4	Payload Integration Guide	14
4.1	System Architecture	14
4.2	Mechanical Mounting	15
4.2.1	Payload Integration Guidelines	15
4.3	Electrical Integration	17
4.4	Software Integration	18

5	Maintenance	19
5.1	Battery & Charging	19
5.1.1	General	19
5.1.2	Long-term Storage	19
6	Contact	20

1 INTRODUCTION

Clearpath Robotics Warthog is a rugged, all-terrain unmanned ground vehicle capable of traveling on land and in water. Warthog fully supports the Robot Operating System (ROS) and can be equipped with a variety of payloads, including sensors and manipulators, to accommodate a wide variety of robotics applications in mining, agriculture and environmental monitoring. This guide contains information about the setup, safe operation, and maintenance of your Warthog unmanned ground vehicle.

1.1 What's Included

Included with each Warthog are the following:

- 1x Warthog Omnidirectional Robotic Platform
 - Onboard computer
 - User Integration Area with power, Ethernet, and USB connectivity
 - 48V Lead Acid Battery Pack
 - Onboard Battery Charger
- 1x Futaba Remote Control (R/C)
- 1x Warthog User Manual

1.2 Hardware Overview

Please see Figure 1 for a view of some of Warthog's key external-facing features.

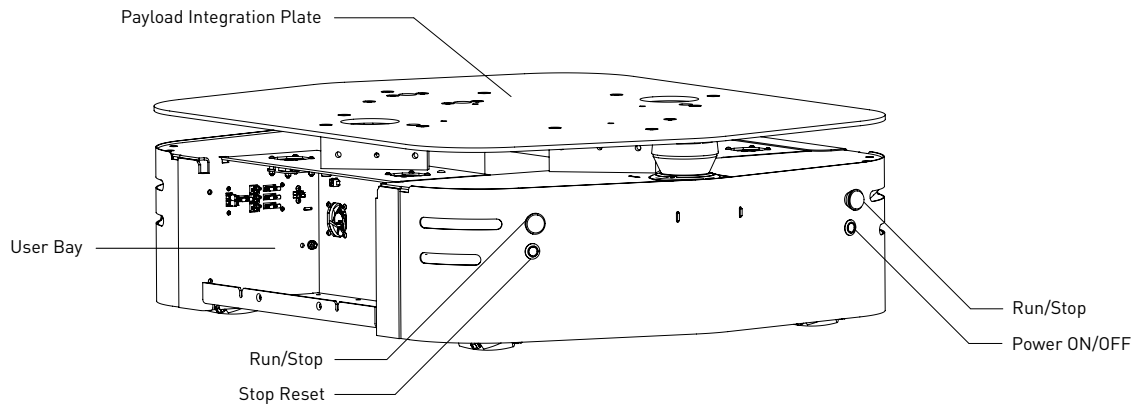


Figure 1: Warthog Hardware Overview

1.2.1 Battery Charger

Info about onboard battery charger

1.2.2 Bilge Pump

Two bilge pumps are installed in each J5 rover. There is one situated in each of the drive units underneath the motor.

The bilge pumps are used to remove water from the main chassis and drive units. At initial startup, an audible sound can be heard from the bilge pumps being initiated. These pumps are an automatic pumping system that check for water levels inside the drive units. The pumps automatically come on every two minutes and check for water levels. If the water level inside the drive unit exceeds a predetermined level, the pumps will remain on, otherwise they will shut off. During prolonged use in water, some water may appear in the drive unit. This is normal and acceptable.

<picture of pump from inside and outside>

This outlet leads from the pump to the exterior of the J5 rover. It is used to remove excess water from the chassis and drive units. No obstructions should be placed in front of or around this area. Obstruction of water flow may result in damage to the internal electrical components and loss of function in the J5 rover.

1.2.3 User Bay

The User Bay provides access to the User Power panel, as well as USB and Ethernet ports, and additional space for stowing user equipment. The electrical panel can be used to power your payloads. The USB3 ports are connected directly to the onboard PC, and the ethernet ports connect to the onboard network switch. To connect a device to the onboard network, it's suggested to give it a static IP in the 192.168.131.x subnet, avoiding IPs in use by the following pre-existing devices:

192.168.1.1	Onboard PC (both ports, br0 network interface).
192.168.1.2	Ethernet-connected MCU.
192.168.1.14	Front-facing LIDAR.
192.168.1.13	Rear-facing LIDAR (optional).

Table 1: Warthog Onboard Network Devices

For more information on electrical integration, please see subsection 4.3 on page 17.

1.2.4 Payload Integration Racks

All payloads should be mounted to the central chassis when traversing through water to prevent rolling. The primary payload of the unit should be placed on the central chassis. If necessary loading can be placed on

the drive units however, payloads should not exceed 50 lbs on each drive unit.

For more information and guidance on mounting payload structures on top of Warthog, please refer to sub-section 4.2 on page 15.

1.3 Technical Specifications

Key specifications of Warthog are shown in Table 2.

External Dimensions (L x W x H)	1.52 x 1.38 x 0.83 m (4.9 x 4.5 x 2.72 ft)
Base Weight	280 kg (551 lbs)
Ground Clearance	254 mm (10 in)
Max Payload	272 kg (600 lbs)
Max Incline	35-45°
Max Speed	18 km/h (11 mph)
Suspension	Geometric Passive Articulation
Drive Configuration	4x4 Skid Steer
Operating Environment	Outdoor
Traction	24" Argo tire (24" Turf tire or 12" wide Quad Track System optional)
Battery Chemistry	AGM sealed lead acid (Li-ion optional)
Capacity	105 Ah at 48 V, expandable to 200 Ah with Li-ion option
Nominal Run Time	Lead acid: 2.5 hrs, Li-ion: 6 hrs
Charge Time	4 Hours approx
User Power	5 V, 12 V Fused (24 V, 48 V optional)
Control Modes	Remote control, computer controlled velocity commands, indoor/outdoor autonomy packages
Feedback	Battery voltage, motor currents, wheel odometry, control system status, temperature, safety status
Communication	Ethernet, USB, Remote Control, Wi-Fi
Drivers and APIs	Packaged with ROS Indigo (includes RViz, Gazebo support), Matlab API available

Table 2: Warthog System Specifications

2 GETTING STARTED

The first step is to power up your Warthog and have some fun driving it around! If you're just opening up the shipping crate, you can unfold the ramp, and remove the ratchet straps which secure Warthog during shipping.

Press the power button on the back of Warthog. Once the body lights are flashing red, clear the two stop buttons (if necessary), and press the blinking red stop reset button. In a moment, the platform should go to solid red lights in back, and solid white in front.

2.1 Futaba Controller

–Instructions on how to operate Warthog with Futaba – Include labeled diagram of Futaba controller.

If you're not seeing any action, check Contact on section 6 to get in touch with support.

2.2 Wireless Access

To get Warthog connected to your local wifi, you must first access the internal computer using a wired connection. Open the User Bay, and connect to one of the the network ports with a standard ethernet cable. Now, set your laptop's ethernet port to a static IP such as 192.168.131.51, and connect via SSH to `administrator@192.168.131.1`. The default password is `clearpath`.

Once connected via wire, execute `connmanctl` to enter the command line interface for Connman, from which you can configure Warthog to either join an existing network, or supply its own standalone access point. An example session to connect to an existing network:

```
connmanctl> enable wifi
connmanctl> scan wifi
connmanctl> services
connmanctl> agent on
connmanctl> connect wifi_123456_123456789123456789_managed_psk
```

After the `connect` line, connman will prompt you for your network's passphrase. Once connected, connman will remember and attempt to reconnect on successive power-ons.

2.3 Remote ROS Connectivity

Now that Warthog is on the wireless network, you can access it via SSH or as a remote ROS master. Note that in the default configuration, the background ROS process running on Warthog launches with the `robot_upstart` package, which is configured to set the `ROS_HOSTNAME` environment variable to the Warthog PC's hostname.

If your network resolves hostnames properly, connecting should be a matter of executing the following two lines in your desktop (or sourcing a script containing these lines):

```
export ROS_MASTER_URI=http://cpr-Warthog:11311 # Your robot's hostname
export ROS_IP=10.25.0.102 # Your computer's wireless IP address
```

If your network doesn't resolve hostnames, you may need to add the following line to your `/etc/hosts` file:

```
10.25.0.101 cpr-Warthog # The robot's wireless IP address.
```

Once you believe everything is set up correctly, try running `rostopic list`, which will verify that your machine can see the robot's ROS master, and `rostopic echo /mcu/status`, which will verify that the robot PC can see your machine in order to stream topics to it.

Please contact Clearpath Support if guidance is required in selecting and executing a remote access strategy. For more general details on how ROS works over TCP with multiple machines, please see:

<http://wiki.ros.org/ROS/Tutorials/MultipleMachines>

For help troubleshooting a multiple machines connectivity issue, see:

<http://wiki.ros.org/ROS/NetworkSetup>

2.4 Visualizing Warthog

To command or observe Warthog from your desktop computer, first set up a basic ROS installation. See the following page for details:

<http://wiki.ros.org/indigo/Installation/Ubuntu>

When your ROS install is set up, install the Warthog desktop packages:

```
sudo apt-get install ros-indigo-Warthog-desktop
```

Once your remote access to Warthog's ROS master is configured (as above), you can launch `rviz`, the standard ROS robot visualization tool:

```
roslaunch Warthog_viz view_robot.launch
```

From within `rviz`, you can use interactive markers to drive Warthog, you can visualize its published localization estimate, and you can visualize any attached sensors which have been added to its robot description XML (URDF).

From your desktop, you can also launch the standard RQT Robot Monitor, which reports the diagnostic output from Warthog's self-monitoring capabilities, as shown in Figure 2:

```
roslaunch rqt_robot_monitor rqt_robot_monitor
```

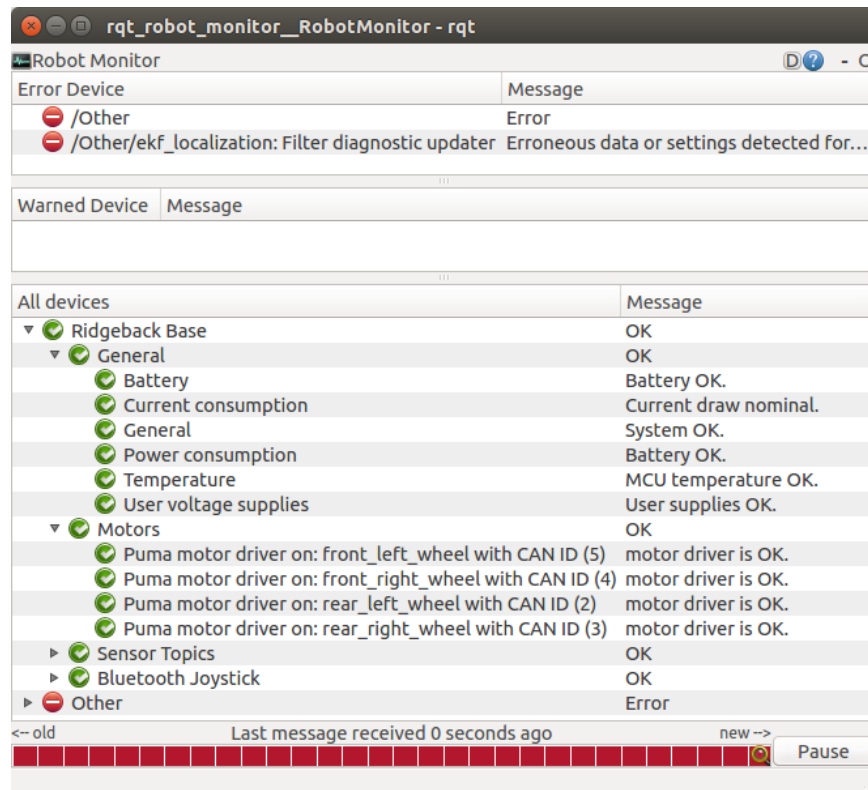


Figure 2: Robot Monitor

3 SAFETY CONSIDERATIONS

Warthog is a powerful, heavy, fast moving robotic platform. Please read the following notices carefully.

3.1 General Warnings

Warthog is a rugged and high-performance vehicle. For the safety of yourself and others, always conduct initial experiments and software development with the vehicle raised off the ground. Place a wooden crate, a set of sawhorses, a sturdy storage tub, or any other solid flat structure having a height greater than 6 inches under Warthog to keep the wheels clear of the ground (“up on blocks”).

When starting out, favor slower wheel speeds. Warthog’s control loops can accurately maintain velocities as low as 0.1 m/s. Operating at such speeds will give you more time to react if things don’t go quite as you expect.

3.2 Maneuverability in Water

Before entering the water it is important to ensure that:

- Bilge pumps are functioning properly
- The side panels and top cover are properly fastened down
- All Access panels are fastened down

Entrance and exit into the water should ideally be performed on a gradual incline to reduce the risk of flipping or taking on water. When entering the water, ensure that the J5 rover is driven in speed level 1. Once the J5 rover has entered the water the vehicle should be placed in speed level 3.

3.3 Pinch Points

When operating the J5 rover it is important to maintain a safe distance away from the unit. The suspension seen in Figure 3-5 has the ability to pivot. Do not place fingers anywhere along the suspension link as it can result in injury.

3.4 Stop Buttons

Two red Stop buttons are located on the back of Warthog. When in Stop mode the Warthog will not drive. The commands received during stop are not buffered; Warthog will always act on the latest commands received. This means that if the commands are stopped before the Stop button is released, the Warthog will not move. If the commands are continued, Warthog will move at the speed commanded once the Stop is released.

Always ensure the Stop button is accessible at all times. Avoid mounting payloads that extend over the rear of Warthog and would occlude the Stop buttons.

3.5 Electrical System

Warthog is powered by two lead-acid (PbSO_4) deep-cycle AGM batteries, similar to the type found in electric wheelchairs, golf carts, and other vehicles. Warthog's battery is capable of delivering 2000W. This gives Warthog's motors their great performance, however, it is also enough power to cause severe bodily harm. Always use caution when operating Warthog to avoid personal injury or property damage. To ensure safety, please observe the following precautions:

- Do not tamper with the battery terminals or wiring.
- Do not tamper with the fuse panel, except to check and change the fuses, and to connect and disconnect the battery plug.
- Always replace fuses with the same type and rating to ensure continued protection against risk of fires.
- Consult Clearpath Robotics support if you need to service the battery pack.
- Do not lay tools or other objects on top of the battery.
- Do not move the robot while charging the battery.
- Charge the battery only with the integrated charger installed by Clearpath Robotics.
- Please dispose of the batteries properly, or return the battery to Clearpath Robotics to do so.

3.6 Lifting and Transport

- Ensure that Warthog's Stop button is engaged when transporting short distances and powered off when transporting longer distances
- Do not push the robot at more than 0.5 m/s (1.6 ft/s) or damage to the motor controls may occur

4 PAYLOAD INTEGRATION GUIDE

If you want to attach custom hardware to Warthog, you will have to take care of mechanical mounting, electrical supply, and software integration. This section aims to equip you with respect to these challenges.

4.1 System Architecture

Like most robotic systems, Warthog has an onboard PC coupled to a custom microcontroller board. The microcontroller board handles IO, system and battery monitoring, and provides an interface to the CAN-controlled motor drivers. See the diagram in Figure 3 for more details.

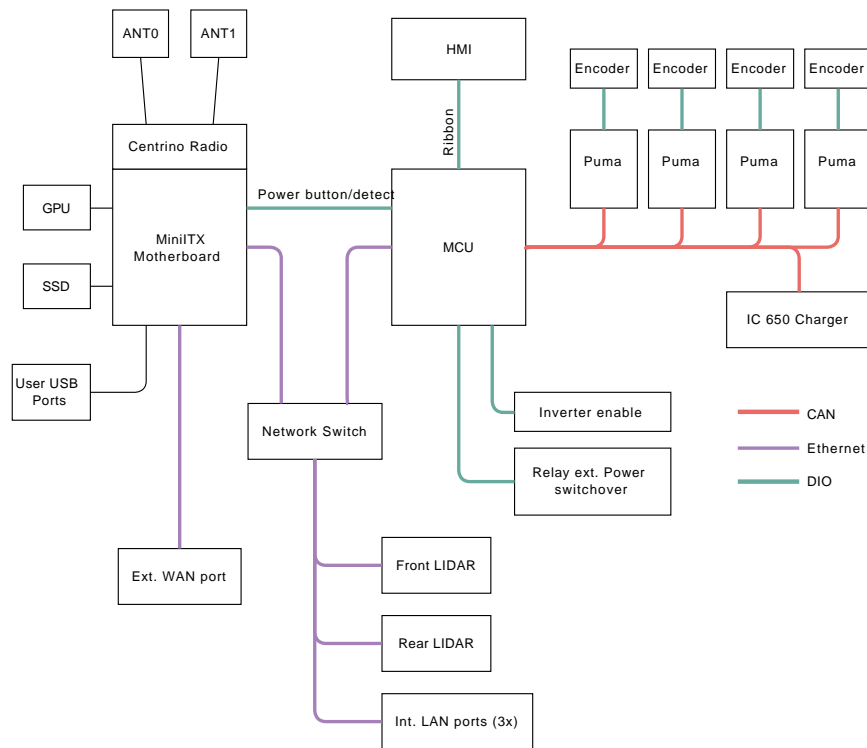


Figure 3: System Architecture

4.2 Mechanical Mounting

The payload integration area can be used to mount external payloads on top of the Warthog.

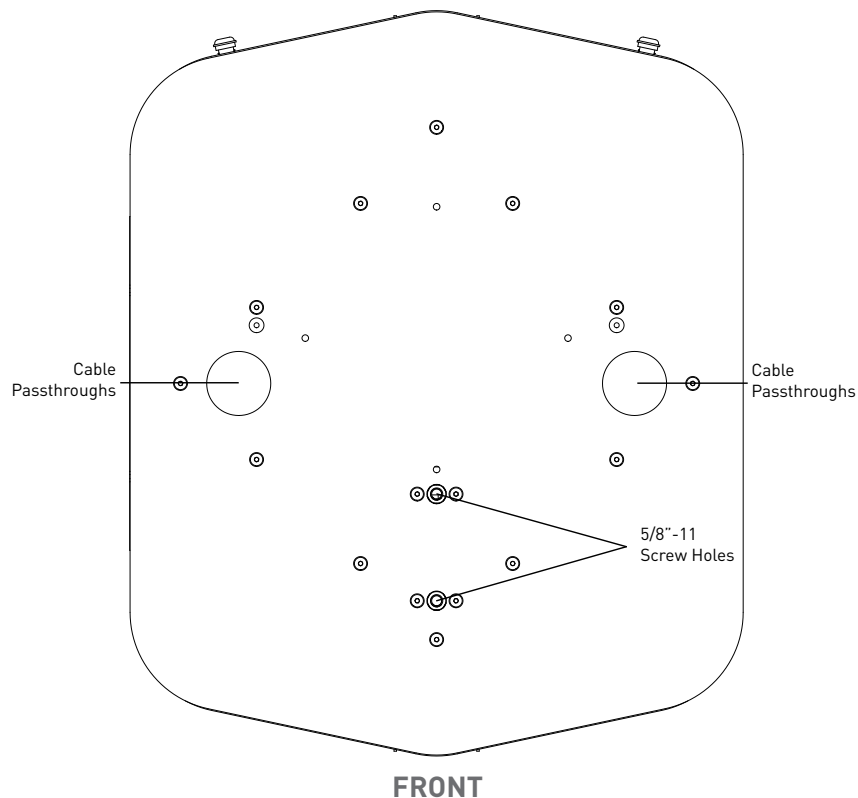


Figure 4: Warthog Payload Integration

4.2.1 Payload Integration Guidelines

- 27.75" is the maximum allowed width of any installed payload (this assumes that the payload is also centered across the width of the rover chassis).
- No part of the payload may extend over the sheet metal housings of the drive units or into the small (2") gaps between the chassis and drive units. Damage to both the rover and the payload WILL result.
- The chassis has a removable access cover measuring 46.25" x 26.25". This access cover is supported underneath by two adjustable cross members. Regardless of payload, it is imperative that both cross members remain installed (approximately evenly spaced) to provide required support to the access cover. Consider that any payload installed above the top deck will prevent access to the chassis through the access cover, without first removing the installed payload.

- The rotation of the suspension differential link in the horizontal plane will allow the payload to extend beyond the chassis top deck in both fore and aft locations. The amount of this payload extension (overhang) is dependent on several factors, including the weight and method of attachment of the payload as well as the terrain in which the rover will operate. Ensure that the amount of overhanging payload allows the rover to operate safely and doesn't contact the terrain, especially when crossing steep and/or deep gullies.
- The available internal chassis volume is approximately 17.5" long x 26" wide x 9.5" high. This space is located at the center of the chassis between two battery packs. Consider that anything placed inside the chassis **MUST** be secured as to not move or shift during rover operation. Any payload secured inside the chassis must also be insulated from coming into contact with the battery wiring and terminals.

Permanent damage resulting from custom modifications to the mounting plate is not covered under warranty and may not be supported by Clearpath Support. Please contact our support team if you require assistance or have any questions relating to custom modifications.

4.3 Electrical Integration

The three white Molex user power receptacles located in the User Bay are capable of supplying 5Vdc, 12Vdc, and unregulated battery voltage (approximately 24Vdc) for powering Warthog's payloads. See Figure 5 for an labeled illustration and the pin assignments. The total draw permitted on each rail is 5A. The mating connector for these Molex Mini Fit Jr (tm) receptacles is 39-01-2040, available on Digikey as M3701-ND. Ensure you select contact appropriate for the gauge of wire used.

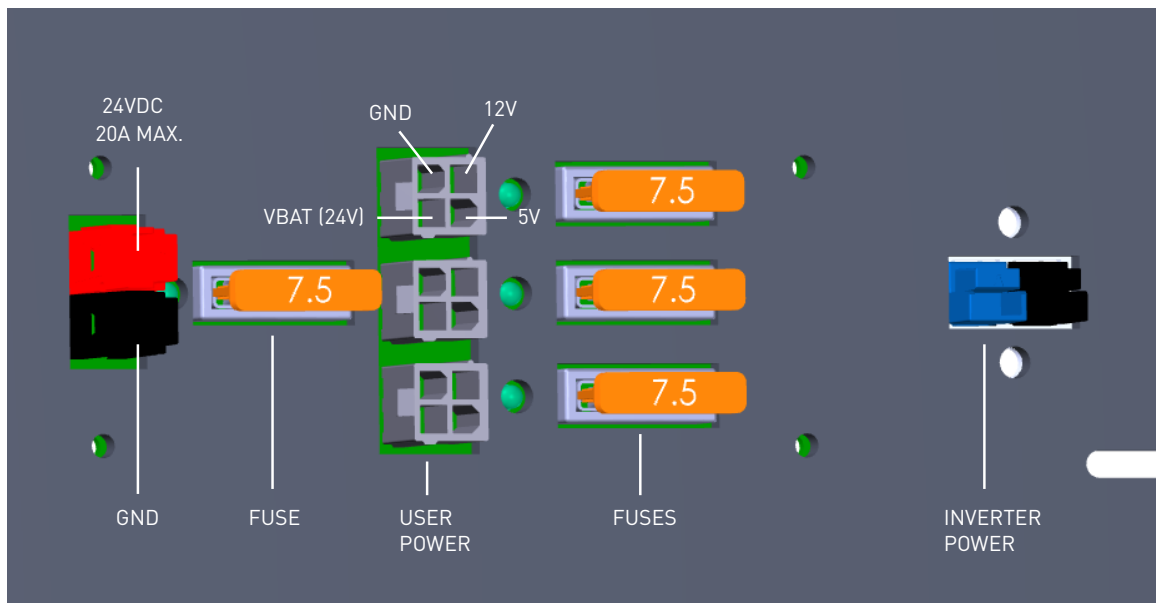


Figure 5: Warthog Power User Panel

The single red and black Anderson connector pair provides unregulated battery voltage (approximately 24Vdc) at up to 20-amps peak. The mating parts are Anderson PP45 Power Pole (tm) 1327 (red housing), 1327G6 (black housing) and 261G2-LPBK (contacts.) These components are readily available at <http://mouser.com>.

The rails on the User Bay Power board are protected against short circuit by fuses. See the illustration for the fuse locations and purposes.

Risk of Fire

For continued protection against risk of fire, always replace fuses only with those of the same type and rating.

Unregulated Rail

The unregulated battery output may range from as low as 20Vdc up to 30Vdc or more depending on the state of charge of the battery pack and the electrical loading on the system. Ensure any accessories connected to that rail are able to deal with unregulated battery voltages.

4.4 Software Integration

ROS has a large ecosystem of sensor drivers, some of which include pre-made URDF description and even simulation configurations. Please see the following page on the ROS wiki for a partial list:

<http://wiki.ros.org/Sensors>

For the best experience, consider purchasing supported accessories from Clearpath Robotics for your Warthog, which will include simulation, visualization, and driver support. However, we will happily help you get started with integrating your own devices as well.

5 MAINTENANCE

5.1 Battery & Charging

5.1.1 General

Warthog contains 48V lead-acid or lithium-ion battery packs. Each battery pack typically consists of four 12V leadacid or lithium-ion batteries.

Battery configuration may vary with each unit. Only batteries of the same type, capacity, brand and model should be added in parallel to the system. In order to maximize performance it is important to ensure that the battery level across each set of lead-acid or lithium-ion batteries is within 0.1-0.2V of each other. If the battery packs exceed this tolerance, it is advised to charge them to within tolerance before wiring these packs in parallel. The overall battery life will vary depending upon the usage of the unit.

Always exercise caution and observe the following safety practices connecting, disconnecting or handling batteries:

- Batteries are high voltage, high current
- Battery packs must be properly fastened down to ensure they do not move when the Warthog is in operation.
- Ensure that the battery packs are evenly distributed throughout the Warthog to maximize stability.
- Battery levels on the unit should be checked on a regular basis. It is important to maintain the battery voltage at a suitable level for proper operation.
- When additional battery packs are added to the system it is important to connect the positive terminal first to the main power of the Warthog before connecting ground.
- When installing additional battery packs, disconnect the ground on all battery packs presently in the unit before connecting the positive terminal of the new battery packs.

5.1.2 Long-term Storage

When storing Warthog for long periods of time, its important to properly maintain the batteries to fully maximize their life. Consider one of the following two procedures when placing Warthog in long-term storage:

- Fully charge Warthog, turn it off and put it into storage. Once a week, connect power to the charger and allow the charger to top up the battery for an hour or so.
- Fully charge Warthog, turn it off and put it into storage, but leave the charger connected and powered the entire time Warthog is in storage. The charger will monitor the battery and will automatically charge it up as needed.

Please contact Clearpath Robotics for additional information about Warthog's battery pack.

6 CONTACT

Clearpath is committed to your success with Warthog. Please get in touch with us and we'll do our best to get you rolling again quickly: support@clearpathrobotics.com.

To get in touch with a salesperson regarding Warthog or other Clearpath Robotics products, please email sales@clearpathrobotics.com.

If you have an issue that is specifically about ROS and is something which may be of interest to the broader community, consider asking it on answers.ros.org. If you don't get a satisfactory response, please ping us and include a link to your question as posted there. If appropriate, we'll answer in the ROS Answers context for the benefit of the community.