



With the 3DStar PGM, both jumpers are on position 1.
No extra components are needed.

To use a standard 3.3V Arduino programmer, put both jumpers to position 2 and
populate C1, C2, D1 and R1.

TITLE: ESP-07-12 Adpt		REV: 1.1
	Company: 3DStar.ro	Sheet: 1/1
	Date: 2020-05-15 Drawn By: cctweaker	