



SEAMICRO™

Quick Start Guide

This Guide is designed for first-time system bring-up.
Before you begin, define the following:

1. Internal server subnet (one subnet, /22 recommended). IP: _____ /22
2. Inband IP address and gateway (same subnet as #2). IP: _____ /22 GW: _____
3. IP address of PXE server. _____
4. **Required:** an OS distribution is required in order to boot the servers via PXE.

Connect to DB-9

BAUD: 9600
Data bits: 8
Stop bits: 1
Parity: None

Login

login: admin
password: seamicro

Config Level

enable
config

Inband Interface

int inband
ip address <ip-address/mask>
ip default-gateway <ip-address>
allow ssh

Required: place inband IP in same subnet as internal servers.

Gigabit Interfaces

int gig <slot/port>
no shut
exit

PXE Server
Setup*

Power On Servers

power-on servers all

Save

write mem

Storage Configuration

storage provision

DHCP
Setup*

Connect to Server Console

server console connect <server-number>
To disconnect: Ctrl+I followed by "quit"

Connect
to
Server

YES

NO

Seamicro Application Guide

www.seamicro.com/support

* PXE server and DHCP setup for RedHat Enterprise/CentOS on back.