



# **MT7681 IoT Wi-Fi Firmware Programming Guide**

Version: 1.0

Release date: 2014-8-8

© 2014 MediaTek Inc.

This document contains information that is proprietary to MediaTek Inc.

Unauthorized reproduction or disclosure of this information in whole or in part is strictly prohibited.

Specifications are subject to change without notice.

# Revision History

Date	Revision	Author	Description
01.03.2014	First v0.01	Jinchuan	Initial draft for MT7681 IoT Firmware Programming Guide.
01.16.2014	v0.02	Jiayi	Update Flash Layout and Flash API Update Folder Structure
01.24.2014	v0.03	Jinchuan	Update Flash Layout and Flash API: spi_flash_write() Add Section: AT Command Usage
03.22.2014	v0.04	Jinchuan Jerry	Add FIRMWARE boot UP flow Add Customer Hook Function Add Flash settings Load/Storage Add Timer APIs Modify Interface APIs Modify Flash Partitions
04.15.2014	v0.05	Jinchuan Jerry	Modify File Structure Modify GPIO Interface Description and GPIO/Pin Mode Set Modify Flash Partitions Add New PWM API Add Customer UART-TO-WIFI Function Add Customer Hook Function for Smart Connection
05.16.2014	v0.07	Jinchuan	Add IoT_gpio_read() Add IoT_Cust_Set_GPIINT_MODE(); IoT_Cust_Get_GPIINT_MODE(); IoT_Cust_GPIINT_Hdlr() Add GetMsTimer() Add Security API Update Firmware Boot Up Flow Update Customer Hook Function Update File Structure Update IoT_led_pwm(): led_num range in soft pwm mode Delete ATCmd about TCP/UDP
05.30.2014	v0.08	Jinchuan	Add APIs for Rxfilter control Add Set channel API Add Rx Packet API: STARxDoneInterruptHandle Add Tx Packet API: mt76xx_dev_send Add APIs for MD5: RT_MD5() ...
07.09.2014	v0.09	Jinchuan	Add Wifi State Machine Flow chart Update Rxfilter API's Notes Update IoT_Cmd_Set_Channel API's channel range Update ATCmd Channel Switch: AT#Channel -b0 -c6 Add AT cmd for Smart Connection entry: AT#Smnt Add spi_flash_write_func() description Update spi_flash_write () description and Add design flow Add HW Timer1 Interrupt Function
8.8.2014	V1.0	Jinchuan	Update Rx Filter Description Correct API name as: RT_AES_Decrypt, RT_AES_Encrypt

			Add Sample code descript for AES ECB/CBC Decrypt/Encrypt Add IoT_send_udp_directly() API to send udp packet Add AsicSetChannel() API Add SPI Cmd table in the section of “Flash Driver”
--	--	--	--

## Contents

1	Introduction.....	5
1.1	Flow Chart Symbols .....	5
1.2	Keywords .....	5
2	SW Structure .....	6
2.1	Flow chart .....	6
3	File Structure .....	6
4	FIRMWARE boot UP flow .....	7
5	Wifi Connection State Machine Flow .....	7
6	Customer Hook Function.....	8
7	Customer UART-TO-WIFI Function.....	9
8	Flash settings Load/Storage .....	10
9	AT Command .....	13
9.1	Flow chart: .....	13
9.2	Function Description.....	13
9.3	How to add a new AT command.....	14
10	Data Command.....	14
10.1	Flow chart: .....	14
10.2	Function Description.....	15
10.3	How to add a new Data command .....	15
11	WIFI MAC APIS.....	16
11.1	Rx Filter Control .....	16
11.2	MAC Control .....	16


12	Security APIs.....	18
13	Timer APIs.....	20
13.1	SW Timer APIs.....	20
13.2	HW timer1 interrupt function.....	21
14	Interfae APIs.....	21
14.1	Flash Driver.....	21
14.2	UART.....	23
14.3	LED / PWM.....	24
14.4	GPIO.....	25
14.5	GPIO/Pin Mode Set.....	27
15	Flash Partitions.....	28
16	Compiler Setup.....	30
17	AT Command Usage.....	31
17.1	Display version.....	31
17.2	Reboot the system.....	31
17.3	Set Default.....	31
17.4	Switch channel.....	31
17.5	Configure UART interface.....	31
17.6	Update Firmware from Uart.....	31
17.7	Enter into Smart Connection State.....	31
17.8	Enter into Deep sleep mode.....	32

## 1 INTRODUCTION

The 7681 IoT Wi-Fi structure could be divided into two layers (HW layer, Firmware Layer);

This document aims to help the programmers understand the 7681 Wi-Fi Firmware architecture and how to do the customization, such as AT command or Data command

### 1.1 Flow Chart Symbols

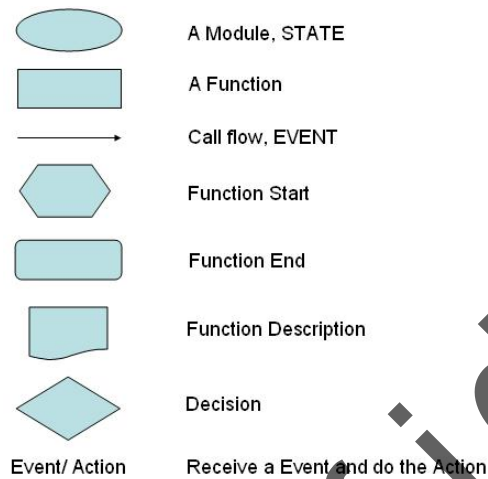


### 1.2 Keywords

BBP: Base Band Processor  
SEC: Security Engine  
PBF: Packet Buffer  
PDMA: Programmable Direct Memory Access  
FCE: Frame Control Engine

## 2 SW STRUCTURE

### 2.1 Flow chart

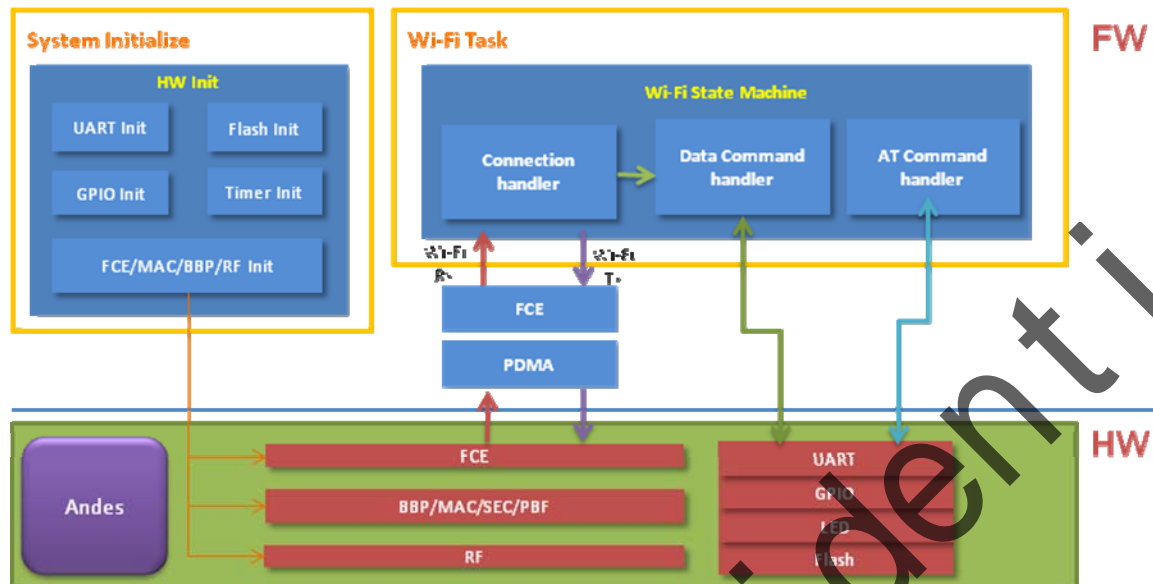

HW init: initialize the HW registers to enable HW interfaces and Wi-Fi function

Wi-Fi State machine: a single loop to control Wi-Fi Tx, Rx, and process the Data command, AT command

Data Command handler: handle the Data command which received from Wi-Fi


AT Command handler: handle the AT command which received from UART

## 3 FILE STRUCTURE

IoT_MT7681_PKG	
cust	
tcpip	
iot_at_cmd.c	\cust\main_pub.c , Main entry
iot_at_cmd_tcpip.c	\cust\wifi_task_pub.c , Wifi Task Function
iot_at_cmd_utility.c	\cust\rtmp_data_pub.c , Rx Handler
iot_custom.c	\cust\iot_customer.c , The Initial Hook and setting load/storage
iot_custom_uart2wifi.c	\cust\iot_at_cmd.c , handle the AT command which received from UART
iot_parse.c	\cust\iot_at_cmd_utility.c , the common api for AT command usage
iot_parse_conn_mgmt.c	\cust\iot_parse.c , handle the Data command which received from Wi-Fi
iot_uart_rb.c	\cust\tcpip\*.c , the source code and sample code for TCP UDP
main_pub.c	
rtmp_data_pub.c	
wifi_task_pub.c	
mak	
MT7681	\mak\MT7681\ , store the configuration for compiler or linker
compiler.mk	\mak\MT7681\flags_sta.mk , store the macros for all station mode source code
flags_ap.mk	\mak\MT7681\flags_ap.mk , store the macros for all AP mode source code
flags_recovery.mk	\out\ , store the files which created by compiler
flags_sta.mk	\out\build.log , the compiling log
obj	\out\MT7681.bin , the target binary file
out	
refbin	
src	
include	\src\include , the header files
flash_merge.sh	libandessta.a , library for MT7681 Station Mode
header.sh	libandesap.a , library for MT7681 AP Mode
libandesap.a	
libandesrecovery.a	
libandessta.a	
Makefile	
MT7681_all.bin	MT7681_all.bin , The Image for FW upgrade by Flash writer (include Loader.bin, EEPROM.bin, RecoveryFW.bin, StationFW.bin, APFW.bin)

## 4 FIRMWARE BOOT UP FLOW

Power On

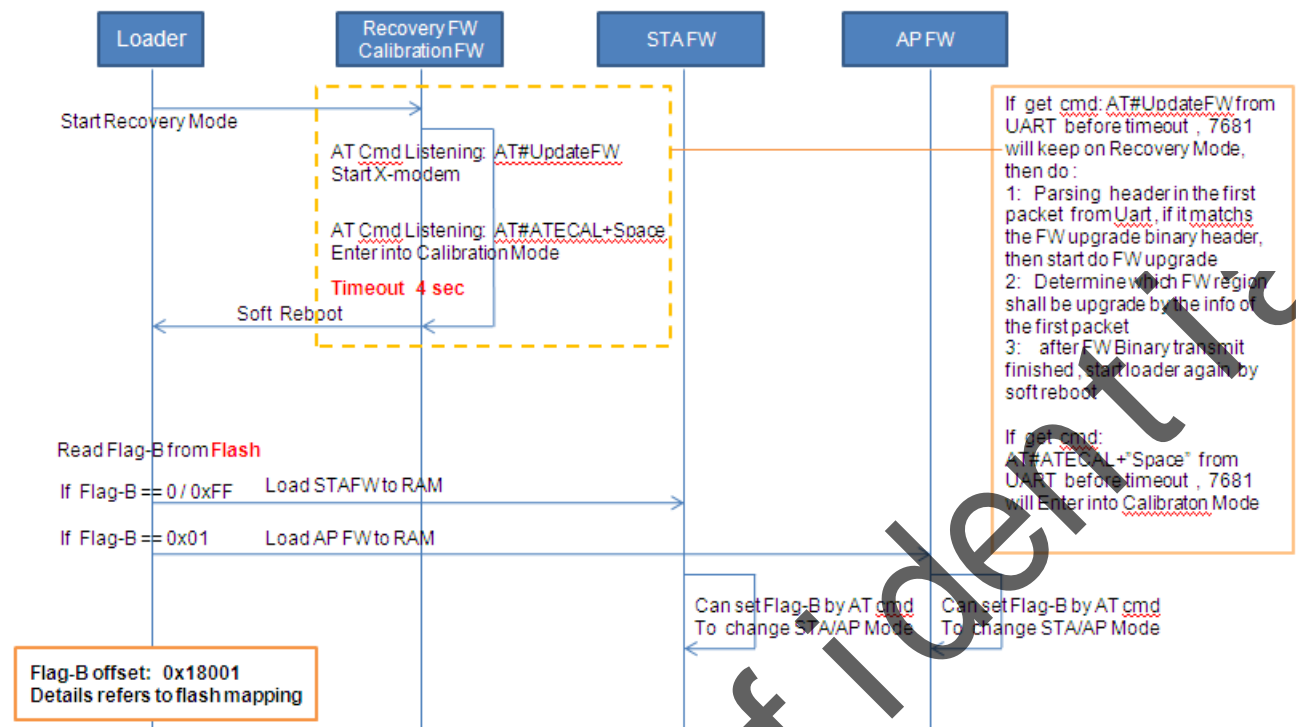

The Boot up flow is: Loader → Recovery Mode → Loader → STA/AP FW


## 5 WIFI CONNECTION STATE MACHINE FLOW

STA Mode v1.40:

- \* When Scan, Auth, Assoc, 4Way, DHCP fail, not back to smart connection state
- \* Smart Connection state is only triggered by following methods:
  - 1: There is no valid content in Flash Sta Config region
  - 2: 7681 receive AT Cmd: AT#Smnt

Customer maybe change this process, to make smnt state can be entered with other method by control ATSetSmnt flag

# WIFI SM

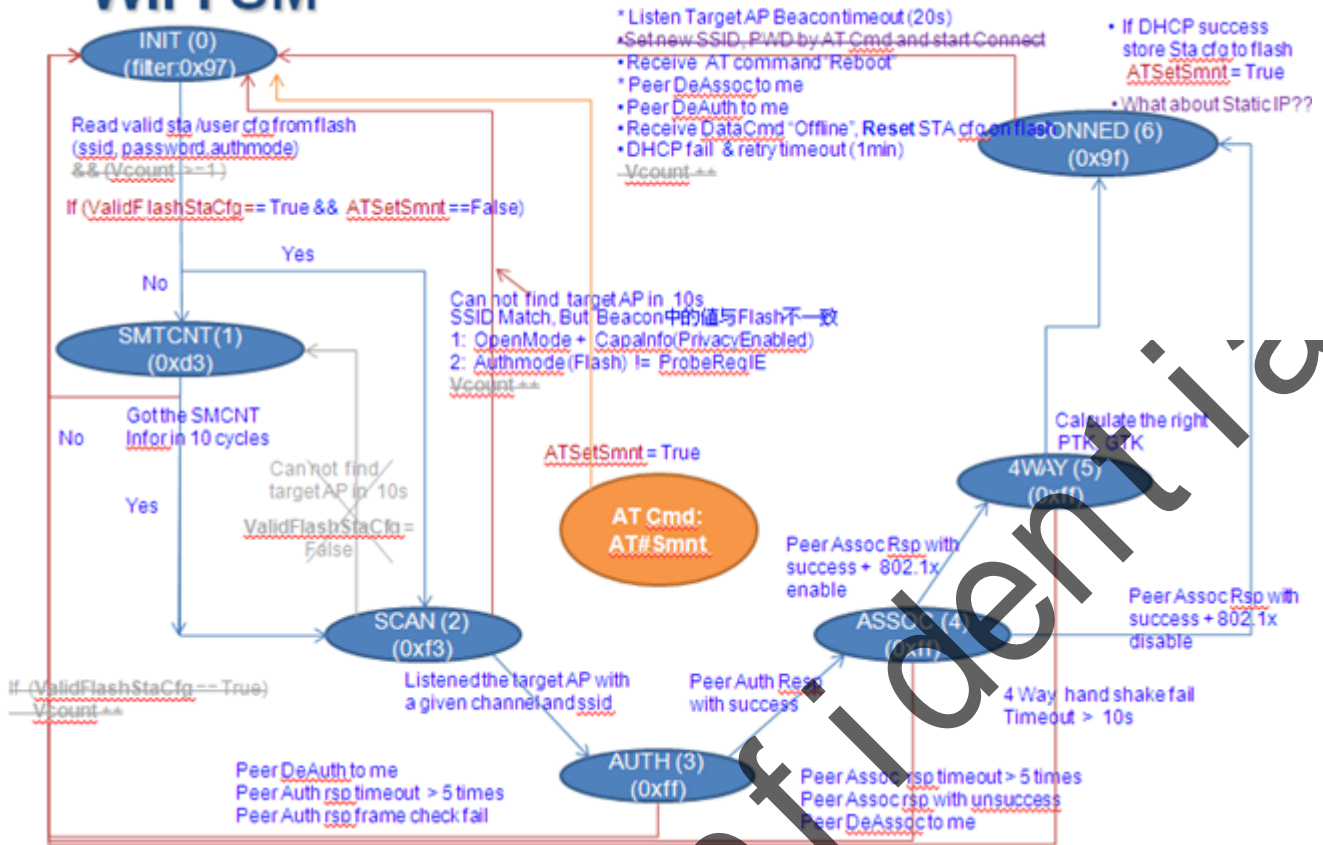

## 6 CUSTOMER HOOK FUNCTION

lot\_customer.c

```

VOID IoT_Cust_Ops (VOID)
{
    IoTCustOp.IoTCustPreInit = Pre_init_cfg; /*The callback in system Boot state, do not print msg as Uart is not ready*/
    IoTCustOp.IoTCustInit = IoT_Cust_Init; /*The callback in system initial state*/

    /*The callback for each of Wifi State Machine,
    It is not suggested to do the heavy process here, It is OK if only set GPIO status*/
    IoTCustOp.IoTCustWifiSMInit = NULL;
    IoTCustOp.IoTCustWifiSMStm = IoT_Cust_SM_Smnt;
    IoTCustOp.IoTCustWifiSMConnect = NULL;
    IoTCustOp.IoTCustWifiRxHandler = IoT_Cust_Rx_Handler;


    /*Callback function while do wifi_state_chg(WIFI_STATE_SMNT, 0);*/
    IoTCustOp.IoTCustSMNTStaChgInit = IoT_Cust_SMNT_Sta_Chg_Init;

    /*The callback in the wifi main task, it shall be called every cycle of the wifi main task*/
    /*we set the ATcommandHandler here to receive Uart Data and process AT command */
    IoTCustOp.IoTCustSubTask1 = IoT_Cust_Sub_Task;
}
    
```

IoT\_Cust\_Ops() is used to register callback function, which could be called by Wifi main function


When and where this callback function will be used, please see next picture for the details



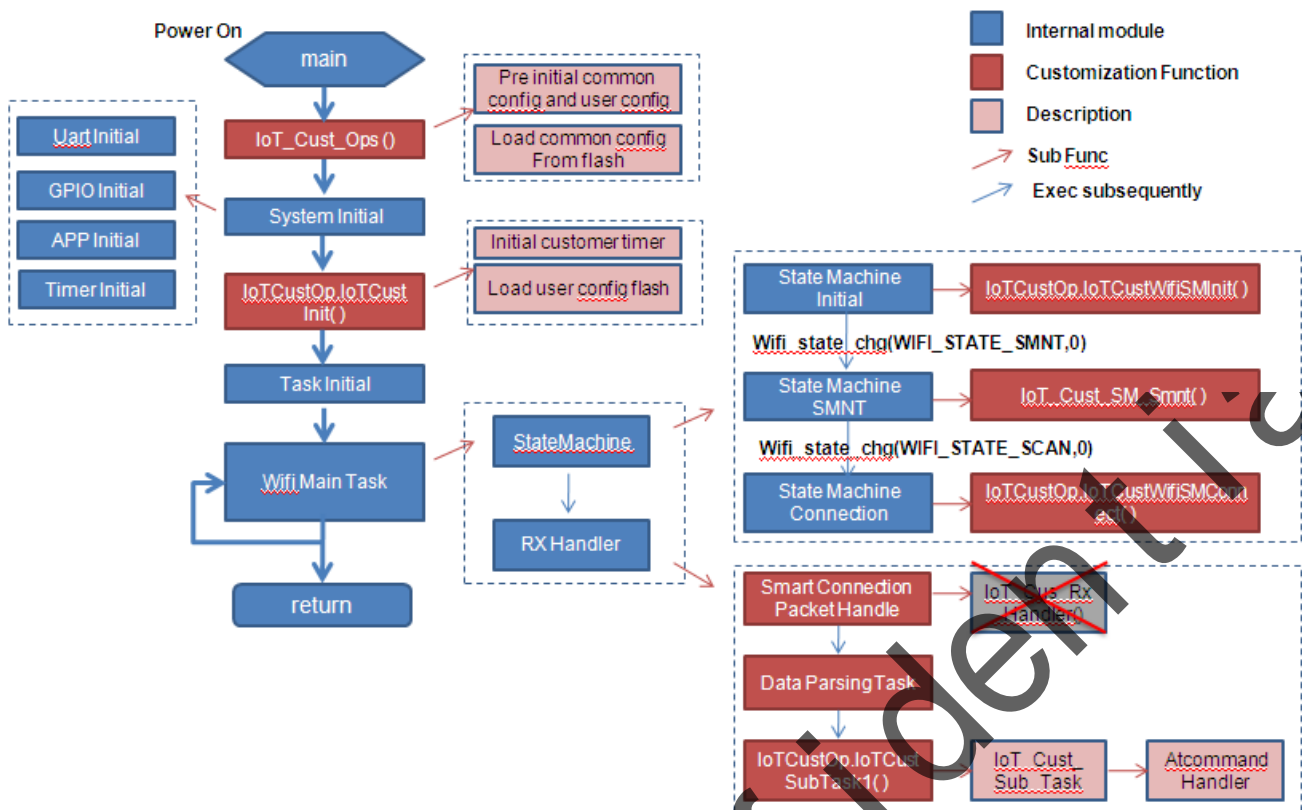

## 7 CUSTOMER UART-TO-WIFI FUNCTION

lot\_customer\_uart2wifi.c

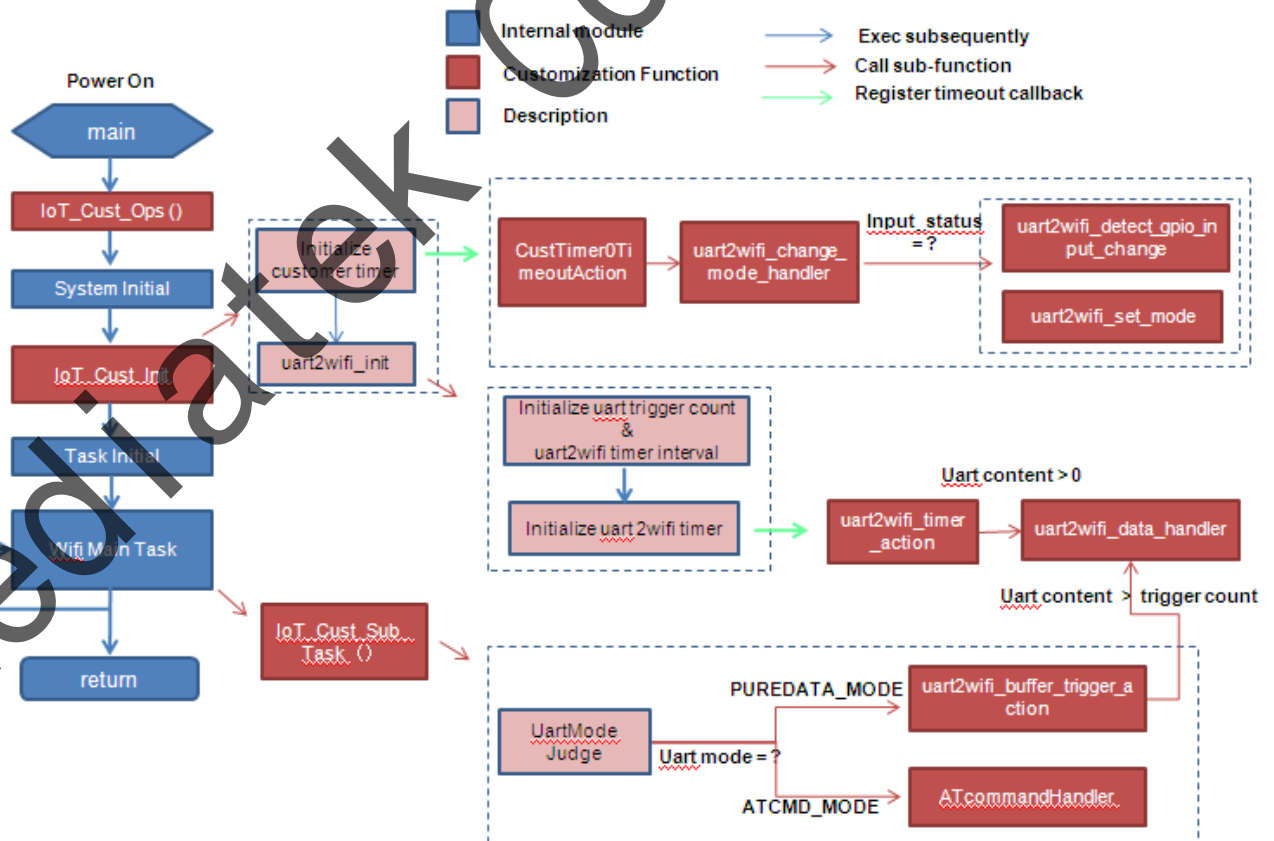

### **IoT\_Cust\_uart2wifi\_data\_handler() :**

It is the key function for uart-to-wifi transmission.

It is the bridge between uart module and TCP/IP module of WiFi.

In the sample code, uip\_send() is called to send data from uart to wifi.

### **IoT\_Cust\_uart2wifi\_init() :**

You can use it to configure uart-to-wifi timer interval and uart trigger count.

In the sample code, every 300 ms , or when the uart rx content is larger than 10,

a uart-to-wifi transmission judgment will be triggered.

### **IoT\_Cust\_uart2wifi\_detect\_gpio\_input\_change () :**

You can use it to define your own input status change.

In the sample code, when the input of gpio2 is high, uart rx is switched to pure data mode;

otherwise, it is switched to AT cmd mode.

### **Note:**

Uart-to-wifi function collides with data parser uart rx function,

so you must set DATAPARSING\_UARTRX\_SUPPORT to 0 first.

When and where these functions will be used, please see next picture for the details

## **8 FLASH SETTINGS LOAD/STORAGE**

lot\_customer.c

The default settings on User/Common config block of the flash , if there is no content or the content is invalid, system shall used these default settings , the detail implementation is on the lot\_customer.c

```

00046: /*Default setting of User Config Block*/
00047: #define DEFAULT_VENDOR_NEME "Mediatek"
00048: #define DEFAULT_PRODUCT_TYPE "IoT 1"
00049: #define DEFAULT_PRODUCT_NAME "MT7681"
00050:
00051:
00052: /*Default setting of Common Config Block*/
00053: #define DEFAULT_BOOT_FW_IDX 0 /*1: BootFromAP, other: BootFromSTA*/
00054: #define DEFAULT_RECOVERY_MODE_STATUS 0 /*not used*/
00055: #define DEFAULT_IO_MODE 0 /*not used*/
00056:
00057: #define DEFAULT_UART_BAUDRATE UART_BAUD_115200
00058: #define DEFAULT_UART_DATA_BITS len_8
00059: #define DEFAULT_UART_PARITY pa_none
00060: #define DEFAULT_UART_STOP_BITS sb_1
00061:
00062: #define DEFAULT_TCP_UDP_CS 1 /*0: UDP, 1:TCP (Default 3*Client, 1*Server is Open)*/
00063: #define DEFAULT_IOT_TCP_SRV_PORT 7681 /*The IoT Server TCP Port in the internet*/
00064: #define DEFAULT_LOCAL_TCP_SRV_PORT 7681 /*The TCP Port if 7681 as a TCP server*/
00065: #define DEFAULT_IOT_UDP_SRV_PORT 7681 /*The IoT Server UDP Port in the internet*/
00066: #define DEFAULT_LOCAL_UDP_SRV_PORT 7681 /*The UDP Port if 7681 as a UDP server*/
00067:
00068: #define DEFAULT_USE_DHCP 1 /*0: Static IP, 1:Dynamic IP*/
00069: #define DEFAULT_STATIC_IP {192,168,0,99}
00070: #define DEFAULT_SUBNET_MASK_IP {255,255,255,0}
00071: #define DEFAULT_DNS_IP {192,168,0,1}
00072: #define DEFAULT_GATEWAY_IP {192,168,0,1}
00073: #define DEFAULT_IOT_SERVER_IP {182,148,123,91}
00074:
00075: #define DEFAULT_IOT_CMD_PWD {0xFF,0xFF,0xFF,0xFF}

```

There are two structures: IOT\_COM\_CFG, IOT\_USR\_CFG

**IOT\_COM\_CFG:** Please **do not** modify this structure, because the Wi-Fi main task/ TCP IP will use this structure for module initialization or operation

**IOT\_USR\_CFG:** Can be customized, because only `iot_parser.c`, `iot_custom.c` will use this structure

Notice: Both of above two structures are mapping with Flash Layout, and the settings load/reset is optimized for code size slim by macro "FLASH\_STRUCT\_MAPPING 1" with this condition.

If the structure is not mapping with Flash Layout, "FLASH\_STRUCT\_MAPPING" should be set as 0

```

00171: typedef struct GNU_PACKED _IOT_COMMON_CFG_ {
00172:     UINT8    BootFWIdx;
00173:     UINT8    RecovModeStatus;
00174:     UINT8    IOMode;
00175:
00176:     UINT32    UART_Baudrate;
00177:     UINT8    UART_DataBits;
00178:     UINT8    UART_Parity;
00179:     UINT8    UART_StopBits;
00180:
00181:     UINT8    TCPUDP_CS;
00182:     UINT16    IoT_TCP_Srv_Port;
00183:     UINT16    Local_TCP_Srv_Port;
00184:     UINT16    IoT_UDP_Srv_Port;
00185:     UINT16    Local_UDP_Srv_Port;
00186:
00187:     UINT8    Use_DHCP;
00188:     UINT8    STATIC_IP[MAC_IP_LEN];
00189:     UINT8    SubnetMask_IP[MAC_IP_LEN];
00190:     UINT8    DNS_IP[MAC_IP_LEN];
00191:     UINT8    GateWay_IP[MAC_IP_LEN];
00192:     UINT8    IoT_ServeIP[MAC_IP_LEN];
00193:     //UINT8 IoT_ServeDomain[MAC_DOMAIN_NAME_LEN];
00194:
00195:     UINT8    CmdPWD[PASSWORD_MAX_LEN];
00196: } ? end _IOT_COMMON_CFG_ ? IOT_COM_CFG;
00197:
00198: |
00199: typedef struct GNU_PACKED _IOT_USER_CFG_ {
00200:     UCHAR VendorName[FLASH_USR_CFG_VENDOR_NAME_LEN];
00201:     UCHAR ProductType[FLASH_USR_CFG_PRODUCT_TYPE_LEN];
00202:     UCHAR ProductName[FLASH_USR_CFG_PRODUCT_NAME_LEN];
00203: } IOT_USR_CFG;
00204:
00205:
00206: typedef struct _IOT_ADAPTER {
00207:     IOT_COM_CFG    ComCfg;
00208:     IOT_USR_CFG    UsrCfg;
00209:     UINT8          flash_rw_buf[RAM_RW_BUF_SIZE];
00210:
00211: } IOT_ADAPTER;

```

**Example A:** Modify IOT Server IP to {172.133.125.12}

Method1: Change #define DEFAULT\_IOT\_SERVER\_IP {182.148.129.91} to {172.133.125.12}

Method2: not modify DEFAULT\_IOT\_SERVER\_IP, but use FLASH API to write the new value to related position of the FLASH, thus, while MT7681 reboot or power on again, the new settings on flash will be load

**Example B:** Add a Uart2Wifi Length parameter to User Config Block

Step1: add new macro in flash\_mapping.h to indicate Uart2Wifi position on the flash,


Step2: Add new member on IOT\_USR\_CFG structure

Step3: Add a default value macro, just like: #define DEFAULT\_IOT\_SERVER\_IP {182.148.129.91}

Step4: Add load/reset implementation for Uart2Wifi on load\_usr\_cfg(), rest\_usr\_cfg()

## 9 AT COMMAND

### 9.1 Flow chart:

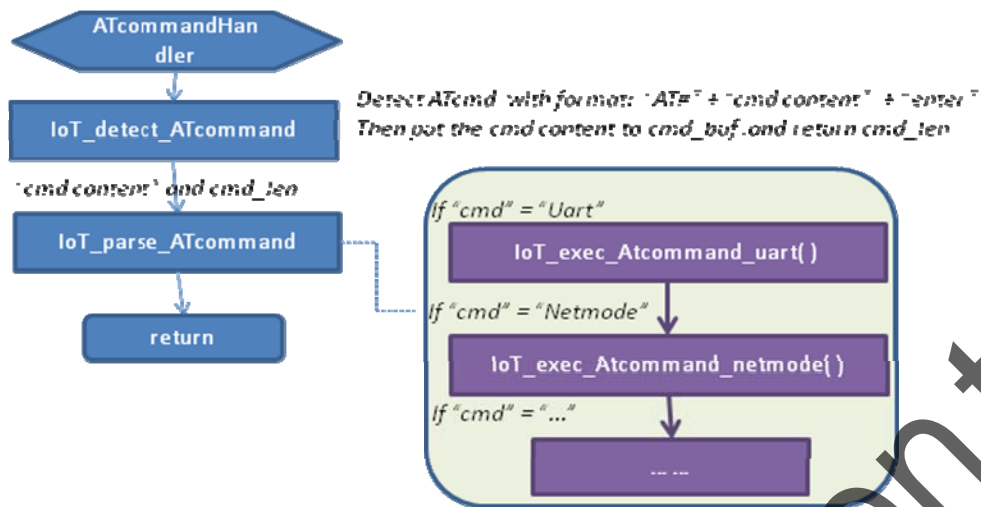

### 9.2 Function Description

- **INT32 IoT\_parse\_ATcommand (PUCHAR cmd\_buf, INT32 at\_cmd\_len);**

Description: This function parses AT command from the Uart port. It classifies the commands and call respective functions to parse the commands.

Parameters:

[IN]: cmd\_buf ---- Pointer to AT command buffer

[IN]: at\_cmd\_len ---- Length of the AT command.

Return Values: Return negative if error occurs. Return zero, otherwise.

Remarks: The command header "AT#" is removed before entering this function.

- **INT32 IoT\_exec\_Atcommand\_uart (PUCHAR cmd\_buf, INT32 at\_cmd\_len)**

Description: This function parses uart AT command.

Parameters:

[IN]: cmd\_buf ---- Pointer to uart AT command buffer

[IN]: at\_cmd\_len ---- Length of the uart AT command.

Return Value : Return negative if error occurs. Return zero, otherwise.

Remark : None.

- **INT32 IoT\_exec\_Atcommand\_netmode (PUCHAR cmd\_buf, INT32 at\_cmd\_len)**

Description: This function parses netmode AT command.

Parameters:

[IN]: cmd\_buf ---- Pointer to netmode AT command buffer

[IN]: at\_cmd\_len ---- Length of the netmode AT command.

Return Value : Return negative if error occurs. Return zero, otherwise.

Remark: None.

### 9.3 How to add a new AT command

- 1) Add a new else/if branch for the new AT command type in the function `IoT_parse_ATcommand`.

```
INT32 IoT_parse_ATcommand(PUCHAR cmd_buf, INT32 at_cmd_len)
{
    INT32 ret_code = 0;

    cmd_buf[at_cmd_len] = '\0';
    DBGPRINT(RT_DEBUG_INFO, ("AT command %s \n", cmd_buf));


    if(!memcmp(cmd_buf, "Uart", strlen("Uart")))
    {
        ret_code = IoT_exec_ATcommand_uart(cmd_buf, at_cmd_len);
    }
    else if(!memcmp(cmd_buf, "Netmode", strlen("Netmode")))
    {
        ret_code = IoT_exec_ATcommand_netmode(cmd_buf, at_cmd_len);
    }
    else if(*****)
    {
        ret_code = *****/**Add new type here */+
    }

    return ret_code;
} ? end IoT_parse_ATcommand ?
```

- 2) Add a new parsing function for the new type. `IoT_exec_ATcommand_netmode` can be a template.

## 10 DATA COMMAND

### 10.1 Flow chart:

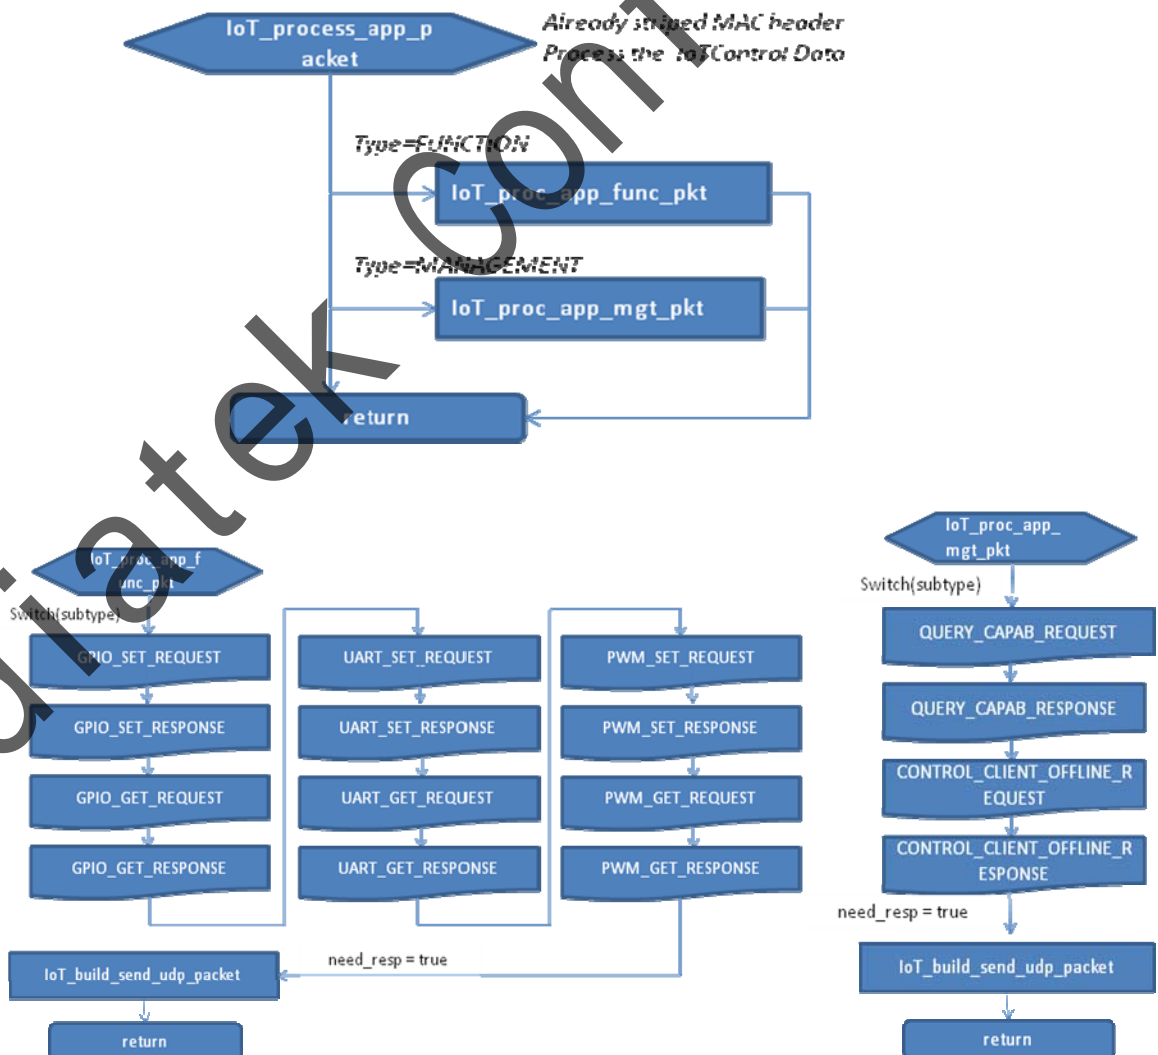

## 10.2 Function Description

- **INT32 IoT\_proc\_app\_packet(CHAR sock\_num, PCHAR packet , UINT16 rawpacketlength);**

Description: This function parses control protocol packet in the application layer.

It removes protocol header and call respective functions to parse the data header and data content.

Parameters

[OUT]: sock\_num ---- socket number of the current TCP/UDP transmission  
[OUT]: packet ---- Pointer to protocol header  
[OUT]: rawpacketlength ---- Length of the packet

Return Value: Return zero.

Remark: sock\_num is used to distinguish different TCP/UDP transmission

- **INT32 IoT\_proc\_app\_func\_pkt (DataHeader\* DataHeader, UINT16 FuncType, IoTPacketInfo \*PacketInfo);**

Description: This function parses control protocol packet of the function type.

Parameters

[OUT]: DataHeader ---- Pointer to data header  
[OUT]: FuncType ---- the function command type  
[OUT]: PacketInfo ---- packet information that is used when sending the response.

Return Value: Return zero.

Remark: None.

- **INT32 IoT\_proc\_app\_mgt\_pkt(DataHeader\* Dataheader, UINT16 MgtType, IoTPacketInfo \*PacketInfo);**

Description: This function parses control protocol packet of the management type.

Parameters

[OUT]: Dataheader ---- Pointer to data header  
[OUT]: MgtType ---- the management command type  
[OUT]: PacketInfo ---- packet information that is used when sending the response.

Return Value: Return zero.

Remark: None.

## 10.3 How to add a new Data command

### 1. function related command

- 1) Add new command in the structure t\_FunctionCommand.
- 2) Add a new select/case branch in the function IoT\_proc\_app\_func\_pkt

### 2. management related command

- 1) Add new command in the structure t\_ManagementCommand.
- 2) Add a new select/case branch in the function IoT\_proc\_app\_mgt\_pkt

### 3. command of other class

- 1) Add new type in the structure t\_CommandType.
- 2) Add new parsing function for the new type. IoT\_proc\_app\_func\_pkt can be a template.

3) Add a new type and its parsing function in the function `IoT_proc_app_pkt`

## 11 WIFI MAC APIS

### 11.1 Rx Filter Control

- **UINT16 IoT\_Get\_RxFilter(VOID)**

Description: Get Rx filter about frame receive

Parameters None

Return value: Rx filter value, the definition of the setting as blow table

Bits	Type	Name	Description	Initial value
15	R/W	DROP_BAR	Drop BAR	0
14	R/W	DROP_BA	Drop BA	1
13	R/W	DROP_PSPOLL	Drop PS-Poll	0
12	R/W	DROP_RTS	Drop RTS	1
11	R/W	DROP_CTS	Drop CTS	1
10	R/W	DROP_ACK	Drop ACK	1
9	R/W	DROP_CFEND	Drop CF-END	1
8	R/W	DROP_CFAK	Drop CF-END + CF-ACK	1
7	R/W	DROP_DUPL	Drop duplicated frame	1
6	R/W	DROP_BC	Drop broadcast frame	0
5	R/W	DROP_MC	Drop multicast frame	0
4	R/W	DROP_VER_ERR	Drop 802.11 version error frame	1
3	R/W	DROP_NOT_MYBSS	Drop frame that is not my BSSID	1
2	R/W	DROP_UC_NOME	Drop not to me unicast frame	1
1	R/W	DROP_PHY_ERR	Drop physical error frame	1
0	R/W	DROP_CRC_ERR	Drop CRC error frame	1

Note: 1: enable, 0: disable.

- **UINT16 IoT\_Set\_RxFilter(UINT16 Value)**

Description: Set Rx filter about frame receive

Parameters

[IN]: Value ---- The Rx Filter value , the settings refers to above table

Return value: the value actually write to RxFilter, it should same as Input Parameter

Notes: when bit5=1, both BC/MC packet shall be dropped, even if bit6=0.

Notes: Rx Filter shall be reset to 0x7f97 when Wifi State Change by function `wifi_state_chg()`

### 11.2 MAC Control

- **IoT\_Cmd\_Set\_Channel (UINT8 Channel)**

Description: switch Current Channel

Parameters

[IN]: Channel ---- The new channel shall be switched to, Channel Range [1~14]

Return value: None

- **INT AsicSetChannel (UCHAR ch, UCHAR bw, UCHAR ext\_ch)**

Description: switch Current Channel, bandwidth and channel setting

Parameters

[IN]: ch , Channel number, ---- [1~14] if 'bw' is BW\_40, 'ch' is Center channel

[IN]: bw , Bandwidth ---- [BW\_20, BW40]



[IN]: ext\_ch, 11n bandwidth setting ---- [EXTCHA\_NONE, EXTCHA\_ABOVE, EXTCHA\_BELOW]

Return value: 0

Remark:

if 'bw'=BW\_20, 'ext\_ch' should be EXTCHA\_NONE or EXTCHA\_ABOVE, these two options have the same effect for BW\_20.

if 'bw'=BW\_20, 'ext\_ch' should not be EXTCHA\_BELOW

**Example:**

AsicSetChannel (8, BW\_40, EXTCHA\_ABOVE)

It means: 7681 will change to Center channel 8, and bandwidth 40 with 40MHz above mode

In this case, **primary channel is 6**

If your want to scan all primary channels [1~13] in 802.11n mode, it is possible to start scan with the below inputs

AsicSetChannel (n, BW\_40, EXTCHA\_ABOVE) ---- n = [3~11]

AsicSetChannel (m, BW\_40, EXTCHA\_BELOW) ---- m = [8~11]

Parameter 3---ext\_ch for BW40

Parameter 1-----ch

Primary channel	20 MHz	40 MHz above		40 MHz below		
	Blocks	2nd ch.	Center	Blocks	2nd ch.	Center
1	1 - 3	5	3	1 - 7	Not Available	
2	1 - 4	6	4	1 - 8	Not Available	
3	1 - 5	7	5	1 - 9	Not Available	
4	2 - 6	8	6	2 - 10	Not Available	
5	3 - 7	9	7	3 - 11	1	3
6	4 - 8	10	8	4 - 12	2	4
7	5 - 9	11	9	5 - 13	3	5
8	6 - 10	12	10	6 - 13	4	6
9	7 - 11	13	11	7 - 13	5	7
10	8 - 12	Not Available		6	8	4 - 12
11	9 - 13	Not Available		7	9	5 - 13
12	10 - 13	Not Available		8	10	6 - 13
13	11 - 13	Not Available		9	11	7 - 13

- INT rtmp\_bbp\_set\_bw(UINT8 bw)

Description: switch Current Bandwidth

Parameters

[IN]: bw ---- The new bandwidth shall be switched to, bandwidth Range [0:BW20, 1:BW40]

Return value: Always TRUE

- **BOOLEAN STARxDoneInterruptHandle (pBD\_t pBufDesc)**

Description: Wifi MAC Rx packet handler

Parameters

[IN]: pBufDesc ---- The received Rx descriptor, include Rx MAC content and Rx Info

Return value: FALSE if the Rx packet is invalid, TRUE if the Rx packet is valid

- **VOID mt76xx\_dev\_send(void)**

Description: Send uip Tx packet

Parameters None

Return value: None

Notes: This function will copy data from "uip\_buf" to Tx Descriptor and send it to wireless

- **INT32 IoT\_send\_udp\_directly(uip\_ipaddr\_t \*DstAddr,**

PUCHAR DstMAC,

UINT16 SrcPort,

UINT16 DstPort,

PUCHAR pPayload

UINT16 PayloadLen)

Description: This function is used to send packet with UDP format directly

Parameters

[IN]: DstAddr ---- The pointer of destination IP address

[IN]: DstMAC ---- The pointer of destination MAC address

[IN]: SrcPort ---- The udp port of source

[IN]: DstPort ---- The udp port of destination

[IN]: pPayload ---- The pointer of payload which shall be send to destination

[IN]: PayloadLen ---- The length of payload which shall be send to destination

Return value: 0=successful, 1=input parameter is invalid 2=allocate free queue buffer fail

## 12 SECURITY APIS

- **VOID RT\_AES\_Decrypt(UINT8 CipherBlock[], UINT CipherBlockSize, UINT8 Key[],  
UINT KeyLen, UINT8 PlainBlock[], UINT \*PlainBlockSize);**

Description: This function is used to decrypt data with AES algorithm

Parameters

[IN]: CipherBlock[] ---- The block of cipher text, 16Bytes(128bit) each block

[IN]: CipherBlockSize ---- The length of block of cipher text in bytes

[IN]: Key[] ---- Cipher key , it maybe 16,24 or 32bytes

[IN]: KeyLen ---- The length cipher key in bytes

[IN]: PlanBlockSize ---- The length of allocated plain block in bytes

[OUT]: PlanBlock[] ---- Plain block to store plain text

[OUT]: PlanBlockSize ---- The length of real used plain block in bytes

Return value: None

- **VOID RT\_AES\_Encrypt(UINT8 PlainBlock[], UINT \*PlainBlockSize, UINT8 Key[],**

**UINT KeyLen,      UINT8 CipherBlock[],      UINT CipherBlockSize);**

Description: This function is used to Decrypt data with **AES** algorithm

Parameters

[IN]: PlanBlock[]      ---- The block of Plain text, 16bytes(128bit) each block  
 [IN]: PlanBlockSize    ---- The length of block of plain text in bytes  
 [IN]: Key[]            ---- Cipher key , it maybe 16,24 or 32bytes  
 [IN]: KeyLen           ---- The length cipher key in bytes  
 [IN]: CipherBlockSize   ---- The length of allocated cipher block in bytes

[OUT]: CipherBlock[]    ---- cipher text  
 [OUT]: CipherBlockSize   ---- The length of real used cipher block in bytes

Return value: None

**RT\_AES\_Decrypt()**, **RT\_AES\_Encrypt()** are only **16 Bytes** input **16 Bytes** output for PlainBlock and CipherBlock  
 There are some sample codes in `iot_aes_pub.c` , the entry of AES ECB,CBC sample code is **AES\_Sample()**

- **INT32 RtmpPasswordHash(PSTRING password,    PUCHAR ssid,    INT32 ssid\_len    PUCHAR output);**

Description: This function is used to calculate the PMK

Parameters

[IN]: password            ---- ASCLL string up to 63 characters in length  
 [IN]: ssid                ---- octect string up to 32 octects  
 [IN]: ssid\_len            ---- length of ssid in octects  
 [OUT]: output            ---- must be 40 octects in length and 0~32octects(256bits) is the key

Return value: None

- **VOID \_\_romtext RT\_MD5 ( const UINT8 Message[],    UINT MessageLen,    UINT8 DigestMessage[])**

Description: MD5 algorithm

Parameters

[IN]: message            ---- Message context  
 [IN]: messageLen        ---- The length of message in bytes  
 [OUT]: digestMessage    ---- Digest message

Return Value: None

```
VOID __romtext RT_MD5 (
const UINT8 Message[],
UINT MessageLen,
UINT8 DigestMessage[])
{
    MD5_CTX_STRUC md5_ctx;
    Md5ZeroMemory(&md5_ctx, sizeof(MD5_CTX_STRUC));
    RT_MD5_Init(&md5_ctx);
    RT_MD5_Append(&md5_ctx, Message, MessageLen);
    RT_MD5_End(&md5_ctx, DigestMessage);
} /* End of RT_MD5 */

#define MD5_BLOCK_SIZE    64 /* 512 bits = 64 bytes */
#define MD5_DIGEST_SIZE   16 /* 128 bits = 16 bytes */
typedef struct {
    UINT32 HashValue[4];
    UINT64 MessageLen;
    UINT8 Block[MD5_BLOCK_SIZE];
    UINT BlockLen;
} MD5_CTX_STRUC, *PMD5_CTX_STRUC;
```

- **VOID \_\_romtext RT\_MD5\_Init (MD5\_CTX\_STRUC \*pMD5\_CTX)**

Description: Initial Md5\_CTX\_STRUC

Parameters

[IN]: pMD5\_CTX            Pointer to Md5\_CTX\_STRUC

Return Value: None

- **VOID \_\_romtext RT\_MD5\_Append (MD5\_CTX\_STRUC \*pMD5\_CTX, const UINT8 Message[], UINT MessageLen)**

Description: The message is appended to block. If block size > 64 bytes, the MD5\_Hash will be called.

Parameters:

pMD5_CTX	Pointer to MD5_CTX_STRUC
Message	Message context
MessageLen	The length of message in bytes

Return Value: None

- **VOID \_\_romtext RT\_MD5\_End (MD5\_CTX\_STRUC \*pMD5\_CTX, UINT8 DigestMessage[])**

Description:

1. Append bit 1 to end of the message
2. Append the length of message in rightmost 64 bits
3. Transform the Hash Value to digest message

Parameters

[IN] pMD5_CTX	Pointer to MD5_CTX_STRUC
[OUT] digestMessage	Digest message

Return Value: None

## 13 TIMER APIS

### 13.1 SW Timer APIs.

- **VOID cnmTimerInitTimer( IN P\_TIMER\_T prTimer, IN PFN\_MGMT\_TIMEOUT\_FUNC pfFunc, IN UINT\_32 u4Data IN UINT\_32 u4Data2)**

Description: This function is used to initialize a timer

Parameters

[IN]: prTimer	---- Pointer to a timer structure
[IN]: pfFunc	---- Pointer to the call back function
[IN]: u4Data	---- parameter for call back function
[IN]: u4Data2	---- parameter for call back function

Return value: None

- **VOID cnmTimerStartTimer (IN P\_TIMER\_T prTimer, IN UINT\_32 u4TimeoutMs)**

Description: This function is used to start a timer

Parameters

[IN]: prTimer	---- Pointer to a timer structure
[IN]: u4TimeoutMs	---- Timeout to issue the timer and callback function (unit:ms)

Return value: None

- **VOID cnmTimerStopTimer(IN P\_TIMER\_T prTimer)**

Description: This function is used to stop a timer

Parameters

[IN]: prTimer ---- Pointer to a timer structure

Return value: None

There is a example on IoT\_customer.c

- **UINT32 GetMsTimer(VOID)**

Description: Get the time from system start (Unit: 1ms)


Parameters

Return value: the counter value

## 13.2 HW timer1 interrupt function

The Frequency for hardware timer 1 interrupt, Range [1~10]

#define TICK\_HZ\_HWTIMER1 10 /\*T = 1/TICK\_HZ\_HWTIMER1\*/

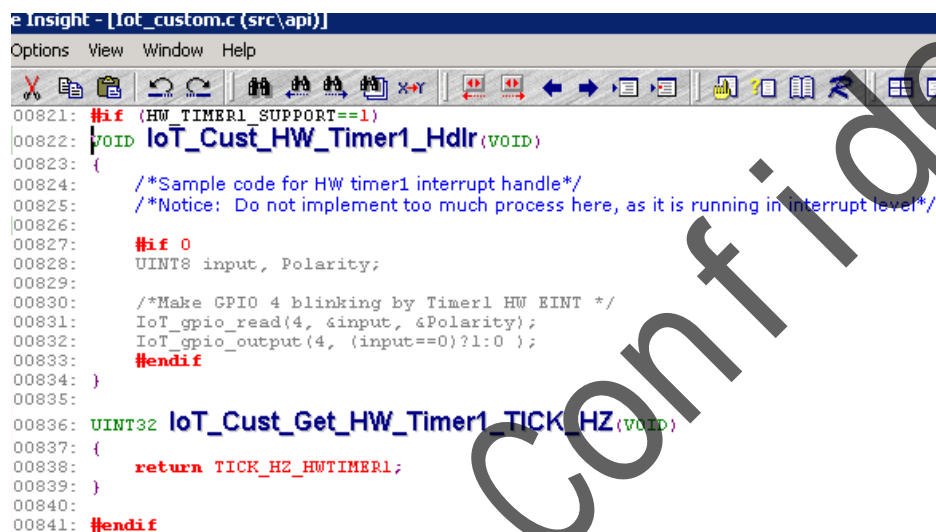

```
00821: #if (HW_TIMER1_SUPPORT==1)
00822: VOID IoT_Cust_HW_Timer1_Hdlr(VOID)
00823: {
00824:     /*Sample code for HW timer1 interrupt handle*/
00825:     /*Notice: Do not implement too much process here, as it is running in interrupt level*/
00826:
00827:     #if 0
00828:     UINT8 input, Polarity;
00829:
00830:     /*Make GPIO 4 blinking by Timer1 HW EINT */
00831:     IoT_gpio_read(4, &input, &Polarity);
00832:     IoT_gpio_output(4, (input==0)?1:0 );
00833:     #endif
00834: }
00835:
00836: UINT32 IoT_Cust_Get_HW_Timer1_TICK_HZ(VOID)
00837: {
00838:     return TICK_HZ_HWTIMER1;
00839: }
00840:
00841: #endif
```

Above example: IoT\_Cust\_HW\_Timer1\_Hdlr will be triggered every 100ms (That is T=1/10)

## 14 INTERFAE APIS

### 14.1 Flash Driver

- **void spi\_flash\_erase\_SE(uint32 address)**

Description: This function is used to erase the sector in which the address specifies.

Parameters

[IN]: addr ---- the address in flash to be erased

Return value: None

- **void spi\_flash\_erase\_BE(uint32 address)**

Description: This function is used to erase the block in which the address specifies.

Parameters

[IN]: addr ---- the address in flash to be erased

Return value: None

Note:

1. Due to the characteristic of flash, erase the sector/block where data is to be written is mandatory before write anything to flash.
2. The size of sector/block of one flash is different. Please check the datasheet of using flash.

3. above two APIs will erase a sector or a block, please consider if there are some data should not be erased in one sector/block before using those two APIs

- **int32 spi\_flash\_read(uint32 addr, uint8 \*data, uint16 len)**

Description: This function is used to read specified data from flash

Parameters

[IN]: addr ---- The offset which the reading data stored on the flash

[IN]: len ---- The data length need to read

[OUT]: data ---- The pointer indicate the reading data

Return value: 0 means successful, non-zero means fail

- **int32 spi\_flash\_read\_m2(uint32 addr, uint8 \*data, uint16 len)**

Description: This function is used to read specified data from flash with SPI command method

The function has the same effect with spi\_flash\_read()

- **int32 spi\_flash\_write\_func(uint32 addr, uint8 \*data, uint16 len)**

Description: This function is used to write specified data to flash

Parameters

[IN]: addr ---- The offset which the data will be write on the flash

[IN]: len ---- The data length need to write

[IN]: data ---- The pointer indicate the writing data

Return value: 0 means successful, non-zero means fail

**Notes:** This API will write data to flash offset "addr" directly,

If the flash sector which the "addr" belongs to is not be erased first, This API will write data to flash unsuccessful

- **int32 spi\_flash\_write(uint32 addr, uint8 \*data, uint16 len)**

Description: This function is used to write specified data to flash

Parameters

[IN]: addr ---- The offset which the data will be write on the flash

[IN]: len ---- The data length need to write

[IN]: data ---- The pointer indicate the writing data

Return value: 0 means successful, non-zero means fail


**Notes:** As the RAM limitation, the len must <= FLASH\_OFFSET\_WRITE\_BUF (4KB)

This API will **erase Sector first** then → store original data → merge the modified data → write back to sector

Thus, 1: if you want to write some data to flash, please do not call spi\_flash\_erase\_SE() or spi\_flash\_erase\_BE() to erase flash again, but just call spi\_flash\_write().

2: As this API will erase sector, thus, need avoid calling this API with High Frequency

## spi\_flash\_write()

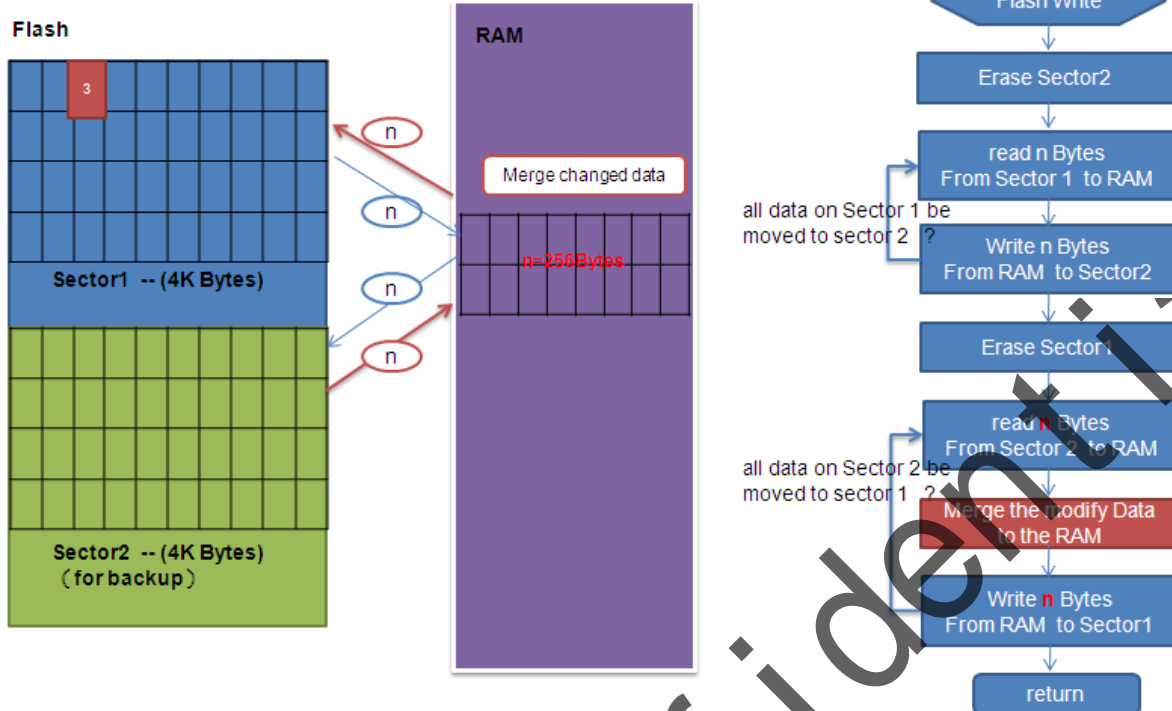

### SPI Command description

Type	Offset	Bits	Type	Description	Initial value
PUB_SPICMD_WR_BYTE	0x0000	[31:8]	-	Reserved	-
		[7:0]	WO	Write 1 byte on SPI.	8'b0
PUB_SPICMD_WR_LAST_BYTE	0x0004	[31:8]	-	Reserved	-
		[7:0]	WO	Write the last byte on SPI.	8'b0
PUB_SPICMD_RD_BYTE	0x0018	[31:1]	-	Reserved	
		0	WO	Read 1 byte on SPI.	1'b0
PUB_SPICMD_RD_LAST_BYTE	0x001C	[31:1]	-	Reserved	
		0	WO	Read the last byte on SPI.	1'b0

### 14.2 UART

- **INT32 IoT\_uart\_input(UINT\_8 \*msg, INT32 count);**

Description: This function reads a given length of data from the uart port.

Parameters

[IN] : msg ---- Pointer to a uart rx buffer

[OUT] : count ---- Length of data to read

Return Value: Return zero.

Remark: None.

- **INT32 IoT\_uart\_output(UINT\_8 \*msg, INT32 count);**

Description: This function writes a given length of data to the uart port.

Parameters

[OUT] : msg ---- Pointer to a uart tx buffer

[OUT] : count ---- Length of data to write

Return Value: Return zero.

Remark: None.

### 14.3 LED / PWM

- **INT32 IoT\_led\_pwm (INT32 led\_num, INT32 brightness);**

Description: This function configures the brightness of a led.

Parameters

[OUT] : led\_num ---- In hardware pwm mode, led\_num is led controller number, range (1~ 3)..

[Ex: Led\_num=1, use Pin26 as Led/PWM

Led\_num=2, use pin31 as Led/PWM

Led\_num=3, use pin30 as Led/PWM ]

In software pwm mode, led\_num is gpio number , range (0~ 4).

[Ex: Led\_num=0, use Pin31 as Led/PWM

Led\_num=1, use pin30 as Led/PWM

Led\_num=2, use pin29 as Led/PWM

Led\_num=3, use pin28 as Led/PWM

Led\_num=4, use pin27 as Led/PWM ]

[OUT] : brightness --- Brightness level of led.

In hardware pwm mode, range (0 ~ 5)

In software pwm mode, range (0 ~ 20)

Return Value: Return -1 if led\_num is invalid. Return 0, otherwise.

Remark

1) Two pwm mode is supported.

If IOT\_PWM\_TYPE==1, hardware pwm mode is used.

If IOT\_PWM\_TYPE==2(default type), software pwm mode is used.

2) Level 0 is off. Level 5 is the brightest in hardware pwm mode.

Level 0 is off. Level 20 is the brightest in software pwm mode.

3) Software pwm mode consumes more CPU resources.

However, it has high frequency and more brightness levels.

4) In Hardware PWM mode,

if you want to cancel PWM mode for pin26, 31, 30 and set them as GPIO mode

need call **IoT\_gpio\_output(5, 0), IoT\_gpio\_output(0, 0), IoT\_gpio\_output(1, 0)**

The pin and GPIO relationship, please refer to section: "GPIO/Pin Mode Set"

- **VOID IoT\_software\_pwm\_addset (INT32 led\_num, INT32 brightness)**

Description: This function configures a gpio pin to software pwm mode and set the brightness level.

It absolute same as **IoT\_led\_pwm()** in soft PWM mode

Parameters

[OUT] : led\_num ---- Specify the gpio number which is to be configured to software pwm mode.

Should be ranged from 0 to 4

[OUT] : brightness --- Brightness level of led.

Available only In software pwm mode, should be ranged from 0 to 20.

Return Value: Return -1 if led\_num is invalid. Return 0, otherwise.

Remark

1) This API is available. only if software pwm mode is used

2) Level 0 is off. Level 20 is the brightest in software pwm mode.



- **INT32 IoT\_software\_pwm\_del (INT32 led\_num)**

Description: This function changes a gpio pin from software pwm mode back to gpio mode

Parameters

[OUT] : led\_num ---- Specify the gpio number which is to be changed. Should be ranged from 0 to 4

Return Value: Return -1 if led\_num is invalid. Return 0, otherwise.

Remark

1) This API is available. only if software pwm mode is used

#### 14.4 GPIO

- **INT32 IoT\_gpio\_read (INT32 gpio\_num, UINT8 \*pVal, UINT8 \*pPolarity);**

Description: This function set the GPIO as input mode, and read it's input value

Parameters

[IN]: gpio\_num ---- Specify the gpio number. Should be ranged from 0 to 6

[OUT]: pPolarity ---- read the gpio polarity, 0=Output Mode, 1=Input Mode

[OUT]: pVal ---- read the gpio status, 0=low, 1=High

Return Value: none

Remarks:

The GPIO/Pin Mode Set please refer to section: "GPIO/Pin Mode Set"

**We can set one specific GPIO's mode/value at one time with following APIs**

- **INT32 IoT\_gpio\_input(INT32 gpio\_num, INT32 \*input);**

Description: This function set the GPIO as input mode, and read it's input value

Parameters

[IN]: gpio\_num ---- Specify the gpio number. Should be ranged from 0 to 6

[OUT] : input ---- the input status of the given gpio number. 0 is low. 1 is high.

Return Value: Return -1 if gpio\_num is invalid.

Return -2 if input is invalid.

Return zero, Otherwise.

Remarks:

The GPIO/Pin Mode Set please refer to section: "GPIO/Pin Mode Set"

- **INT32 IoT\_gpio\_output(INT32 gpio\_num, INT32 output);**

Description: This function configures the output status of a gpio.

Parameters

[IN]: gpio\_num ---- Specify the gpio number. Should be ranged from 0 to 6

[OUT]: output ---- the output status of the given gpio number. 0 is low. 1 is high.

Return Values: Return -1 if gpio\_num is invalid. Return -2 if output is invalid. Return 0, otherwise.

Remarks:

The GPIO/Pin Mode Set please refer to section: "GPIO/Pin Mode Set"

**We can set several GPIOs mode/value at one time with following APIs**

- **INT32 IoT\_gpio\_batch\_modify\_mode(INT32 output\_bitmap);**

Description: This function configures a batch of gpio pins to output mode

Parameters

[OUT] : output\_bitmap ---- Specify the gpio output mode bitmap.

Bit(i) stands for gpio(i). Should be ranged from 00000B to 11111B

Return Values: Return 0

Remarks:

1. The GPIO/Pin Mode Set please refer to section: "GPIO/Pin Mode Set"
2. If output\_bitmap is 10001B, gpio0 and gpio4 will be set to output mode

Case	bitmap	*	...	*	Pin27	Pin28	Pin29	Pin30	Pin31	Remark
	Paramter	bit 31	bit x	bit 5	GPIO4	GPIO3	GPIO2	GPIO1	GPIO0	
1	output_bitmap	Reseved			1	0	0	0	1	set <b>GPIO0</b> to output mode set <b>GPIO4</b> to output mode set GPIO1,2,3 to Input Mode
2	output_bitmap	Reseved			0	0	1	0	0	set <b>GPIO2</b> to output mode set GPIO0,1,3,4 to Input Mode

### ● INT32 IoT\_gpio\_batch\_modify\_output\_value(INT32 output\_bitmap, INT32 value\_bitmap);

Description: This function configures a batch of gpio pins to output high.

Parameters

[OUT] : output\_bitmap ---- Specify the gpio output mode bitmap.

Bit(i) stands for gpio(i). Should be ranged from 00000B to 11111B.

[OUT]: value\_bitmap ---- Specify the gpio output status bitmap.

Bit(i) stands for gpio(i). Should be ranged from 00000B to 11111B.

Return Values: Return 0

Remarks:

1. The GPIO/Pin Mode Set please refer to section: "GPIO/Pin Mode Set"
2. This function does not change gpio pins to output mode. It modifies the output value only
3. If output\_bitmap is 10001B, and value\_bitmap is 10000B,  
gpio0 will be set to low, and gpio4 will be set to high

Case	bitmap	*	...	*	Pin27	Pin28	Pin29	Pin30	Pin31	Remark
	Paramter	bit 31	bit x	bit 5	GPIO4	GPIO3	GPIO2	GPIO1	GPIO0	
1	output_bitmap	Reseved			1	0	0	0	1	set <b>GPIO0</b> to 0 set <b>GPIO4</b> to 1
	value_bitmap	Reseved			1	0	0	0	0	
2	output_bitmap	Reseved			0	0	1	0	0	set <b>GPIO2</b> to 1
	value_bitmap	Reseved			0	0	1	0	0	

### ● UINT8 IoT\_Cust\_Set\_GPIINT\_MODE(IN UINT8 GPIO\_Num, IN UINT8 Val)

Description: Set GPIO interrupt mode

Parameters

[IN] : GPIO\_Num ---- [0~6].

[IN]: Val ---- [0~4]

- 0: no trigger, 1: falling edge trigger  
2: rising edge trigger 3: both falling and rising edge trigger

Return Values: 0- Success, 1-invalid input

### ● UINT8 IoT\_Cust\_Get\_GPIINT\_MODE(OUT UINT16\* pGPI\_INT\_MODE)

Description: Set GPIO interrupt mode

Parameters

[OUT] : GPI\_STS

[1:0]: GPIO1 Interrupt mode

[3:2]: GPIO0 Interrupt mode

[5:4]: GPIO2 Interrupt mode

[7:6]: GPIO3 Interrupt mode

[9:8]: GPIO4 Interrupt mode

[11:10]: GPIO5 Interrupt mode

[13:12]: GPIO6 Interrupt mode

For each GPIO's interrupt mode

0: no trigger,

1: falling edge trigger

2: rising edge trigger

3: both falling and rising edge trigger

Return Values: None

- **VOID IoT\_Cust\_GPIINT\_Hdlr(IN UINT8 GPI\_STS);**

Description: This Handler shall be called as any GPIO Interrupt be triggered

Parameters

[IN] : GPIO\_Num ---- [0~6]. GPIO0~6 Interrupt status

Return Values: 0- Success, 1-invalid input

## 14.5 GPIO/Pin Mode Set

Current, We use IOT\_PWM\_TYPE=2, The GPIO list as below:

CHIP Pin	IOT_PWM_TYPE		
	0	1 (HW PWM Mode)	2 (SW PWM Mode)
Pin 31	GPIO 0	PWM2	GPIO0 / PWM1
Pin 30	GPIO 1	PWM3	GPIO1 / PWM2
Pin 29	GPIO 2	GPIO 2	GPIO2 / PWM3
Pin 28	GPIO 3	GPIO 3	GPIO3 / PWM4
Pin 27	GPIO 4	GPIO 4	GPIO4 / PWM5
Pin 26	Uart Tx	PWM1 / Uart Tx	Uart Tx
Pin 25	Uart Rx	Uart Rx	Uart Rx
Remark		PWM: 20Hz, Level(0~5) Level 0 =off Level 5= brightest	PWM: 50Hz, Level(0~20) Level 0 =off Level 20= brightest

## 15 FLASH PARTITIONS

Flash Layout						
	Offest	Section	Size (KB)	HEX (Byte)	DEC Offset	
1	0x0000	Loader	20	0x5000	0	Store Loader program
	0x5000	reserved 1	4	0x1000	20480	
2	0x6000	Recovery Mode FW	64	0x10000	24576	Store Recovery Mode program
	0x16000	reserved 2	4	0x1000	90112	
3	0x17000	EEPROM	4	0x1000	94208	Store Calibration Settings
	0x18000	Common config	4	0x1000	98304	
	0x19000	Station Mode Config	4	0x1000	102400	
	0x1A000	AP Mode Config	4	0x1000	106496	
	0x1B000	User Config	4	0x1000	110592	
	0x1C000	reserved 3	12	0x3000	114688	
4	0x1F000	STA Mode FW	64	0x10000	126976	Store Station Mode Program
	0x2F000	reserved 4	4	0x1000	192512	
	0x30000	STA Mode-XIP FW	60	0xF000	196608	
	0x3F000	STA Mode-OVL FW	60	0xF000	258048	
	0x4E000	reserved 5	4	0x1000	319488	
6	0x4F000	AP Mode FW	64	0x10000	323584	Store AP Mode Program
	0x5F000	reserved 6	4	0x1000	389120	
	0x60000	AP Mode-XIP FW	60	0xF000	393216	
	0x6F000	AP Mode-OVL FW	60	0xF000	454656	
	0x7E000	reserved 7	4	0x1000	516096	
	0x7F000	Flash Write Buffer	4	0x1000	520192	Flash Write时的Data中转， 以减少RAM BufSize
	0x80000	reserved 8	0	0x0	524288	

Common Config (0x11000)			
Offset	Section	Size (Byte)	DEC Offset
0x18000	Common Info Stored Flag	1	0
0x18001	Boot Firmware Index:	1	1
0x18002	Firmware Update Status	1	2
0x18003	I/O Mode select	1	3
0x18004	Reserved 1	20	4
0x18018	Uart Baudrate	4	24
0x1801C	Uart Data bits	1	28
0x1801D	Uart Parity bits	1	29
0x1801E	Uart Stop bits	1	30
0x1801F	Reserved 2	20	31
0x18033	TCP/UDP, Sever/Client Select (Bitmap)	1	51
0x18034	TCP Server Port (2Bytes)	2	52
0x18036	TCP Client Port (2Bytes)	2	54
0x18038	UDP Server Port (2Bytes)	2	56
0x1803A	UDP Client Port (2Bytes)	2	58
0x1803C	IP Type select (0:Static / 1: Dynamic)	1	60
0x1803D	Static IP	4	61
0x18041	Subnet Mask (4 Bytes)	4	65
0x18045	DNS Server IP (4 Bytes)	4	69
0x18049	Gateway IP (4 Bytes)	4	73
0x1804D	IoT Server IP (4 Bytes)	4	77
0x18051	IoT Sever Domain Name (128 Bytes)	128	81
0x180D1	Reserved 3	20	209
0x180E5	Cmd_Password (4 Byte)	4	229
0x180E9	Reserved 4	x	233

Station Mode Config/Setting			
Offset	Section	Size (Byte)	DEC Offset
0x19000	Station Info Stored Flag (1 Byte)	1	0
0x19001	BSSID (6 Byte)	6	1
0x19007	SSID (32 Byte)	32	7
0x19027	SSID Len (1 Byte)	1	39
0x19028	AP Password (32 Byte)	32	40
0x19048	AP Password Len (1 Byte)	1	72
0x19049	Auth Mode (1Byte)	1	73
0x1904A	Reserved 1	x	74

AP Mode Config/Setting			
Offset	Section	Size (Byte)	DEC Offset
0x1A000	AP Info Stored Flag (1 Byte)	1	0
0x1A001	BSSID (6 Byte)	6	1
0x1A007	SSID (32 Byte)	32	7
0x1A027	AP Channel (1 Byte)	1	39
0x1A028	AP Password (32 Byte)	32	40
0x1A048	AP Password Len (1 Byte)	1	72
0x1A049	Auth Mode (1Byte)	1	73
0x1A04A	fglsHidden_ssid(1 Byte)	1	74
0x1A04B	Reserved 1	x	75

User Config/Setting			
Offset	Section	Size (Byte)	DEC Offset
0x1B000	Product Info Stored Flag (1 Byte)	1	0
0x1B001	Vendor Name (32 Byte)	32	1
0x1B021	Product Type (32 Byte)	32	33
0x1B041	Product Name (32 Byte)	32	65
0x1B061	Transport Frame Size	2	97
0x1B063	Transport Frame Timeout	4	99
0x1B067	Reserved 1	x	103

Note: 1. As the limitation of RAM size, while do flash read/write at a time, only **256B** of data can be read from FLASH to RAM, (use IoTpAd.flash\_rw\_buf[256] ) Then rewrite the data to corresponding place after being modified.

## 16 COMPILER SETUP

Please refer to description on the Andes web

<http://forum.andestech.com/viewtopic.php?f=23&t=576&p=672>

<http://forum.andestech.com/viewtopic.php?f=23&t=587>

## 17 AT COMMAND USAGE

### 17.1 Display version

Command: **Ver**  
Argument Descriptions: None  
Example: AT#Ver+enter

### 17.2 Reboot the system

Command: **Reboot**  
Argument Descriptions: None  
Example: AT#Reboot+enter

### 17.3 Set Default

Command: **Default**  
Argument Descriptions: -s <channel number>  
Example: AT#Default+enter

### 17.4 Switch channel

Command: **Channel**  
Argument Descriptions: -b <Bandwidth> (0 for BW\_20, 1 for BW\_40)  
-c <channel number> (1~14)  
Example: AT#Channel -b0 -c 6+enter  
Remarks: when set 1 to -b, the -c means central channel for BW40

### 17.5 Configure UART interface

Command: **Uart**  
Argument Descriptions:  
-b <baud rate> (57600, 115200, 230400, ...)  
-w <data bits> (5, 6, 7, 8)  
-p <parity> (0 for no parity, 1 for odd, 2 for even)  
-s <stop bits> (1 for 1bit, 2 for 2bits, 3 for 1.5bits)  
Example: AT#Uart -b 57600 -w 7 -p 1 -s 1 +enter  
Remarks:  $d1r = \text{round}(\text{systemclock}/(16 * \text{baudrate}), 0)$   
actual baudrate =  $\text{systemclock}/(16 * d1r)$   
You can find more supported baudrate for your system according the formula and experiment

### 17.6 Update Firmware from Uart

Command: **UpdateFW**  
Argument Descriptions: -t <flash area type>  
Example: AT# UpdateFW +enter  
Remarks: should be enabled on Recovery mode, X-modem shall be start up after implement this command

### 17.7 Enter into Smart Connection State

Command: **Smnt**  
Argument Descriptions:

Example: AT# Smnt+enter

Remarks: when this cmd be input to 7681, 7681 need change state machine to Smnt state, and start to listen packet in the air to do smart connection

## 17.8 Enter into Deep sleep mode

Command: **PowerSaving**

Argument Descriptions:

-l <PowerSaving Level> (1~5)

-t <PowerSleep Time> (0~0xFFFFFF (unit:: us))

-r <read PowerSaving Level>

Example: AT#PowerSaving -l1 -t0xFFFFFF+enter

AT#PowerSaving -r<Space> +enter

Remarks: 7681 will go to sleep when get cmd "AT#PowerSaving -l1 -t0xFFFFFF", and awake after 0xFFFFFF(us)

(The Power Saving mode is also in improving , so turn this Cmd off by default temporary , if customer want to test power saving in present, they can turn this Cmd on in MT7681\_sta.mk )