

Replacing Bulbs:

1. This device requires two T8 10W UV light bulbs (two bulbs included, replacements available).
2. To replace the bulbs:
 - A. Turn off the device and unplug the power cord.
 - B. Wait for one minute before proceeding to avoid electrical shock. To ensure device is fully discharged, touch an insulated screwdriver on two grid bars.
 - C. Set the device on a flat surface.
 - D. Push down firmly on the back mesh screen and pull out to remove it.
 - E. Turn the burnt out bulb away from you until the metal prongs on the end of the bulb line up with the notches on the sockets on either side of the device. Lift the bulb out gently.
 - F. Insert the fresh bulb by lining up the prongs with the notches on the sockets. Turn the bulb towards you until you hear a clicking sound.
3. If you are replacing both bulbs, repeat the process.
4. To replace the screen, insert the bottom of the screen into the spring-loaded holes and press down until the top of the screen can be fitted properly. Release.

Specifications:

- Input voltage: 120V/60Hz.
- Power: 20W
- Tube: 2 x 10W/TB
- Coverage Area: 6,000 sq. feet (557 sq. meters)

Contact Us:

We enjoy receiving letters and email from our valued customers. If you have questions, comments, or suggestions about the product, please write to us. If you have a success story, please let us know. With your permission, we may publish it on our website.

DISCLAIMER:

Unless specifically agreed to in writing, Aspectek®:

- A. Makes no warranty as to the accuracy, sufficiency or suitability of any technical or other information provided in its manuals or other documentation.
- B. Assumes no responsibility or liability for loss or damage, whether direct, indirect, consequential or incidental, which might arise out of the use of such information. The use of any such information will be entirely at the user's risk.

CAUTION!



We stand by our products with a one-year limited warranty. If you are having trouble with your product, please don't return it to the merchant. Contact us, and we would be happy to help you.

Aspectek™

 
© Copyright 2023 Aspectek™.
All rights reserved. Version 1.0

Langara PO Box No. 61088
571 West 57 Ave. Vancouver, BC V6P
1R8 Canada
Visit us at www.aspectek.com
or email us at service@aspectek.com

Aspectek™

"Designed for you."

Indoor Electric Insect Killer 20W

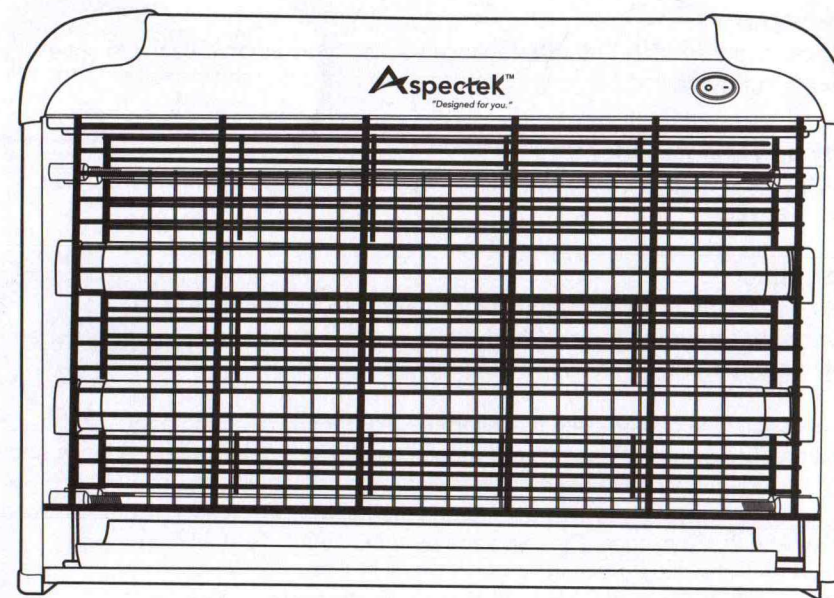

⚠ WARNING:

- Important safety instructions.
- Read all instructions before using.
- Do not place unit in an area where it can fall into water or near flammable materials.
- Do not clean unit with water or liquid.
- Save this manual for future reference.

Aspectek® Indoor Electric Insect Killer 20W

ENGLISH LANGUAGE
owner's manual

How it Works:

The Aspectek® Indoor Electric Insect Killer 20W (Two 10W/T8 light tube) attracts flies, moths, mosquitoes, and other flying insects using a UV light. The insects are then killed by high-voltage electric metal grids.

The Aspectek® Indoor Electric Insect Killer 20W is safe for people and pets. The mesh screen prevents contact with the electric grid and a harmless ultra-violet black light tube attracts the insects.

As a chemical-free alternative, it is safe to use in houses, businesses, food preparation areas, hospitals and other indoor areas.

IMPORTANT:

Please read the safety and maintenance section to avoid a preventable shock when handling device.

Safety and Maintenance:

Check the local voltage before operating. Aspectek® Indoor Electric Insect Killer operates at 120V.

WARNING:

This device emits high-voltage on contact with the metal grid. Do not attempt to touch the internal high voltage grids during use. Never put metal objects into the internal electrical grid.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This device is for indoor use only. Keep away from children and pets.
- Do not use where flammable vapors or explosive dust may exist.
- Placement Height Limit: Hanging height should be around 1.5-2 meters better.
- Do not attempt to open the device or replace internal parts other than the light tube. It must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not operate the product with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING:

Electric shock hazard may exist if water from a garden hose is directed at the Bug Zapper. When using extension cords, keep the socket-outlet away from moisture and avoid damage to the cord.

- If an extension cord is required, please carry out a physical safety check of extension cord before use. Check for cuts or damage, kinds/ twisting, exposed wires, damaged plugs (bent or loose pins). Avoid improper use of extension cords and keep them away from moisture.
- Do not submerge the main body of the Bug Zapper in water.

CAUTION:

Always unplug Aspectek® Insect Killer before cleaning or changing the light tube. Please note that the internal electrical grid can hold residual charge for up to one minute after shutting the device off. After unplugging the device, always wait at least one minute to fully discharge the internal electrical grid before replacing the light tube.

- To ensure device is fully discharged, touch an insulated screwdriver on two grid bars.
- Use a dry brush to clean the grid. Dispose of insects collected in the tray weekly.
- Do not use water to wash any part of the device (except plastic tray).
- Do not place near gas, oil or other flammable materials.
- Do not use if the power cord is damaged. Return for repair.

Placement:


Hang the Insect Killer on where the insects appear or on any damp and dark areas (kitchen, bedroom, washroom, places occupied by lots of furniture, etc.). In order to prevent children from touching the unit, the hanging height should be around 1.5-2 meters. This unit will achieve better results if used without people in the coverage area. Do not hang the Insect Killer under the bright light or in front of the outlet of air conditioning equipment, such as air conditioners and heaters. If the unit is hung above the mentioned equipment, turn off the air conditioning equipment before turning on the Insect Killer.

How to Use:

1. Hang the Insect Killer by attaching the enclosed chain to the hooks on the top of the device, or set it on a solid surface.
2. Place the removable plastic tray on the bottom of the device to collect the dead insects when they fall.
3. Turn on the device.

How to Clean:


1. Switch device off.
2. Unplug device.
3. Carefully remove tray.
4. Slide insects into trash.
5. Wash and dry the tray if necessary.
6. Re-install tray.
7. If needed, use dry brush to clean electric grid.

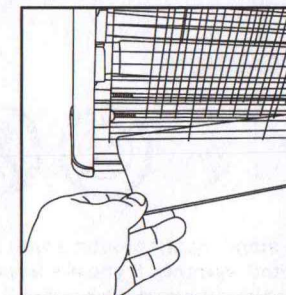

Wire mesh with plastic lock – How to replace the UV tube?

Aspectek®

"Designed for you."

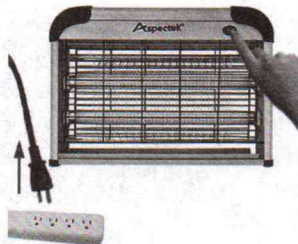

Step 1.

Turn off the power button and unplug the bug zapper. (Turn off and Unplug)

Aspectek®

"Designed for you."




Step 2.

Use a screwdriver with an insulated handle to touch the inner high-voltage grid for 30 seconds to 1 minute, or you only leave it alone for 5 minutes. (Discharge)

Aspectek®

"Designed for you."

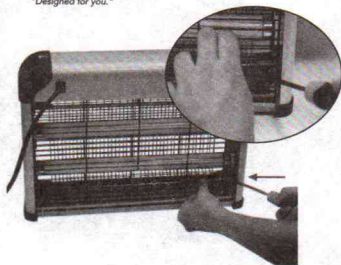


Step 3.

Remove the external grille of the side where the tubes are located. Use a screwdriver pry up bottom plastic lock of both side from the external grille.

Aspectek®

"Designed for you."

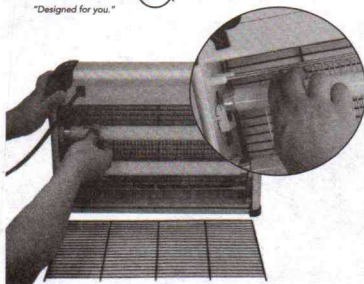

Step 4.

Rotate the tube till the tube base meet the slots of the tube holders and take them out, replace them with the new ones, and then rotate couple turns to make sure the new tubes are in place where connect tightly with tube holders. (Rotate and Replace the tubes)