



*Press 1234 then press the bottom right button to open the safe for the first time. Then open the door (rotate lock) and press the side button behind the door lock, the message of "proceed" will prompt. Then input your desired 4 digit combination (remember it) and press the button on button left. That will set your code. Then close the door and lock the safe. To unlock press your newly set code then bottom right button.*

*As a courtesy to the next guest, please reset the code to 1234 before leaving.*