



# Replacement parts and fittings

Model : HLC1HE~4HE

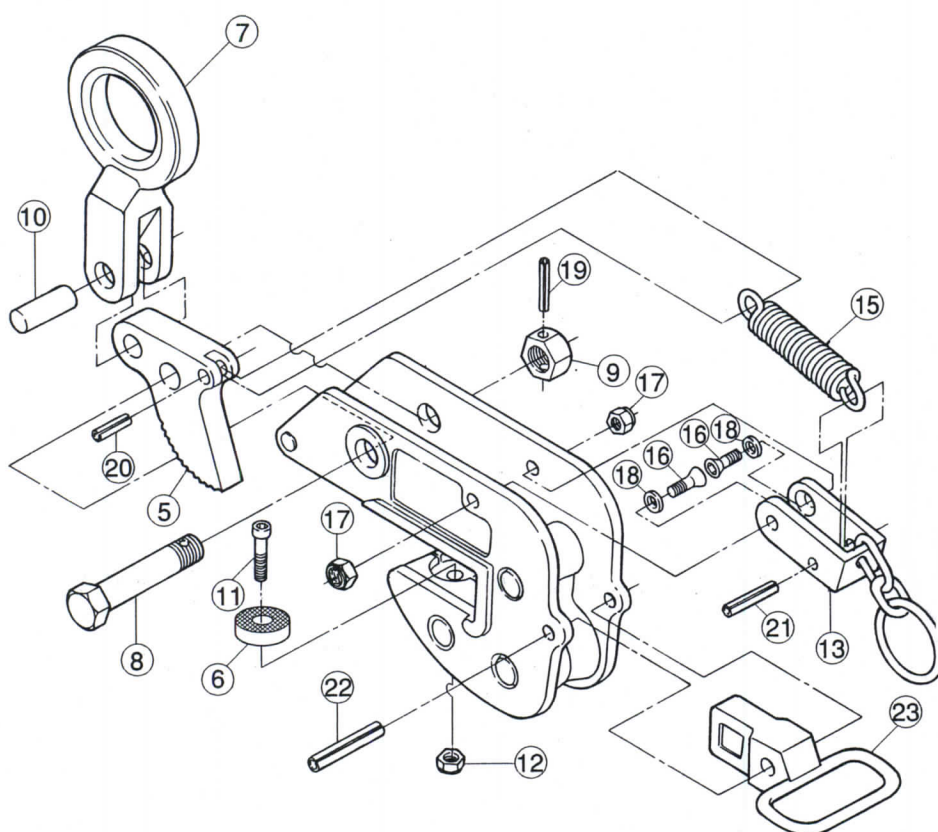

Part No.	Part Name	Item No.
<b>SHACKLE ASSEMBLY</b>		<b>HLH</b>
7	Shackle	HLCH
10	Support pin for shackle	HLCY
<b>CAM ASSEMBLY</b>		<b>HLT</b>
5	Cam	HLCT
20	Spring pin	HLCR
8	Support bolt for cam	HLCN
9	Support nut for cam	
19	Spring pin	HLCO
<b>PAD ASSEMBLY</b>		<b>HLP</b>
6	Pad	HLCP
11	Hex.socket head cap screw	HLCV
12	Nylon nut	
<b>HANDLE ASSEMBLY</b>		<b>HLU</b>
13	U-handle	HLCU
16	Hex.socket flat head bolt	HLCK
17	U-nut	
18	Collar	HLCC
21	Spring pin	HLCO
15	Spring	HLCS
<b>GRIP ASSEMBLY</b>		<b>HLG</b>
23	Grip	HLCG
22	Spring pin	HLCJ

Model: HLC6HE・12HE HLCWHE (Wide type)

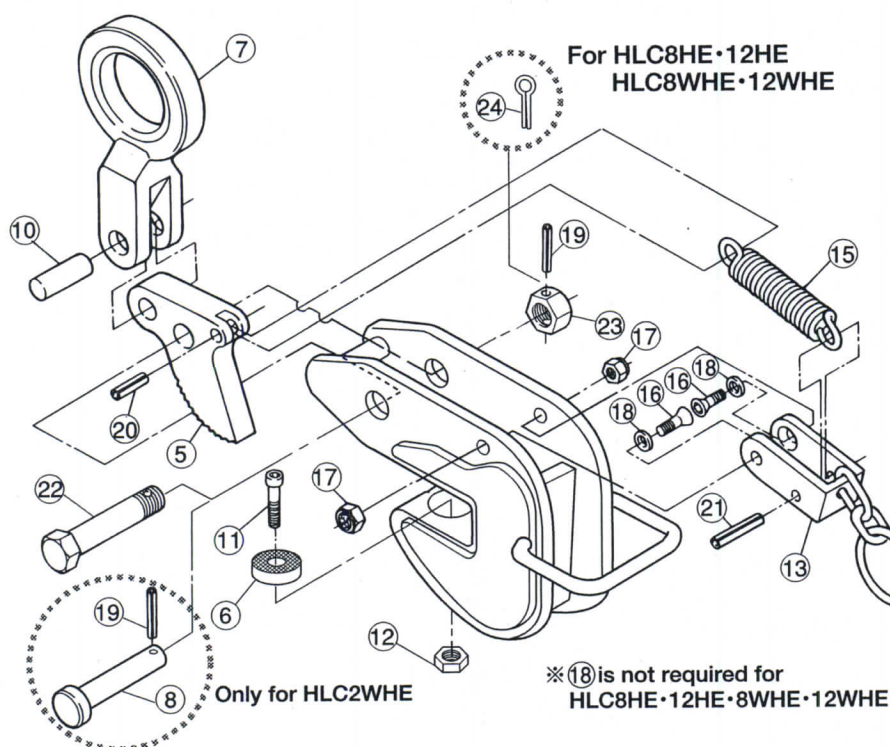

Part No.	Part Name	Item No.
<b>SHACKLE ASSEMBLY</b>		<b>HLH</b>
7	Shackle	HLCH
10	Support pin for shackle	HLCY
<b>CAM ASSEMBLY</b>		<b>HLT</b>
5	Cam	HLCT
20	Spring pin	HLCR
8	Support pin for cam	HLCN
22	Support bolt for cam	HLCB
23	Support nut for cam	
19	Spring pin	HLCO
24	Cotter pin	HLCW
<b>PAD ASSEMBLY</b>		<b>HLP</b>
6	Pad	HLCP
11	Hex.socket head cap screw	HLCV
12	Nylon nut	
<b>HANDLE ASSEMBLY</b>		<b>HLU</b>
13	U-handle	HLCU
16	Hex.socket flat head bolt	HLCK
17	U-nut	
18	Collar	HLCC
21	Spring pin	HLCQ
15	Spring	HLCS