


Replacement parts and fittings


Model : SVC1HE~6HE / SVC1WHE~ 6WHE

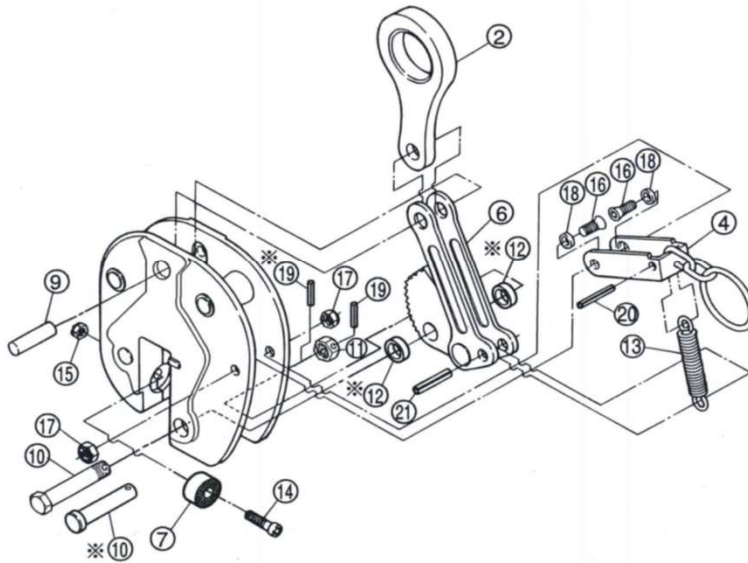

※ Mark only for SVC2WHE

Part No.	Part Name	Item No.
SHACKLE ASSEMBLY		SVH
2	Shackle	SVCH
9	Support pin for shackle	SVCY
CAM ASSEMBLY		SVT
6	Cam • Link	SVCT
21	Spring pin	SVCU
CAM SUPPORT PIN ASSEMBLY		SVK
10	Support bolt for cam	SVCK
11	Support nut for cam	
19	Spring pin	SVCO
12	Cam collar	SVCR
PAD ASSEMBLY		SVP
7	Pad	SVCP
14	Hex.socket head cap screw	SVCV
15	Nylon nut	
HANDLE ASSEMBLY		SVG
4	U-handle	SVCG
16	Hex.socket flat head bolt	SVCF
17	U-nut	
18	Collar	SV CZ
20	Spring pin (For lever)	SVCQ
13	Spring	SVCS

Model: SVC8HE · 12HE SVC8WHE · 12WHE (wide type)

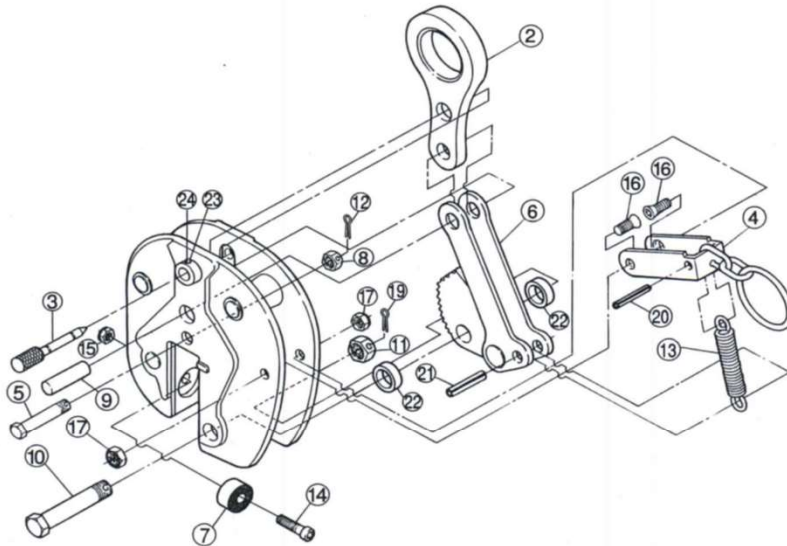

Part No.	Part Name	Item No.
SHACKLE ASSEMBLY		SVH
2	Shackle	SVCH
9	Support pin for shackle	SVCY
CAM ASSEMBLY		SVT
6	Cam • Link	SVCT
21	Spring pin	SVCU
CAM SUPPORT PIN ASSEMBLY		SVK
10	Support bolt for cam	SVCK
11	Support nut for cam	
19	Spring pin	SVCW
22	Cam collar	SVCR
PAD ASSEMBLY		SVP
7	Pad	SVCP
14	Hex.socket head cap screw	SVCV
15	Nylon nut	
HANDLE ASSEMBLY		SVG
4	U-handle	SVCG
16	Hex.socket head cap screw	SVCF
17	U-nut	
20	Spring pin	SVCQ
13	Spring	SVCS
STOP PIN ASSEMBLY		SVN
5	Bolt for stop	SVCN
8	Nut for stop	
12	Spring pin for stop	SVCA
LOCK PIN ASSEMBLY		SVB
3	Cam releasing lock pin	SVCB
23	Plunger bolt	SVCC
24	Plunger nut	