

The diagram illustrates the wiring for the RESET pin. The RESET pin is connected to JP5, which is a 3-pin header. JP5 is connected to VCC, GND, and DTR. JP4 is a 10-pin header connected to RX, TX, D2, D3, D4, VCC, and GND. JP3 is a 4-pin header connected to D5, D6, D7, and D8.

Sheet: 1/1