

Audio Key Codes

Code	HAI Hi-Fi	Russound ¹	NuVo ²	NuVo Grand Concerto	Xantech ³	Speakercraft ⁴
1	Power	Power	Power	Power	Power	Source select 1
2	Source step	Source step	Source step	Source step	Source select 1	Source select 2
3	Vol up	Vol up	Vol up	Vol up	Source select 2	Source select 3
4	Vol down	Vol down	Vol down	Vol down	Source select 3	Source select 4
5	Mute	Mute	Mute	Mute	Source select 4	Source select 5
6		Play	Play	Play / Pause	Source select 5	Source select 6
7		Stop	Stop	Stop (not used)	Source select 6	Source select 7
8		Pause	Pause	Pause (not used)	Source select 7	Source select 8
9		Minus	Rewind	Previous	Source select 8	
10		Plus	Forward	Next	Channel up	Mute
11		Previous	Fast rewind	Favorite 1	Channel down	Vol Up
12		Next	Fast forward	Favorite 2	Mute	Power
13		Record	Continuous	Favorite 3	Play	Vol Down
14		Channel up	Shuffle	Favorite 4	Stop	
15		Channel down	Group	Favorite 5	Pause	
16		Zero	Disc	Favorite 6	Rewind	
17		One	Zero	Favorite 7	Forward	One
18		Two	One	Favorite 8	Vol up	Two
19		Three	Two	Favorite 9	Vol down	Three
20		Four	Three	Favorite 10	Tier 2 power	Four
21		Five	Four	Favorite 11	Tier 2 source select 1	Five
22		Six	Five	Favorite 12	Tier 2 source select 2	Six
23		Seven	Six	Ok button down	Tier 2 source select 3	Seven
24		Eight	Seven	Ok button up	Tier 2 source select 4	Eight
25		Nine	Eight	Play / Pause button down	Tier 2 source select 5	Nine
26		Plus ten	Nine	Play / Pause button up	Tier 2 source select 6	Track
27		Enter	Plus ten	Previous button down	Tier 2 source select 7	Zero
28		Last	Enter	Previous button up	Tier 2 source select 8	Disc
29		Sleep	Hotkey zero	Next button down	Tier 2 channel up	Random
30		Guide	Hotkey one	Next button up	Tier 2 channel down	Repeat
31		Exit	Hotkey two	Power / Mute button down	Tier 2 mute	Bass
32		Info	Hotkey three	Power / Mute button up	Tier 2 play	Treble
33		Menu	Hotkey four	Menu button down	Tier 2 stop	Guide
34		Menu up	Hotkey five	Menu button up	Tier 2 pause	Menu
35		Menu right	Hotkey six	Up button down	Tier 2 rewind	Up
36		Menu down	Hotkey seven	Up button up	Tier 2 forward	Left
37		Menu left	Hotkey eight	Down button down		Select
38		Select	Hotkey nine	Down button up		Right
39		Favorite 1				Down
40		Favorite 2				Escape
41						Info
42						Rewind
43						Forward
44						Pause
45						Play
46						Stop

1: applies to Russound CAM, CAV, CAA, E-Series, and C-Series audio systems.

2: applies to NuVo Concerto, Essentia, and Simplese audio systems (Essentia and Simplese responds to Key Codes 1-5 only).

3: applies to Xantech MRC-88 audio system.

4: applies to Speakercraft MZC and Proficient M4 and M6 audio systems.