

合图主机部署

- 下载应用
 - 下载 zip 包 [conthing-hetu-installer-hetu-installer-v1.1.0b3.zip](#)
- 安装应用
 - 给设备上电，连接网线
 - 用 MobaXterm 连接设备，设备的默认地址是 192.168.0.101
 - 向 / 目录下上传 zip 包
 - shell中解压，解压完成后删除压缩包

```
cd /  
unzip conthing-hetu-installer-xxxxx.zip  
rm conthing-hetu-installer-xxxxx.zip
```

- 重命名成 /app

```
mv hetu-installer-xxxxx/ app
```

- 执行安装脚本

```
cd /app/scripts  
bash ./prepare.sh  
./install_redis.sh
```

```
root@conthing:/# mv lpr-installer-v1.1.5b1/ app
root@conthing:/# cd /app/scripts/
root@conthing:/app/scripts# bash ./prepare.sh
create soft link /app/nginx/log -> /app/log/nginx
ipaddr.sh already in /etc/init.d
ipaddr.sh already in /etc/rc.local
generate frpc.ini
frpc.sh already in /etc/init.d
frpc.sh already in /etc/rc.local
startup.sh already in /etc/rc.local
root@conthing:/app/scripts# ./install_redis.sh
Welcome to the redis service installer
This script will help you easily set up a running redis server

Selected config:
Port          : 6379
Config file   : /app/redis/6379.conf
Log file      : /app/log/redis_6379.log
Data dir      : /app/data/redis/6379
Executable    : /app/redis/bin/redis-server
Cli Executable : /app/redis/bin/redis-cli
Copied /tmp/6379.conf => /etc/init.d/redis_6379
Installing service...
Success!
Starting Redis server...
Installation successful!
root@conthing:/app/scripts# reboot
```

- 重启设备

reboot

- 重启成功后，用浏览器登录 192.168.0.101 进行冒烟测试