

Installation of firmware version 0.6


1. Download **Zadig** from the official website: <https://zadig.akeo.ie/>.

2. Enter the Booster into DFU mode:

Insert a pin into the **DFU Bootloader**, power cycle the Booster, and wait a few seconds before removing the pin.

3. In Zadig choose **STM32 BOOTLOADER** and install WinUSB by clicking **Install Driver**.

Points 1. and 3. should be done only once per PC.

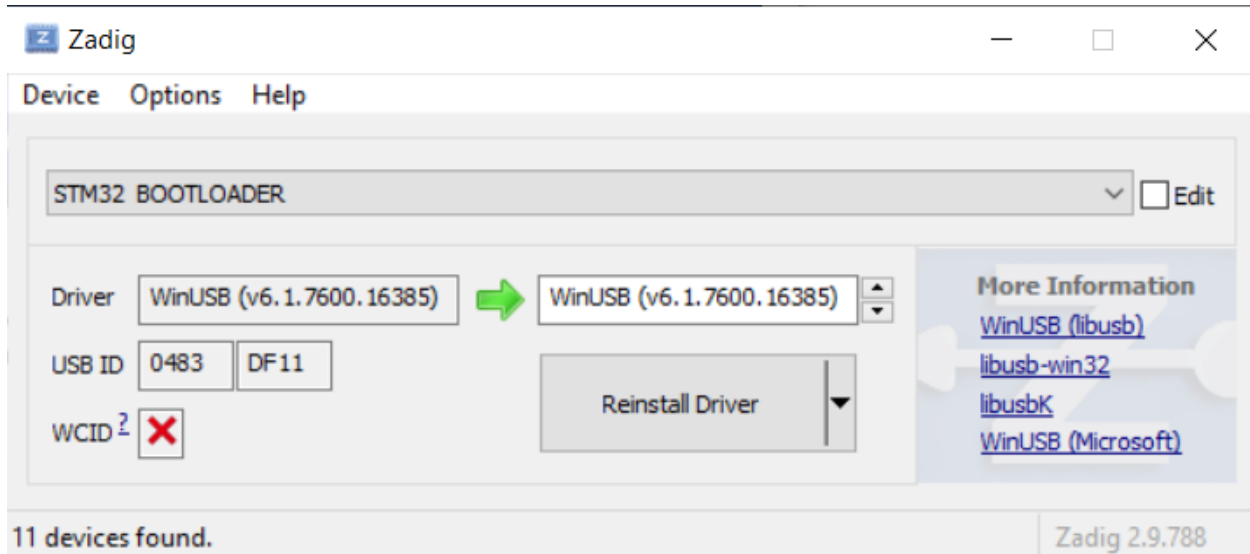

4. Open PowerShell.

5. Navigate to the directory named dfu-util containing dfu-util.exe and booster-release.bin files. Booster firmware files are available here:

<https://github.com/quartiq/booster/releases/tag/v0.6.0> .

6. Upload new firmware using this command:



```
.\dfu-util.exe -a 0 -s 0x08000000:leave --download booster-release.bin
```

7. Wait until booster starts again.


8. After firmware installation on the first Booster, you can skip steps 1 and 3 on the same PC for any additional Boosters.

Booster connection setup with mosquitto


1. Download **mosquitto** from: <https://mosquitto.org/download/> .
2. Run downloaded .exe file to begin installation

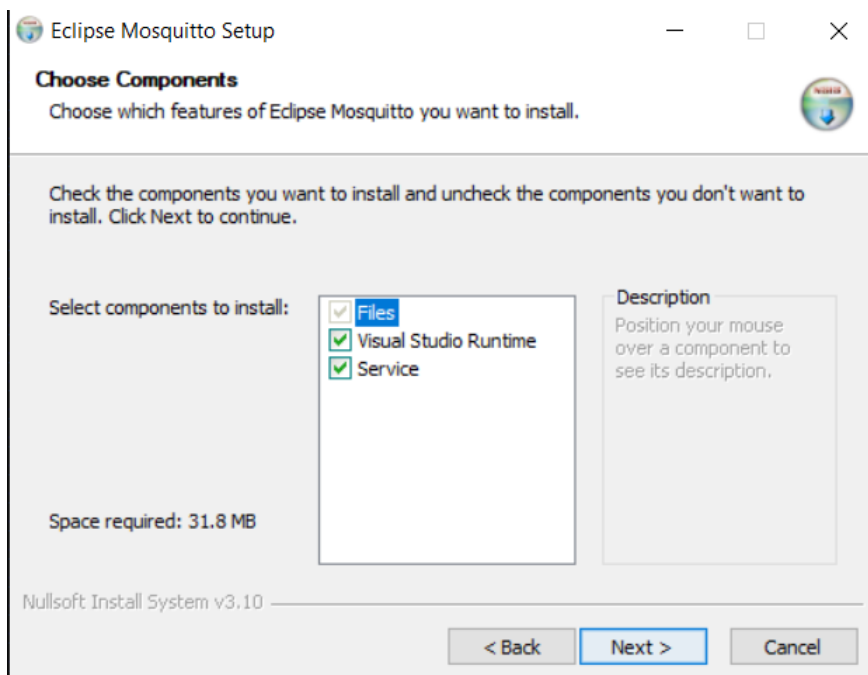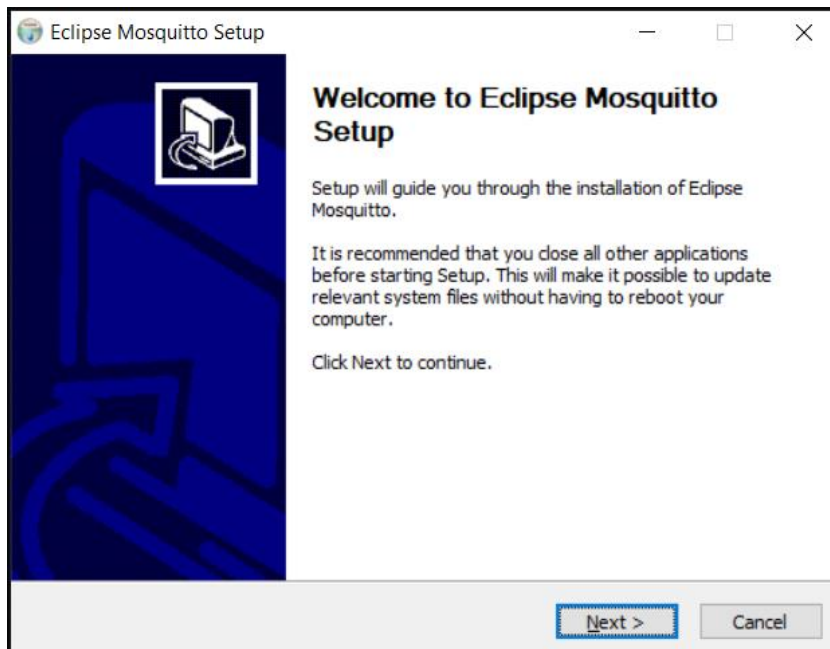


3. Important! Change destination folder to: “C:\mosquitto”

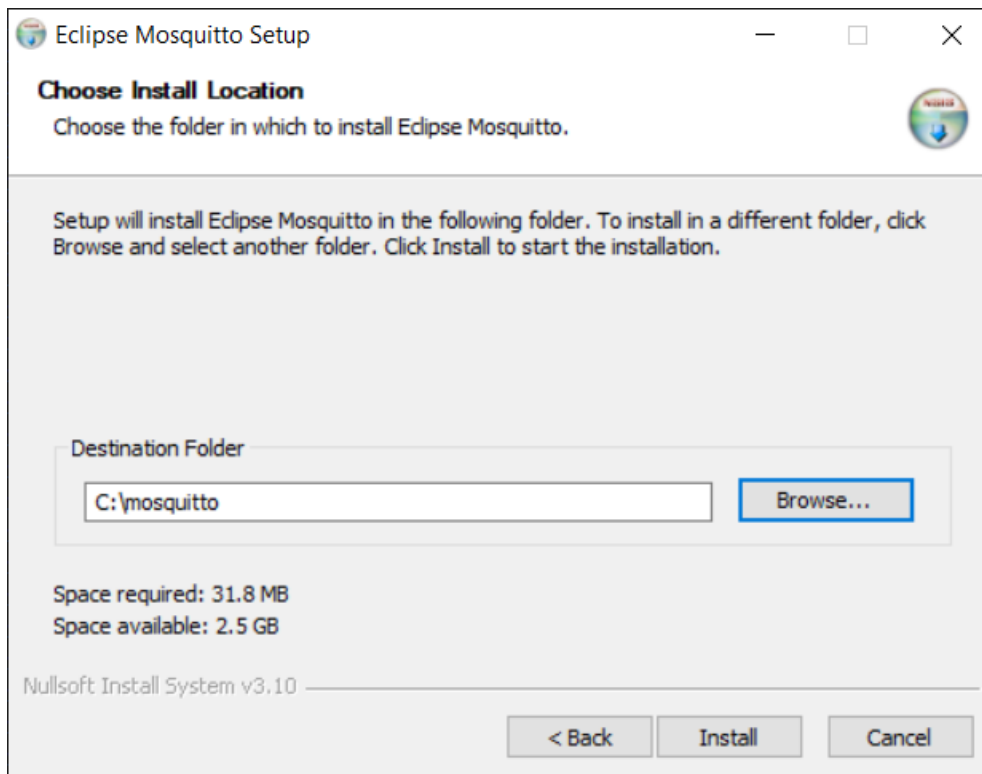


4. To allow Mosquitto to receive MQTT connections, you need to add an **inbound firewall rule**:
 - a. Open **Windows Firewall with Advanced Security** via the Start Menu
 - b. In the left menu, click "**Advanced Settings**".

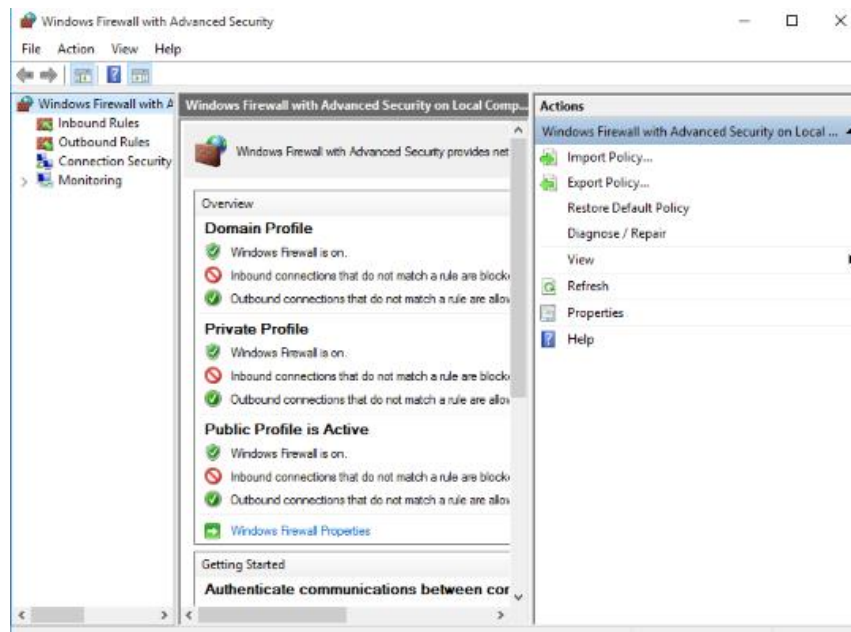

- c. Go to **"Inbound Rules"** → click **"New Rule..."**
- d. Choose **"Port"**, then click **Next**.

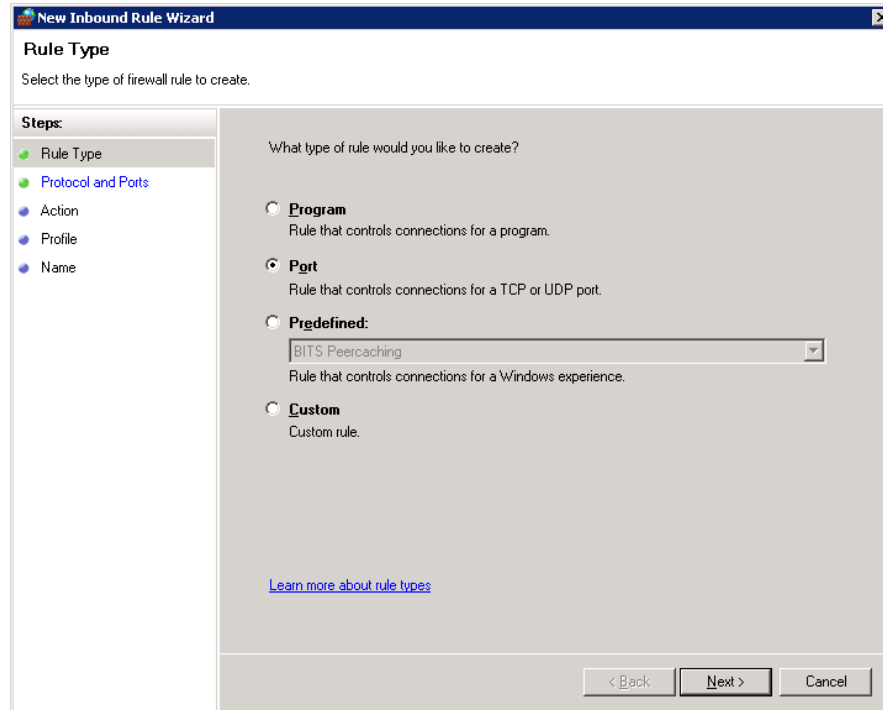

- e. Select **"TCP"** and enter port number **1883**, then click **Next**.

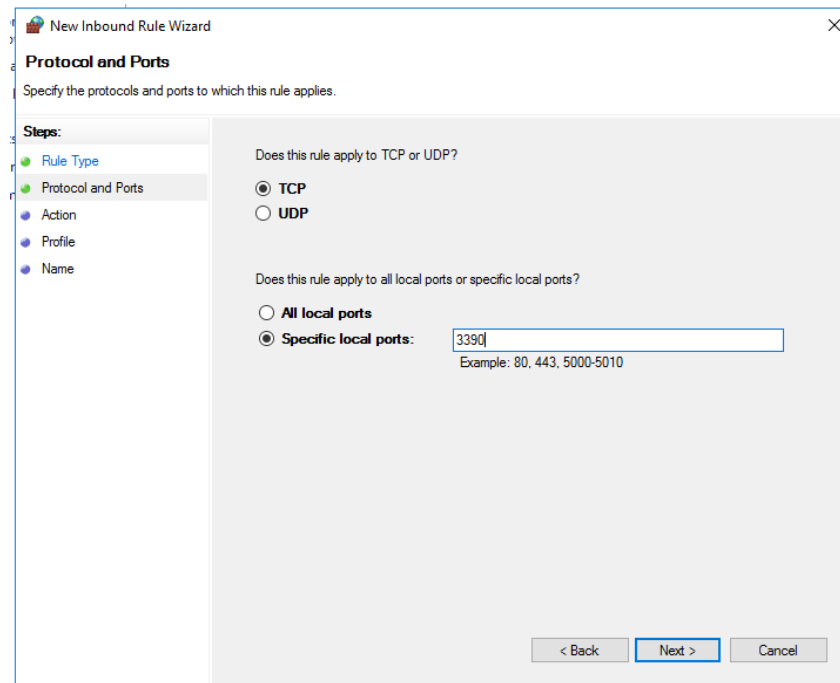

- f. Select "**Allow the connection**", then click **Next**.
 - g. Choose "**Domain**" then click **Next**.
 - h. Give rule a name e.g. "**MQTT Mosquitto 1883**" and click **Finish**.
- 5. Modify **mosquitto.conf** file that should be located in "C:\moquitto") by adding these 3 lines into it:

```
listener 1883 0.0.0.0  
  
allow_anonymous true  
  
connection_messages true
```

These settings allow mosquitto to accept MQTT connections from any IP address on port 1883 and enable basic connection logging.

- 6. Enter PowerShell and run:

```
cd C:\mosquitto
```

And then Start the broker with the configuration file in verbose mode:

```
.\mosquitto.exe -c "C:\mosquitto\mosquitto.conf" -v
```

This will start the **mosquitto broker** service. The broker will listen on port 1883, and its IP address will match the IP address of your PC.

- 7. Connect to mosquitto broker with **mqtt-explorer**.

