

Load the parameters into the servo drive:

Switch off the supply voltage for brake control.

Interrupt the connection on X5/28

Press the button **PRG** (cursor is blinking on C1103.01 or 51)

Press the button ▲ until C94 is displayed

Press the button **PRG** (cursor is blinking on 9999) **If here is already displayed 0 Then continue at *** because no password is active!

Press the buttons ▲ ▼ ◀ ▶ for adjusting the password (2343)

Press the button **SHIFT** and hold it and press **PRG** for a short time ("OK" will be displayed for one moment)

Press the button **PRG** (cursor is blinking on the value of C1103.01)

Press the button **PRG** (now the value of C94 have to be 0)

*

Press the button ◀ "User Menü"

Press the button ▲ "Code List"

Press the button ▶ place the cursor on C02

Press the button **PRG** cursor on the value of C02

Press the button ▲ until the value of **C02 is "20"**

Press the buttons **SHIFT** and **PRG** together -- "BUSY" will be displayed while loading (don't interrupt)

Remove and plug in again the keypad

Restore the connection on X5/28

Switch the supply voltage for brake control back on

