


- 1 Start:**
Locate the button on the right side of the device. Turn on the Senseair Go by sliding the button to the right.

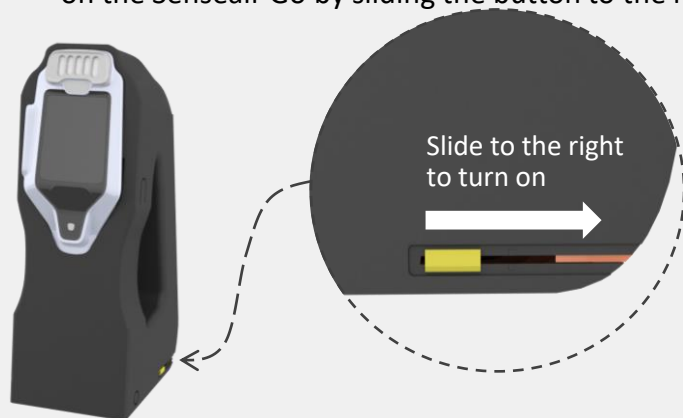

- 2** Wait until the system initializes the sensor and software (around 2 minutes).



- 3** The screen will show "Press button to start" when the system is ready



- 4 Perform a measurement:**
Press the button. When the unit tells you to breathe, blow into the inlet as you were blowing out a candle.




- 5 Result:**
Wait a few seconds. The screen will show one of the following results.

BRAC (mg/L) < 0.1



BRAC (mg/L) > 0.1



 The BRAC in mg/L will be shown on the screen's bottom right corner

6

Turn off:

Rapidly click the main button 4 times. Wait until the “Press the button to start” screen disappears. Slide the button to the OFF position (left).



Wait (approx.
10 seconds)



Return button
to left



Rapidly press the
button 4 times

HOW TO...

Charge the system: Make sure the system is **OFF**. Plug the charger in the port on the left side of the device



Insufficient Breath: If the breath is not enough to calculate the BrAC, the screen will show “Insufficient breath”.

Wait until the device prepares a new breath measurement and breathe again.

Reset the device: If the device does not respond or shows the “Connecting” screen. Turn off the device via the button on the side. Turn on again.

For support you can contact us!


Technical Specifications:

Parameter	Value
Sensor	Infrared optical sensor
Battery Duration	5-8 Hours
Operating Temperature Range	-10° to 30° C



WARNING

- Do not expose the device to high temperatures.
- **ONLY** use the provided charger.
- Avoid charging the device while in operation.
- Do no drop the device.
- High capacity Lithium Battery. Handle with care.

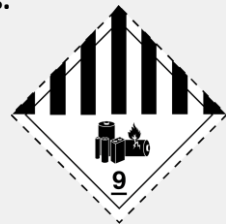

Contact:

Javier Aranda: Javier.Aranda@senseair.com

Emma Jonforsen: emma.Jonforsen@senseair.com