


# CHANGING YOU CAR OIL

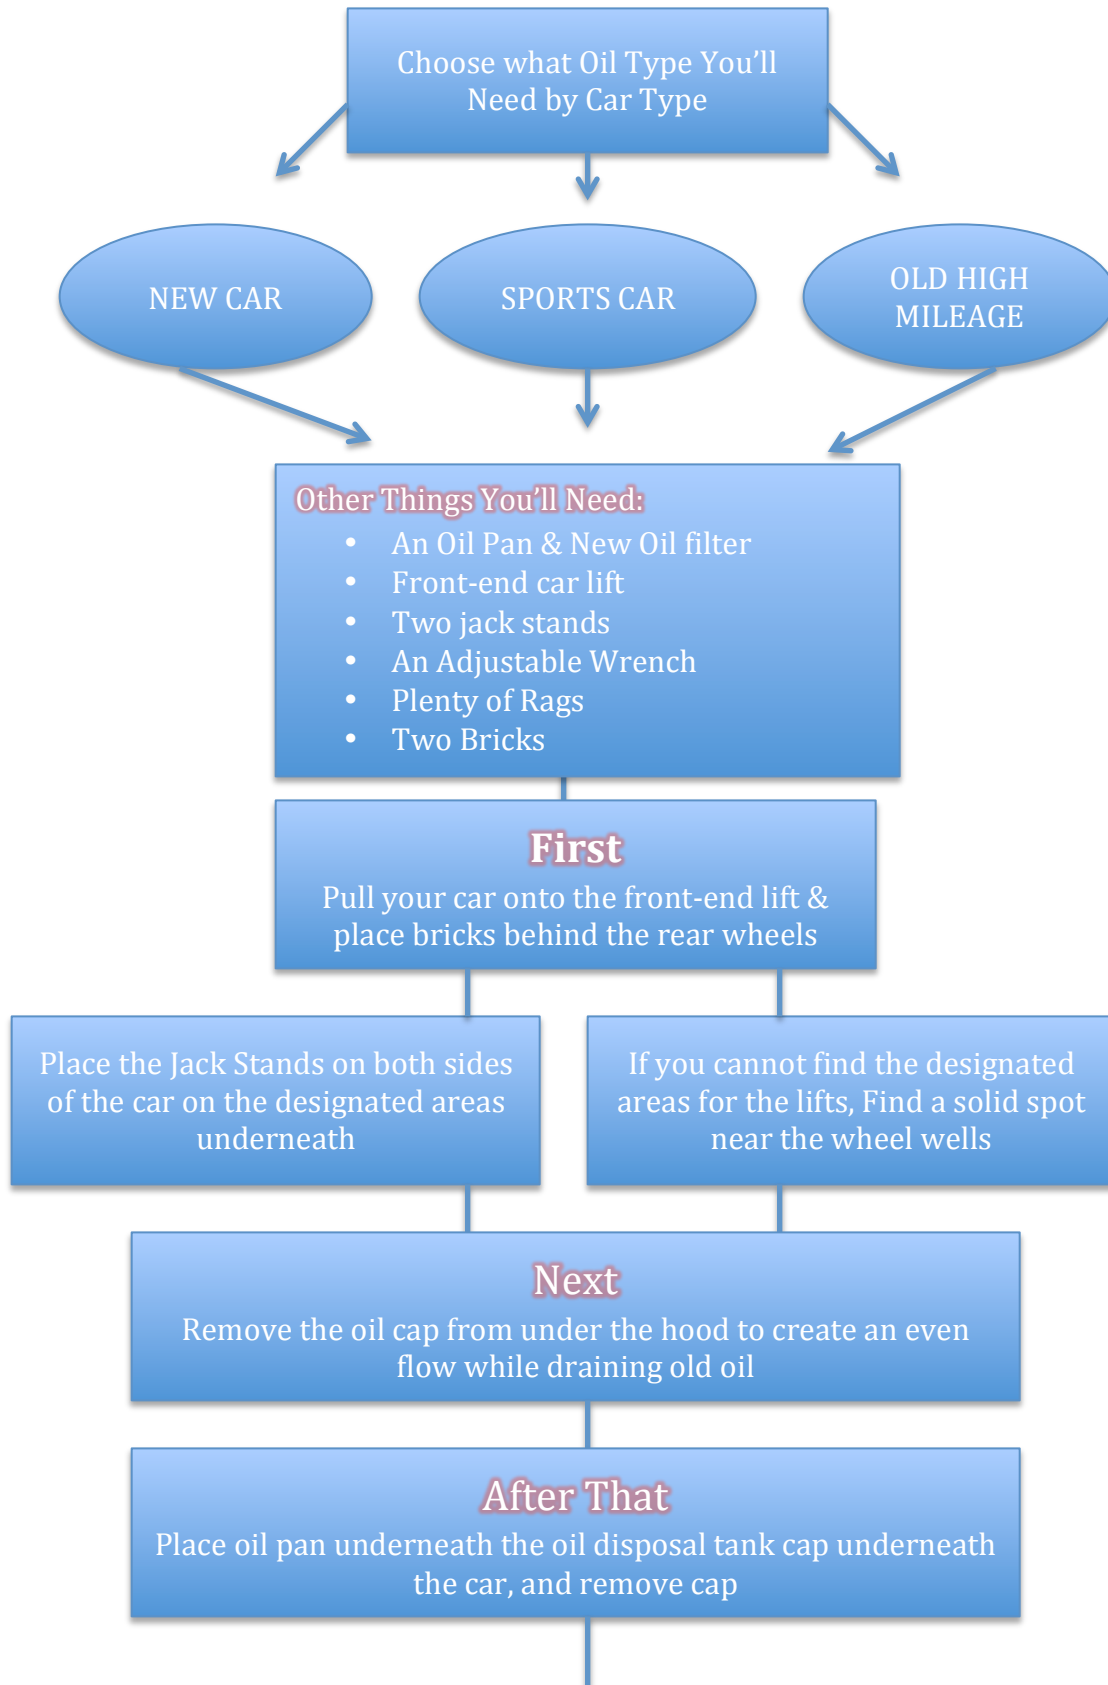

### Next

After the oil has stopped running out, place the cap back on the disposal tank

### After That

Locate you oil Filter above the oil tank under the car and remove it  
And insert the New Filter

### Now

You can pour the new oil into the oil tank located under the hood of your car.

### Also

You can choose to ad additional oil supplements that help keep you engine pistons clean

### Or

You can just stick with the standard oil that you have for your car type

### Finally

***PLEASE DISPOSE OF YOUR MOTOR OIL PROPERLY***

By taking it to a garage which will be disposed of in proper form