

<https://configure.ergodox-ez.com/ergodox-ez/layouts/PBKjJ/latest/0>

The diagram illustrates a split keyboard layout. The left section contains keys for punctuation and letters: ` ` (comma/underscore), `!` (exclamation mark), `@` (at symbol), `#` (hash), `\$` (dollar), `%` (percent), `Del` (delete), `Tab`, ` ` (apostrophe/quotation mark), `,` (comma), `.` (period), `P` (P), `Y` (Y), a key with an 'X' icon, `Esc Left Ctrl`, `A` (A), `O` (O), `E` (E), `U` (U), `I` (I), a key with an arrow icon, a key with an upward arrow icon, `;` (semicolon/apostrophe), `Q` (Q), `J` (J), `K` (K), `X` (X), a key with a left arrow icon, a key with a circular arrow icon and '1', a key with a tilde/underscore icon, and a key with a circular arrow icon and '2'. The right section contains keys for punctuation and letters: `Del`, `^` (caret), `&` (ampersand), `*` (asterisk), a key with an equals/underscore icon, a key with an 'X' icon, `F` (F), `G` (G), `C` (C), `R` (R), `L` (L), `num 0` (0), a key with a left arrow icon, `D` (D), `H` (H), `T` (T), `N` (N), `S` (S), `?` (question mark), a key with a right arrow icon, `B` (B), `M` (M), `W` (W), `V` (V), `Z` (Z), a key with a backslash/apostrophe icon, a key with a circular arrow icon and '2', a key with a left arrow icon, a key with a down arrow icon, a key with an up arrow icon, and a key with a right arrow icon. Two detached numeric keypad sections are shown below the main sections. The left detached keypad contains keys for `num /` (forward slash/underscore), `.` (period/apostrophe), a key with a left arrow icon, a key with a scissors icon, a key with a circular arrow icon and '1', and a key with a circular arrow icon and '2'. The right detached keypad contains keys for `+` (plus/equals), `num *` (asterisk/underscore), a key with a left arrow icon, a key with a scissors icon, a key with a circular arrow icon and '1', and a key with a circular arrow icon and '2'.

The diagram illustrates a split keyboard layout. The left section is a standard QWERTY layout with function keys F1-F6 and a Del key at the top. The right section is a standard QWERTY layout with function keys F7-F12 at the top. Below the main sections are two angled sections. The left angled section contains a power button, a media play/pause button, and a media volume up button. The right angled section contains a media volume down button, a media play/pause button, and a media volume up button.

The diagram illustrates a split keyboard layout. The left half contains keys for punctuation and letters (Tab, Esc, Arrow Up, A-Z, 1-2, ~, 1, 2), while the right half contains keys for punctuation and numbers (Del, ^, &, *, numbers, L, num 0, S, ?, Z, \, 0, ., Arrow Up, Arrow Right). Both halves feature a central cluster of keys including num, /, -, +, *, and a central cluster with a scissors icon.