


ARTEMIS Synthesizer Usage Guide

Web Programmer Location: http://ohm.bu.edu/~swd/javascript/sine_wave_audio_jq2.html

Keyboard Mode

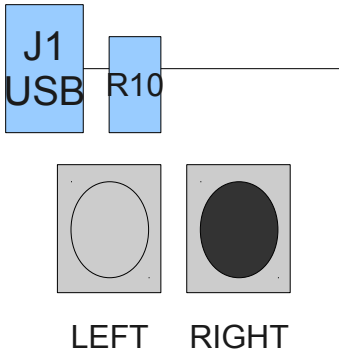

To Enter:

Hold down RIGHT for 1 second


When In Keyboard Mode:

- LEFT: Backwards through scales
- RIGHT: Forward through scales

Scales

●	○	○	○	○	○	○	○	○	○	C Major
●	●	○	○	○	○	○	○	○	○	C Pentatonic
●	●	●	○	○	○	○	○	○	○	C Blues
●	●	●	●	○	○	○	○	○	○	C Dorian

Sequencer Mode

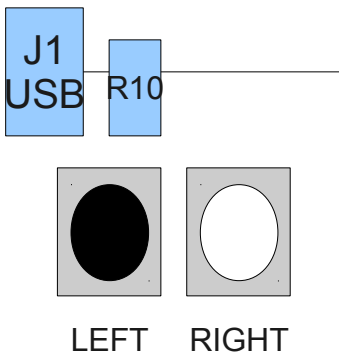

To Enter:

Hold down LEFT for 1 second


When In Sequencer Mode:

- LEFT: Increase Speed
- RIGHT: Decrease Speed
- Press the buttons on the bottom row to access different sequences.

Sequences

●	○	○	○	○	○	○	○	○	○	Sequence 1
○	●	○	○	○	○	○	○	○	○	Sequence 2
... etc ...										

Programmer Mode

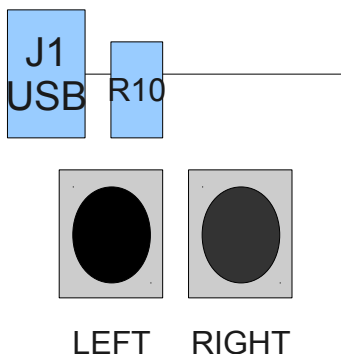

To Enter or Exit:

Hold down LEFT and RIGHT for 1 second.

When In Programmer Mode:

Hold up R10 (the Photodiode) to the blinky box on the programming website. Wait for light to stop blinking then exit .

To Program a Specific Sequence:

Go into Sequencer Mode, select your Sequence then enter Program Mode