


NOTE:
INT and XS pins must have pullups either on the sensor module or activated on the microcontroller's I/O pins.

1		2		3		4	
A							A
B							B
C							C
D							D
1		2		3		4	

Title			
Size A	Number		Revision
Date:	2/1/2020		Sheet of
File:	D:\Documents\...\SensorModule.SchDoc		Drawn By:

Title			
Size A	Number		Revision
Date:	2/1/2020		Sheet of
File:	D:\Documents\..\SensorModule.SchDoc		Drawn By:

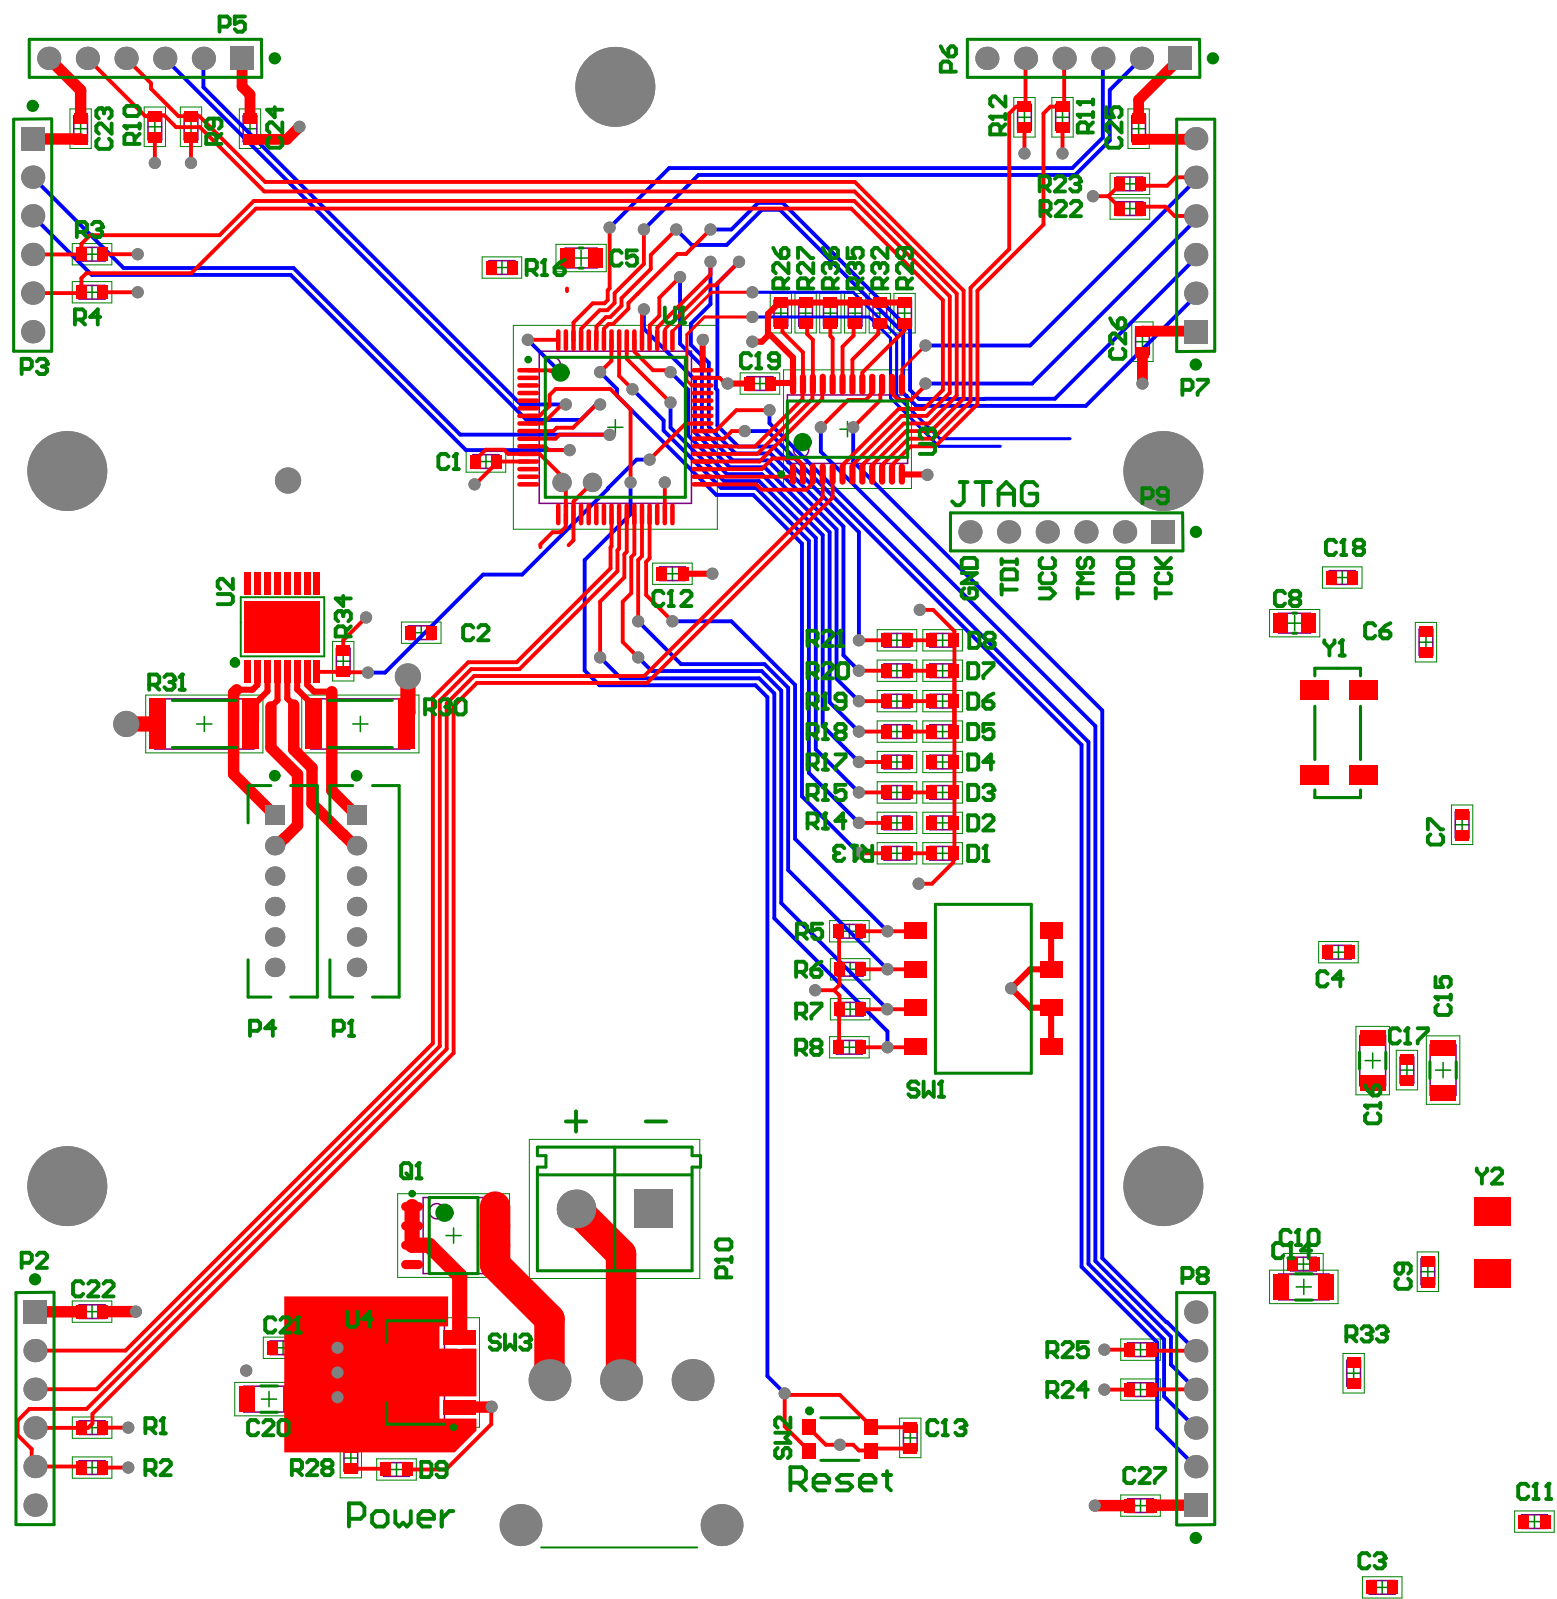

Board Slack Report