


DTC	P1300/14	Igniter Circuit Malfunction
------------	-----------------	------------------------------------

CIRCUIT DESCRIPTION

A DIS (Direct Ignition System) has been adopted. The DIS improves the ignition timing accuracy, reduces high-voltage loss, and enhances the the overall reliability of the ignition system by eliminating the distributor. The DIS is a 1-cylinder ignition system which ignites one cylinder with one ignition coil. In the 1-cylinder ignition system, the one spark plug is connected to the end of the secondary winding. High voltage generated in the secondary winding is applied directly to the spark plug. The spark of the spark plug pass from the center electrode to the ground electrode.


The engine ECU determines ignition timing and outputs the ignition signals (IGT) for each cylinder. Based on IGT signals, the power transistors in the igniter cuts off the current to the primary coil in the ignition coil is supplied to the spark plug that are connected to the end of the secondary coil. At the same time, the igniter also sends an ignition confirmation signal (IGF) as a fail-safe measure to the engine ECU.

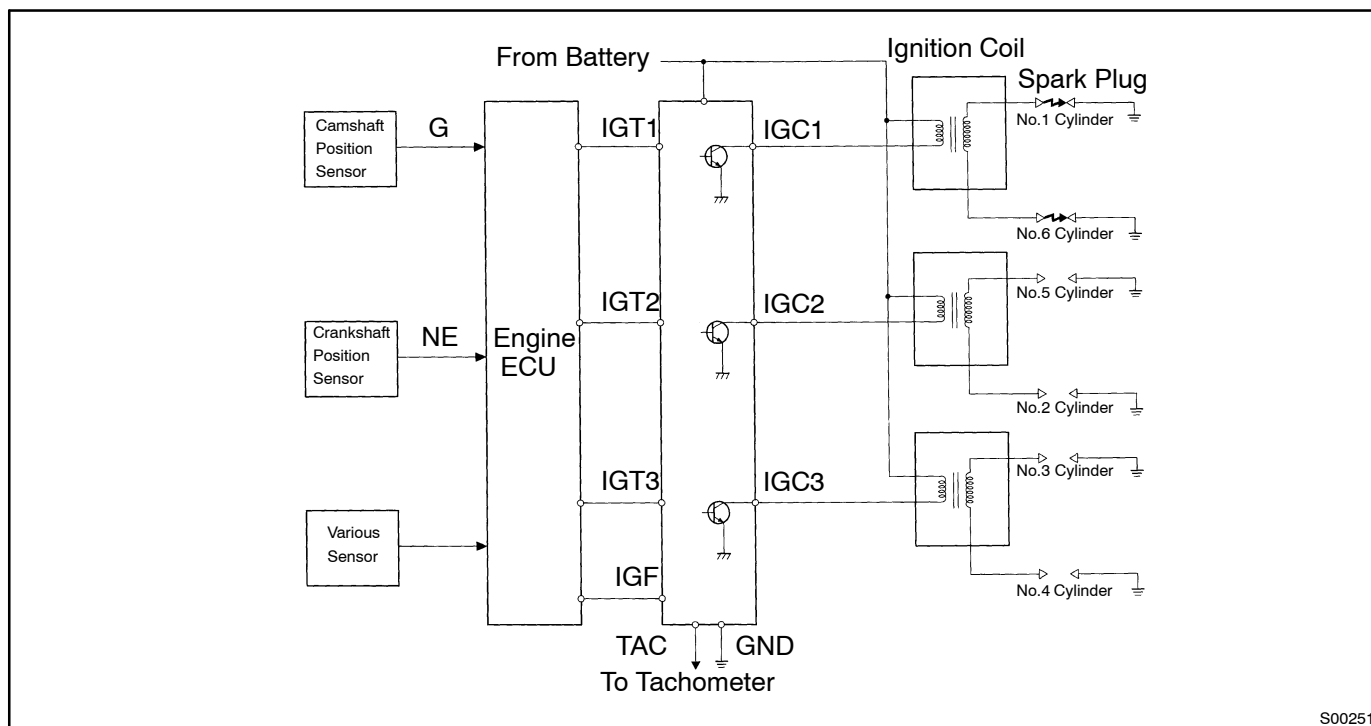

S00251

DTC No.	DTC Detecting Condition	Trouble Area
P1300/14	Condition (a) is repeated 3 times consecutively during 6 consecutive IGT signals while engine is running (a) IGF signal is not input to engine ECU for 2 or more ignitions	<ul style="list-style-type: none"> • Open or short in IGF or IGT circuit from igniter to engine ECU • Igniter • Engine ECU

WIRING DIAGRAM

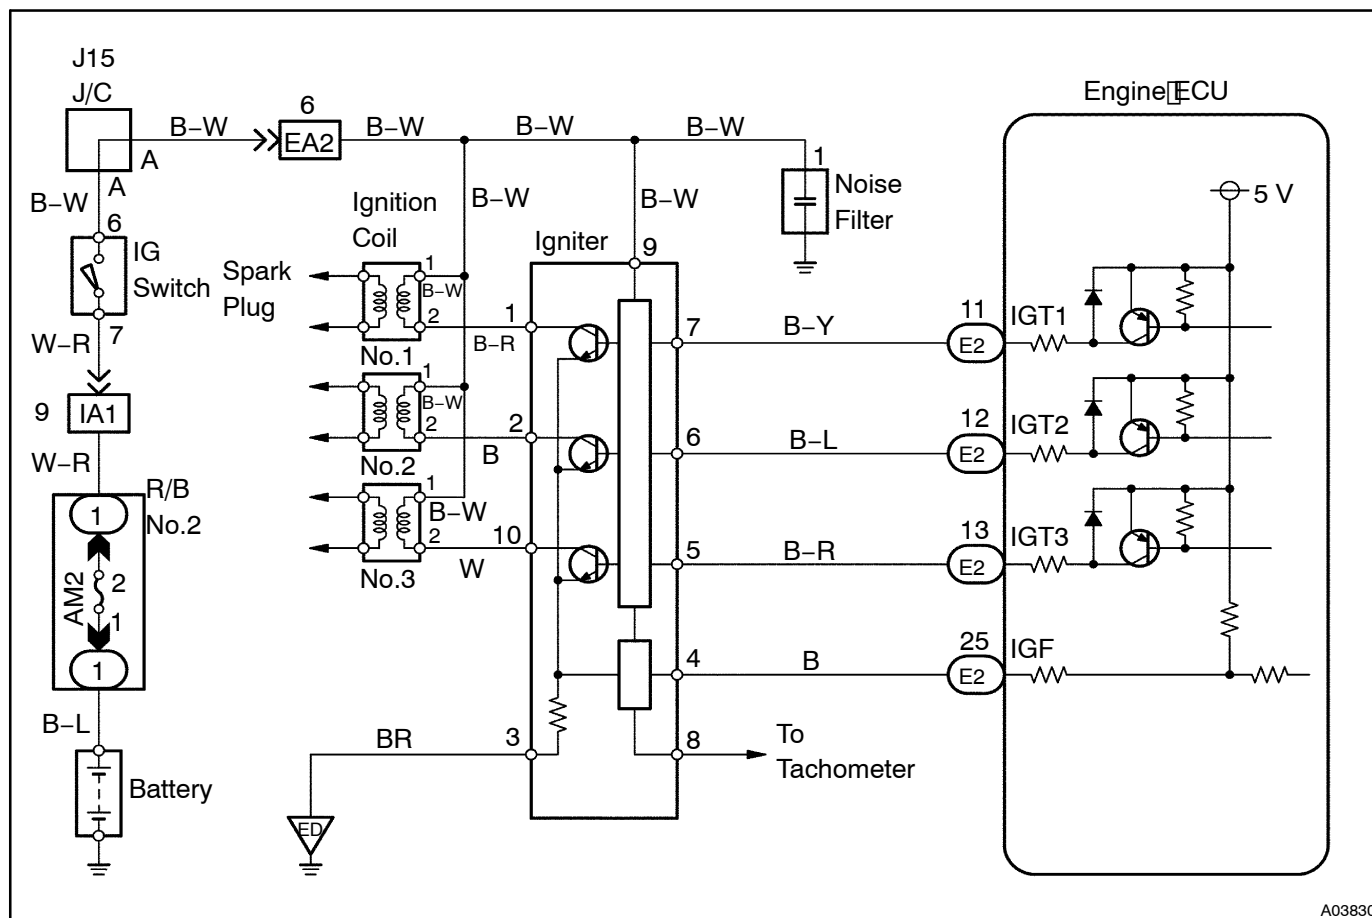

INSPECTION PROCEDURE

HINT:

- Read freeze frame data using a hand-held tester. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

1 Check spark plug and spark (See page IG-1).

NG

Go to step 4.

OK


- 2 Check for open and short in harness and connector in IGF signal circuit between engine ECU and ignition coil with igniter (See page IN-29).

NG

Repair or replace harness or connector.

OK

- 3 Disconnect ignition coil with igniter connector and check voltage between terminals IGF of engine ECU connector and body ground.

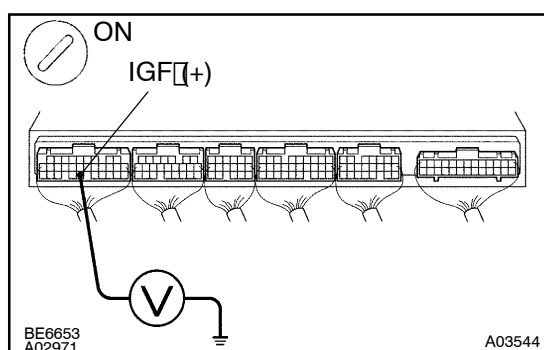**PREPARATION:**

- (a) Disconnect the igniter connector.
- (b) Remove the engine room engine ECU hood and cover.
- (c) Turn the ignition switch ON.

CHECK:

Measure voltage between terminals IGF of the engine ECU connector and body ground.

OK:

Voltage: 4.5 ~ 5.5 V

OK

Replace igniter.

NG

Check and replace engine ECU (See page IN-29).


- 4 Check for open and short in harness and connector in IG1 ~ 3 signal circuit between engine ECU and ignition coil with igniter (See page IN-29).

NG

Repair or replace harness or connector.

OK

5 Check voltage between terminals IGT1 ~3 of engine ECU connector and body ground.

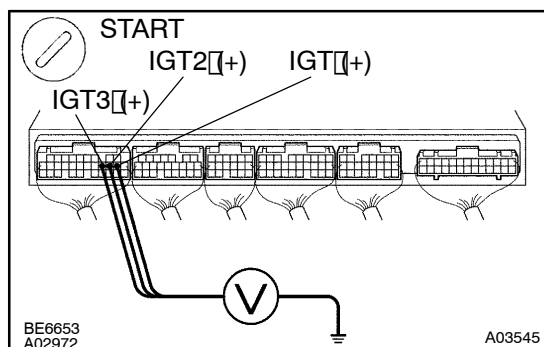

PREPARATION:


Remove the engine room engine ECU hood and cover.

CHECK:

Measure voltage between terminals IGT1 ~3 of the engine ECU connector and body ground when engine is cranked.

OK:

Voltage: More than 0.1 V and less than 4.5 V

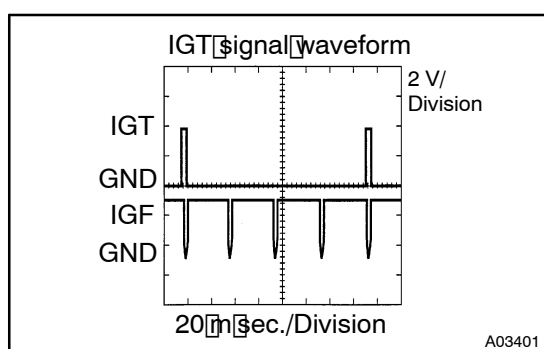

Reference: INSPECTION USING OSCILLOSCOPE

During cranking or idling, check waveform between terminals IGT1 ~3 and E1 of the engine ECU connector.

HINT:


Correct waveform appears as shown, with rectangle waves.

NG

Check and replace engine ECU (See page IN-29).

OK

6 Disconnect connector and check voltage between terminals IGT1 ~3 of engine ECU connector and body ground.

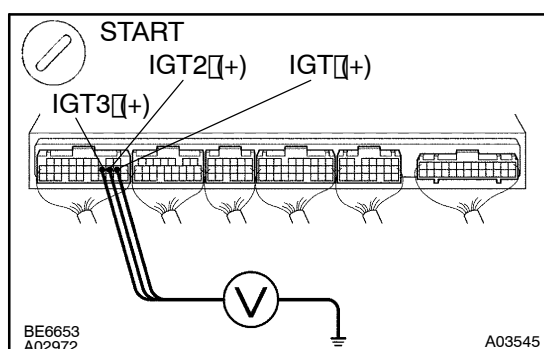

PREPARATION:

(a) Remove the engine room engine ECU hood and cover..

(b) Disconnect the igniter connector.

CHECK:

Measure voltage between terminals IGT1 ~3 of the engine ECU connector and body ground when engine is cranked.

OK:


Voltage: More than 0.1 V and less than 4.5 V

NG

Check and replace engine ECU (See page IN-29).

OK

7 Check voltage between terminal 2 of igniter connector and body ground.

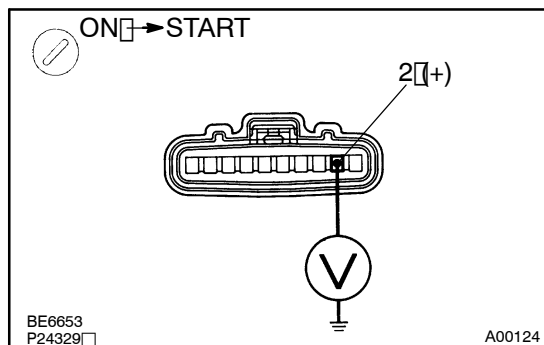

PREPARATION:

Disconnect the igniter connector.

CHECK:

Measure voltage between terminal 1 of igniter connector and body ground, when ignition switch is turned to "ON" and "START" position.

OK:

Voltage: 9 - 14 V

OK

Repair igniter power source circuit.

NG

8 Check for open and short in harness and connector between ignition switch and igniter (See page IN-29).

NG

Repair or replace harness or connector.

OK

9 Check EFI main relay (Marking: EFI) (See page FI-49).

NG

Replace EFI main relay (marking: EFI).

OK

Replace igniter.