


Elite 110 Series

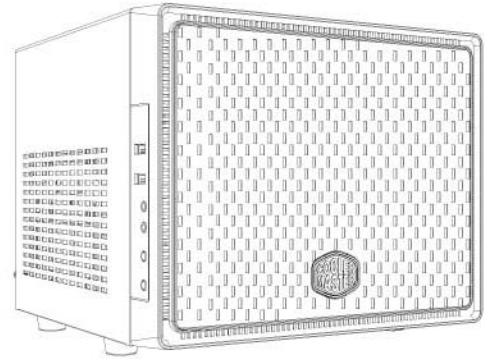

Asia Pacific
Cooler Master Technology Inc.
8F., No. 788-1, Zhongzheng Rd., Zhonghe Dist.,
New Taipei City 23586, Taiwan (R.O.C.).
Tel: +886-2-2225-3517
Service: eservice@coolermaster.com.tw

CHINA
Cooler Master China
5F., Building B, No. 18, HeChang E. 4th Rd., ZhongKai,
Hui-Zhou City, Guang Dong Province, China
Tel: +86-752-260-8898
Service: web@coolermaster.com.cn

EUROPE
Cooler Master Europe B.V.
Hudsonweg 3 Trade Port West 9272,
5928 LW Venlo, The Netherlands
Service: Support@coolermaster.nl

USA
Cooler Master USA
4820 Schaefer Ave. Chino CA 91710, USA
Service: support@coolermaster.com

Global Live Help: <http://www.coolermaster.com/livehelp>

For the most updated information, please visit our official website: <http://www.coolermaster.com>
©2013 Cooler Master Technology Inc. All Rights Reserved. All trademarks are registered to their respective owners.

Installation Guide

User manual / English
شيفتدال ليلد / Arabic
Инструкция за експлоатация / Български
安裝說明 / 簡體中文
安裝說明 / 繁體中文
Uživatelská příručka / Čeština
Handuch / Deutsch
Εγχειρίδιο χρήσης / Ελληνικά
Manual de Usuario / Español
Manuel de l'utilisateur / Français
Felhasználói kézikönyv / Magyar
Manuale d'uso / Italiano
ユーザーズマニュアル / 日本語
Handleiding / Nederlands
설치 안내 / Korean
Қолданушы нұсқаулығы / Kazakh
Instrukcja Użytkownika / Polski
Manual do Usuário / Português
Руководство пользователя / русский
Uputstvo za korišćenje / Srpski
Kullanım Kilavuzu / Türkçe



Specifications

Material	Appearance: polymer front mesh panel Case body: Steel alloy
Dimensions (W x H x D)	260x 208 x 280 mm/10.3x8.2x11.1 inch
Net weight	2.65kg / 5.9lbs
M/B Type	Mini ITX
3.5" / SSD Drive Bays	3 x 3.5" HDD, or 2 x 3.5" HDD and 2 x SSD, or 1 x 3.5" HDD and 3 x SSD, or 4 x SSD
I/O Panel	USB 3.0 x 2 , Audio In & Out
Expansion Slots	2
Cooling System	Front: 120 mm fan x 1 (installed, converted to 140 mm fan x 1) Side: 80mm fan x 2 (optional)
Maximum Compatibility	VGA card length: 210 mm / 8.3 inch CPU cooler height: 76mm / 3 inch PSU length: 180mm/ 7.1 inch (w/ less cable management) 142mm / 5.6 inch (w/ full cable management) Max Radiator size: 120mm
Power Supply Type	Standard ATX PS2


* Product specifications are subject to change without notice.

Fittings Pack

Figure	Name	Q'ty	Used for
	Cable tie	3	Cable management
	#6-32*6.5 screw	4	M/B tray
	#6-32*6 screw	8	PSU, M/B
	#6-32*5 step screw	2	3.5" HDD (installed on the left side panel)
	Stand-off socket	1	M/B tray
	M3*8 step screw	8	2.5" SSD (installed on the left side panel)
	Shockproof Pad	8	2.5" SSD (installed on the left side panel)
	Buzzer	1	Motherboard speaker
	M3*5 screw	8	2.5" SSD (installed on the top panel)
	#6-32*5 screw	10	3.5" HDD (installed on the top panel and the left side panel)

Icon Description
 A screw driver for assembling is needed


Diagram/示意图

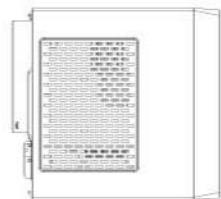

Top view/顶视图



Left view/左视图

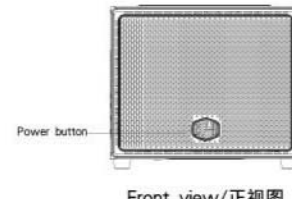


Front view/正视图



Warning!!

- CPU cooler installation:
Please ensure that your CPU cooler does NOT exceed 3 inch (76 mm) in height, it will cause damage to the side panel of the case and the CPU cooler.
- Please ensure that your graphics card does NOT exceed 8.3 inch (210mm) in length, it will cause damage to the case and the graphics card.
- Before install a radiator in front, please check the limitation
(1) The distance between front panel to the edge of M/B is 40 mm
(2) The distance between the bottom side of PSU is 76 mm.

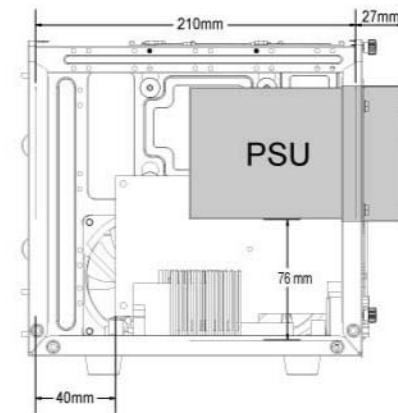



图示说明
 必备螺丝刀

Installation Guide / 安装说明

1

- EN** How to remove the top panel
AR كيفية إزالة اللوحة العلوية
BG Как се отстранява страничният панел
CHS 卸除上板
CHT 卸除上板
CS Jak odstranit horní panel
DE So entfernen Sie die obere Gehäuseverschalung
EL Πώς να αφαιρέσετε το άνω κάλυμμα
ES Como extraer el panel superior
FR Comment retirer le panneau supérieur
HU Felső panel eltávolítása




- IT** Come estrarre il pannello superiore
JP トップパネルの取り外し方法
KR 상단 패널 제거 방법
KZ Жоғарғы тақтаны қалай алу керек
NL Verwijderen van het top panel
PL Jak zdjąć górny panel
PT Como remover o painel superior
RU Как снять верхнюю панель
SR Kako da uklonite gornju stranicu
TR Üst panel nasıl çıkarılır

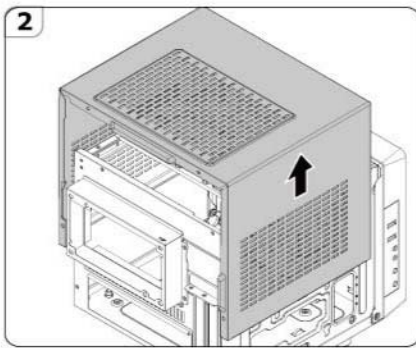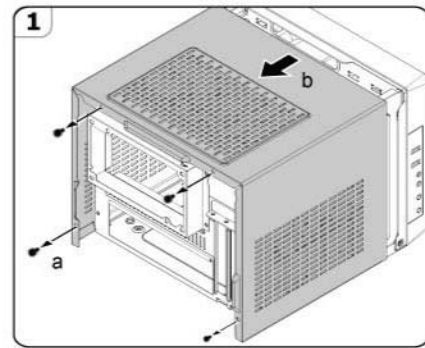

2

- EN** How to install the motherboard
AR الأم التثبيت كيفية
BG Как се инсталира дънната платка
CHS 安裝主機板
CHT 安裝主機板
CS Jak nainstalovat motherboard
DE So installieren Sie das Motherboard
EL Πώς να εγκαταστήσετε τη Μητρική μονάδα
ES Cómo instalar la placa base
FR Comment installer la carte mère
HU Alaplap összeállítás

- IT** Come installare la motherboard
JP マザーボードの取り付け方法
KR 미디보드 설치 방법
KZ Аналық платаны қалай орнату керек
NL Installeren van het moederbord
PL Jak zamontować płytę główną
PT Como instalar a placa-mãe
RU Как установить материнскую плату
SR Kako da instalirate matičnu ploču
TR Anakartı kurma

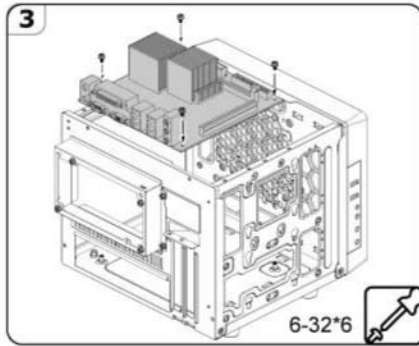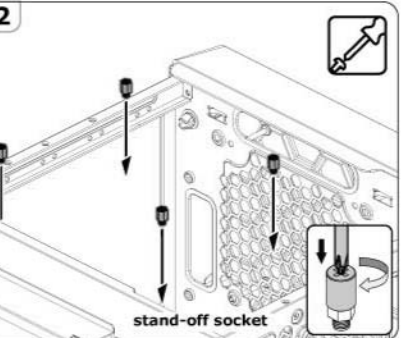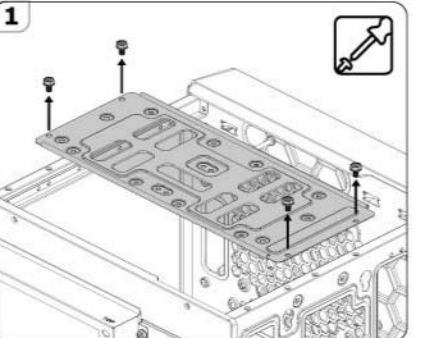


- EN** How to install or replace the case fan
AR الكمبيوتر حافظه مبردة استبدال أو تثبيت كيفية
BG Как се инсталират или заменят вентилаторите на кутията
CHS 安装和更换机箱风扇
CHT 安裝和更換機箱風扇
CS Jak nainstalovat či vyměnit větrák
DE So installieren Sie Gehäuselüfter oder tauschen sie aus
EL Πώς να εγκαταστήσετε ή να αντικαταστήσετε τους ανεμιστήρες του περιβλήματος
ES Cómo instalar o reemplazar los ventiladores de la carcasa
FR Comment installer ou remplacer les ventilateurs du boîtier
HU Ventilátorok szerelése vagy cseréje

- IT** Come installare o sostituire le ventole del case
JP ケースファンの取り付けまたは交換方法
KR 케이스 팬 설치 또는 제거하는 방법
KZ Қаңқалық желдеткіштерді қалай орнату керек
NL Installeren of vervangen van de case fans
PL Jak zamontować lub wymienić wentylatory w obudowie
PT Como instalar ou substituir ventoinhas da caixa
RU Как установить или заменить корпусные вентиляторы
SR Kako da instalirate ventilatore u kućiste i da ih menjate
TR Kasa fanlarını kurma veya değiştirme


3.1 How to install fan(s) or a radiator

Pull front panel, from the bottom side, outward

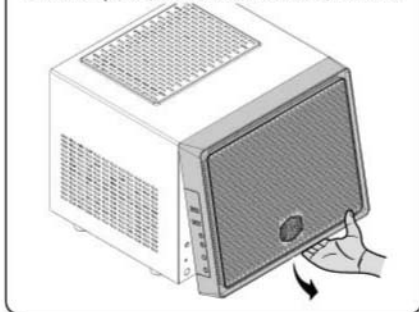


3.2 Install a 120/140mm fan or 120mm radiator on the front


(A) Install a 120mm fan

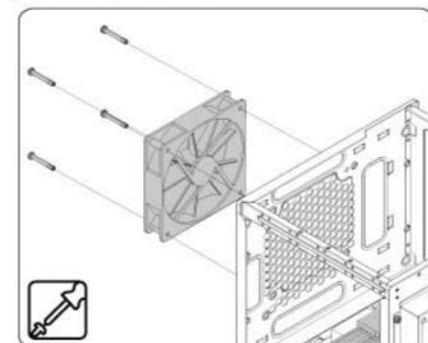

(B) Install a 140mm fan

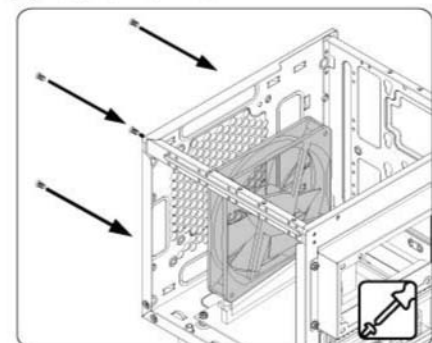


(C) Install a 120mm radiator

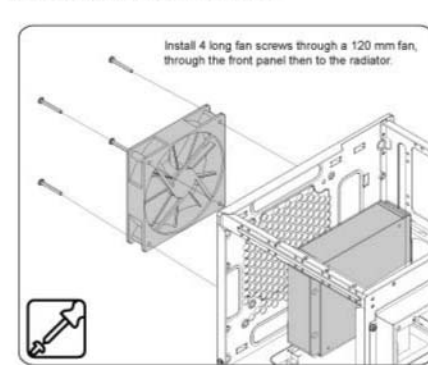

3.3 Install 80mm fan(s) on the side

* If fans are installed on the left side panel, you can't install graphic card with 2 PCI brackets.

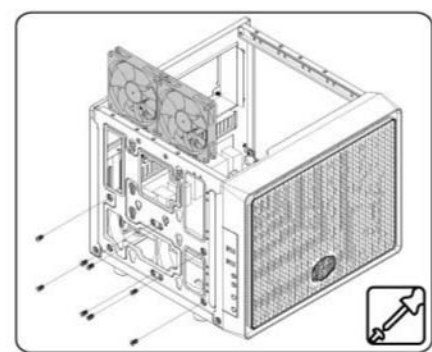


4

- EN** How to install the 3.5"/2.5" device
AR كيفية تثبيت القرص الصلب مقاس 3.5"/2.5" بوصة
BG Как се инсталират 3.5"/2.5" устройствата
CHS 安装3.5"/2.5" 硬盘
CHT 安裝3.5"/2.5" 硬碟
CS Jak nainstalovat zařízení 3.5"/2.5"
DE So installieren Sie 3.5/2.5 Zoll Geräte
EL Πώς να εγκαταστήσετε τις συσκευές 3.5"/2.5"
ES Como instalar los dispositivos de 3.5"/2.5"
FR Comment installer les périphériques 3.5/2.5 pouces
HU 3.5"/2.5" eszközök beszerelése


- IT** Come installare le unità da 3.5"/2.5"
JP 3.5/2.5インチデバイス (HDDなど) の取り付け方法
KR 3.5/2.5인치 하드 디스크 드라이브 설치 방법
KZ 3.5"/ 2.5" қатқыл дискіні қалай орнату керек
NL Installeren van de 3.5"/2.5" apparaten
PL Jak zamontować urządzenia 3.5"/2.5"
PT Como instalar os dispositivos de 3.5"/2.5"
RU Как установить 3.5"/2.5" устройства
SR Kako da instalirate 3.5"/2.5" uređaja
TR 3.5"/2.5" aygıtları kurma

4.1 Install a 3.5" HDD / SSD on the side bracket

(A) Install a 3.5" HDD

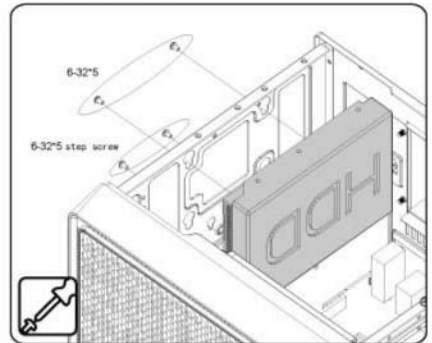

(B) Install a SSD

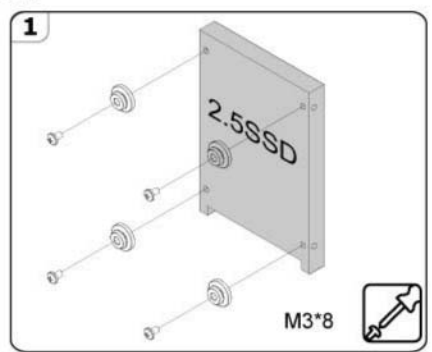


4.2 Install a 3.5" HDD / SSD on the top bracket


*Top hard drive mount is optional depending on thermal condition

*Please do this step after install a PSU

(A) Install a 3.5" HDD

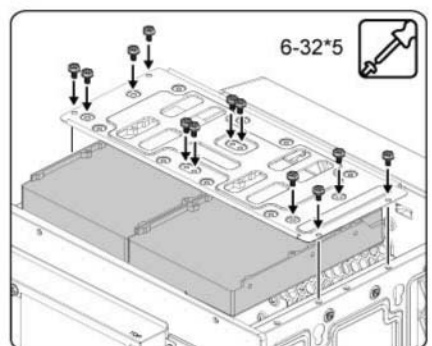



(B) Install a SSD

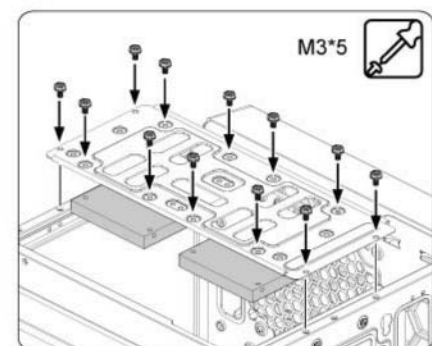

5

- EN** How to install the add-on card
AR مضافة بطاقات تثبيت كيفية
BG Как се инсталират допълнителните платини
CHS 安裝显卡
CHT 安裝顯示卡
CS Jak nainstalovat přídatné karty
DE So installieren Sie Erweiterungskarten
EL Πώς να εγκαταστήσετε τις κόρτες προεθκήης
ES Cómo instalar tarjetas adicionales
FR Comment installer les cartes supplémentaires
HU Add-on kártyák beszerelése

- IT** Come installare le schede aggiuntive
JP 拡張カードの取り付け方法
KR 애드온 카드 설치 방법
KZ Кеңейту карталарын қалай орнату керек
NL Installeren van de uitbreidings kaarten
PL Jak podłączyć karty rozszerzeń
PT Como instalar as placas adicionais
RU Как установить карты расширения
SR Kako da instalirate dodatne kartice
TR Eklenli kartlarını kurma

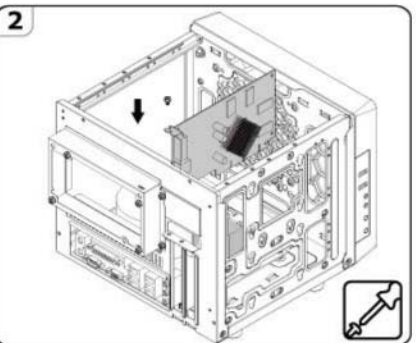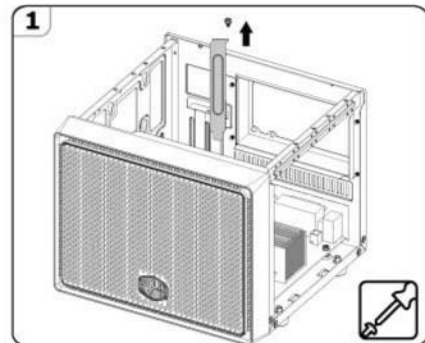

6

- EN** How to install the power supply
AR الطاقة موفر تثبيت كيفية
BG Как се поставя захранващата връзка
CHS 安裝電源
CHT 安裝電源
CS Jak instalovat zdroj napájení
DE So installieren Sie das Netzteil
EL Πώς να εγκαταστήσετε τη τροφοδοσία
ES Cómo instalar la fuente de alimentación
FR Comment installer l'unité d'alimentation
HU Tápellátás bekötése

- IT** Come installare l'alimentatore
JP 電源ユニットの取り付け方法
KR 파워 서플라이 설치 방법
KZ Қуат көзі блогын қалай орнату керек
NL Installeren van de voeding
PL Jak podłączyć źródło zasilania
PT Como instalar a fonte de alimentação
RU Как установить блок питания
SR Kako da instalirate napajanje
TR Güç kaynağını kurma

*Recommend PSU installation with fan intake facing down if HDD(s), SSD(s) on the top bracket

