



SMARTPEN Components

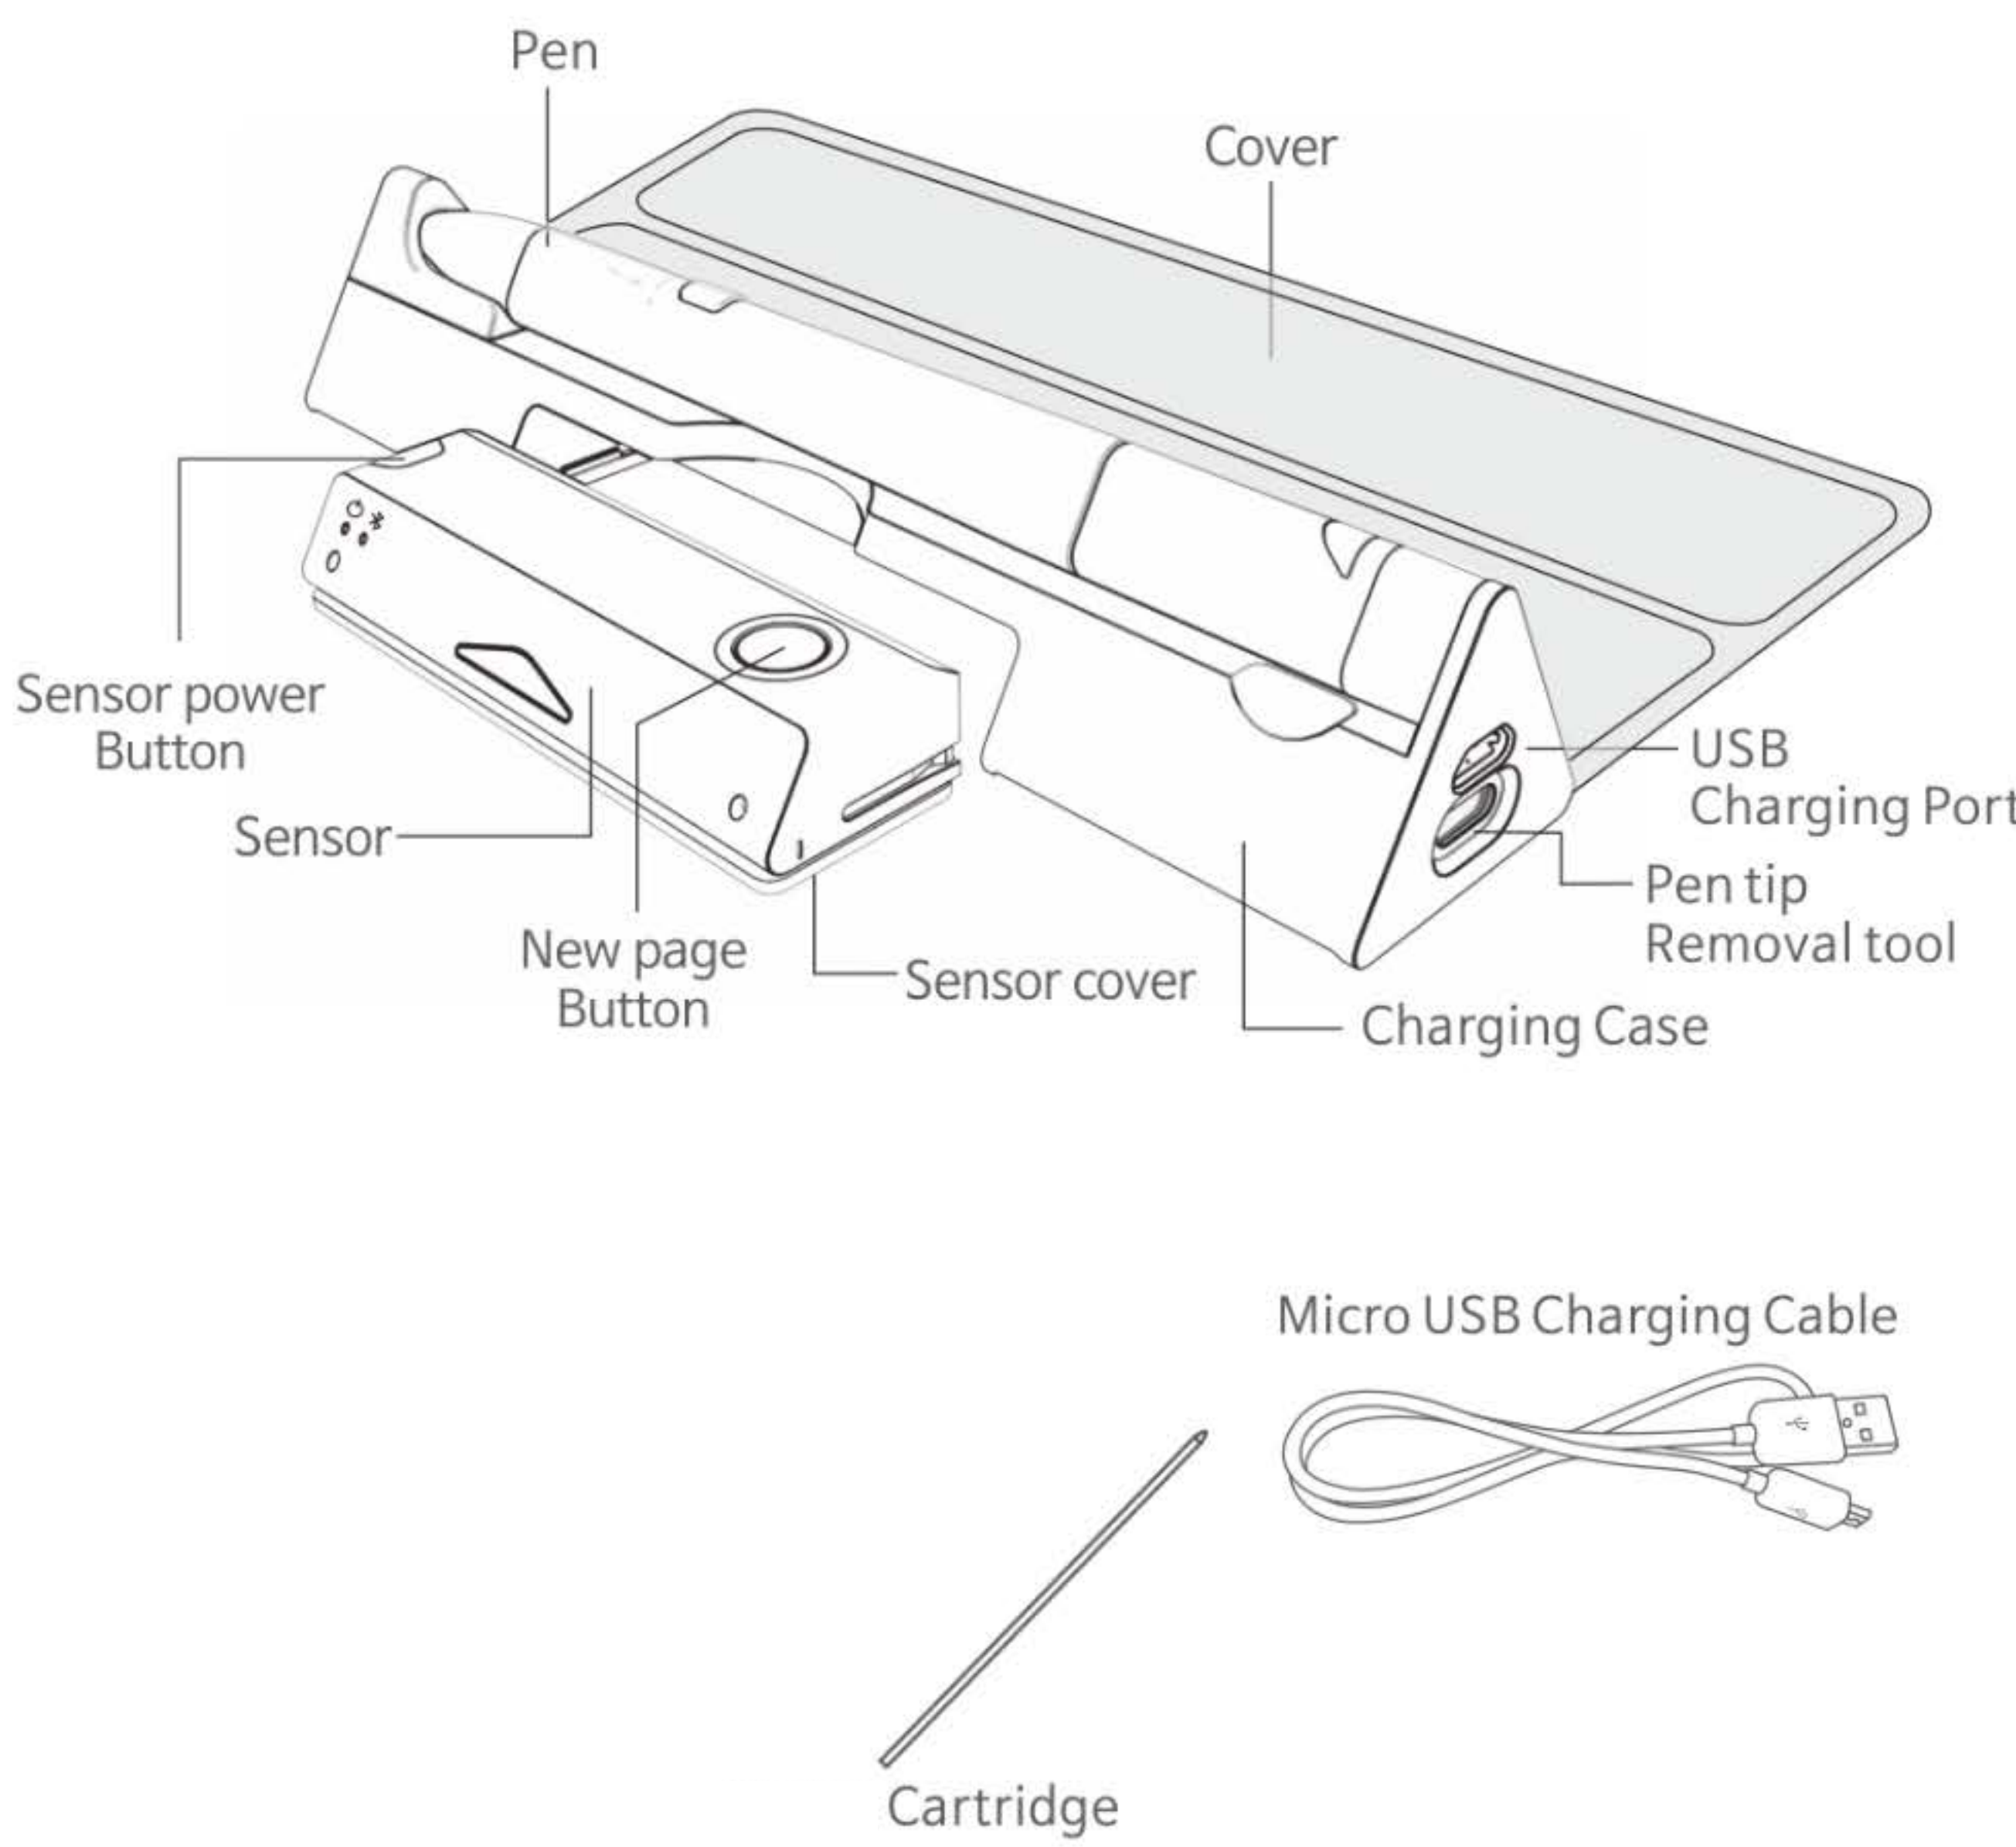

Charging Pen and the Sensor


Please fully charge SMARTPEN
before initial use.

Charging time is approx. 2hrs.

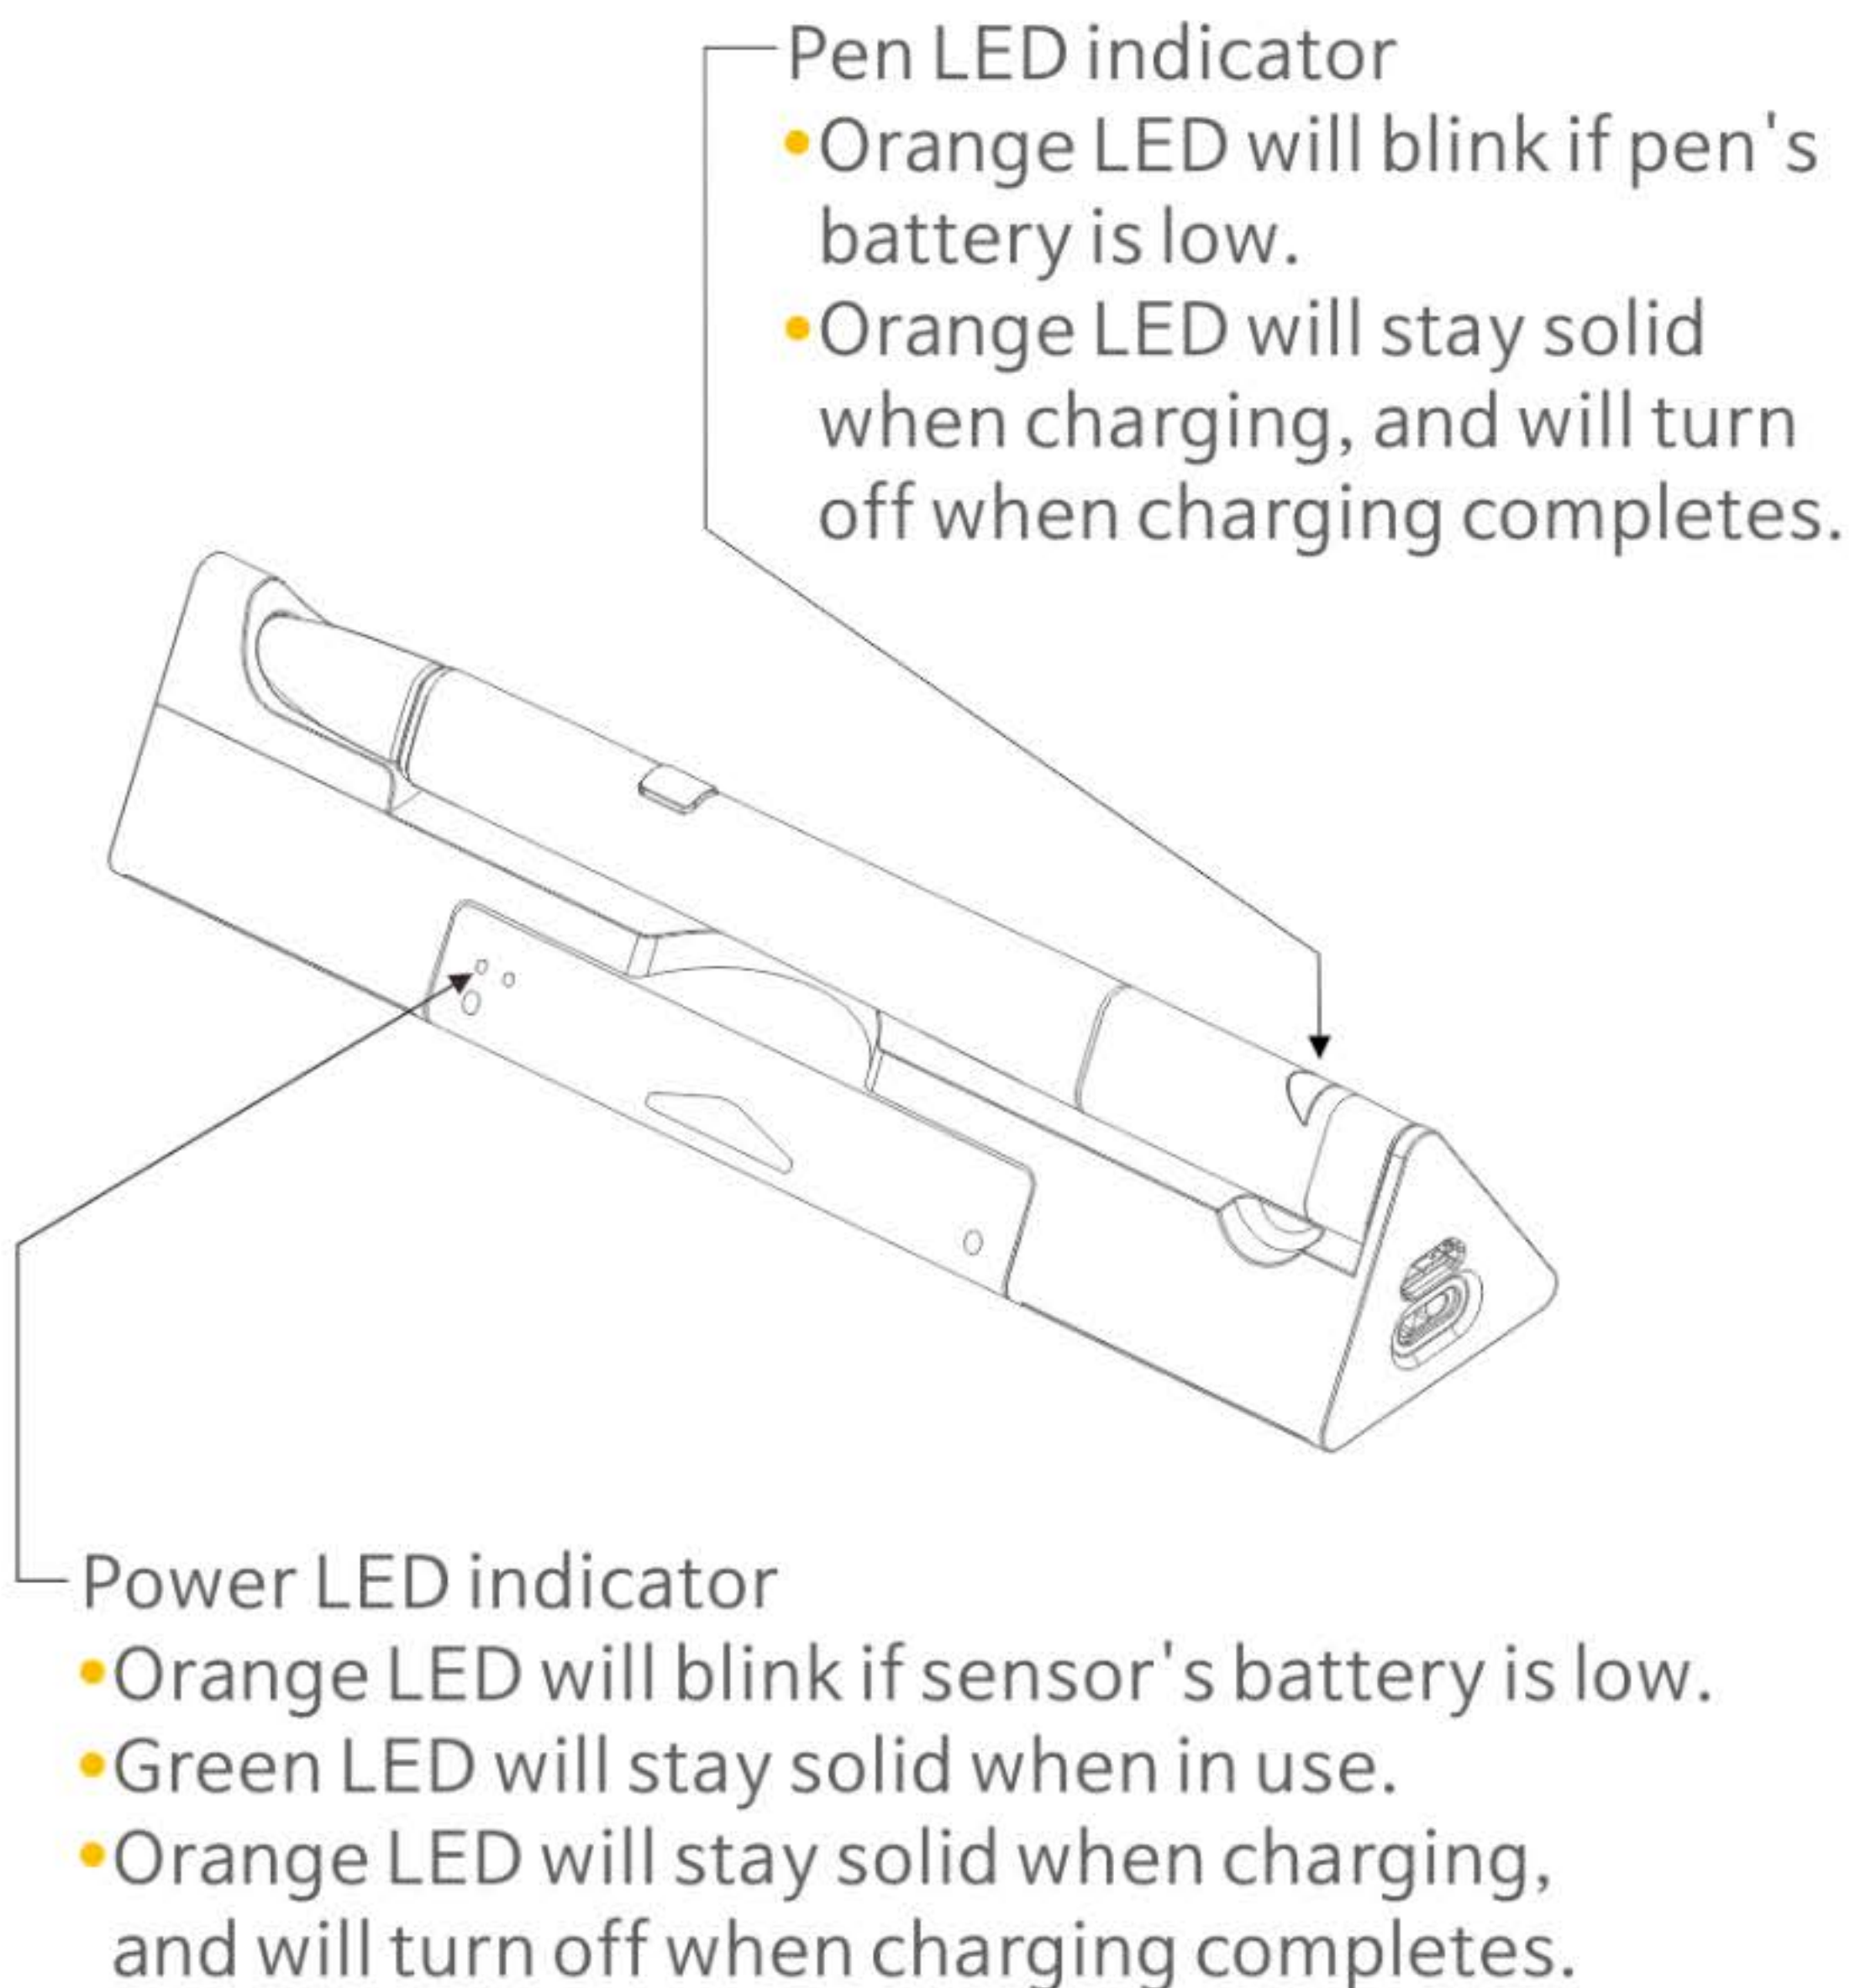

How to use

SMARTPEN

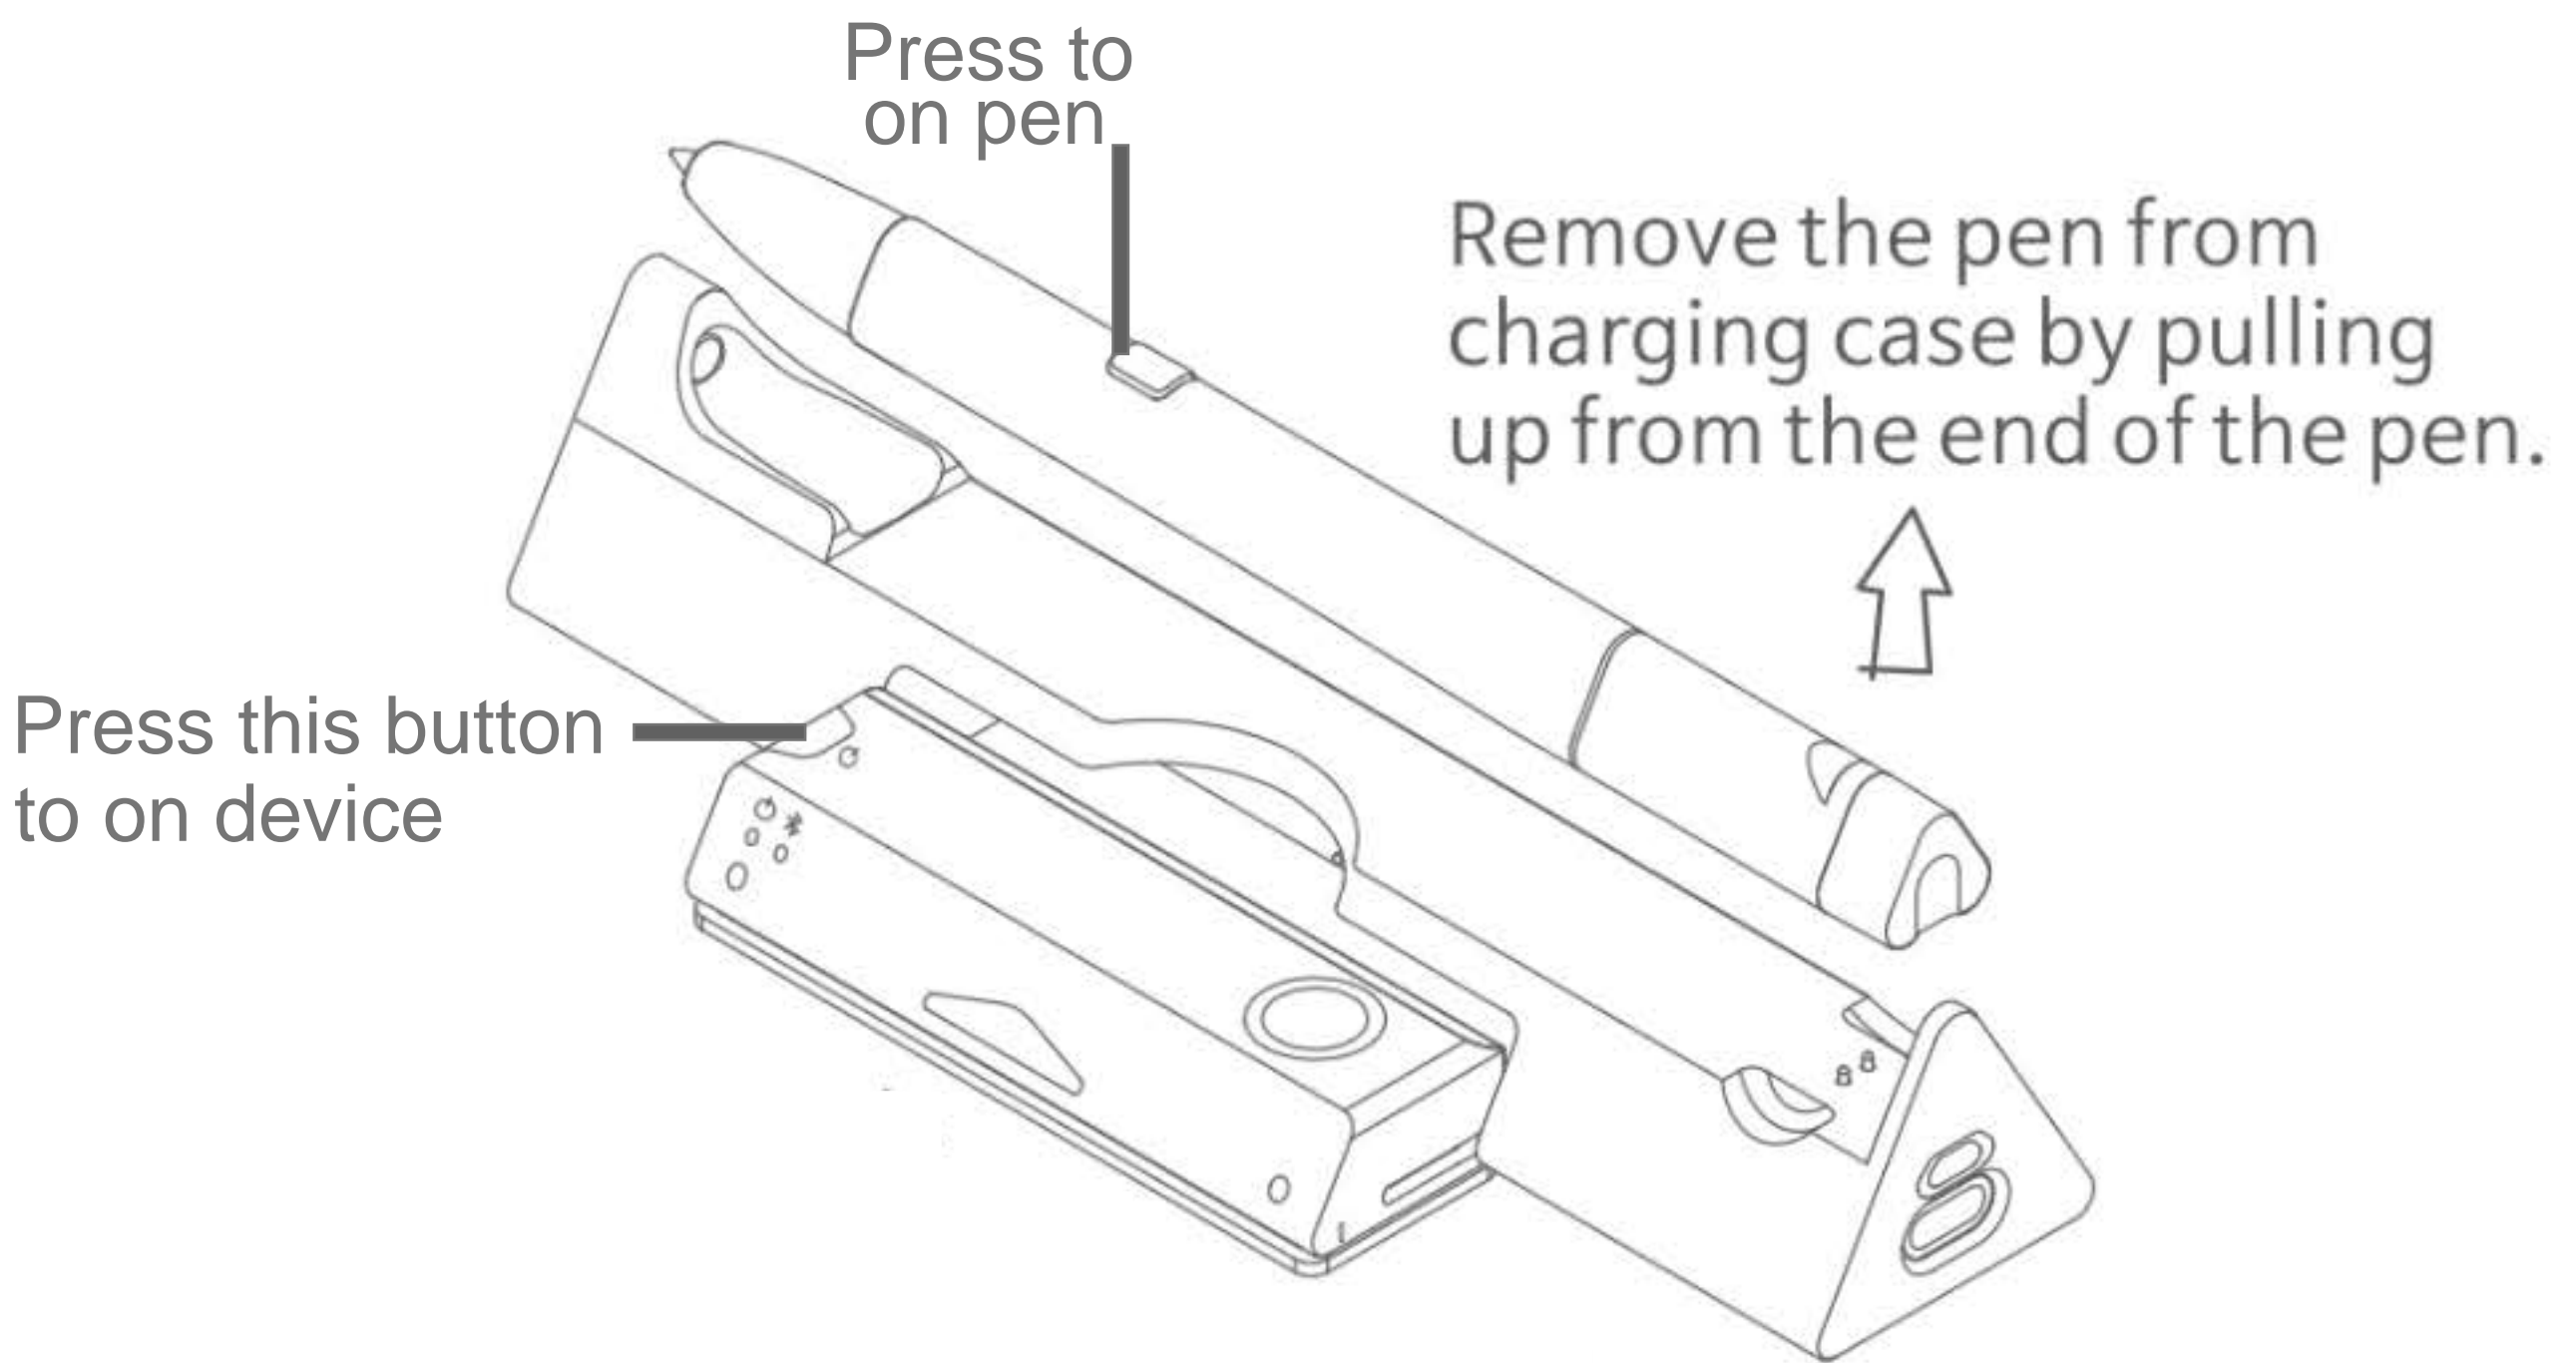


Bluetooth LED

- Blue LED will blink when sensor is searching for device. Once connected, Blue LED will stay solid.


Using Pen

Caution

Yes

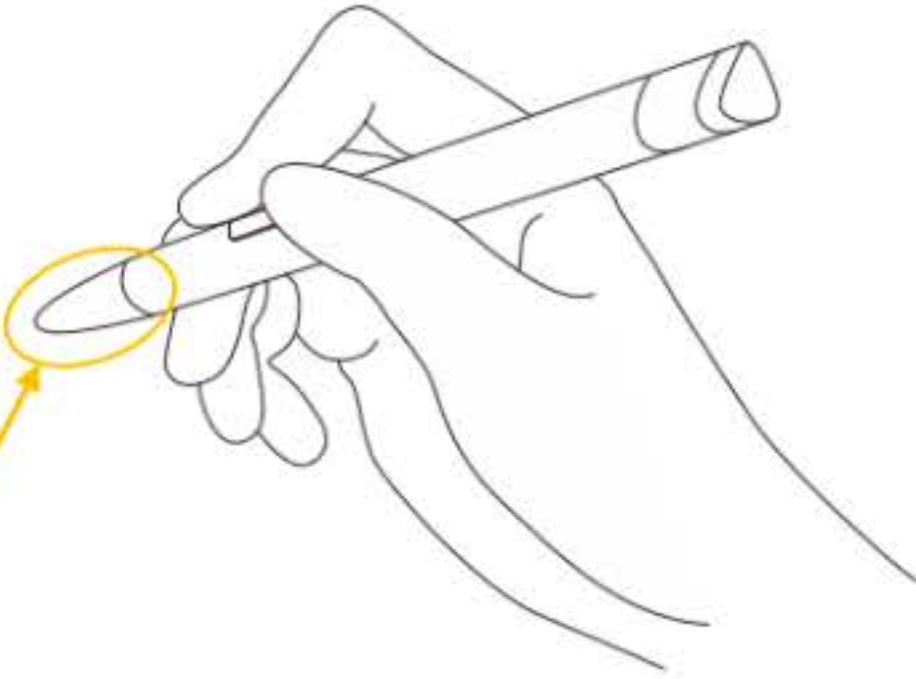

No

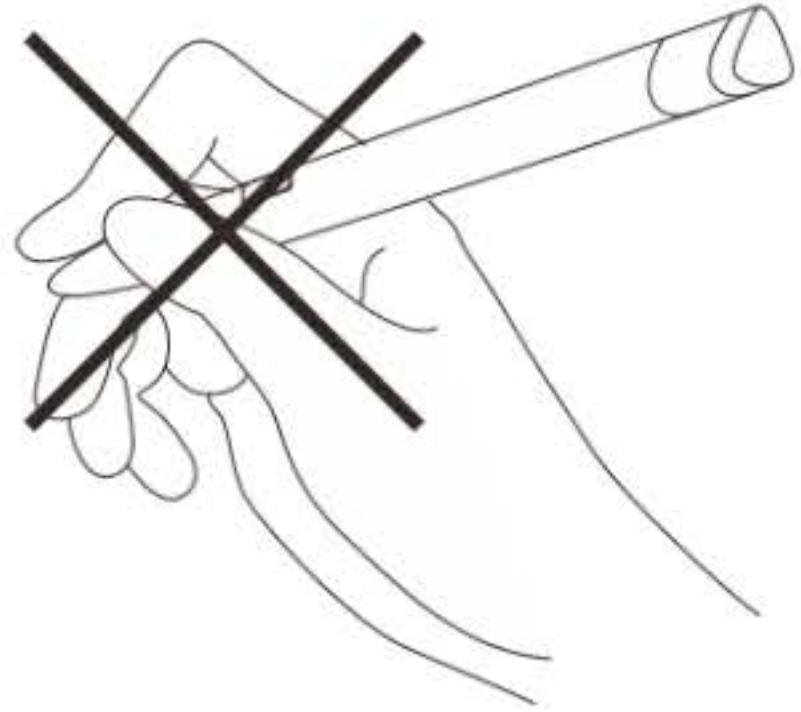


Tip of the pen should not be covered by hand.

- Cursor will show up when Pen Pointer Button is pressed.





- Please do not block line of sight from pen and the sensor.

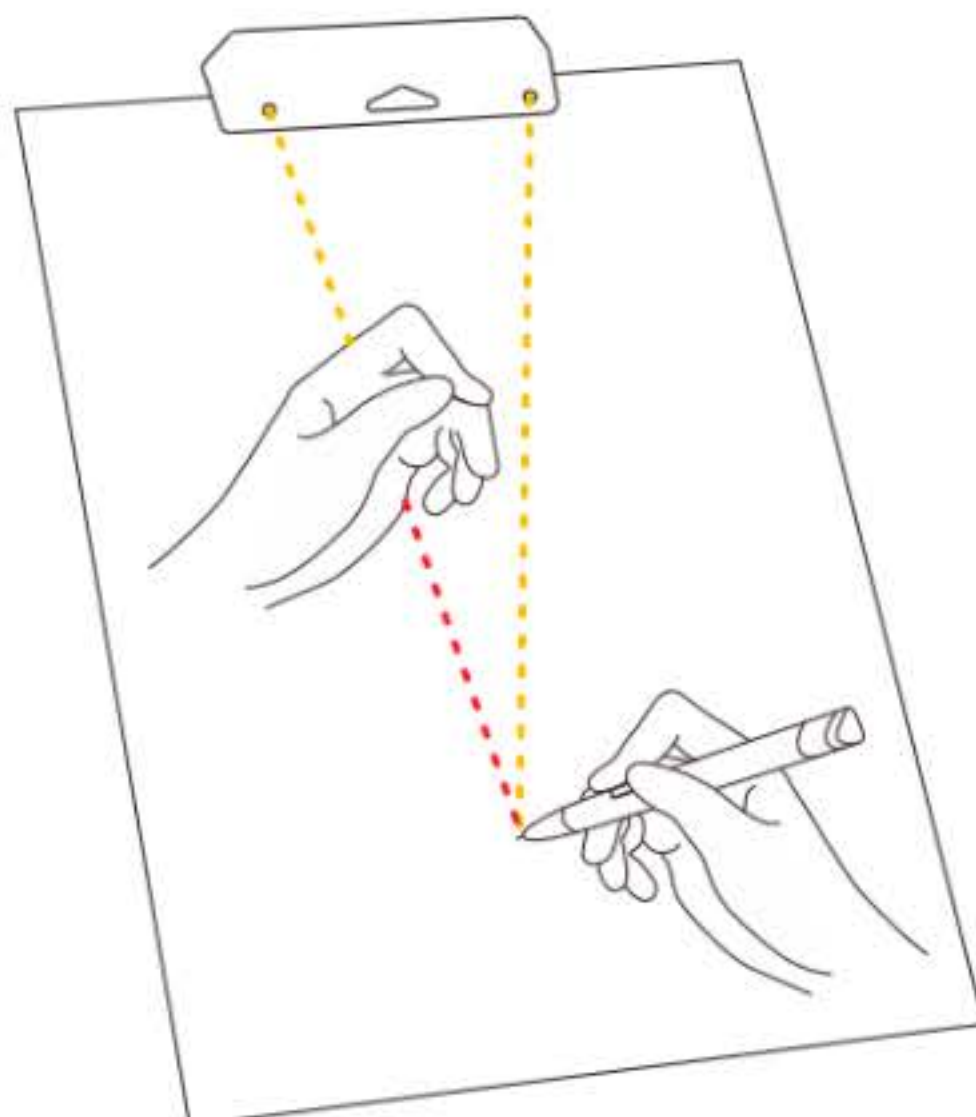


Troubleshoot

- You see the writing on paper, but not on device.
 1. Please check to see if pen and sensor are charged and turned on.
 2. Please do not cover tip of the pen as shown on illustration (1-1).
 3. Please do not cover line of sight from sensor to pen as shown on illustration (1-2).

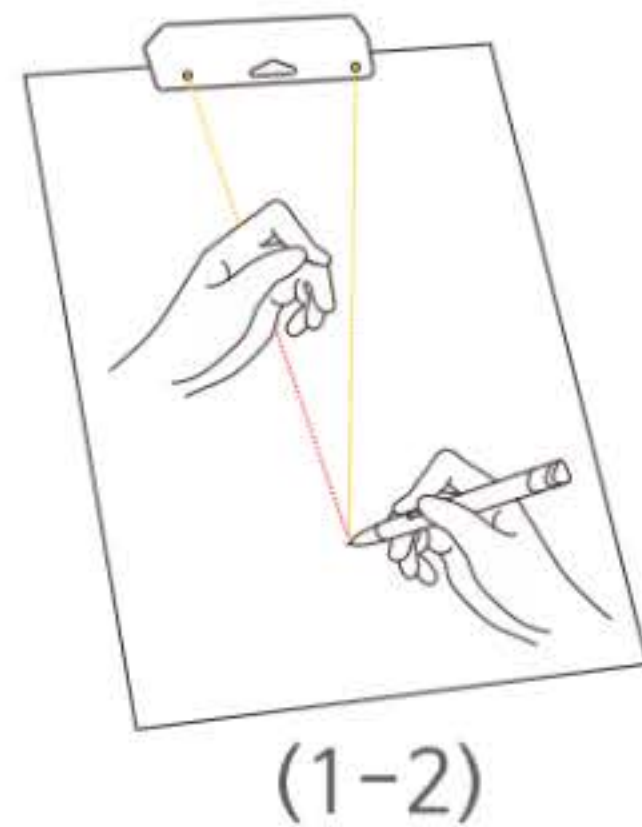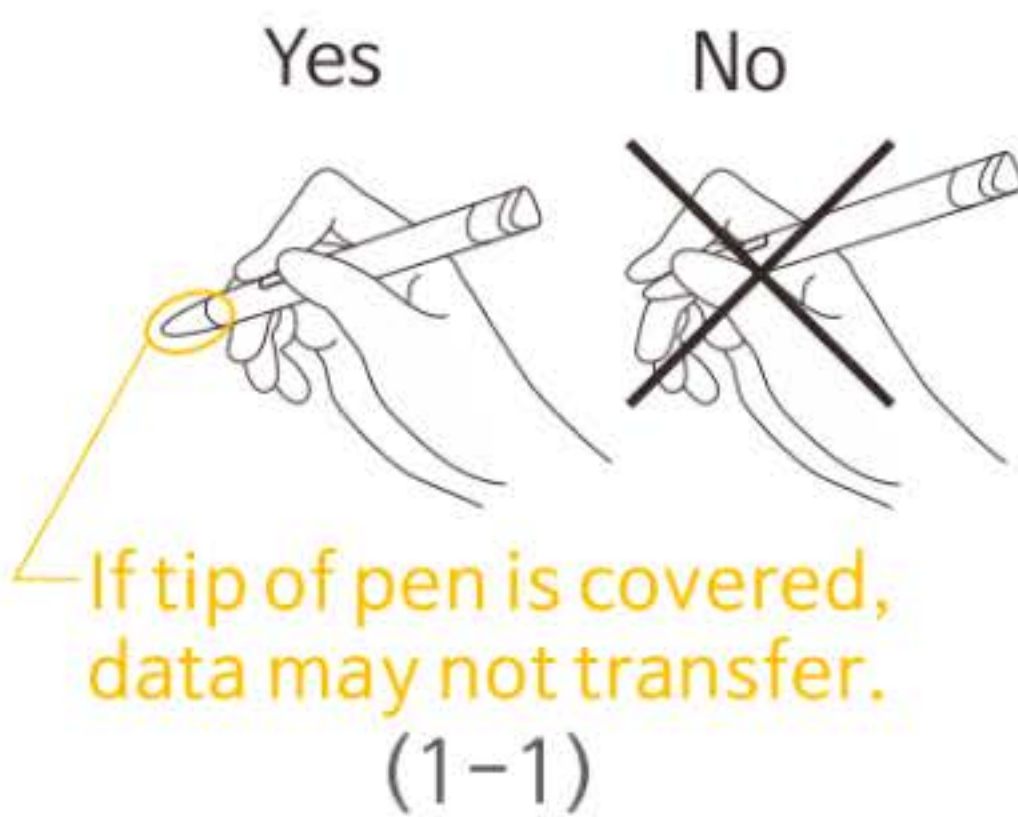


- Writing shows up app, but not on paper.
 1. Please check ball point cartridge.
 2. When pen tip needs to be replaced, please follow step by step direction shown below (1-3).

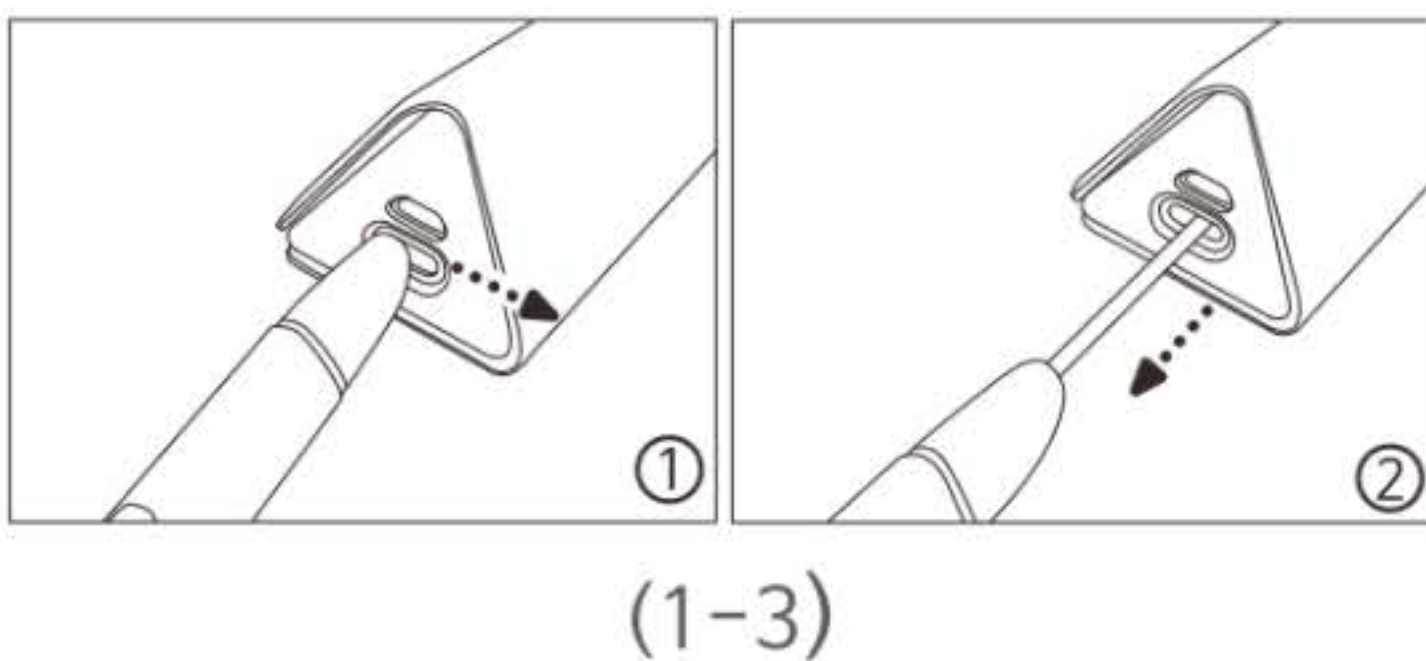



- Pen may malfunction if pen is not fully inserted in to the pen.
- Pen may not work properly under the circumstances of being exposed to certain models of motion sensors.
- Pen is not defective when not working under these circumstances.
- Please move away from motion sensor to use the pen.

Caution

- When changing pen cartridge, please insert pen tip fully and straight into the pen as it is illustrated.
- If cartridge isn't pushed in fully, pen may not work properly.

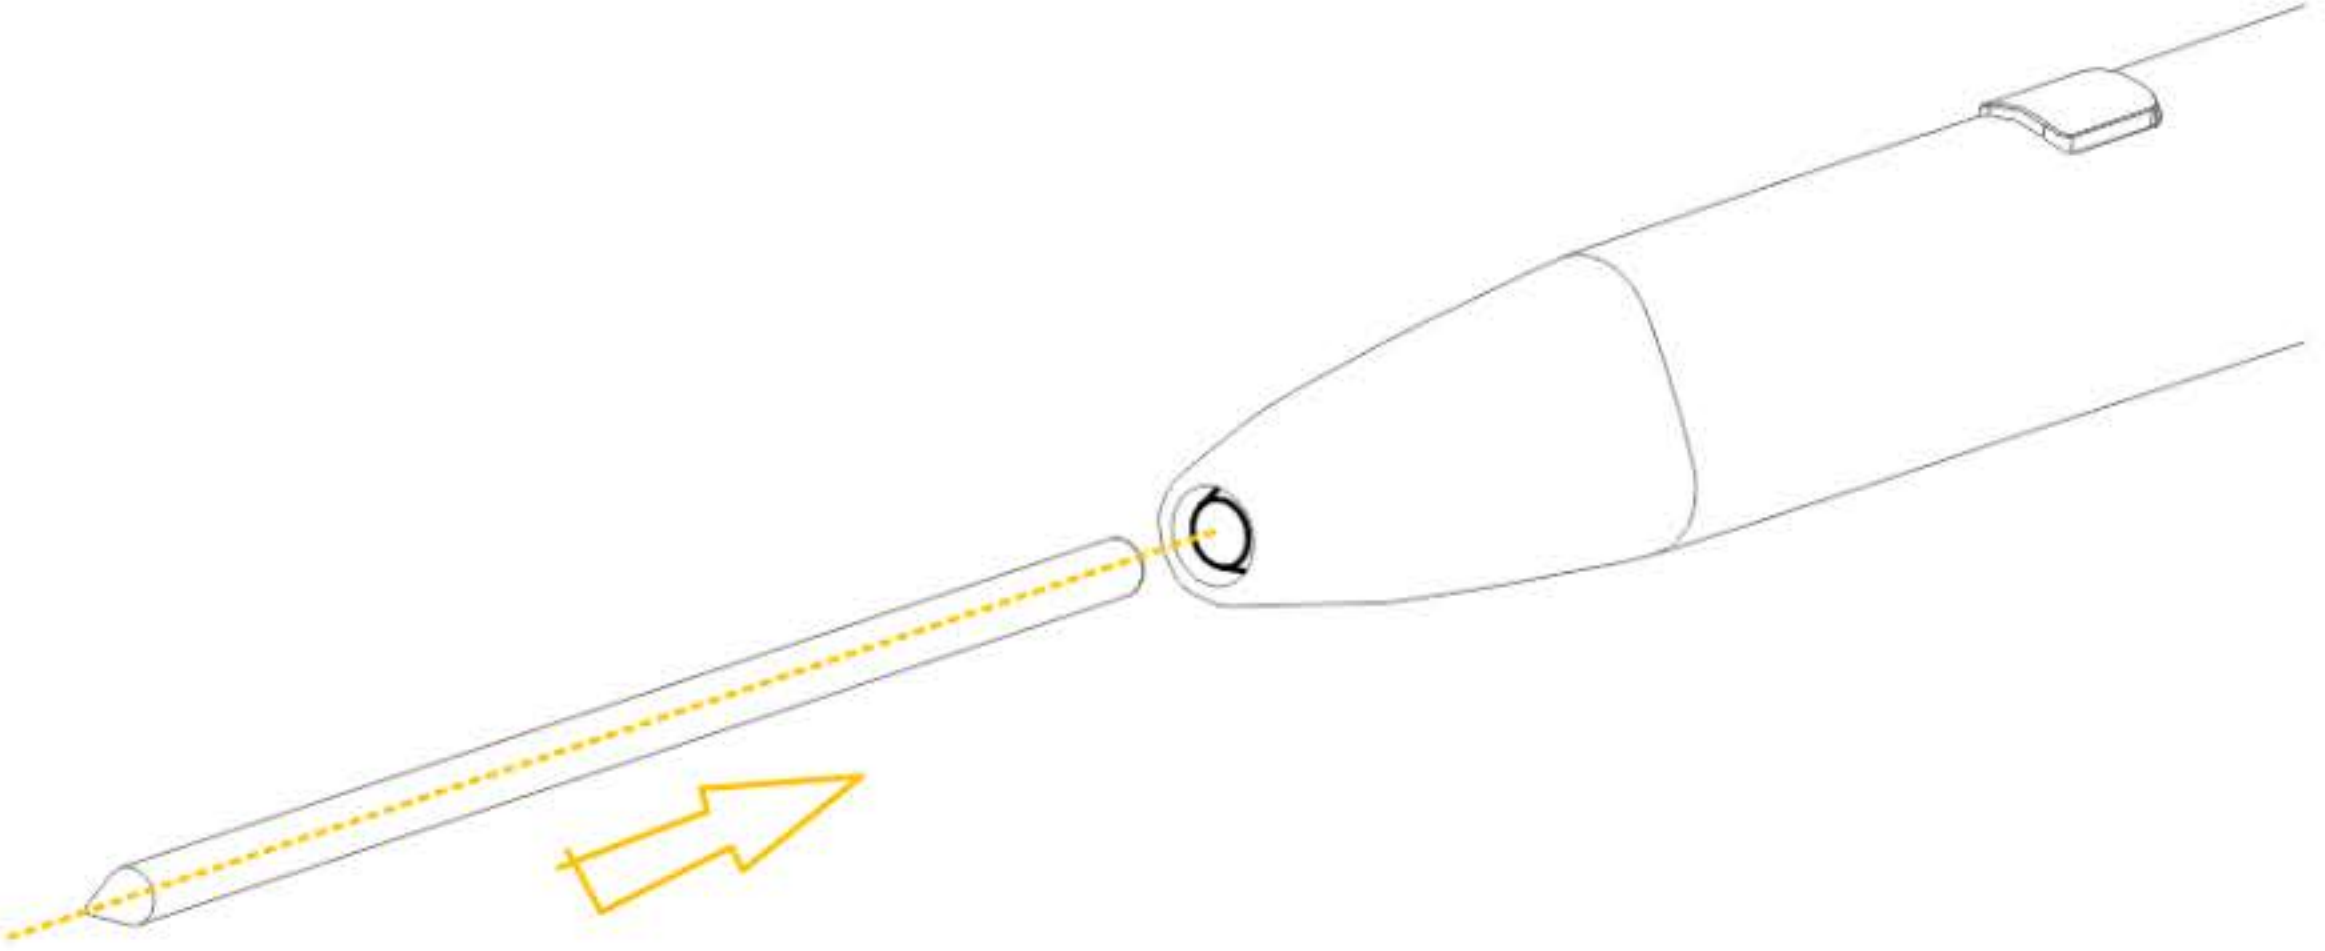

- When inserting cartridge, please be careful not to touch black plastic inside of the pen.

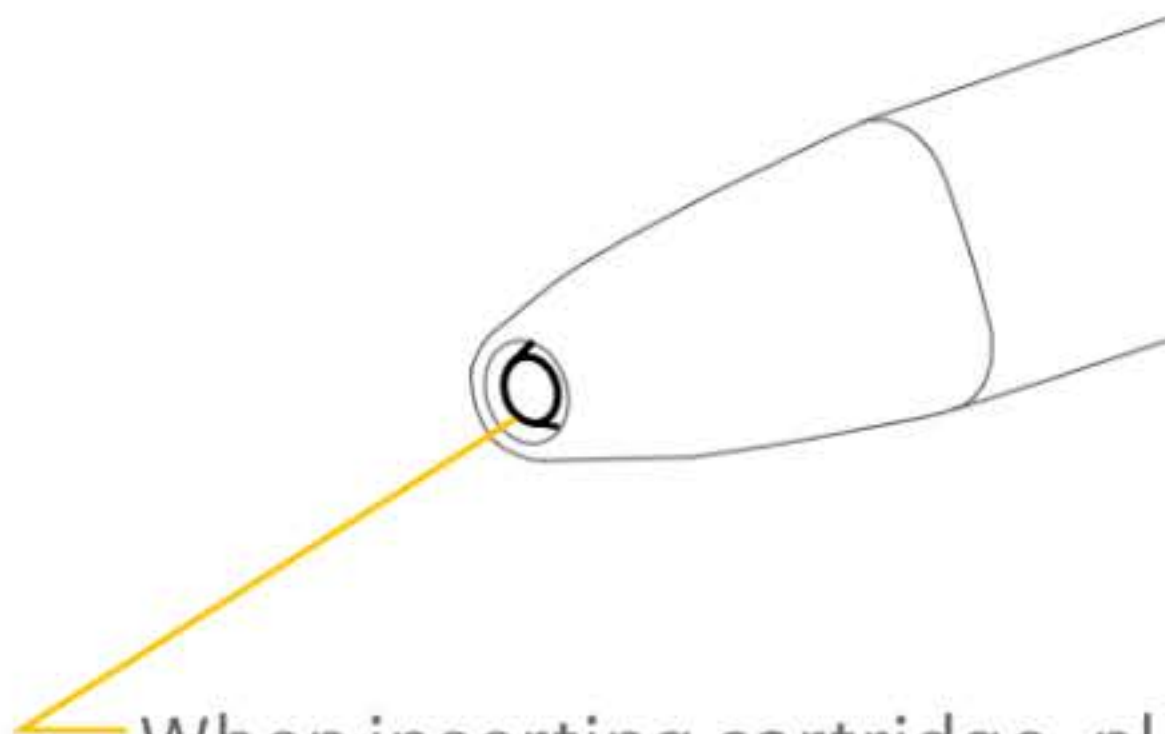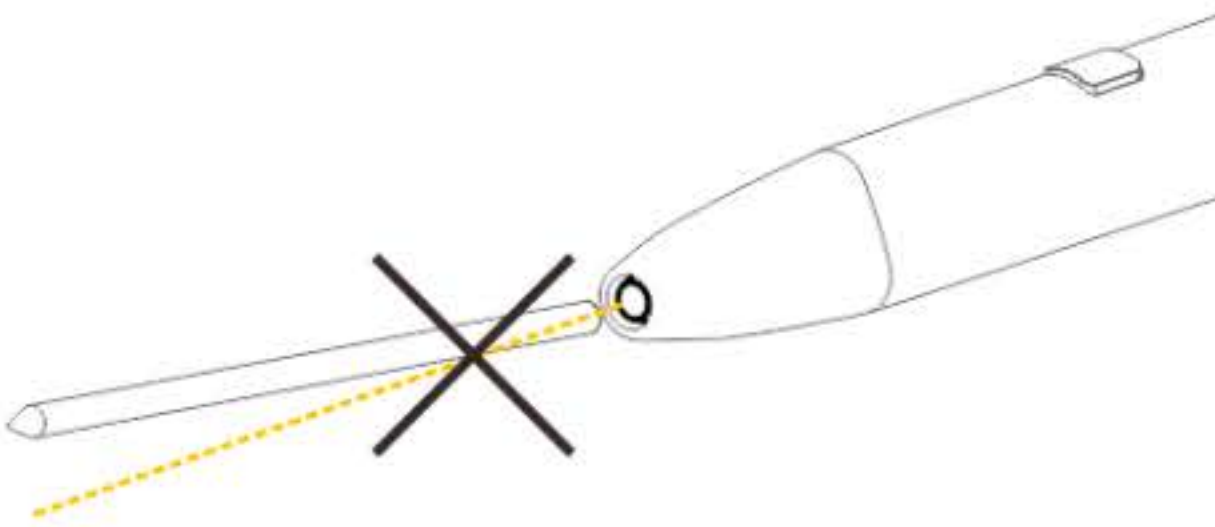

When inserting cartridge, please be careful not to touch black plastic inside of the pen.