


Keyboard Matrix


Numpad




USB / Power

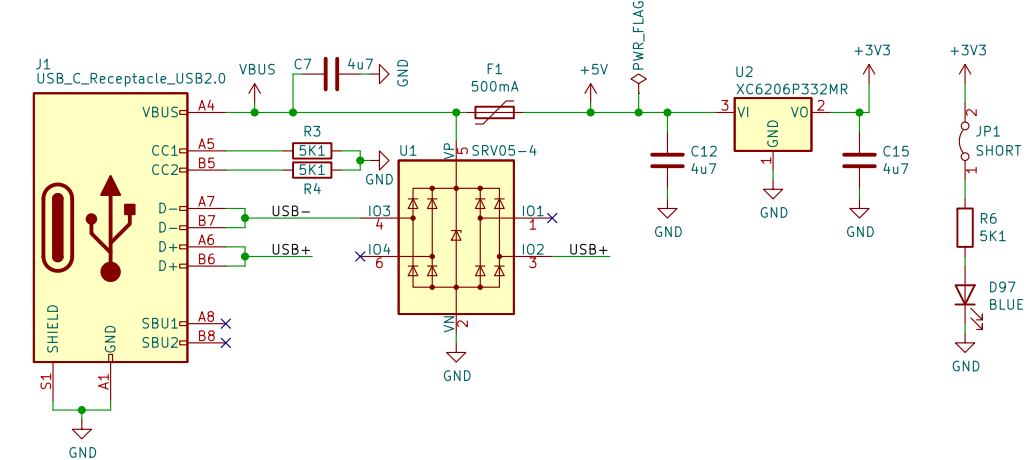


Underglow

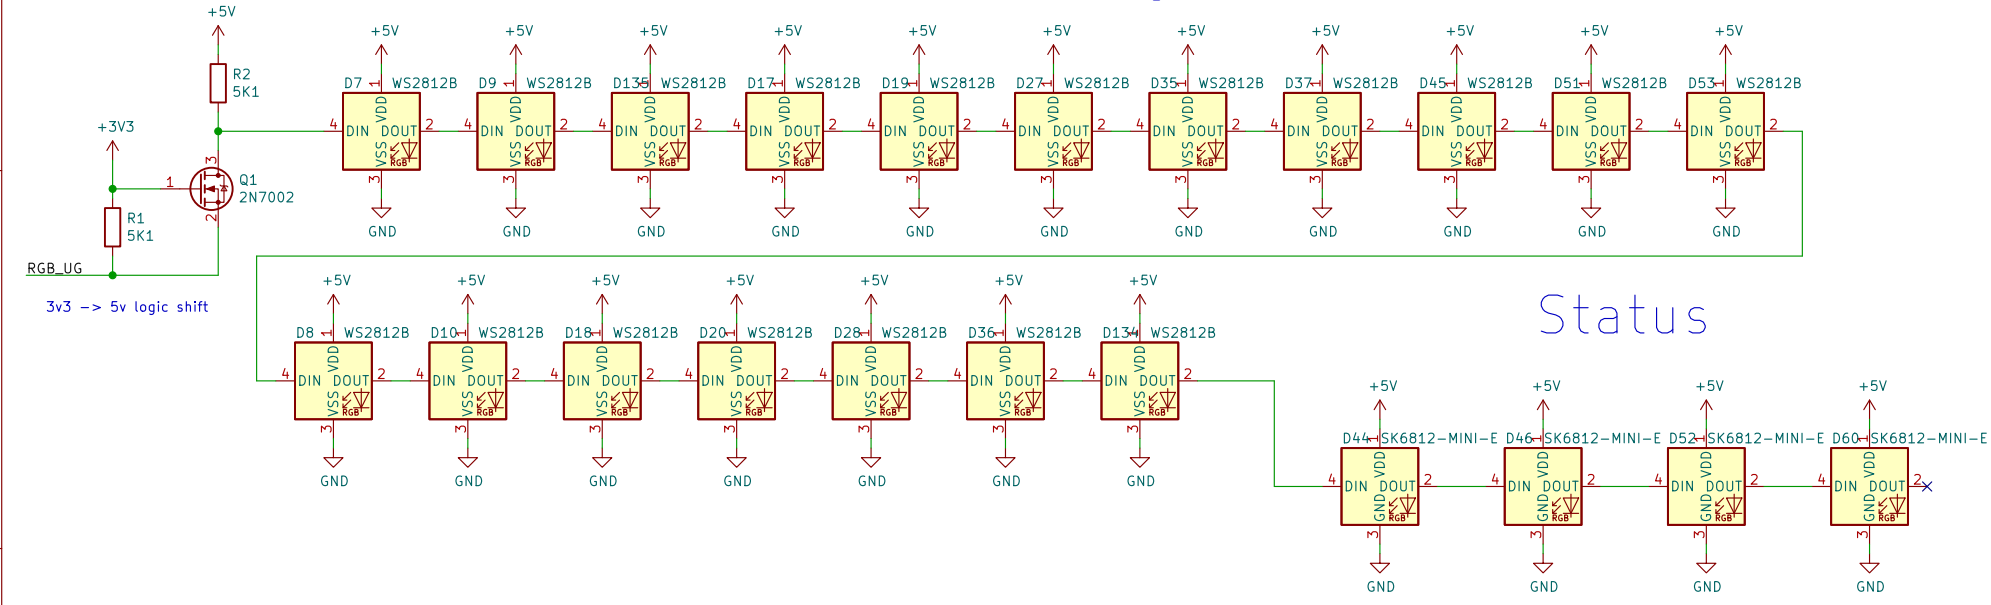


Status

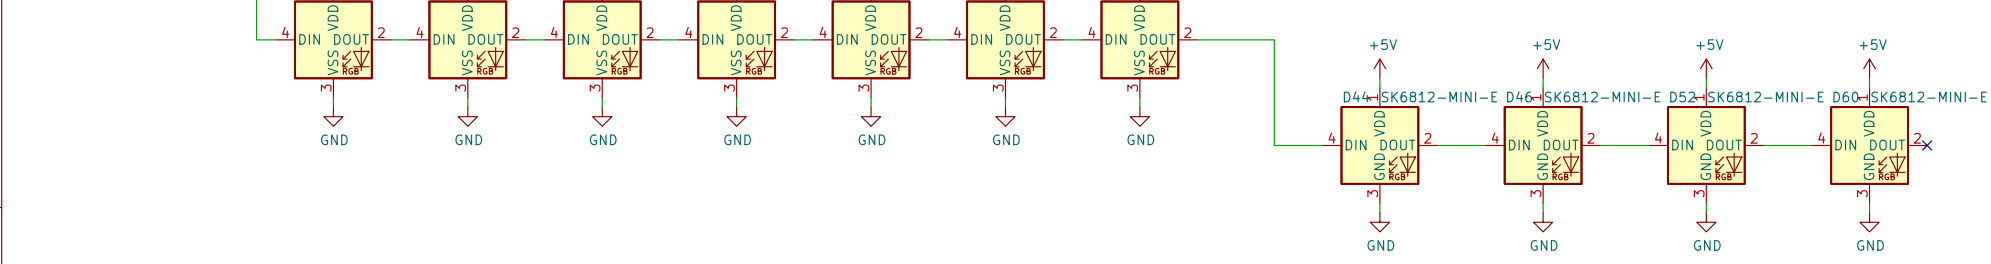


DFU / Reset

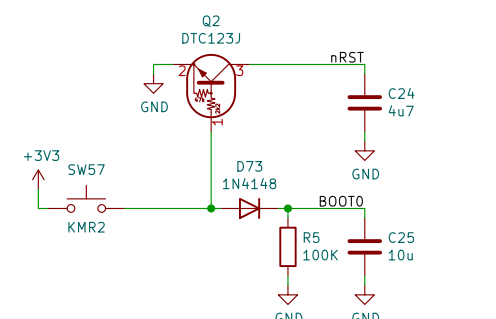


Spare IO

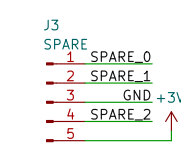

Programming

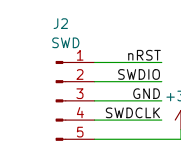

Mounting Holes

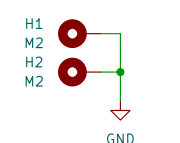

Logos / Silk



Stopping ERC Errors

