

Audio: 3 Position
ON-OFF-ON
DPDT Switch
T4: Turns On Aux
if Internet is Off
if switch is in
Down Position

Audio Switch Position ON
DOWN: Auxiliary

Audio Switch Position OFF CENTER:
Radio

T1: Aux Amp Trigger
(Triggers in "Down or Up
if Internet is Off)
T2: RPi Amp Trigger
(only triggers if Internet
is On)
T3: Radio Trigger

Audio Switch Position ON UP:
IF INTERNET IS ON: Raspberry Pi
IF INTERNET IS OFF: Auxiliary

3 Channel Audio
Amplifier to Speakers
and Subwoofer, Only
On When an Audio
Source is Triggered

