


Kill all switch:
In the down position it disconnects the battery, charging system, motor and valves.

Standard Operation


Setting: Up

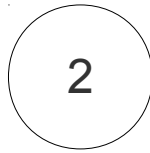

Manual On:
In the up position it either turns on the motor to pump from the barrel or opens the valve.

Standard Operation

Setting: Neutral

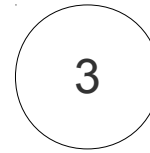

Charge Source:
Putting the switch down uses the solar charger, putting the switch up uses the AC charger.*

Standard Operation

Setting: Down



Automatic/Manual Mode Select:
In the down position it allows the user to manually select the source of water(via switch 5). In the up mode, the the source will be selected automatically.

Standard Operation


Setting: Up



Manual Source Select:
In the up position the unit will use barrel water, in the down position the unit will use city water. When not using the manual mode this switch should be in the neutral (middle) position.

Standard Operation

Setting: Neutral

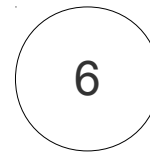

Blank

Quick Start Guide:

Leave switch 1 in the up position, switch 2 in the neutral position, and switch 3 in the down position. To manually run the unit put switch 2 in the up position.** To select the water source manually, put switch 4 in the down position and use switch 5 to switch between city water (up) and barrel water (down).

* If an AC charger has been installed.

** With timer installed, using the manual button on the timer rather than switch 2 is recommended.