


4

CHECK HARNESS AND CONNECTOR (SKID CONTROL ECU - DLC3)

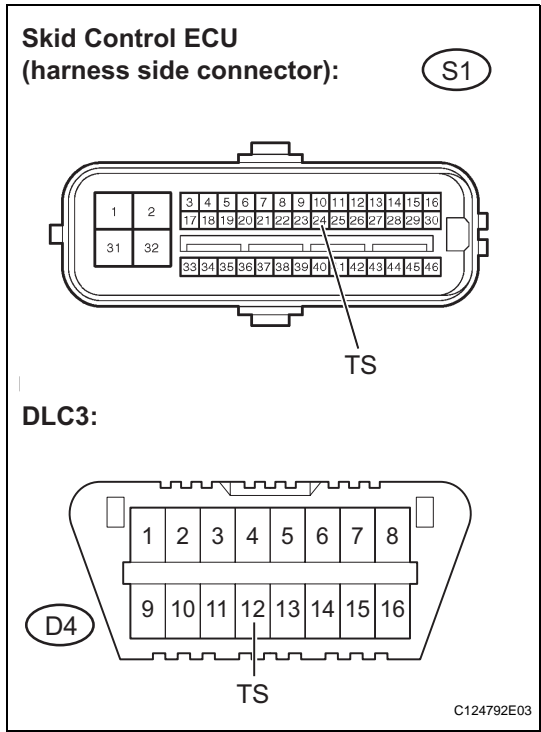

OK

- (a) Disconnect the skid control ECU connector.
(b) Measure the resistance.

Standard

Tester Connection	Specified condition
S1-24 (TS) - D4-12 (TS)	Below 1 Ω

- (c) Measure the resistance.

Standard

Tester Connection	Specified Condition
S1-24 (TS) - Body ground	10 kΩ or higher

- (d) Reconnect the skid control ECU connector.

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

BC

REPLACE MASTER CYLINDER SOLENOID