


TS and CG Terminal Circuit

DESCRIPTION


In sensor check mode, malfunctions of the speed sensor that cannot be detected when the vehicle is stopped are detected while driving.

Transition to the sensor check mode can be performed by connecting terminals TS and CG of the DLC3 and turning the ignition switch from OFF to the ON position.

WIRING DIAGRAM

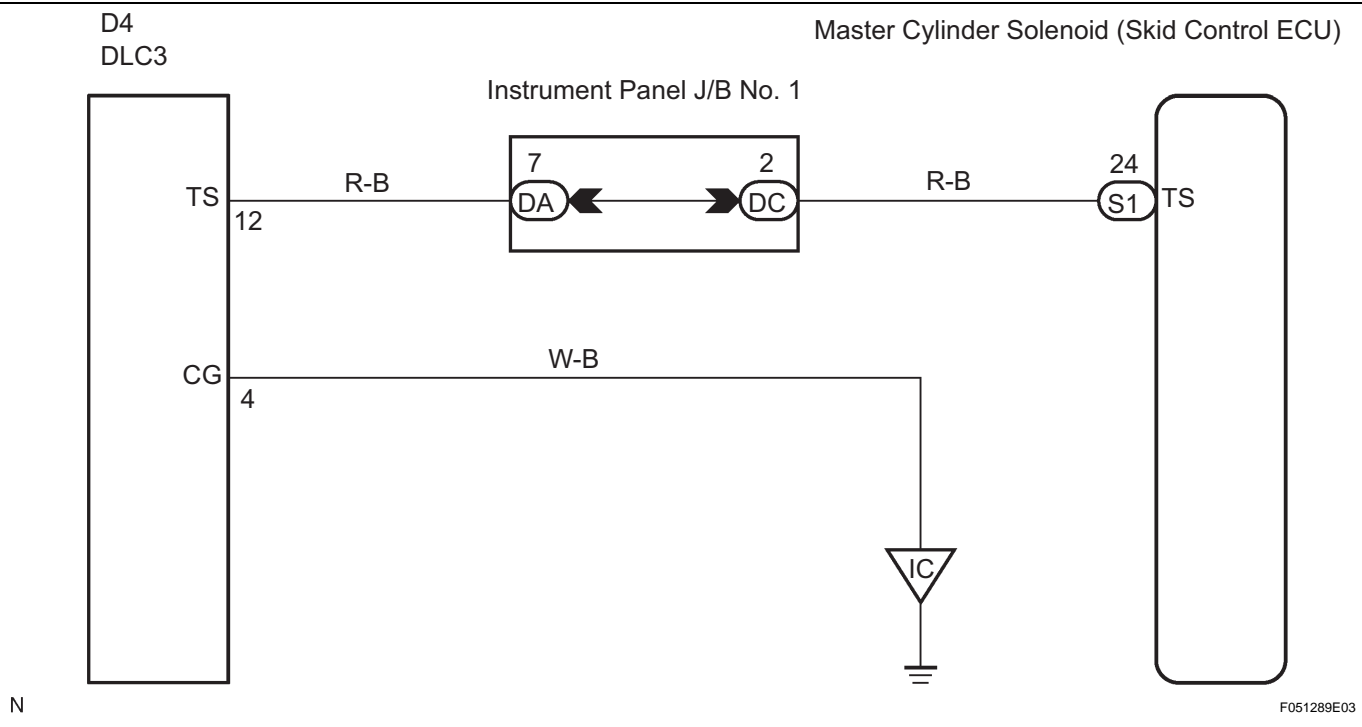

1 INSPECT DLC3 (TS TERMINAL VOLTAGE)

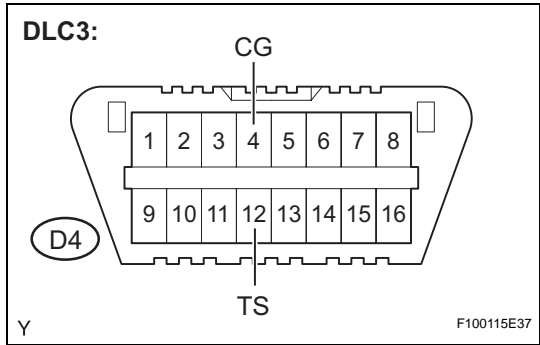

- (a) Turn the ignition switch to the ON position.
(b) Measure the voltage.
- Standard**
- | Tester Connection | Specified Condition |
|------------------------|---------------------|
| D4-12 (TS) - D4-4 (CG) | 10 to 14 V |

- (c) Turn the ignition switch to OFF.
- NG

Go to step 3

OK