


**2****CHECK HARNESS AND CONNECTOR (SKID CONTROL ECU - DLC3)**


Skid Control ECU  
(harness side connector):

S1

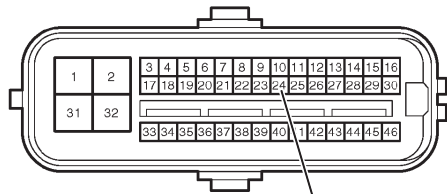

TS

DLC3:

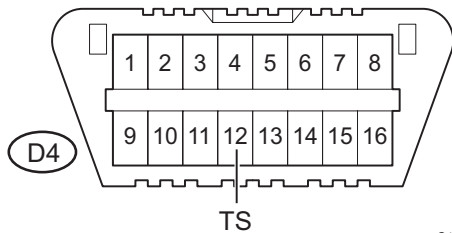

D4

TS

C124792E03

OK

- (a) Disconnect the skid control ECU connector.  
(b) Measure the resistance.

**Standard**

Tester Connection	Specified condition
S1-24 (TS) - D4-12 (TS)	Below 1 $\Omega$

- (c) Measure the resistance.

**Standard**

Tester Connection	Specified Condition
S1-24 (TS) - Body ground	10 k $\Omega$ or higher

- (d) Reconnect the skid control ECU connector.

NG

**REPAIR OR REPLACE HARNESS OR CONNECTOR**


**REPLACE MASTER CYLINDER SOLENOID**

BC

**3****CHECK HARNESS AND CONNECTOR (BODY GROUND - DLC3)**

DLC3:

D4

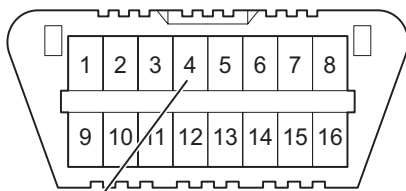

CG

Y

F100115E35

OK

- (a) Measure the resistance.

**Standard**

Tester Connection	Specified condition
D4 (CG) - Body ground	Below 1 $\Omega$

NG

**REPAIR OR REPLACE HARNESS OR CONNECTOR**