



connect your 3.3v serial adapter to your WIFI TXD/RXD respectively

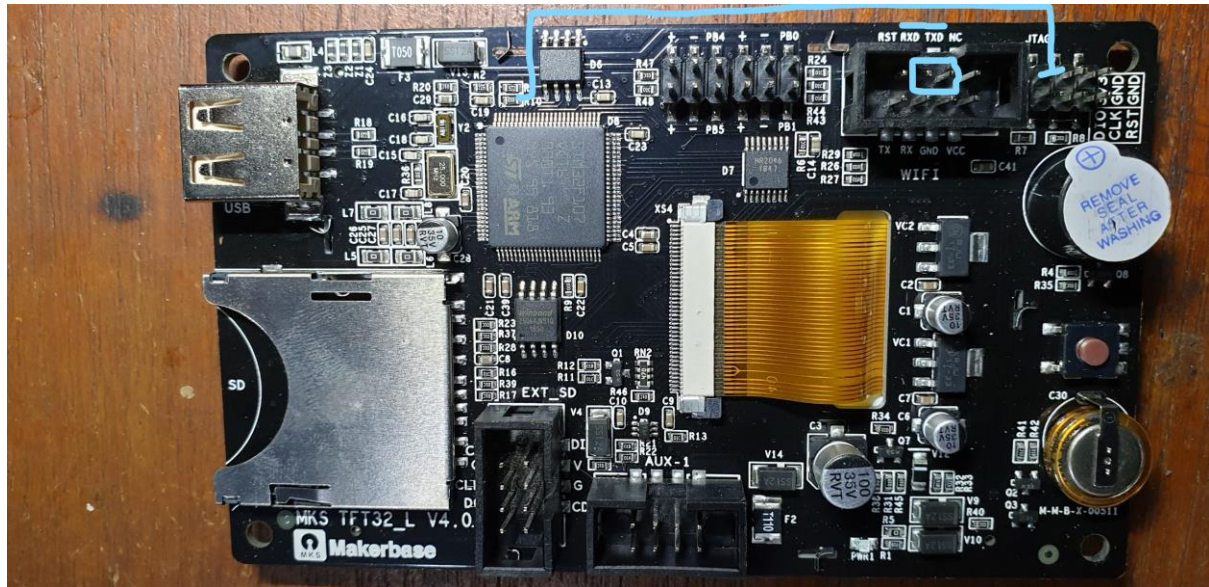

(rx on device to tx on usb)

load flymcu.exe app and setup for correct serial port, click 3 dots to select firmware.hex

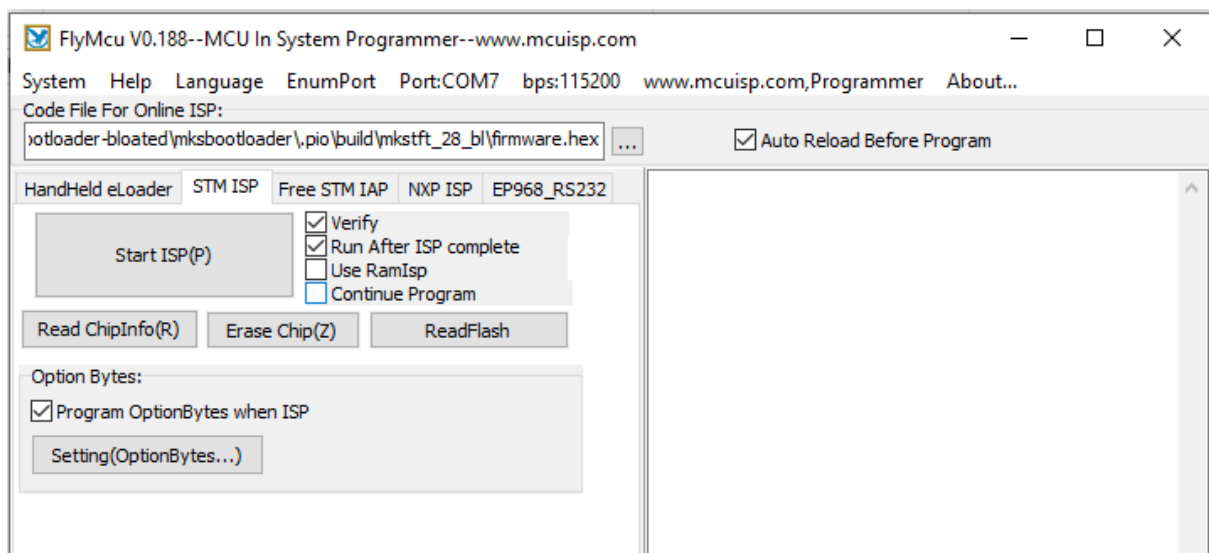

Click start ISP

On the device :-

connect 3.3v(JTAG) to R10 (the side with text R10 & closest to eeprom IC)

press reset

release 3.3v connection to r10 when text displays uploading ...