



Bias the HPF at 2.5V. This is because at the two TX outputs have a 2.5V DC level.



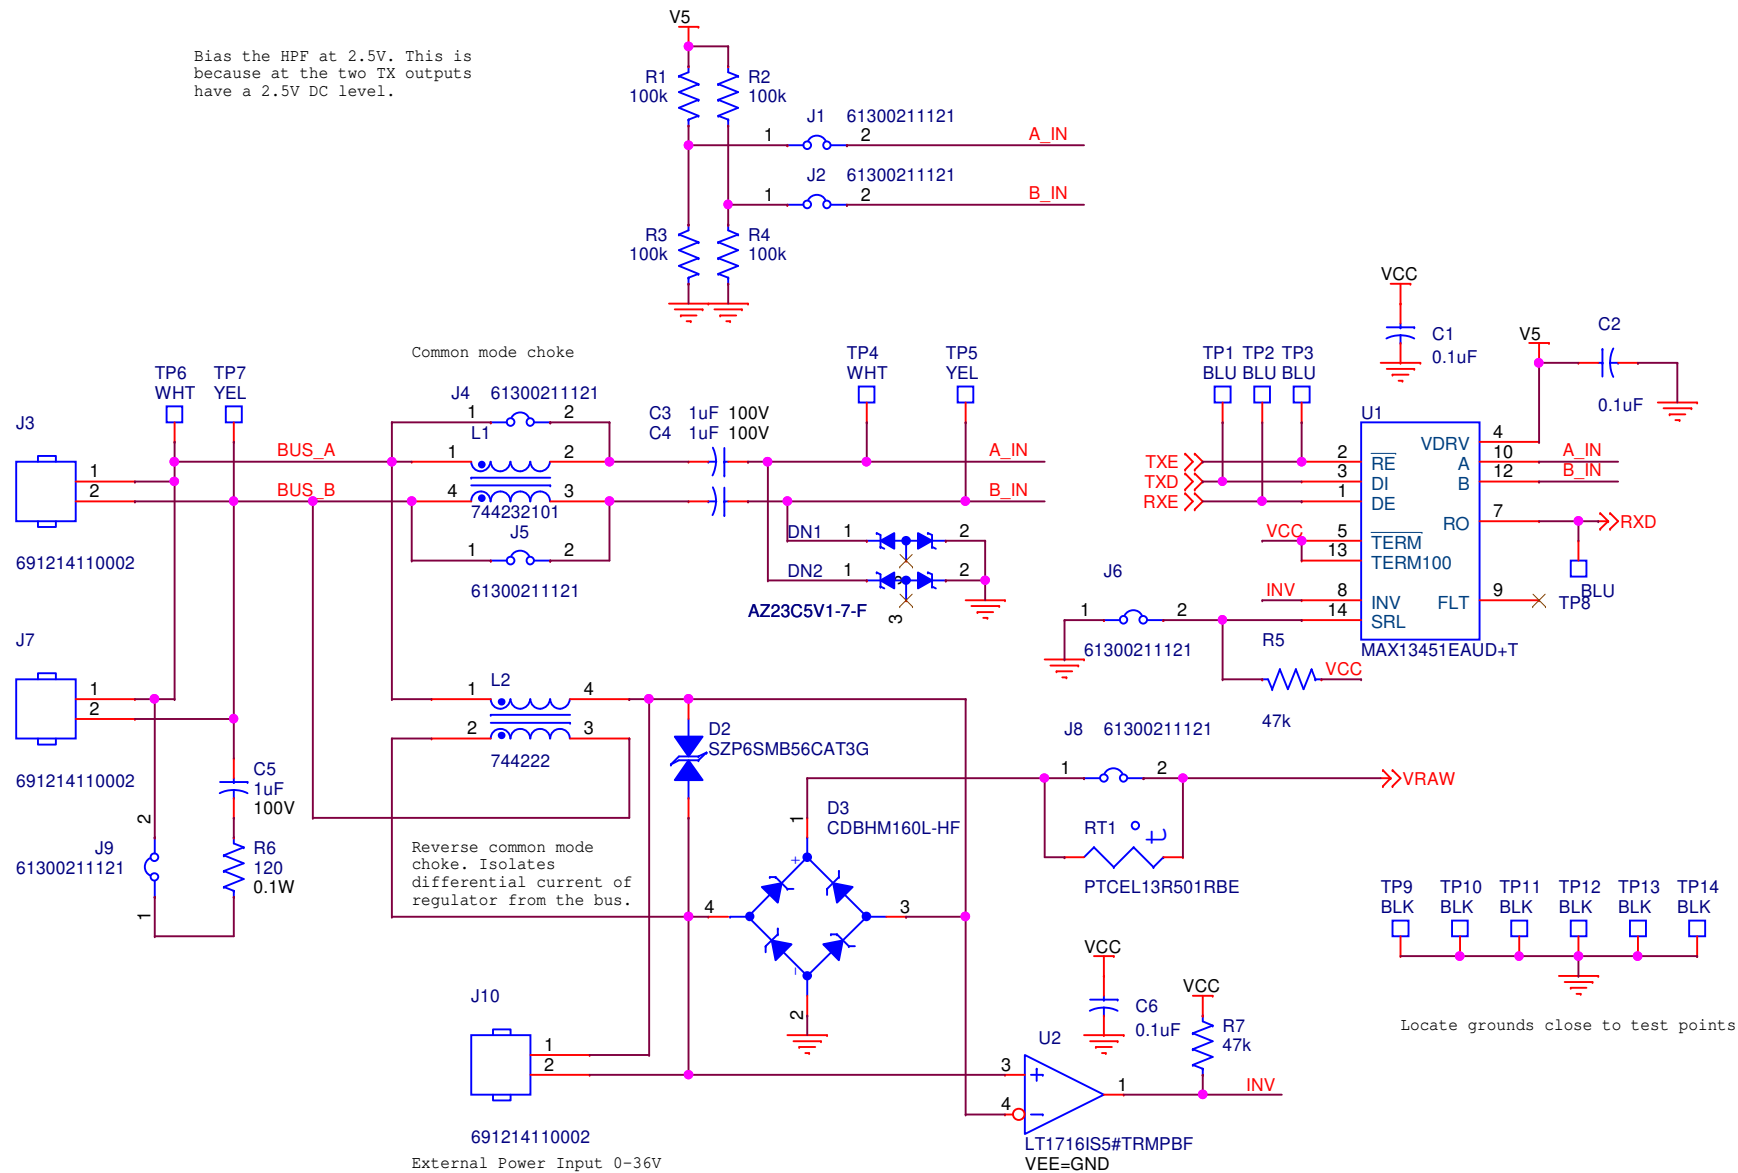


Geostuff		
Title		
Bus Access		
Size	Document Number	Rev
A	GEO-00002	A
Date:	Sunday, January 03, 2021	Sheet 1 of 1


Used to set the baud rate

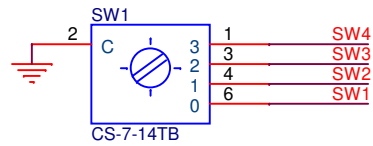


When pushed, transmits a packet

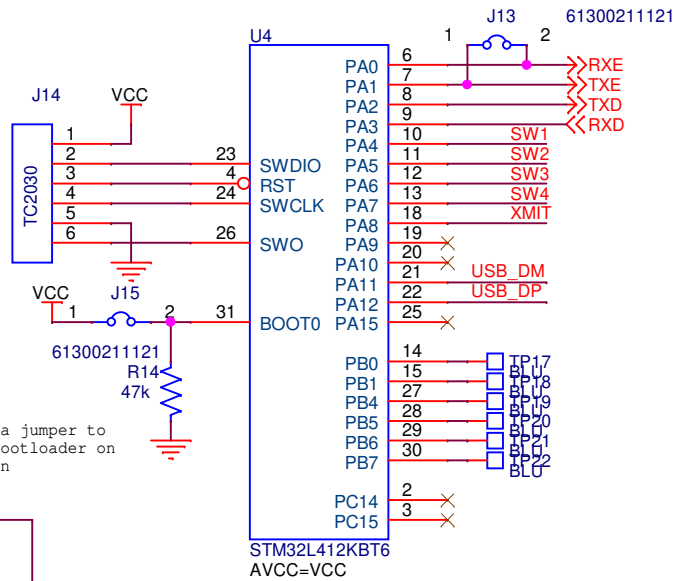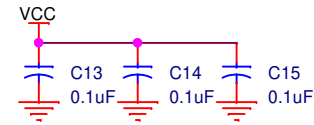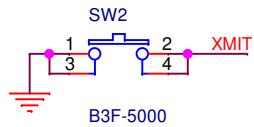

USB layer change

 

Insert a jumper to enter bootloader on power-on

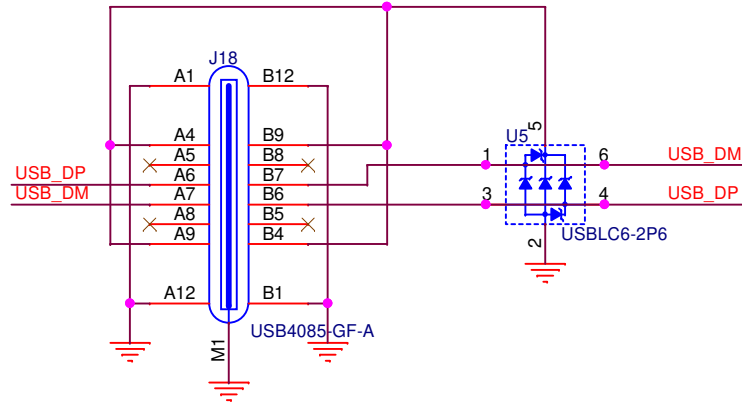

Geostuff

Title
Pattern Generation

Size A Document Number
GEO-00002

Rev A

Date: Sunday, January 03, 2021 Sheet 3 of 1