

Thursday, 3 May 2018

Assembly instructions for the STMBL Servo Drive

The STMBL is an open-source 3-phase servo drive suitable for motors up to 2.2kW. Further details can be found [here](#)


I had a batch of 50 PCBs made by [PCBStore](#) for a very reasonable £47 per board. These kits were without the more bulky and expensive components. This blog post describes how to assemble one of the kits in to a working drive.

The [main documentation](#) (work in progress) is relevant to both the current and future versions of the drive. However due to the withdrawal from the market of the IRAM256 chip used by the board any future versions are likely to be physically different and assembled differently which is why this is a blog post and not a documentation section.

1) Test the board and flash the firmware.

There is no point assembling the board if it is a dud. The boards are supplied with the two halves linked and with a bridge that permits communications.


Before the boards are powered up they need to have C143 (22 μ F 6.3mm dia) installed. Most of the boards that I supply will have this already. Do not power up the boards without this component.

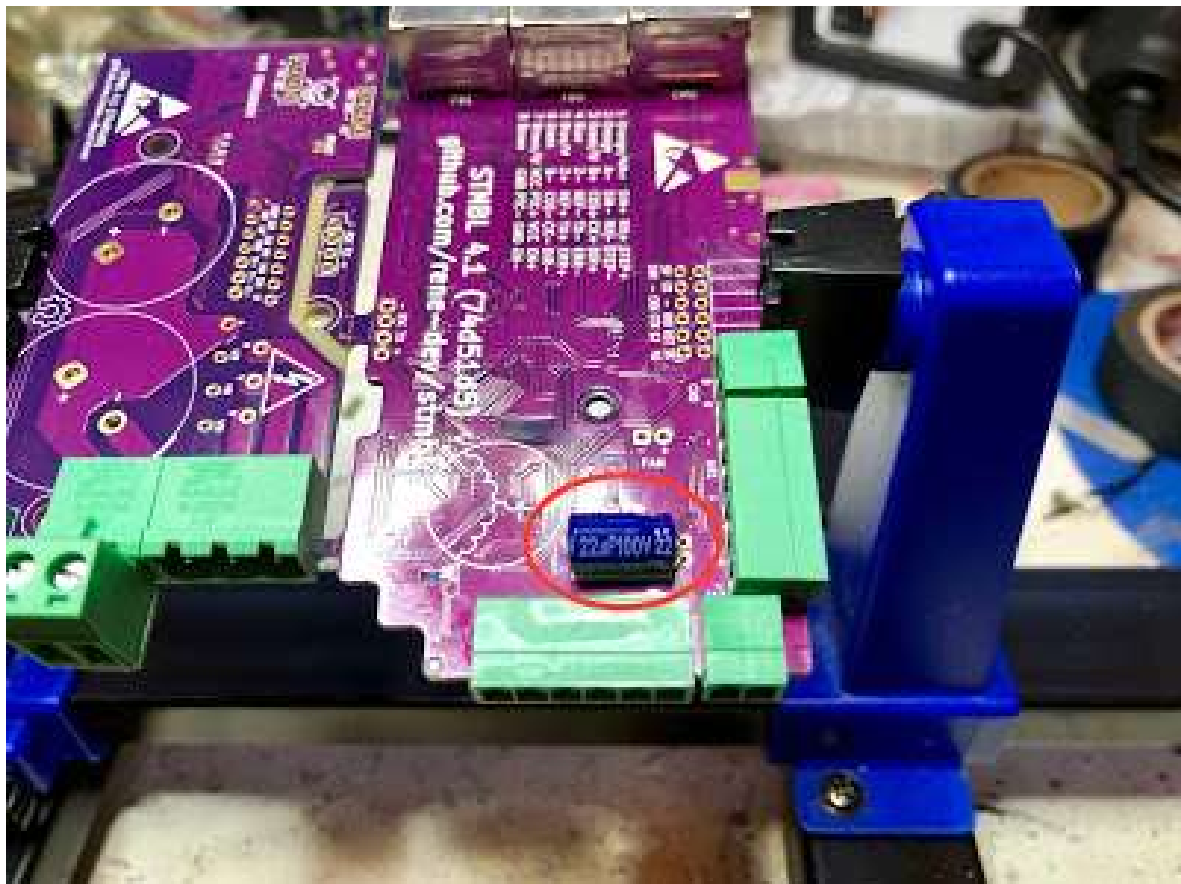

Ensure that the white stripe on the capacitor is adjacent to the corresponding stripe on the board silkscreen.

The board can then be powered up with 24V to both halves. There should be two green LEDs illuminated

This is a good time to flash the firmware. See the [main documentation](#) for instructions how to do this.

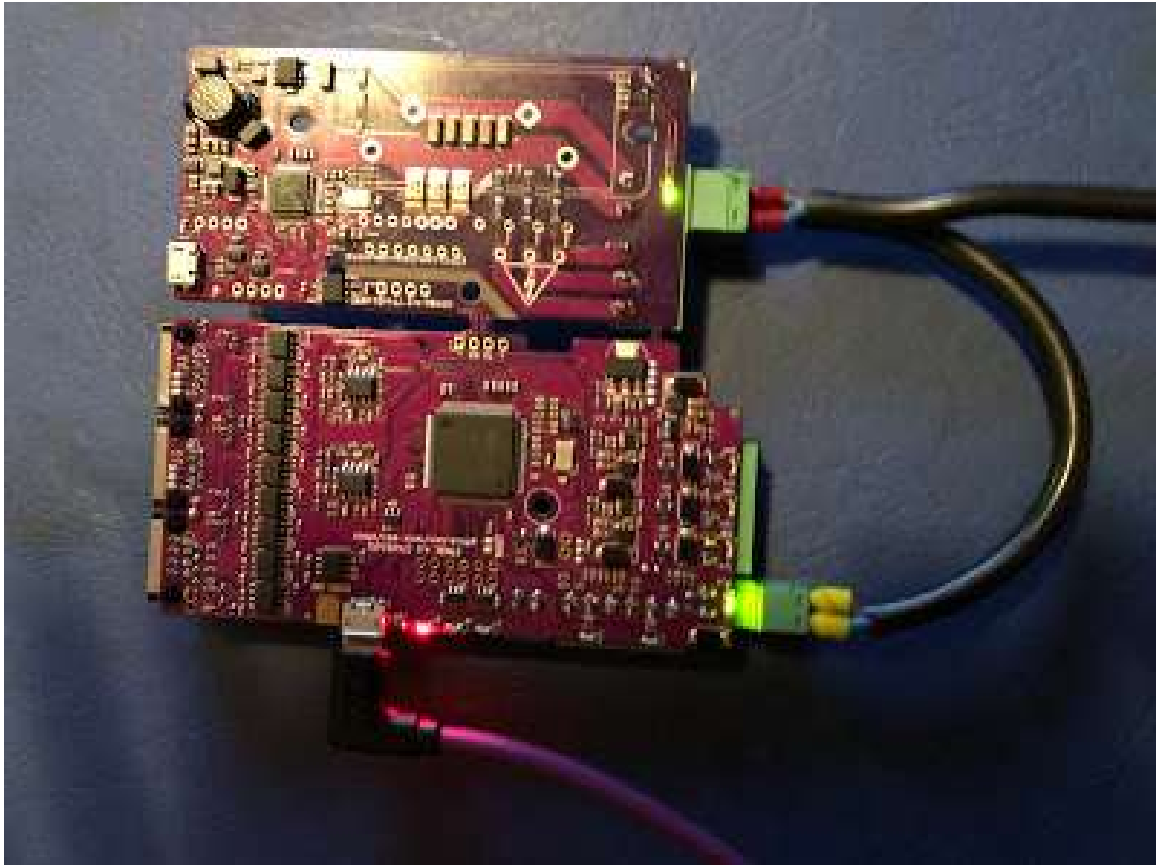

Once the firmware is flashed and the basic functionality of the board is assured the larger components can be added. C21 and C22 (270 μ F 400 / 450V) should be added first. Again make sure that the stripes line up as shown below. Trim the leads off short to ensure spacing from the IRAM module.



It is imperative that the screws have insulated washers. These are supplied with the kit, but the ones I have appear not to fit the PCB holes. Their function is to retain isolation gaps between the screws and the board tracks, so it is OK to cut off the top-hat section.



The IRAM module is spaced from the PCB with special 3D printed standoffs. It is easier to fit these round the screws (M3 x 14mm) prior to installing the IRAM256.



Thread the IRAM256 into the PCB holes and on to the standoffs.



Screw the mounting screws in to the threaded holes on the heat-sink. A dab of heat-sink compound will not come amiss at this point.


Add a plain standoff and another screw. The slots in the extrusion are grooved to accept M3 screws, so this will get a decent grip.




The IRAM256 can now be soldered. Take care to ensure that solder flows all the way through to join the tracks on both sides of the board, as shown below. These are high-current connections and relying on the through-hole plating to link the board-sides is not a good idea.




The 3D printed fan-mounts can now be installed.

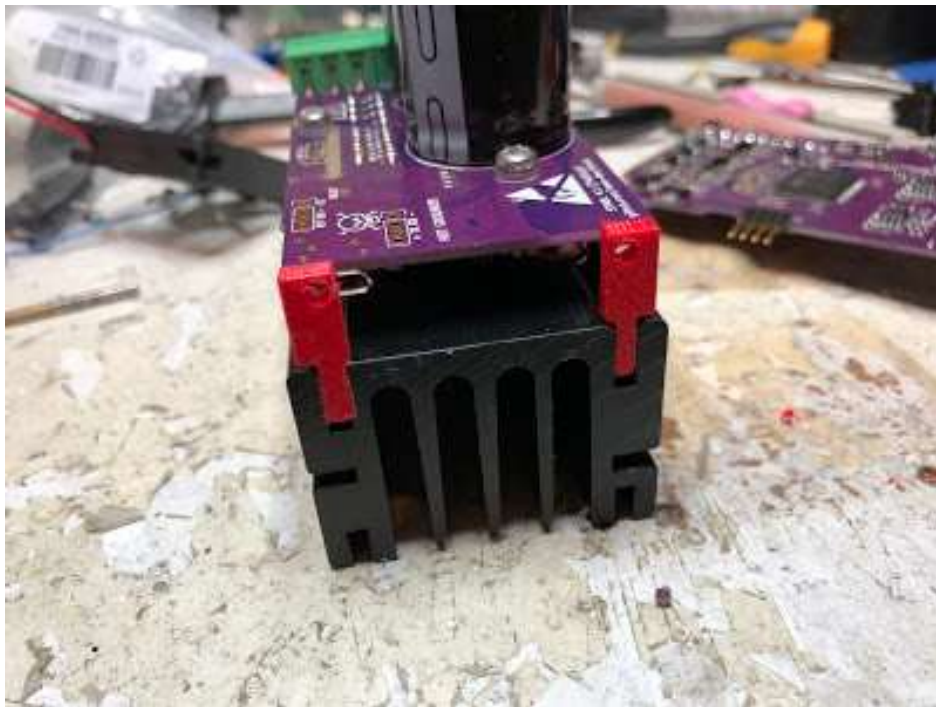

And the fan can be fitted. The 3D-printed parts ensure that the fan is at the right height for later. The lower screws seem able to make their own threads in the lower grooves of the heatsink.

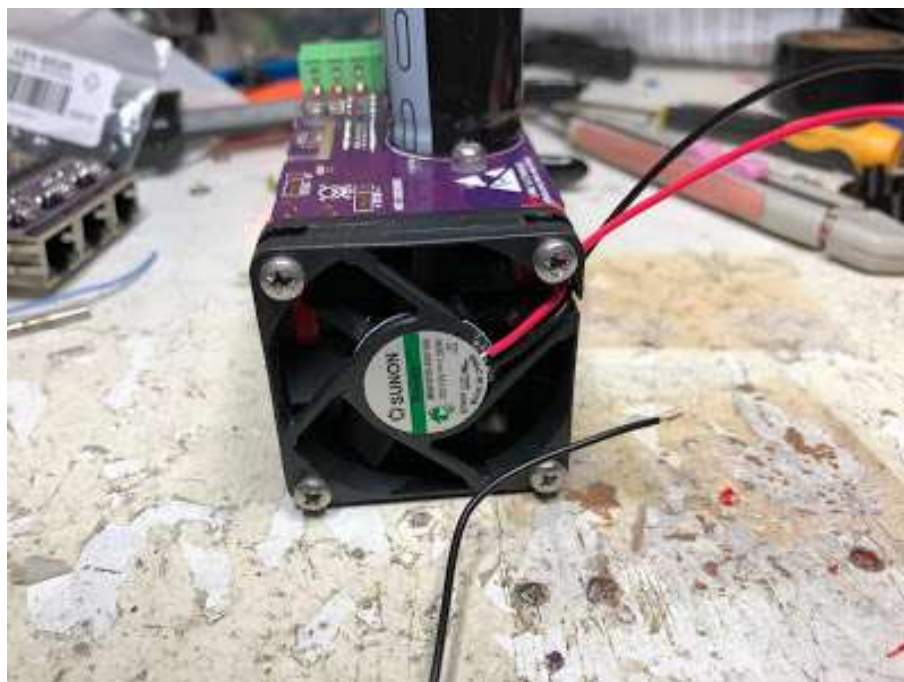

The right-angle header should now be fitted, in the orientation shown, and on the side of the board shown.

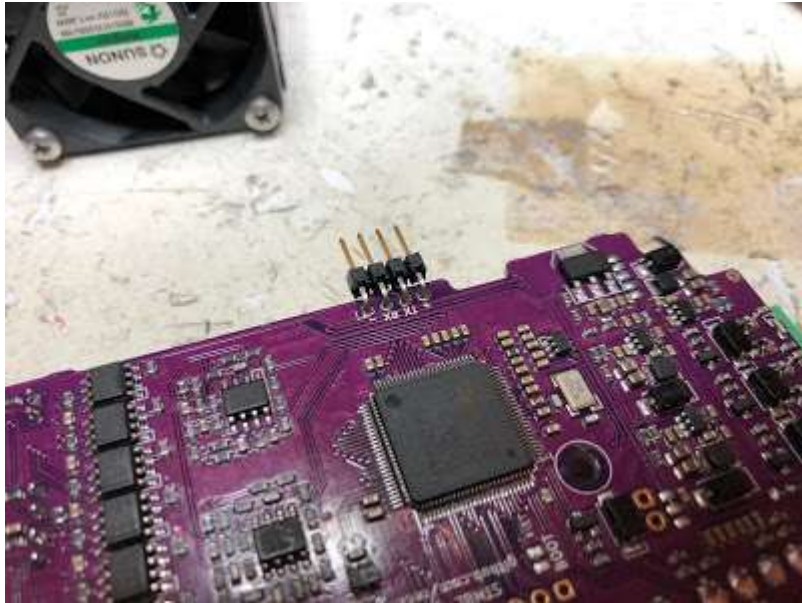

And the steady-bracket can be fitted with the self-tapping screw provided.



The vertical board is designed to sit hard down on the fan and on the connector block. In this position and with the capacitor bracket it is really quite strongly and rigidly supported. It is important to solder the header in-situ to achieve this.



Connect the fan wires and the drive is completed. There are two schools of thought on fan wire routing, some prefer the wires to start from the other corner and connect on the other side of the PCB.

