

## README.sc.txt

Welcome to Beta Release 2 of the combination ISDN driver for SpellCaster's ISA ISDN adapters. Please note this release 2 includes support for the DataCommute/BRI and TeleCommute/BRI adapters only and any other use is guaranteed to fail. If you have a DataCommute/PRI installed in the test computer, we recommend removing it as it will be detected but will not be usable. To see what we have done to Beta Release 2, see section 3.

Speaking of guarantees, THIS IS BETA SOFTWARE and as such contains bugs and defects either known or unknown. Use this software at your own risk. There is NO SUPPORT for this software. Some help may be available through the web site or the mailing list but such support is totally at our own option and without warranty. If you choose to assume all and total risk by using this driver, we encourage you to join the beta mailing list.

To join the Linux beta mailing list, send a message to: majordomo@spellcast.com with the words "subscribe linux-beta" as the only contents of the message. Do not include a signature. If you choose to remove yourself from this list at a later date, send another message to the same address with the words "unsubscribe linux-beta" as its only contents.

## TABLE OF CONTENTS

---

1. Introduction
  - 1.1 What is ISDN4Linux?
  - 1.2 What is different between this driver and previous drivers?
  - 1.3 How do I setup my system with the correct software to use this driver release?
2. Basic Operations
  - 2.1 Unpacking and installing the driver
  - 2.2 Read the man pages!!!
  - 2.3 Installing the driver
  - 2.4 Removing the driver
  - 2.5 What to do if it doesn't load
  - 2.6 How to setup ISDN4Linux with the driver
3. Beta Change Summaries and Miscellaneous Notes

## 1. Introduction

---

The revision 2 Linux driver for SpellCaster ISA ISDN adapters is built upon ISDN4Linux available separately or as included in Linux 2.0 and later. The driver will support a maximum of 4 adapters in any one system of any type including DataCommute/BRI, DataCommute/PRI and TeleCommute/BRI for a maximum of 92 channels for host. The driver is supplied as a module in source form and needs to be compiled before it can be used. It has been tested on Linux 2.0.20.

### 1.1 What Is ISDN4Linux

ISDN4Linux is a driver and set of tools used to access and use ISDN devices on a Linux platform in a common and standard way. It supports HDLC and PPP protocols and offers channel bundling and MLPPP support. To use ISDN4Linux

you need to configure your kernel for ISDN support and get the ISDN4Linux tool kit from our web site.

ISDN4Linux creates a channel pool from all of the available ISDN channels and therefore can function across adapters. When an ISDN4Linux compliant driver (such as ours) is loaded, all of the channels go into a pool and are used on a first-come first-served basis. In addition, individual channels can be specifically bound to particular interfaces.

## 1.2 What is different between this driver and previous drivers?

The revision 2 driver besides adopting the ISDN4Linux architecture has many subtle and not so subtle functional differences from previous releases. These include:

- More efficient shared memory management combined with a simpler configuration. All adapters now use only 16Kbytes of shared RAM versus between 16K and 64K. New methods for using the shared RAM allow us to utilize all of the available RAM on the adapter through only one 16K page.
- Better detection of available upper memory. The probing routines have been improved to better detect available shared RAM pages and used pages are now locked.
- Decreased loading time and a wider range of I/O ports probed. We have significantly reduced the amount of time it takes to load the driver and at the same time doubled the number of I/O ports probed increasing the likelihood of finding an adapter.
- We now support all ISA adapter models with a single driver instead of separate drivers for each model. The revision 2 driver supports the DataCommute/BRI, DataCommute/PRI and TeleCommute/BRI in any combination up to a maximum of four adapters per system.
- On board PPP protocol support has been removed in favour of the sync-PPP support used in ISDN4Linux. This means more control of the protocol parameters, faster negotiation time and a more familiar interface.

## 1.3 How do I setup my system with the correct software to use this driver release?

Before you can compile, install and use the SpellCaster ISA ISDN driver, you must ensure that the following software is installed, configured and running:

- Linux kernel 2.0.20 or later with the required init and ps versions. Please see your distribution vendor for the correct utility packages. The latest kernel is available from <ftp://sunsite.unc.edu/pub/Linux/kernel/v2.0/>
- The latest modules package (modules-2.0.0.tar.gz) from <ftp://sunsite.unc.edu/pub/Linux/kernel/modules-2.0.0.tar.gz>
- The ISDN4Linux tools available from <ftp://ftp.franken.de/pub/isdn4linux/v2.0/isdn4k-utils-2.0.tar.gz>  
This package may fail to compile for you so you can alternatively get a pre-compiled version from <ftp://ftp.spellcast.com/pub/drivers/isdn4linux/isdn4k-bin-2.0.tar.gz>

## 2. Basic Operations

---

### 2.1 Unpacking and installing the driver

1. As root, create a directory in a convenient place. We suggest `/usr/src/spellcaster`.
2. Unpack the archive with :  
`tar xzf sc-n.nn.tar.gz -C /usr/src/spellcaster`
3. Change directory to `/usr/src/spellcaster`
4. Read the README and RELNOTES files.
5. Run 'make' and if all goes well, run 'make install'.

### 2.2 Read the man pages!!!

Make sure you read the `scctrl(8)` and `sc(4)` manual pages before continuing any further. Type 'man 8 scctrl' and 'man 4 sc'.

### 2.3 Installing the driver

To install the driver, type '`/sbin/insmod sc`' as root. `sc(4)` details options you can specify but you shouldn't need to use any unless this doesn't work.

Make sure the driver loaded and detected all of the adapters by typing '`dmesg`'.

The driver can be configured so that it is loaded upon startup. To do this, edit the file `"/etc/modules/'uname -f'/'uname -v'"` and insert the driver name "sc" into this file.

### 2.4 Removing the driver

To remove the driver, delete any interfaces that may exist (see `isdnctrl(8)` for more on this) and then type '`/sbin/rmmmod sc`'.

### 2.5 What to do if it doesn't load

If, when you try to install the driver, you get a message mentioning 'register\_isdn' then you do not have the ISDN4Linux system installed. Please make sure that ISDN support is configured in the kernel.

If you get a message that says 'initialization of sc failed', then the driver failed to detect an adapter or failed to find resources needed such as a free IRQ line or shared memory segment. If you are sure there are free resources available, use the `insmod` options detailed in `sc(4)` to override the probing function.

Upon testing, the following problem was noted, the driver would load without problems, but the board would not respond beyond that point. When a check was done with '`cat /proc/interrupts`' the interrupt count for `sc` was 0. In the event

of this problem, change the BIOS settings so that the interrupts in question are

reserved for ISA use only.

## 2.6 How to setup ISDN4Linux with the driver

There are three main configurations which you can use with the driver:

- A) Basic HDLC connection
- B) PPP connection
- C) MLPPP connection

It should be mentioned here that you may also use a tty connection if you desire. The Documentation directory of the isdn4linux subsystem offers good documentation on this feature.

### A) 10 steps to the establishment of a basic HDLC connection

---

- please open the isdn-hdlc file in the examples directory and follow along...

This file is a script used to configure a BRI ISDN TA to establish a basic HDLC connection between its two channels. Two network interfaces are created and two routes added between the channels.

- i) using the isdnctrl utility, add an interface with "addif" and name it "isdn0"
- ii) add the outgoing and inbound telephone numbers
- iii) set the Layer 2 protocol to hdlc
- iv) set the eaz of the interface to be the phone number of that specific channel
- v) to turn the callback features off, set the callback to "off" and the callback delay (cbdelay) to 0.
- vi) the hangup timeout can be set to a specified number of seconds
- vii) the hangup upon incoming call can be set on or off
- viii) use the ifconfig command to bring up the network interface with a specific IP address and point to point address
- ix) add a route to the IP address through the isdn0 interface
- x) a ping should result in the establishment of the connection

### B) Establishment of a PPP connection

---

- please open the isdn-ppp file in the examples directory and follow along...

This file is a script used to configure a BRI ISDN TA to establish a PPP connection between the two channels. The file is almost identical to the HDLC connection example except that the packet encapsulation type has to be set.

use the same procedure as in the HDLC connection from steps i) to iii) then, after the Layer 2 protocol is set, set the encapsulation "encap" to syncppp. With this done, the rest of the steps, iv) to x) can be followed from above.

Then, the ippd (ippd daemon) must be setup:

## README.sc.txt

- xi) use the `ipppd` function found in `/sbin/ipppd` to set the following:
- xii) take out (minus) VJ compression and bsd compression
- xiii) set the mru size to 2000
- xiv) link the two `/dev` interfaces to the daemon

NOTE: A "\*" in the inbound telephone number specifies that a call can be accepted on any number.

### C) Establishment of a MLPPP connection

---

- please open the `isdn-mppp` file in the examples directory and follow along...

This file is a script used to configure a BRI ISDN TA to accept a Multi Link PPP connection.

- i) using the `isdnctrl` utility, add an interface with "addif" and name it "ippp0"
- ii) add the inbound telephone number
- iii) set the Layer 2 protocol to `hdlc` and the Layer 3 protocol to `trans` (transparent)
- iv) set the packet encapsulation to `syncppp`
- v) set the eaz of the interface to be the phone number of that specific channel
- vi) to turn the callback features off, set the callback to "off" and the callback delay (`cbdelay`) to 0.
- vii) the hangup timeout can be set to a specified number of seconds
- viii) the hangup upon incoming call can be set on or off
- ix) add a slave interface and name it "ippp32" for example
- x) set the similar parameters for the `ippp32` interface
- x) use the `ifconfig` command to bring-up the `ippp0` interface with a specific IP address and point to point address
- xi) add a route to the IP address through the `ippp0` interface
- xii) use the `ipppd` function found in `/sbin/ipppd` to set the following:
- xiii) take out (minus) bsd compression
- xiv) set the mru size to 2000
- xv) add (+) the multi-link function "+mp"
- xvi) link the two `/dev` interfaces to the daemon

NOTE: To use the MLPPP connection to dial OUT to a MLPPP connection, change the inbound telephone numbers to the outgoing telephone numbers of the MLPPP host.

### 3. Beta Change Summaries and Miscellaneous Notes

---

When using the "scctrl" utility to upload firmware revisions on the board, please note that the byte count displayed at the end of the operation may be different from the total number of bytes in the "dcbfwn.nn.sr" file. Please disregard the displayed byte count.

It was noted that in Beta Release 1, the module would fail to load and result in a segmentation fault when 'insmod'ed. This problem was created when one of the `isdn4linux` parameters, (`isdn_ctrl`, data field) was filled in. In some cases, this data field was NULL, and was left unchecked, so when it was

README.sc.txt

referenced... segv. The bug has been fixed around line 63-68 of event.c.