


The resistors R26 and R27 are the input pull-ups. These resistors can be removed and then the board can work with a 3.3V aardvark, putting some external pull-ups connected to 3.3V, like this:

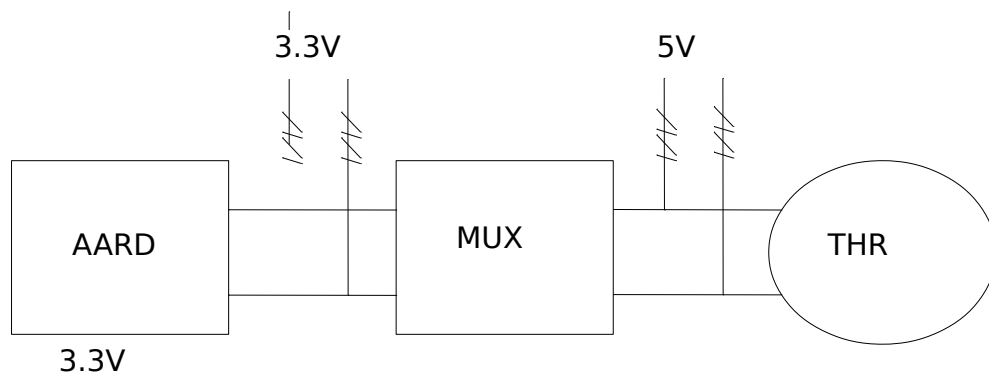

Moreover, the mux can also work with 3.3V, but would be needed to check if the buffers too and it would be needed to change the resistor values.