



NOTES:

1. The regulator jumper in the L298N modules should be disconnected (disabling the regulator);
2. The connectors carrying the signals to pins 4-9 of the L298N module may be connected in both orientations;
3. Before connecting the pumps, the polarities should be checked, since the schematic may not display the polarities of the pumps correctly;

TITLE: PCB connections Quadruple-Tank Process Experimental Setup		REV: 1.0
	Company: DECENTER Project	Sheet: 1/1
	Date: 2021-07-25	Drawn By: L. Pedroso; P. Batista