

485 播放语音

1. 使用场景

通过 485 或 tcp 或 udp 发送文本给背景音乐主机，并让其播放该文本的语音。

2. 使用流程

例如用户想让背景音乐主机播放“你好”，可这样操作(以 TCP 为例)：

背景音乐主机：设置 IP、端口和传输方式



The image shows a dark-themed configuration window titled "接口配置" (Interface Configuration) with a close button (X) in the top right corner. The window contains four settings sections: "传输协议" (Transmission Protocol) set to "TCP", "主机ip" (Host IP) which is empty, "主机端口" (Host Port) set to "0", and "传输方式" (Transmission Method) set to "ASCII码" (ASCII Code). Each section has a dropdown arrow on the right.

设置完毕后，点击右上角按钮返回。

其它设备端：

负责发送文本，文本指定格式为：@@@xxx (必须以三个@开头)

若图一中传输方式设置为 ASCII：

其他设备端发送的文本格式为：@@@你好

若图一中传输方式设置为十六进制，

其他设备端发送的文本格式为：40 40 40 e4 bd a0 e5 a5 bd (需添加空格)

3. 在线十六进制转字符串推荐网址：<https://tool.lu/hexstr>

