

Midi Fighter Twister

DJ TechTools

Bitwig Studio Controller Extension

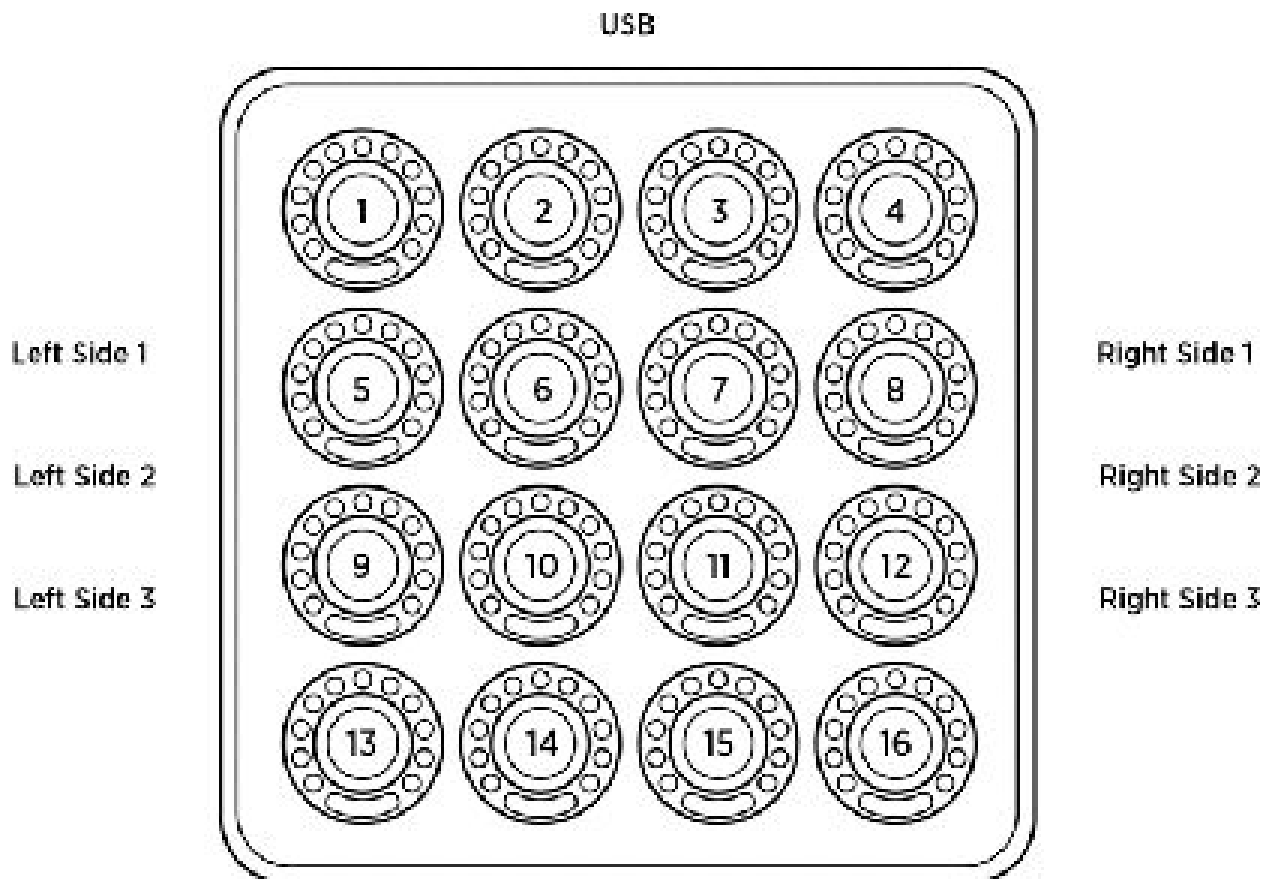


Fig 1 Hardware Naming Convention

Global

Left Side 1	Device Mode
Left Side 2	Track Mode
Right Side 1	Mixer Mode
Right Side 2	User Mode

Device Mode

1	Track selection Press to toggle record arm
2	Track volume Hold for fine control Tap to toggle mute Long press to toggle solo
3	Track pan Hold for fine control Double press to center
4	Shift playhead in 1 bar increments Hold for 1 beat increments Tap to play/stop
5	Device remote control layout selection Press to toggle device remote controls panel
6	Device selection Press to toggle plug-in window
7	Press to toggle device on/off switch
8	Press to browse presets for selected device Hold to choose category, tag, creator, or results column Press again to commit chosen preset
9-16	Device remote controls Press to toggle fine control Double press to reset parameter to default

Track Mode

1-4	See Device Mode
5	Shift loop start position in 1 bar increments Hold for 1 beat increments Tap to toggle loop playback
6	Shift loop end position in 1 bar increments Hold for 1 beat increments Tap to toggle loop playback
7	Zoom level for currently selected editor window Press for zoom to fit content
8	Track color selection Hold for fine control
9-16	Send bank levels (1-8) Hold for fine control Double press to reset send level
Left Side 3	Previous send bank page
Right Side 3	Next send bank page

Mixer Mode

1-4, 9-12	Track bank pan controls (1-8) Hold for fine control Double press to center
5-8, 13-16	Track bank volume controls (1-8) Hold for fine control Tap to toggle mute Long press to toggle solo
Left Side 3	Previous track bank page
Right Side 3	Next track bank page

User Mode

1-16	User definable via the Mappings Panel or VST plug-in GUI Use the MF Utility to set preferred encoder switch action
------	---