

## **AFTER SUCCESSFUL DOWNLOADING**

NOTE: make use of the first two purple buttons on the left hand side for scrolling up and down between the menus and make use of the numeric button for option selection.

- ✓ Power the pos
- ✓ The logo show up if the application Is downloaded to the POS properly
- ✓ “Please wait” shows up after the logo. wait until the main menu shows

### **The main menu shows for transaction**

- 1.Purchase
- 2.Balance
- 3.Refund
- 1.Cash advance
- 2.Purchase and cash back
- 3.Reversal

## **ADMIN CONFIGURATION**

- Press ALPHA button
  - Enter the ADMIN PIN (1234)
  - Press ENTER(the green button)
- The main admin menu show

## **ADMIN MAIN MENU**

1 **TERMINAL ID:** This ID is given by Banks, this is the ID that linked the transaction from the cardholder to the merchant account

2 **NIBSS IP :** 41.58.130.138

3 **NIBSS PORT:** 55531.

### **1. NETWORK CONFIGURATION**

This is divided into three (3) sections which are

- A. GPRS by acronyms GENERAL PACKET RADIO SERVICE
- B. ETHERNET
- C. ACTIVATE COMMS

#### **EXPLANATION**

- a) GPRS: This will be selected if you are using SIMCARD as your network connection by pressing (1).
  - Enter your APN press enter
  - Enter USERNAME press enter
  - PASSWORD press enter

(e.g. for MTN APN; web.gprs.mtnnigeria.net” and password – web, and user name - web)  
the GPRS logo (G%) we show in the right corner of the terminal

b) ETHERNER ; provide the correct prompt below press enter key

- LOCAL IP :
- NETMASK:
- GATEWAY:
- DNS

The Ethernet symbol ( <- )show

c) ACTIVATE COMM: This enables the user to switch from one network connection to another. By pressing three (3) and make a selection, one (1) for GPRS and two (2) for ETHERNET connection respectively ,

**2. PREP TERMINAL:** This is the final stage that makes the connection to NIBSS; before the connection can take place make sure the above stages are correct. Namely

- I. TERMINAL ID
- II. NIBSS IP
- III. NIBSS POST
- IV. GPRS (APN)

### **3. END OF DAY**

- End of day
- Transaction history
- Online End of day

#### **1. PIN key type**

- Triple DES
- DUKPT

#### **2. Get parameter**

- Download parameter
- Change terminal keys
- Load default pos keys

#### **3. Upgrade host IP**

- Remote : 41.79.64.30

#### **1. Upgrade Host port**

- Remote port : 9001

## **2. Reprint Receipt**

- Last receipt
- Specific receipt
- All receipt

## **3. Call home Freq**

- Timer(hrs) :1

## **1. Change Passwords**

- Admin
- Supervisor
- Operation

## **2. Remote Upgrade**

## **3. Print Configuration**