

14261

AIRPORT DIAGRAM

HARTSFIELD - JACKSON ATLANTA INTL (ATL)
AL-26 (FAA) ATLANTA, GEORGIA

ATIS ARR 119.65

DEP 125.55

ATLANTA TOWER

119.1 254.4 (RWY 08L-26R)

125.325 254.4 (RWY 08R-26L)

119.3 254.4 (RWY 09R-27L)

123.85 254.4 (RWY 09L-27R)

119.5 254.4 (RWY 10-28)

GND CON

121.9 254.4 (RWY 08L-26R, 08R-26L)

121.75 254.4 (RWY 09L-27R, 09R-27L)

121.65 254.4 (RWY 10-28)

CLNC DEL

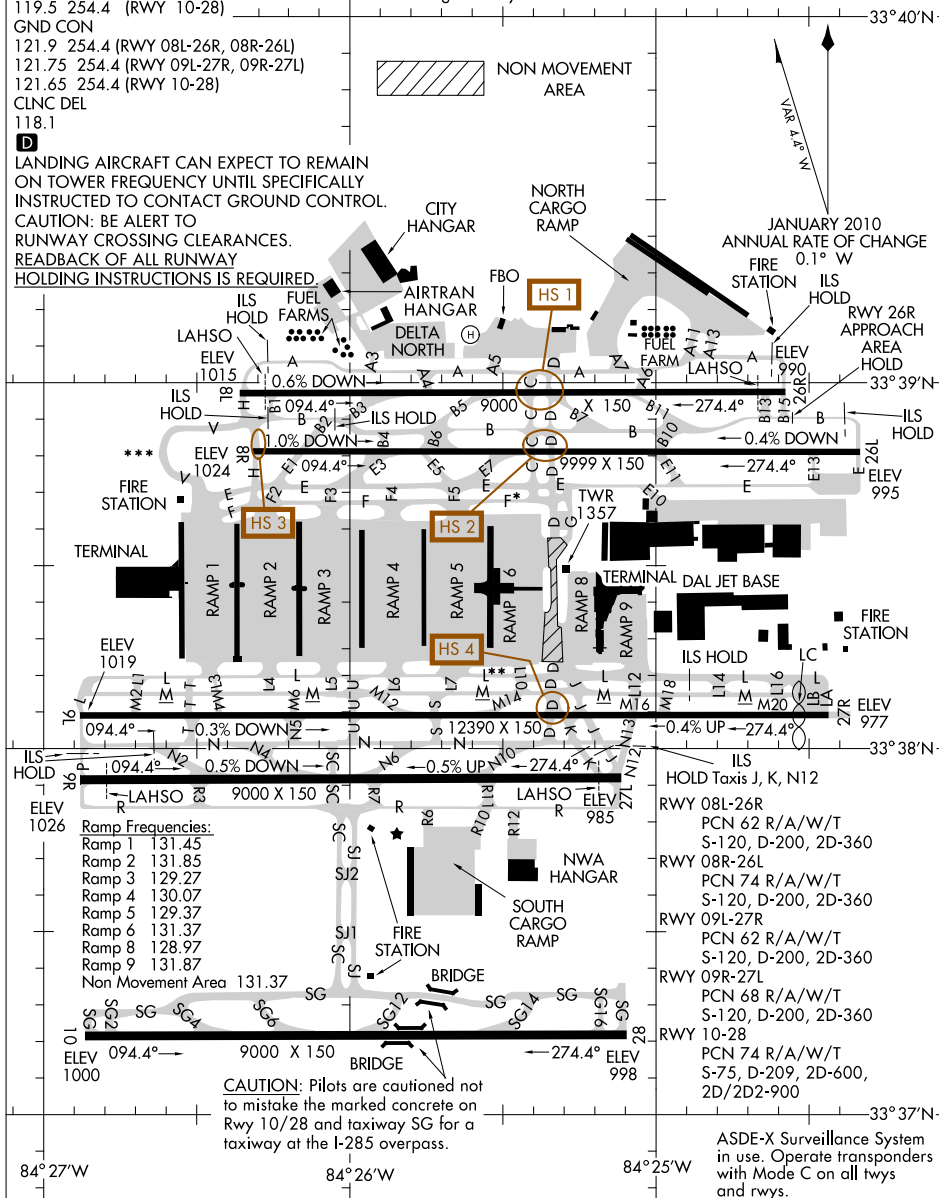
118.1

LANDING AIRCRAFT CAN EXPECT TO REMAIN
ON TOWER FREQUENCY UNTIL SPECIFICALLY
INSTRUCTED TO CONTACT GROUND CONTROL.
CAUTION: BE ALERT TO
RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY
HOLDING INSTRUCTIONS IS REQUIRED.

*Group VI aircraft are restricted from using Taxiway Foxtrot east of Ramp 5 North to the west side of Taxiway Charlie.

**Group VI aircraft are restricted from using Taxiway Lima east of Ramp 5 South to west of Ramp 6 South.

***Aircraft with wingspan greater than 171' are restricted from using Taxiway Victor.

FIELD
ELEV
1024

SE-4, 18 SEP 2014 to 16 OCT 2014

AIRPORT DIAGRAM

14261

ATLANTA, GEORGIA
HARTSFIELD - JACKSON ATLANTA INTL (ATL)

ATLANTA, GEORGIA