


Unpack

Parts are crowded in the box to avoid swaying.


Open the box and you can take them out. Refer to "PartsList.jpg" for full parts list.

Note: If the pins of any part are bent, simply straighten them for normal use.
If the situation is so serious or any parts appear to be damaged, please contact us for a replacement. Please send an email to support@diygeek.lk


Some chips and modules are inserted on the breadboard to protect their pins.
Please find a tool (like a little screwdriver) to remove them like below:

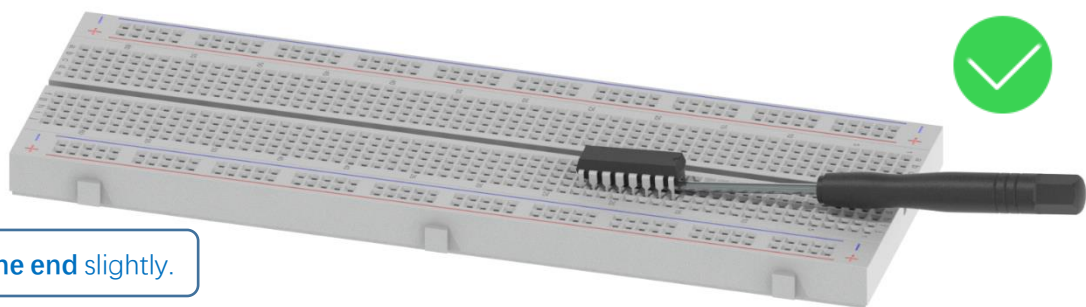

Step 1, lift **one end** slightly.

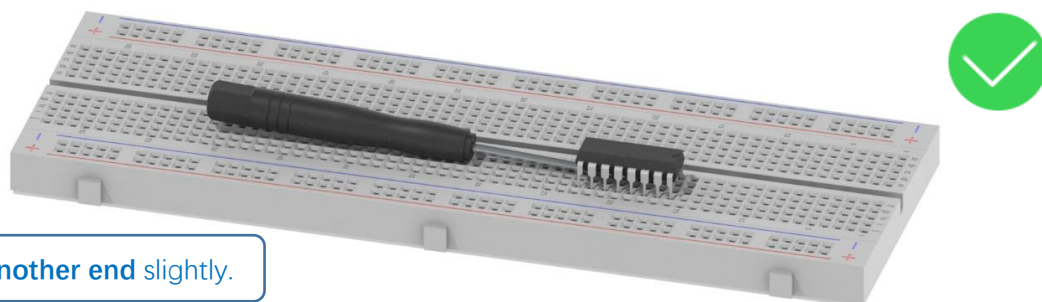

Step 2, lift **another end** slightly.

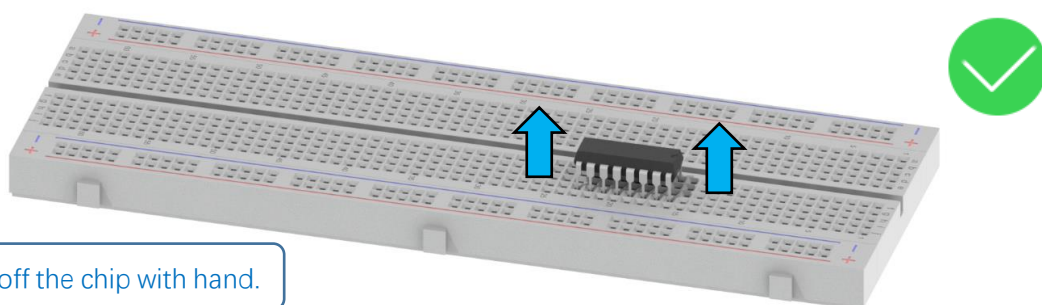

Step 3, take off the chip with hand.

Avoid lifting one end with big angle directly.

