




TV Screen Protector Installation & Care Instructions

Please hold the screen protector up to your TV to insure that it is the correct size before removing the protective film. A 15% restocking fee applies to all non defective screen protectors returned without the protective film attached as they cannot be resold as new units.

- Carefully open the box and remove the TV Armor Screen Protector. Remove the pads and straps from the box and put them off to the side for the moment.
- Using your fingernail, gently pull back the corner of the protective film that covers the TV Screen Protector and protects it from scratches during shipping. Remove the protective film on both sides. **Do not** use a tool or knife to remove the protective film as you may scratch the TV Screen Protector.

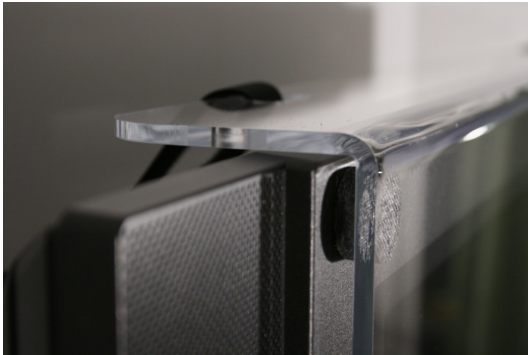

Screen Protector.

- Place the TV Screen Protector unit on your TV. The side with the bend is to be placed on the top of the TV. It should be centered on your TV. Determine the best location in the front four corners of the TV Screen Protector to stick the pads (not over buttons or covering the picture area). The pads keep the TV Screen Protector a 1/4" off your TV's surface. The pads are an **essential** part of its protection system.
- Ensure that the pads are pressing against the sides (bezel) of the TV, not the picture area, as this may damage the TV. Remove the TV Screen Protector and stick the pads to the back side of the TV.

- Place the TV Screen Protector back on your TV (centered) and feed one end of each Velcro™ strap through the top slots and hook it back onto itself. Drape the straps down the back of the TV. The top edge of the TV supports the TV Screen Protector.
- Feed the straps from the back of the TV through the slots at the bottom of the TV Screen Protector and attach the Velcro™ to itself gently pulling the TV Screen Protector tight to the TV. There is no need to use a lot of force to accomplish this. The weight of the Screen Protector is supported by the top of the TV.

Cleaning your TV Armor:

The continued optical clarity of the TV Screen Protector depends on how you care for it. The TV Screen Protector should be cleaned with clean, lukewarm water or a good acrylic cleaner and a micro fiber cloth. **DO NOT** use window cleaning products that contain ammonia or alcohol as they will haze the TV Screen Protector over time. Also **DO NOT** use any paper products to clean the screen.

And finally...

**If you like TV Armor, tell your friends!
You could be saving their TV.**