


PCF Board 1

- | | |
|--------------|---------------|
| Mag Switch 0 | Mag Switch 15 |
| Mag Switch 1 | Mag Switch 14 |
| Mag Switch 2 | Mag Switch 13 |
| Mag Switch 3 | Mag Switch 12 |
| Mag Switch 4 | Mag Switch 11 |
| Mag Switch 5 | Mag Switch 10 |
| Mag Switch 6 | Mag Switch 9 |
| Mag Switch 7 | Mag Switch 8 |

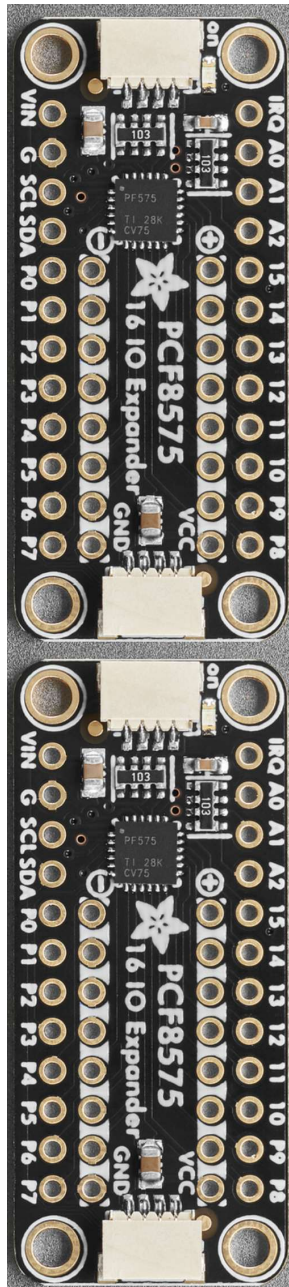

PCF Board 2


Mag Switch 16
Mag Switch 17
Mag Switch 18
Mag Switch 19
Mag Switch 20
Mag Switch 21
Mag Switch 22
Mag Switch 23

Mag Switch 31
Mag Switch 30
Mag Switch 29
Mag Switch 28
Mag Switch 27
Mag Switch 26
Mag Switch 25
Mag Switch 24

PCF Board 3

Mag Switch 32
Mag Switch 33
Mag Switch 34
Mag Switch 35
Mag Switch 36
Mag Switch 37
Mag Switch 38
Mag Switch 39


N/A
N/A
N/A
N/A
N/A
N/A
Mag Switch 41
Mag Switch 40

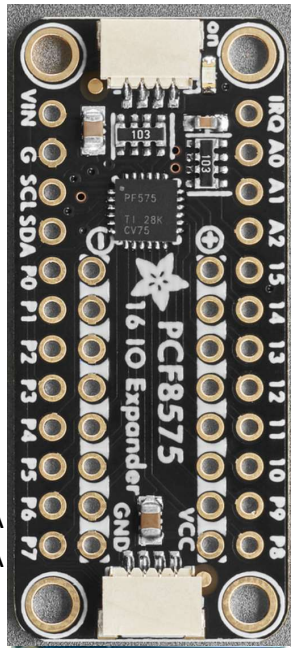

PCF Board 4

Panel Sense 1
 Panel Sense 2
 Panel Sense 3
 Panel Sense 4
 Panel Sense 5
 Panel Sense 6
 N/A
 N/A

Panel 6 EndTurnBtn
 Panel 5 EndTurnBtn
 Panel 4 EndTurnBtn
 Panel 3 EndTurnBtn
 Panel 2 EndTurnBtn
 Panel 1 EndTurnBtn
 N/A
 N/A

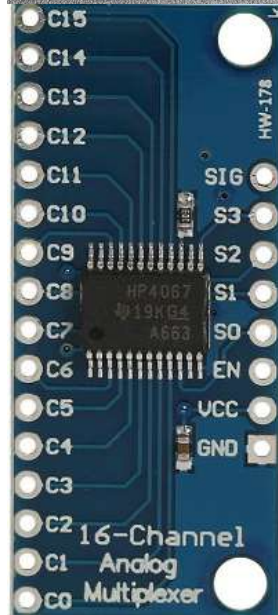

MUX

Panel 6 Potentiometer
 Panel 5 Potentiometer
 Panel 4 Potentiometer
 Panel 3 Potentiometer
 Panel 2 Potentiometer
 Panel 1 Potentiometer