

## MyNode ST7735 LCD Version 2.0.4

### Changes made:

1. Changed the boot up image.
2. Increased the duration of displaying the boot up image from 2 seconds to 60 seconds.

### How to use

1. If there was a previous myNodeST7735LCD service:
  - a. Run the command `sudo systemctl stop myNodeST7735LCD.service` to stop the service.
  - b. Run the command `sudo systemctl disable myNodeST7735LCD.service` to disable the service.
  - c. Run the command `sudo rm /lib/systemd/system/myNodeST7735LCD.service` to delete the service unit file.
  - d. Safely reboot the device, then run the following commands.
2. Run the command `chmod +x myNodeLCDServiceSetup.sh`
3. Run the command `sudo ./myNodeLCDServiceSetup.sh` to create the service.
4. Run the command `systemctl status myNodeST7735LCD` to check if the service has been started.