

# **L76-L** Release Notes

## **GNSS Module Series**

Rev. L76-L\_Firmware\_Release\_Notes\_V0202SC

Date: 2019-08-28



## 1. Preamble

This document provides the Release Notes for L76-L firmware version **L76LNR02A02SC**<sup>[1]</sup>. It describes major changes compared to L76-L firmware version **L76LNR02A01SC**. For more information, refer to the other documents about L76-L.

## 2. New Features

NO.	Brief Description	Since
1	Added the SDK command <b>\$PQGEO</b> to Configure Parameters of Geofencing.	R02A01SC
2	Added the SDK command <b>\$PQPREC</b> to Configure Decimal Places of longitude, latitude and altitude in NMEA sentences.	R02A01SC
3	Added the SDK command <b>\$PQJAM</b> to enable or disable jamming detection.	R02A01SC
4	Added the SDK command <b>\$PQGBS</b> to enable or disable sentence of GNSS satellite fault detection.	R02A01SC

## 3. Improved Features

NO.	Brief Description	Since
1	Fixed an issue where the module could not enter standby mode via the standby pin.	R02A02SC

## 4. Functions

### Basic Function

AIC	EASY	EPO	SBAS	Always Locate	LOCUS	PPS sync NMEA
Y <sup>[2]</sup>	Y	Y	Y	Y	Y	Y

### SDK Command Function

PQBAUD	PQEPE	PQ1PPS	PQECEF	PQODO	PQPZ90	PQVEL	PQGEO	PQPREC
Y	Y	Y	Y	Y	Y	Y	Y	Y
PQJAM	PQGBS	PQGLP						
Y	Y	Y						

### Special Function

I2C	Jamming Detection
Y	Y

### NOTES

- <sup>[1]</sup> From **R02A01SC** to the latest version uses NMEA v4.10 protocol, and added a new segment before “\*” in RMC, GSA and GSV sentences. Please note compatibility issues with older versions.
- <sup>[2]</sup> “Y” means the firmware supports this function.