

Basic AT Command

1. To change sms sending mode : **AT+CMGF=1**

```
mySerial.println("AT+CMGF=1");
```

2. To read SMS in text mode : **AT+CNMI=2,2,0,0,0**

```
mySerial.println("AT+CNMI=2,2,0,0,0");
```

3. To make a call : **ATD+60XXXXXXXXXX;** //replace X with number you want to call, change +60 to your country code

```
mySerial.println("ATD+60XXXXXXXXXX;");
```

4. To disconnect / hangup call : **ATH**

```
mySerial.println("ATH");
```

5. To redial : **ATDL**

```
mySerial.println("ATDL");
```

6. To receive a phone call : **ATA**

```
mySerial.println("ATA");
```