


Dept. <b>ENGINEERING</b>	Technical reference	Created by <b>DROTEK</b>	12/04/2019	Approved by <b>DAMIEN.M</b>
		Document type <b>DRAWING</b>	Document status <b>ACTIVE</b>	
		Title <b>RTK F9P OEM</b>	DWG No.	
			Rev. <b>V1.1</b>	Date of issue
			Sheet <b>1/2</b>	

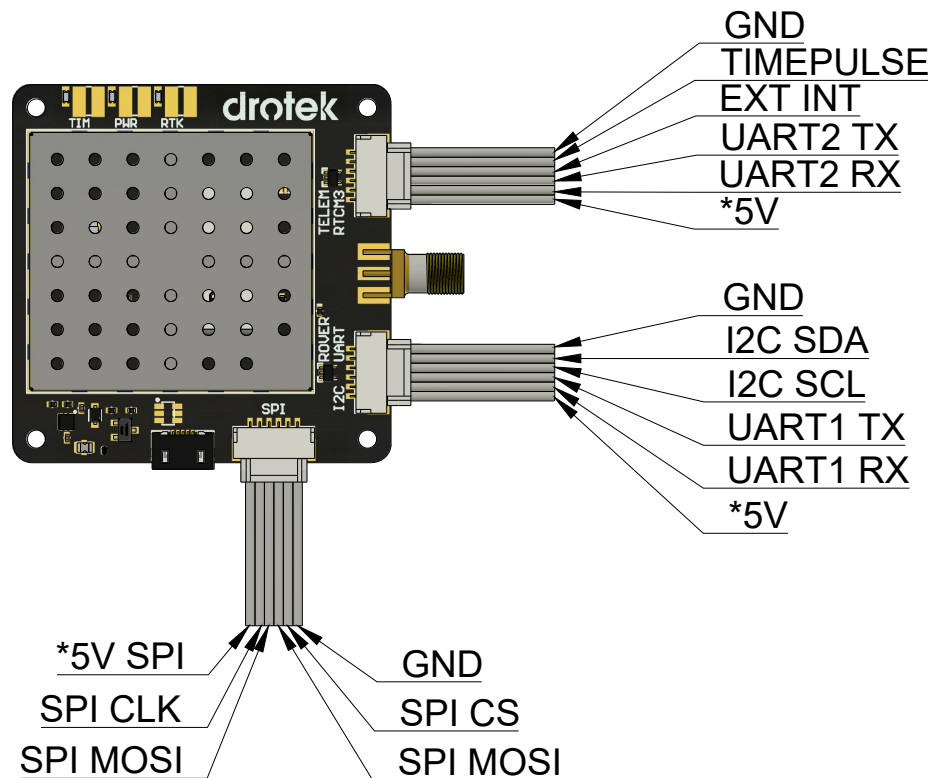

\* To enable the SPI protocol, the 5V SPI pin must be powered with a 5V voltage. Without power supply on the 5V SPI pin, UART and I2C protocols are active

\*\*SPI can not be enabled at the same time as UART (rover) and I2C protocols

Dept. <b>ENGINEERING</b>	Technical reference	Created by <b>DROTEK</b>	12/04/2019	Approved by <b>DAMIEN.M</b>
		Document type <b>PINOUT</b>	Document status <b>ACTIVE</b>	
		Title <b>RTK F9P OEM</b>	DWG No.	
		Rev. <b>V1.1</b>	Date of issue	Sheet <b>2/2</b>