


Dept. ENGINEERING	Technical reference	Created by DROTEK	13/02/2019	Approved by DAMIEN.M
		Document type DRAWING	Document status ACTIVE	
		Title RTK F9P OEM	DWG No.	
			Rev. V1	Date of issue
			Sheet 1/2	

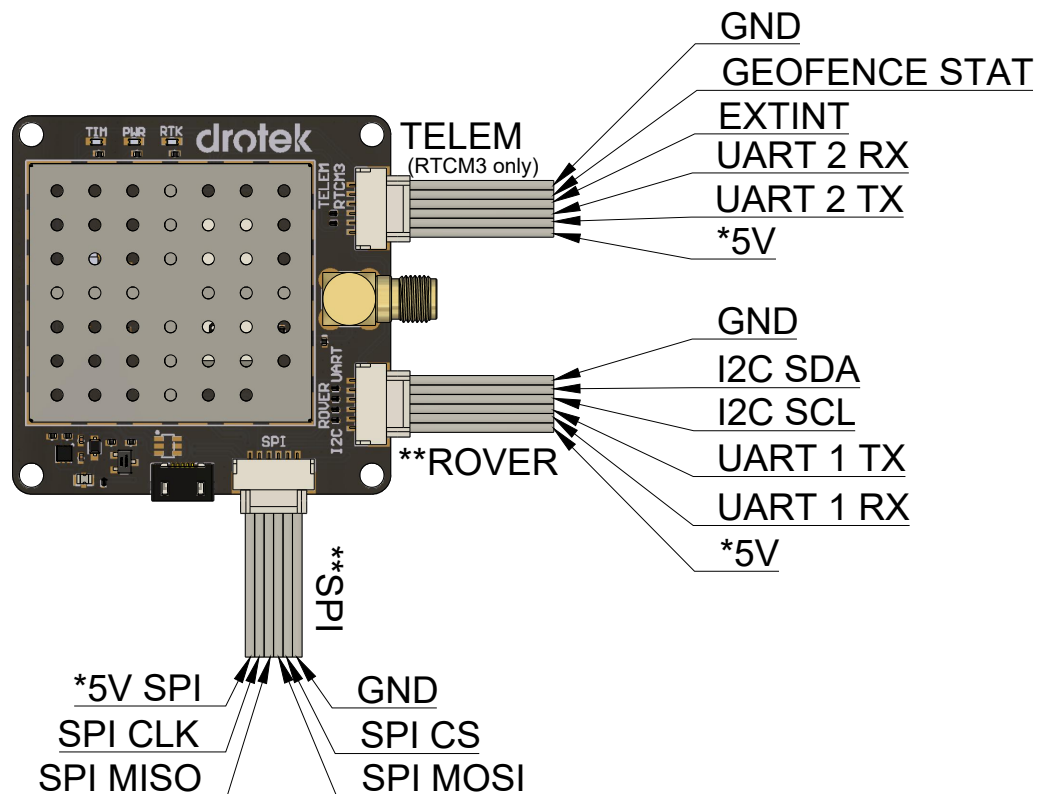

* To enable the SPI protocol, the 5V SPI pin must be powered with a 5V voltage. Without power supply on the 5V SPI pin, UART and I2C protocols are active

**SPI can not be enabled at the same time as UART (rover) and I2C protocols

Dept. ENGINEERING	Technical reference	Created by DROTEK	13/02/2019	Approved by DAMIEN.M
		Document type PINOUT	Document status ACTIVE	
		Title RTK F9P OEM	DWG No.	
		Rev. V1	Date of issue	Sheet 2/2