


 
Front view
Scale: 3:4

*NUMBERS DO NOT APPEAR IN REAL VERSION

ACTUATORS	DESCRIPTION	FUNCTION	UNITS
1. SHUTDOWN BUTTON	PUSH-ROTATE	SHUTS DOWN LVS	1
2. CONTACT SWITCH	FLIP DOWN	TURNS ON ALL LVS AND ACTIVATES AUTO FUEL PRE-LOAD	1
3. FAN/WATER SWITCH	FLIP DOWN	SHUTS ON/OFF FAN AND WATER PUMP	1
4. STARTER BUTTON	PUSH	STARTS ENGINE	1

INFORMATION	DESCRIPTION	FUNCTION	UNITS
5. GEAR DISPLAY	7PANEL DISPLAY	DISPLAYS CURRENT GEAR	1
6. WATER TEMP	3x7PANEL DISPLAY	DISPLAYS ENGINE WATER TEMP	1
7. RPM	LEDs	DISPLAYS RPM PROGRESSION	9
8. FUEL PRE-LOAD	BLUE LED	ON WHEN FUEL PRE-LOAD IS ACTIVE	1
9. LVS	BLUE LED	ON WHEN LVS IS ACTIVE	1
10. OIL TEMP	RED LED	ON WHEN OIL TEMP IS OVER _°C	1
11. OIL PRESSURE	RED LED	ON WHEN OIL PRESSURE IS OVER _bar	1
12. BPSP	RED LED	ON WHEN BPSP IS ACTIVE	1
13. ETC-APPS	RED LED	ON WHEN ERROR IN ACCELERATOR SYSTEM	1
14. FUEL LEVEL	RED LED	ON WHEN UNDER _%, FLASHES WHEN UNDER _%	1
15. AIR PRESSURE	RED LED	ON WHEN UNDER _bar, FLASHES WHEN UNDER _bar	1

FOR THE CAR TO RUN, BOTH SWITCHES MUST BE
IN THE DOWN POSITION (CONTACT ON AND
FUEL AND WATER PUMP ACTIVE)

DESIGNED BY: Patrick			I	-
DATE: 18/01/2020			H	-
CHECKED BY: XXX			G	-
DATE: XXX		DASHBOARD DYN - 05	F	-
SIZE A3			E	-
SCALE 1:2	WEIGHT (kg)		D	-
DRAWING NUMBER V5			C	-
SHEET 1 / 1			B	-
This drawing is our property; it can't be reproduced or communicated without our written agreement.			A	-