



1. Go to the arduino folder on your computer. Usually it can be found under Computer > OSDisk (C:) > Program Files (x86) > Arduino

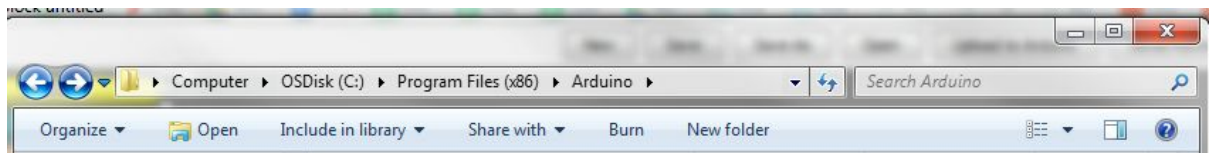

2. Open the tool folder
3. In the tool folder, create a new folder called "ArduBlockTool". The caps and spacing is really important.

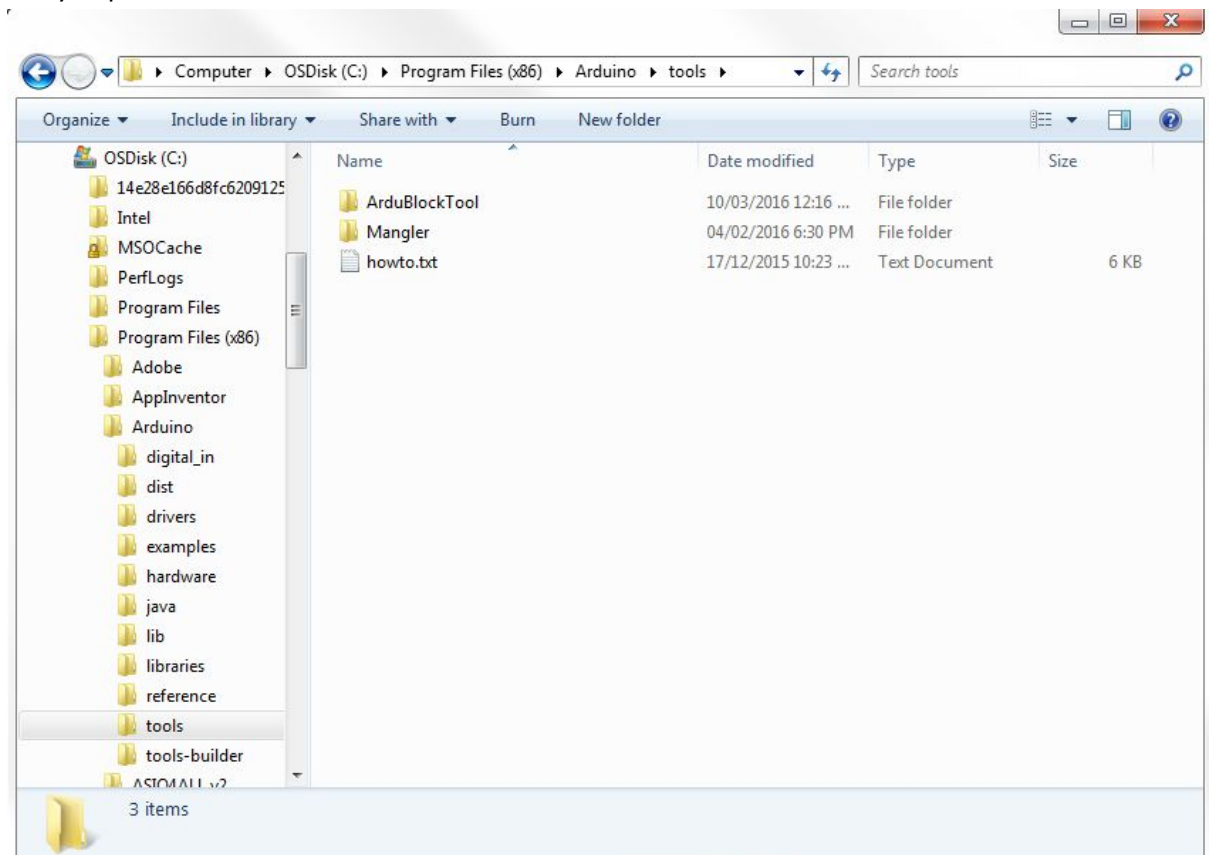

4. In "ArduBlockTool" create a new folder called "tool". Do not put a capital "t"
5. Insert the the ardublock-all.jar file
6. Relaunch Arduino