 

 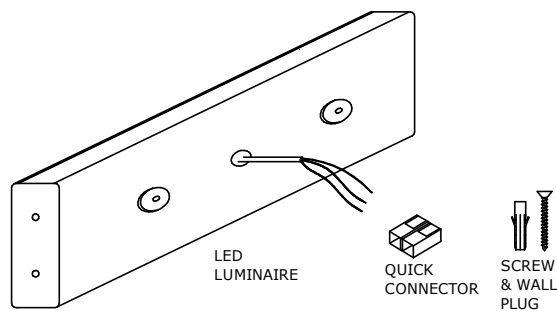


INSTRUCTIONS FOR INSTALLATION AND ASSEMBLY OF TL3 TYPE LED LAMP.
INSTALLATION AND ASSEMBLY MUST BE CARRIED OUT BY A CLASSIFIED PERSON,
PERSON PERFORMING PROFESSIONAL ACTIVITIES IN THE QUESTION OF
ELECTRICAL INSTALLATIONS, ELECTRICIAN. THE LED LAMP CAN BE MOUNTED ON
ALL TYPES OF SURFACES SUCH AS WOODEN SURFACES, KNAUF, BRICK AND
CONCRETE.
ANY UNPROFESSIONAL INSTALLATION CAN LEAD TO DAMAGE TO THE LED LAMP.
INSTALLATION ON WALL IN DRY PREMISES OF THE BUILDING WHERE THERE IS NO
MOISTURE IS ALLOWED.



ALUMINIUM BRACKET
FOR LED LAMP

① TURN OFF THE POWER

TURN OFF THE POWER AT THE FUSE BOX AND SECURE THE FUSE
AGAINST RESTARTING. PLACE AT LEAST ONE WARNING SIGN ON
THE FUSE BOX.





② CHECKING THE PRESENCE OF VOLTAGE

USE A MULTIMETER OR A TWO-POLE CONTINUITY TESTER TO
MAKE SURE THE LEADS ARE NOT LIVE.



③ BRACKET ASSEMBLY

PUSH THE WALL CABLE THROUGH THE BRACKET OF THE LED LAMP, AND WITH THE
LEVEL, PLACE THE BRACKET IN A HORIZONTAL POSITION, MARK THE HOLES TO LEAVE A
MARK WHERE YOU WILL LATER DRILL THE SUBSTRATE FOR PLASTIC DOGS, SCREWS.

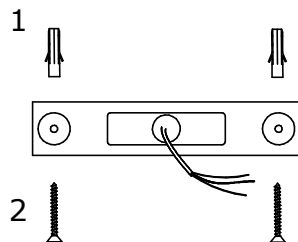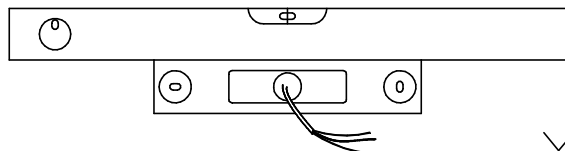

WALL ✓
FLAT CEILING ✗
SLOPE CEILING ✗
FLOOR ✗

1. STEP

DRILLING HOLES FOR PLASTIC DOGS. OPTIONAL IF THE
BRACKET GOES ON A WOODEN SUBSTRATE,
PRE-DRILLING IS NOT REQUIRED.



2. STEP

PASS THE SCREWS THROUGH THE METAL WASHER AND ATTACH THE
BRACKET TO THE CHOSEN SUBSTRATE AND CHECK THE STABILITY OF
THE BRACKET.




④ LED LIGHT CONNECTION

IMPORTANT: THE CONNECTION VOLTAGE OF THE LED LAMP IS 230V 50Hz !!!

CONNECT THE LED LAMP TO THE MAINS VOLTAGE 230V
50Hz ACCORDING TO THE FOLLOWING SCHEMES.


ON/OFF VARIANT

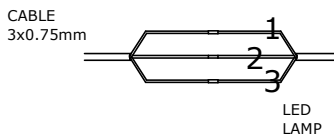

LED LAMP-WIRING

1. BROWN COLOUR
PHASE LEAD
2. BLUE COLOUR
ZERO LEAD
3. YELLOW GREEN COLOUR
GROUND

PUSH DIMMING VARIANT

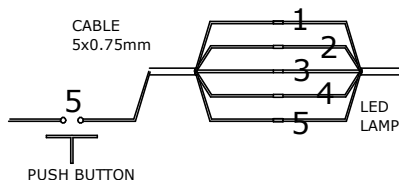

LED LAMP- WIRING

1. BLACK COLOUR
PERMANENT - PHASE LEAD
2. BLUE COLOUR
PERMANENT - NUL LEAD
3. YELLOW GREEN COLOUR
GROUND
4. GRAY COLOUR
IMPULS AC/N NUL
5. BROWN COLOUR
IMPULS AC/L PHASE

NOTE: THE BUTTON CAN ONLY BE CONNECTED
TO THE BROWN COLOR OF THE LED LAMP GUIDE

⑤ INSTALLATION OF LED LAMP ON BRACKET

1. STEP


STORE THE COUPLING CONNECTORS TOGETHER WITH THE
GUIDES IN THE CAVITY OF THE CARRIER.

**IMPORTANT: MAKE SURE THAT ALL THE LEADS ARE IN
THE CAVITY OF THE CARRIER, OTHERWISE THE LED
LAMP WILL NOT TURN ON
IT CAN BE MOUNTED TO THE BRACKET AND THE
CONNECTING GUIDE CAN BE DAMAGED.**



2. STEP

ALIGN THE LED LAMP IN THE PLANE WITH THE BRACKET AND
BRING THE MAGNETS CLOSE TO THE METAL PAD AND THE
MAGNET WILL CONNECT THE LED LAMP WITH THE BRACKET.

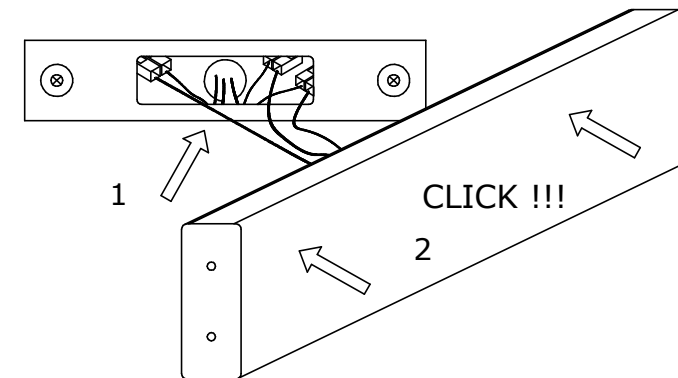

PUSH DIMMING CONTROLLING

BY SHORT PRESSING THE BUTTON	0.1-1 SEC.	SWITCHING THE LED LAMP ON AND OFF
BY LONG PRESSING THE BUTTON	1.5-10 SEC.	STRENGTHENING OR REDUCING THE INTENSITY OF THE LED LAMP LIGHT
RESET	>11 SEC.	LED LAMP CONTROL RESET

⑥ CHECKING FOR CORRECT ASSEMBLY AND COMMISSIONING

BY CHECKING THE STABILITY OF THE LED LAMP, DETERMINE IF
THE LED LAMP IS PROPERLY MOUNTED.

TURN ON THE POWER AT THE FUSE BOX AND TURN ON THE LED
LAMP THROUGH THE SWITCH.

WARRANTY

"TURKOVIĆ" PRODUCTION GUARANTEE THAT THE LED LAMP HAS BEEN TECHNICALLY INSPECTED
WITH A POSITIVE OUTCOME.

THE WARRANTY LASTS 12 MONTHS FROM THE DATE OF SALE. THE WARRANTY DOES NOT COVER
DAMAGES DUE TO FALLING DOWN OF THE PRODUCT, DAMAGE OR POOR HANDLING OF THE LED
LAMP, FAILURE TO FOLLOW THE INSTALLATION INSTRUCTIONS AND RULES. THE WARRANTY IS
NOT VALID IF THE CLIENT DID NOT COMPLY WITH THE TERMS OF PAYMENT. THE LAMP IS THE
PROPERTY OF TURKOVIĆ TRADE UNTIL THE ACCOUNT IS SETTLED IN FULL.

MODEL:

DELIVERY DATE: